


# Configuration Card

180 mm Strip Chart Recorder

CCPLEN-6171  
07-98  
ISSUE 7

## FUNCTION KEYS

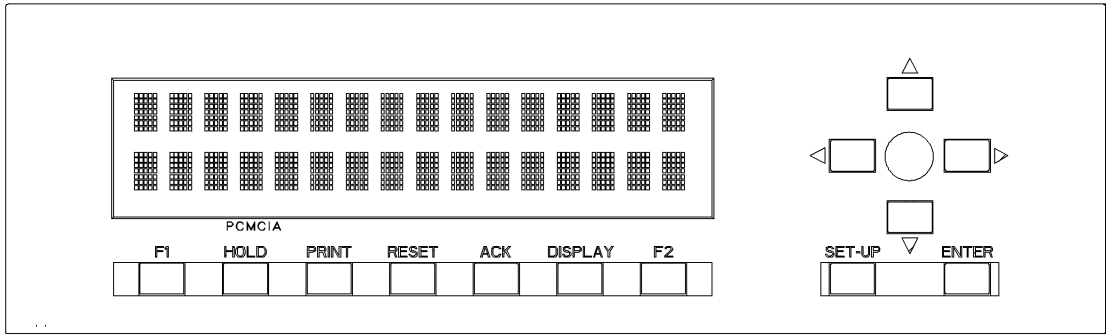

F1	HOLD	PRINT	RESET	ACK	DISPLAY	F2
<p>Immediate action key configurable</p>	<p>To hold the display on a current channel. Use</p> <p>keys to change the channel.</p>	<p>To choose an immediate printing action. The choices are:</p> <ul style="list-style-type: none"> <li>- Inhibit/Printing</li> <li>- Reset paper length</li> <li>- Change speed/int 2 to speed/int 1</li> <li>- Print date &amp; time</li> <li>- Snap shot trace</li> <li>- Chart advance</li> <li>- Change group B to A</li> <li>- Change group A+B to B</li> <li>- Snap shot logic</li> <li>- Snap shot math</li> <li>- Start archive / stop archive</li> <li>- Remove PCMCIA</li> </ul>	<p>Math Occurrence</p> <p>Reset PCMCIA</p>	<p>To acknowledge all latching alarms relays</p>	<p>To choose the display type in run mode or to escape from configuration to run mode</p>	<p>Immediate action key configurable</p>
<p>SET-UP</p> <p>ENTER</p>		<p>To move to configuration mode or to return from parameter configuration to the sub-matrix.</p> <p>To confirm your selected action.</p>				
<p>THESE KEYS ARE USED FOR PRODUCT CONFIGURATION.</p>						

## PRINCIPLE OF PRODUCT CONFIGURATION

