


# Quick Start Guide – DR Graphic Recorders


## 1. Connections

### DR Graphic rear panel

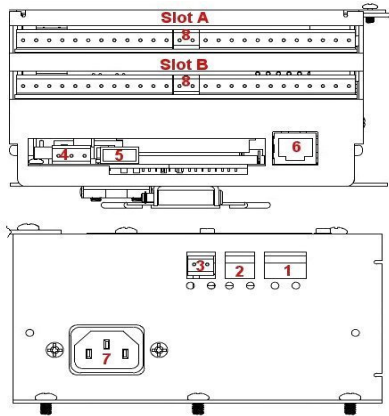


- 1/ 24VDC Inst. power
- 2/ 24V TXP Supply
- 3/ Common Relay Output
- 4/ RS485 connection
- 5/ USB Host
- 6/ Ethernet connection
- 7/ AC supply 100-250VAC
- 8/ C/JC Connector


### Analogue Input board (4, 6 or 8 channel). DR Graphic = Slots A & B,

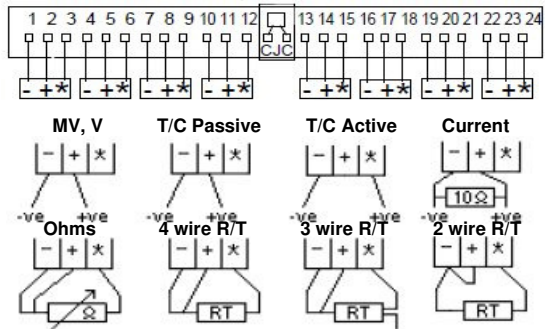


### Analogue Output (2 or 4 channel). DR Graphic = Slot B only

 


### Pulse Input (4 channel). DR Graphic = Slots A & B

 

### Relay Alarm (4 or 8 channel). DR Graphic = Slot B

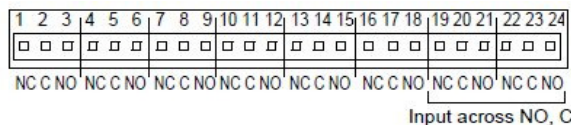

### Digital Input / Output (8 or 16 channel) DR Graphic = Slot B

 

Key: NO = Normally Open, C = Common, NC = Normally Closed,

(2) 24V Transmitter Power Supply connections are made via 2-way connector for DR Graphic.

## 2. Setup Menu



Select the Menu button from the Process Screen



 
### Options

Select Options in Credits menu, tick firmware options to enable. Go to Finish and Commit



### Inputs

All Analogue Inputs default to 12V



Select Input channel

- Setup input Type. V, A, Ohms, RT, TC
- Select Sample Rate
- Select Range / RT / TC Type

Use Back button to return to Setup Menu

### Pens



By default Pen 1 display Analogue Input 1, Pen 2 displays Analogue 2 etc .

Select Pen

- Setup Scale
- Set Alarms, if required
- Setup Logging (required to Log and Save data in memory)

Use Back button to return to Setup Menu

### Localization


Settings for Language and Time Zones, etc.



Back

### Settings (Main Menu > Configuration)



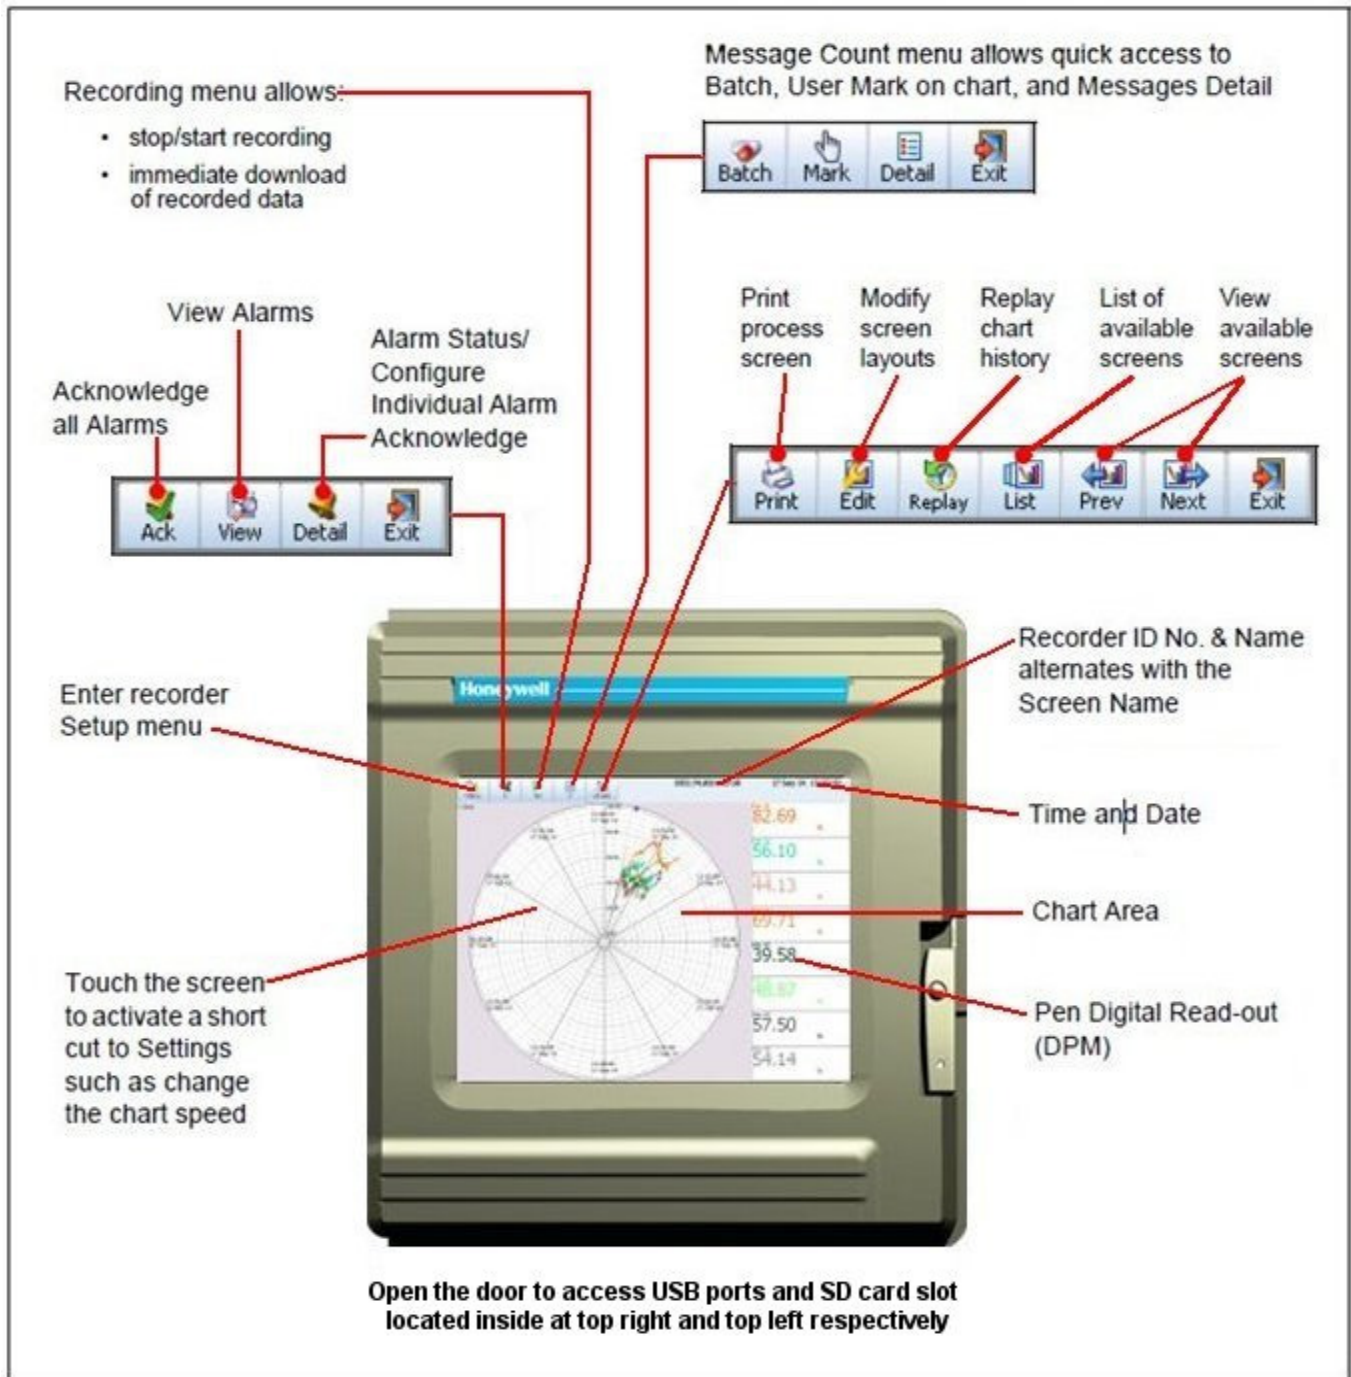

**NOTICE**

For detailed information on all recorder settings and configuration parameter please refer to the Recorder User manual.