

Honeywell



GR Series and DR Graphic Recorders

DR Graphic, Multitrend GR, Minitrend GR and eZtrend GR

See, Store and Send Data Securely

For the best in Display Versatility, Analysis and Communications ..

choose Honeywell

Table of Contents

Section 1: Preface	1
Preface	1
<i>Thank you for choosing a Honeywell GR Series recorder</i>	1
<i>Documentation</i>	1
<i>Notes</i>	1
<i>Trademarks</i>	1
Abbreviations	2
Safety	2
<i>Symbols</i>	3
<i>Static Electricity</i>	4
Protocols used in this manual	4
<i>Safety and Symbol Identification</i>	4
Warnings and Safety Precautions	5
<i>Do's and Don'ts</i>	5
<i>Hazardous Voltage</i>	6
<i>For use in hazardous locations</i>	6
Section 2: Installation	9
Environment and Location	9
Mechanical Installation	10
<i>Installation Instructions</i>	13
Electrical Installation	24
<i>Installation Category</i>	24
<i>Analogue Input Card</i>	31
eZtrend GR Analogue Input (Standard) card	34
<i>Analogue Output Card</i>	36
<i>Pulse Input Card</i>	37
<i>Transmitter Power Supply Card</i>	39
<i>Alarm Relay Cards & Digital Input/Output Cards</i>	40
<i>Communications Connections</i>	44
<i>USB Devices</i>	45
Section 3: Overview	47
Functions and Features	47
<i>Recorder Functionality</i>	49
<i>Features</i>	51
<i>Options - Hardware</i>	57

Section 4: Recorder Setup 65

Power up	65
1. Menu Access.....	65
2. Log On/Off.....	66
4. Time and Date Settings	67
5. Firmware Options	67
Menu Path.....	67
Help.....	68
Main Menu	68
Configure Menu	69
Setup Menu	70
Edit Recording	158
Reports Menu.....	163
Layout	167
Passwords	174
Settings.....	183
Alarms Menu.....	185
Screen Menu.....	186
Batch Setup/Batch Groups	190
Recording Menu.....	194
Messages Menu.....	197
Process Menu.....	200
Status Menu.....	204
Finish	216

Section 5:Security 219

Password Security.....	219
Users and Groups	219
Administrator.....	220
Password Policy.....	222
User Interface requirements	222
Audit Trail	222
Level Permissions	223
Default Password Access	225
Hardware Configuration Lock.....	235

Section 6: Screen Configuration 237

Process Screen Overview.....	237
Menu Bar	238
Screen Menu Bar.....	239
Replay	240
Chart Speeds	247
Hot Button.....	247
Screen Activity.....	248

Section 7: Firmware Options 253

Firmware Credit System	253
Firmware Options	255

Section 8: Communication	257
Comms Configuration	257
Standard Communication Interfaces	257
<i>Protocols</i>	258
Hardware Installation	259
<i>Getting connected - IP Address</i>	260
<i>Local Area Network setup</i>	261
<i>Links to Remote Networks</i>	261
<i>Data Logging and Transfer</i>	261
Comms and Trend Manager Suite	263
<i>System Requirements</i>	263
<i>Software Installation</i>	264
<i>Start Up</i>	265
Communications Server	269
<i>Comms Server Overview</i>	269
<i>Comms Server Start up</i>	269
<i>Comms Server Setup</i>	272
<i>Comms Server Logging</i>	277
Comms Server Database	284
<i>System Setup</i>	284
Shutdown Server	284
<i>Modbus Capabilities</i>	285
Web Browser	286
Internet Security Settings	287
Section 9: PC Software Suite	289
<i>The TrendManager Pro Software Suite</i>	289
<i>X Series & GR Recorder Screen Designer</i>	289
<i>Database Management Tool</i>	290
<i>Report Generation Tool - AMS2750</i>	290
<i>System Requirements</i>	290
Section 10: Spares List	291
<i>Minitrend GR Recorder</i>	291
<i>Multitrend GR Recorder</i>	295
<i>eZtrend GR Recorder</i>	300
<i>DR Graphic Recorder</i>	304
Section 11: Instrument Care and Maintenance	311
Instrument Care and Maintenance	311
<i>Cleaning Instructions</i>	311
<i>Backlights</i>	311
<i>Operating Temperature</i>	311
<i>Touch Screen</i>	312
<i>Calibration</i>	312

Section 12: Technical Data & Specifications 313

Field IO Specification	313
Analogue Input	314
Relay Alarm/Digital Input Specification	314
<i>Relay/Alarm Output Card Options</i>	314
<i>Digital Input Cards</i>	315
Specification Tables	317
<i>Input Range Performance Accuracy Table</i>	322
<i>Input Actuation</i> <i>(Linear)</i>	322
<i>Input Actuation</i>	323
<i>LED Flash Codes</i>	329

Section 13: Network and System Security 331

Network and Security Planning	331
Introduction	331
<i>Assumptions and prerequisites</i>	331
Security Checklist	332
<i>Viruses and other malicious software agents</i>	332
<i>Unauthorized external access</i>	332
<i>Unauthorized internal access</i>	333
<i>Accidental system change</i>	333
<i>Protecting the Recorder system components</i>	333
Backup and Restore	335
..... <i>Formulating a disaster recovery policy</i>	335
<i>Backup and restore configurations</i>	335
Physical and Environmental Considerations	336
<i>Protecting against unauthorized system access</i>	336
<i>Control room access</i>	336
<i>Network and recorder access</i>	336
<i>Physical access to critical devices</i>	337
Security Updates	337
<i>Microsoft Security Updates and Service Packs</i>	337
<i>Virus Protection</i>	337
Network Security	338
<i>Architecture</i>	338
<i>Recommended firewall settings:</i>	339
<i>Communication from a Remote Location</i>	341
Recorder Security Features	342
<i>Extended Security System</i>	342
<i>Secure File Transfer (Secure FT) Communication</i>	342
<i>Export Device</i>	342
<i>User Management System</i>	342
Guidelines for Certifications	343
Notices	344

Appendix A: Quality and Safety	345
CE Mark	345
Safety	345
The RoHS-II Directive 2011/65/EU:	345
Appendix B: Maths Expressions	347
Full Maths & Script Processing	347
<i>Maths Credit Options</i>	347
<i>Maths Variable and Function Tables</i>	348
<i>Full Maths</i>	355
<i>Script Function Application Examples</i>	356
<i>Maths Error Messages</i>	361
Appendix C: Thermocouple Connections	363
How Thermocouples work	363
Thermocouple CJC Compensation	364
<i>Internal Automatic</i>	364
<i>Ext 0°C Reference</i>	365
<i>External with a Specified Temperature</i>	365
<i>External Input Reference</i>	366
Appendix D: Alarms	367
<i>Alarms Menu</i>	367
Appendix E: Ethernet	369
<i>Ethernet</i>	369
<i>Email</i>	370
<i>General operation of the e-mail system</i>	370
Appendix F: Fuzzy Logging	371
Appendix G: F sub zero Sterilisation	375
<i>The Significance of F0</i>	375
Appendix H: Calibration	377
AI Calibration and CJC Calibration	377
Sensor Compensation	377
Appendix I: Battery Data	379
Location: Processor Board	379
<i>Safety Guidelines</i>	379
Appendix J: Function Codes and Memory Maps	381
Modbus Memory Map Supplement:	381
<i>Totalisers</i>	386
<i>Input Text message</i>	386
<i>Analogue Input Value</i>	386
<i>Communications Input</i>	386
<i>Pen Values</i>	387
Modbus Function Codes	388

Appendix K: Troubleshooting 389

Error Messages	389
Information Messages	403

Appendix L: GR Series AMS2750 capabilities 405

AMS2750 and the GR Series Recorders	405
AMS2750 Process mode	406
AMS2750 Credit Option.....	406
AMS2750 Process Menu	407
AMS2750 Process Screen.....	407
SAT	411
I/O + AMS2750 (Process Mode).....	411
AMS2750 Button (Process Mode).....	413
Pens for TUS Sensor (Process Mode).....	417
TUS Sensor Usage Tracking (AMS2750).....	418
TUS mode	420
Temperature Uniformity Survey (TUS) Mode	420
AMS2750 (TUS) - Credit Option.....	421
AMS2750 (TUS) Screen.....	422
I/O + AMS2750 (TUS)	422
AMS2750 Menu (TUS)	423
Pens for TUS Sensor (TUS Mode)	429
TUS survey process screen	430
AMS Input Calibration.....	438
Start a Survey.....	450
During survey.....	450
Events (AMS2750).....	456
Audit Trail (AMS2750).....	457
TUS Data file.....	457
TUS Logged data.....	458
Passwords (AMS2750)	459
TrendManager Suite Software (AMS2750)	460
Screen Designer (AMS2750)	460
AMS2750 Report Generation Tool	461
Installation	461
Introduction	463
Report Tool User Interface.....	463
CAL Report (Calibration Report Generation)	464
Browse Logo.....	464
SAT Report Wizard	465
TUS Report Wizard.....	468

Index 493

Section 1: Preface

Preface

Thank you for choosing a Honeywell GR Series recorder

Thank you for purchasing the newest in our range of electronic data recording for **GR** Advanced Graphic Recorders.

The **Minitrend GR**, **Multitrend GR**, **eZtrend GR** and **DR Graphic** paperless chart recorders are the latest development of the solid-state replacement for traditional paper recorders.

Many options, features and functions are available to meet a wide range of applications and requirements including: Power, Water Treatment, Thermal Processing, Food and Beverage, Pharmaceutical/Biotech and Manufacturing industries.

This manual explains the product functionality operation, configuration and communication as well as Safety Precautions, Installation & Wiring, Recorder Setup, Troubleshooting and Spares List. It is recommended that the user reads the manual before installing and operating the recorder.

Documentation

A full set of manuals for the software and the recorders (including some language versions) are available on the DVD provided and from our website www.honeywellprocess.com.

Also Application Notes and Installation Instructions, first time password setup and database tool information.

Notes

- The contents of this manual are correct at the time of issue. The contents may change at any time without prior notification. This is due to continuous developments to the recorder and its functionality.
- Every effort has been made to ensure the accuracy of this document, however should there be any anomalies found, please contact your nearest **Honeywell** supplier. for contact addresses.
- All rights are reserved. No part of this manual should be copied or reproduced, stored on a retrieval system or transmitted in any form without the prior permission from **Honeywell** International Inc.

Trademarks

- Microsoft, MS-DOS, Windows Server 2012, Windows Server 2016, Windows Server 2019, Windows 10, and Windows 11 are all registered trademarks of Microsoft corporation.



- *SD, SDHC and SDXC are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries or both.

- For the purpose of this manual the [™] and ® symbols will not follow their own trademark names or registered trademark names in every instance.
- Company names and Product names mentioned in this manual are trademarks or registered trademarks of their individual owners.

Abbreviations

Abbreviations

CSR	Certificate Signing Request
CA	Certification Authority
CRL	Certificate Revocation List
DNS	Domain Name System
DHCP	Dynamic Host Configuration Protocol
FQDN	Fully Qualified Domain Name
FTP	File Transfer Protocol
FM	Factory Mutual
IP	Internet Protocol
IIS	Internet Information Service
PNS	Password Network Synchronization
SSL	Secure Sockets Layer
SNTP	Simple Network Time Protocol
SMTP	Simple Mail Transfer Protocol
SELV	Safety Extra Low Voltage
Secure FT	Secure File Transfer
SPNS	Secure Password Network Synchronization
TSP	TrendServer Pro
TLS	Transport Layer Security
TMS	TrendManager Suite
URL	Uniform Resource Locator

Safety

The **GR Series** range of instruments is compliant with the requirements of BS EN 61010-1:2010 "Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use" and UL 61010-1 (3rd Edition) and CAN/CSA-C22-2 No.61010-1-12, as options. If the equipment is used in a manner not specified, the protection provided by the equipment may be impaired.








The **GR Series Minitrend** and **Multitrend** range of instruments are compliant to the requirements for FM Class 1, Div.2 Hazardous (Classified) Locations. Refer to the Model Selection Guide.

Safety

Symbols

One or more of the following symbols may appear on the recorder labelling.

 Table 1.1 : Safety Symbols

Symbol	Meaning
	Caution - refer to manual for instructions
	Caution - risk of electric shock
	Direct Current
	Protective conductor terminal
	Earth (ground) terminal
	Static Electricity
	Directive 2012/19/EC WEEE: Waste Electrical and Electronic Equipment

Protocols used in this manual



Static Electricity

All circuit boards and electronic modules associated with this recorder contain components which are susceptible to damage caused by electrostatic discharge. Should it be necessary to handle such components, appropriate precautions in accordance with ANSI/ESD S20.20 Electrostatic Discharge Control Program Standard, should be observed.

Protocols used in this manual

Safety and Symbol Identification

Table 1.2 :

Symbol	Description
 WARNING	The WARNING symbol indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury .
 CAUTION	This CAUTION symbol may indicates a potentially hazardous situation, which, if not avoided, may result in property damage .
NOTICE	A NOTICE symbol indicates important information that must be remembered and aids in job performance.

Warnings and Safety Precautions

Do's and Don'ts

1. DC inputs to the product should be provided by SELV power supply
2. The inputs of the product are supplied from SELV and should not exceed 50V.
3. Before any connections are made to the recorder, ensure the protective earth terminal is connected to a protective conductor before applying power or any other connections.



WARNING

IMPROPER INTERRUPTION OF CONNECTIONS

Any interruption of the protective conductor outside the recorder, or disconnection of the protective earth terminal is likely to make the recorder dangerous under some fault conditions. Intentional interruption of the protective conductor is dangerous.

Failure to comply with these instructions could result in death or serious injury.

In order to comply with the requirements of safety standard EN 61010-1:2010, the recorder should have one of the following as a disconnecting device, located within easy reach of the operator, and be clearly labelled as the disconnecting safety device:

- A switch or circuit breaker which complies with the requirements of IEC 60947-1 and IEC 60947-3.
 - A separable coupler which can be disconnected without the use of a tool.
 - A separable plug, without a locking device, to mate with a socket outlet in the building.
4. Whenever it is likely that protection has been impaired, the recorder should be made inoperative and secured against operation. The manufacturer's service centre should be contacted.
 5. Repair is not to be attempted by a customer. Any adjustment or maintenance expected of an operator as part of the normal operation of the product is referred to as Operational Maintenance. Any maintenance not expected of the operator is referred to as Corrective Maintenance and is to be carried out only by authorized service personnel or returned to an authorized repair centre.
 6. Where conductive pollution such as condensation or conductive dust is present, adequate air conditioning, filtering and/or sealing must be installed.
 7. This recorder contains one battery on the Processor board which must be treated and disposed of with care. Batteries must not be short circuited. Batteries should be disposed of in accordance with local regulations, they must not be disposed of with normal refuse.

Warnings and Safety Precautions

8. Improper signal and supply wiring - WARNING



WARNING

IMPROPER SIGNAL AND SUPPLY WIRING

Signal and supply wiring should be kept separate. Where this is impractical, shielded cables should be used for the signal wiring. Where signal wiring is carrying, or could carry under fault conditions, hazardous voltage (defined as >30 V rms and 42.4 V peak, or >60 Vd.c.), double insulation must be used for all signal wiring.

Failure to comply with these instructions could result in death or serious injury.

9. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be inadequate.

10. The protective earth terminal must remain connected (even if the recorder is isolated from the mains supply) if any of the measuring, communications, or relay terminals are connected to hazardous voltages.

Hazardous Voltage

Hazardous Voltages are defined by EN61010-1 as follows:



WARNING

HAZARDOUS VOLTAGE LEVELS

Voltage levels above 30V rms and 42.4V peak or 60V dc are deemed to be "Hazardous Live". Ensure operators are not exposed to hazardous voltage levels.

Failure to comply with these instructions could result in death or serious injury.

For use in hazardous locations

(only applicable to recorders with FM approval)



WARNING

EXPLOSION HAZARD

Do not remove or replace the Connectors, Fuse holders while circuit is live when Flammable or Combustible atmosphere is present.

Warnings and Safety Precautions



WARNING

EXPLOSION HAZARD

Do not disconnect equipment when a flammable or combustible atmosphere is present.



WARNING

EXPLOSION HAZARD

Do not open the enclosure or replace the battery when a flammable or combustible atmosphere is present.



WARNING

EXPLOSION HAZARD

Do not connect or disconnect the equipment or memory card or USB device unless the power has been switched off or the area is known to be hazardous.

NOTICE

The Front door is tool secured and do not intended to open during live condition or when flammable or combustible atmosphere is present. Ensure to lock the door for use in hazardous location.

In case of GR Mini /Multi /eZtrend the front door is tool secured with cable tie whereas in DR graphic recorder the front door is tool secured with Hex head Screw.

Section 2: Installation

Damage checks

Any damage caused to the recorder or the contents should be reported immediately to your shipper.

Unpacking

Remove the contents, check the packaging and remove all documentation and accessories supplied. Retain the box and any packaging for future transportation.

Contents

Check that the contents and accessories are correct against the order or Model Selection Guide using the model number on the recorder. Contact your authorised **Honeywell** distributor or **Honeywell** immediately should there be any query.

The contents are based on Unit Model Number ordered and will vary from unit to unit. The following list is provided as a general guide and not specific to any single unit.

- Recorder - specification as ordered (check against the Model Selection Guide)
- Mounting fixings - Mounting clamps and panel gasket
- Connector kit - mating half connectors to recorder spec. Including a CJC connector for Thermocouple operation.
- Quick Start Guide - to get you started
- First time Password system instructions - for ESS recorders only
- DVD - Viewer software + documentation
- Plastic stylus x 2 (for use with the touch screen)
- Manual (optional) - Hard copy English, French or German
- Any other items ordered as an option (Model Selection Guide)

Re-packing

NOTICE

Should the original packing be destroyed or lost, new packaging can be ordered or as a last alternative, then **ONLY** pack the recorder in polystyrene granules if the recorder is **FIRST** sealed in a strong plastic bag. Failure to do this will invalidate your warranty.

Environment and Location

- The recorder is designed to be mounted into a panel. [See “Installation Instructions” on page 13.](#)
- Mounting angle is unlimited. Choose a suitable location with an ideal viewing angle. [See “Mounting and Viewing Angles” on page 10.](#)
- The location should be free from vibration.
- The environment should be of non-condensing humidity.
- The ambient temperature should be between 0°C and 50°C (32°F to 122°F).
- The relative humidity should be between 10% to 90%.
- In the presence of sustained strong EM Field (~10V/m or higher), deviation from the accuracy specifications may occur. To improve performance under such installation scenarios we recommend using twisted pair cables and/or ferrite cylinders (over individual wires)

Mechanical Installation

Mounting and Viewing Angles

Mounting - The **Minitrend GR**, **Multitrend GR** and **eZtrend GR** recorders have an unlimited mounting angle.

Viewing - For the best view of the display the viewing angle should not exceed:

Minitrend GR 55° from the left or right, 40° looking down and 50° looking up at the recorder display.

Multitrend GR and **DR Graphic** 70° from the left or right, 45° looking down and 55° looking up at the recorder display.

eZtrend GR 45° from the left or right, 10° looking down and 30° looking up at the recorder display.

Panel cut-out size for the Minitrend GR and eZtrend GR recorders

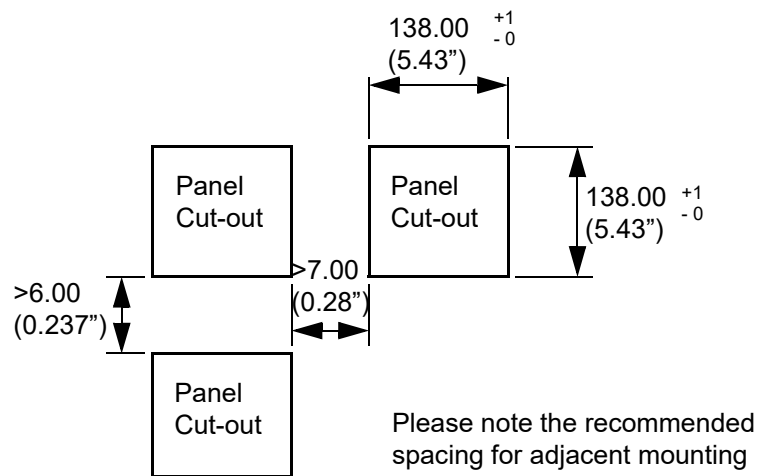


Figure 2.1 Minitrend GR and eZtrend GR Panel cut-out

Mechanical Installation

Panel cut-out size for the Multitrend GR recorder

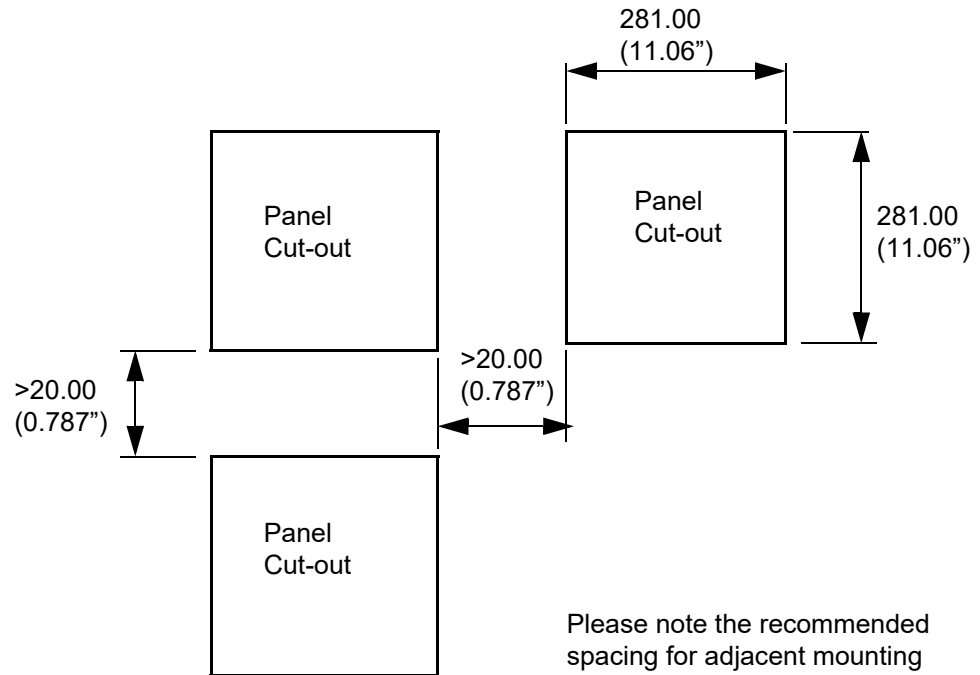


Figure 2.2 Multitrend GR Panel cut-out

The **Minitrend GR**, **Multitrend GR** and **eZtrend GR** recorders are DIN Standard sizes and should be panel mounted.


Panel cut-out size for the DR Graphic recorder

Physical considerations

The recorder can be mounted flush in a panel or on the surface of a panel or wall using the mounting kit supplied with the recorder. Adequate access space must be available at the back of the panel for installation and servicing.

Overall dimensions

The overall dimensions and panel cutout requirements for mounting the recorder are shown in Figure 2.3

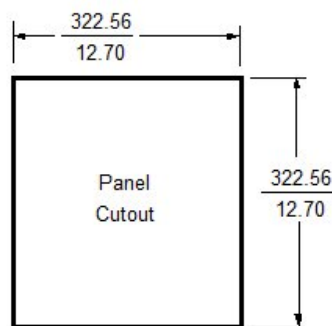


**Figure 2.3
DR Graphic recorder
Panel cut-out**

Mechanical Installation

Minitrend GR Dimension details

Figure 2.4 Minitrend GR Recorder Dimensions and Mounting slots (including 45mm panel thickness)

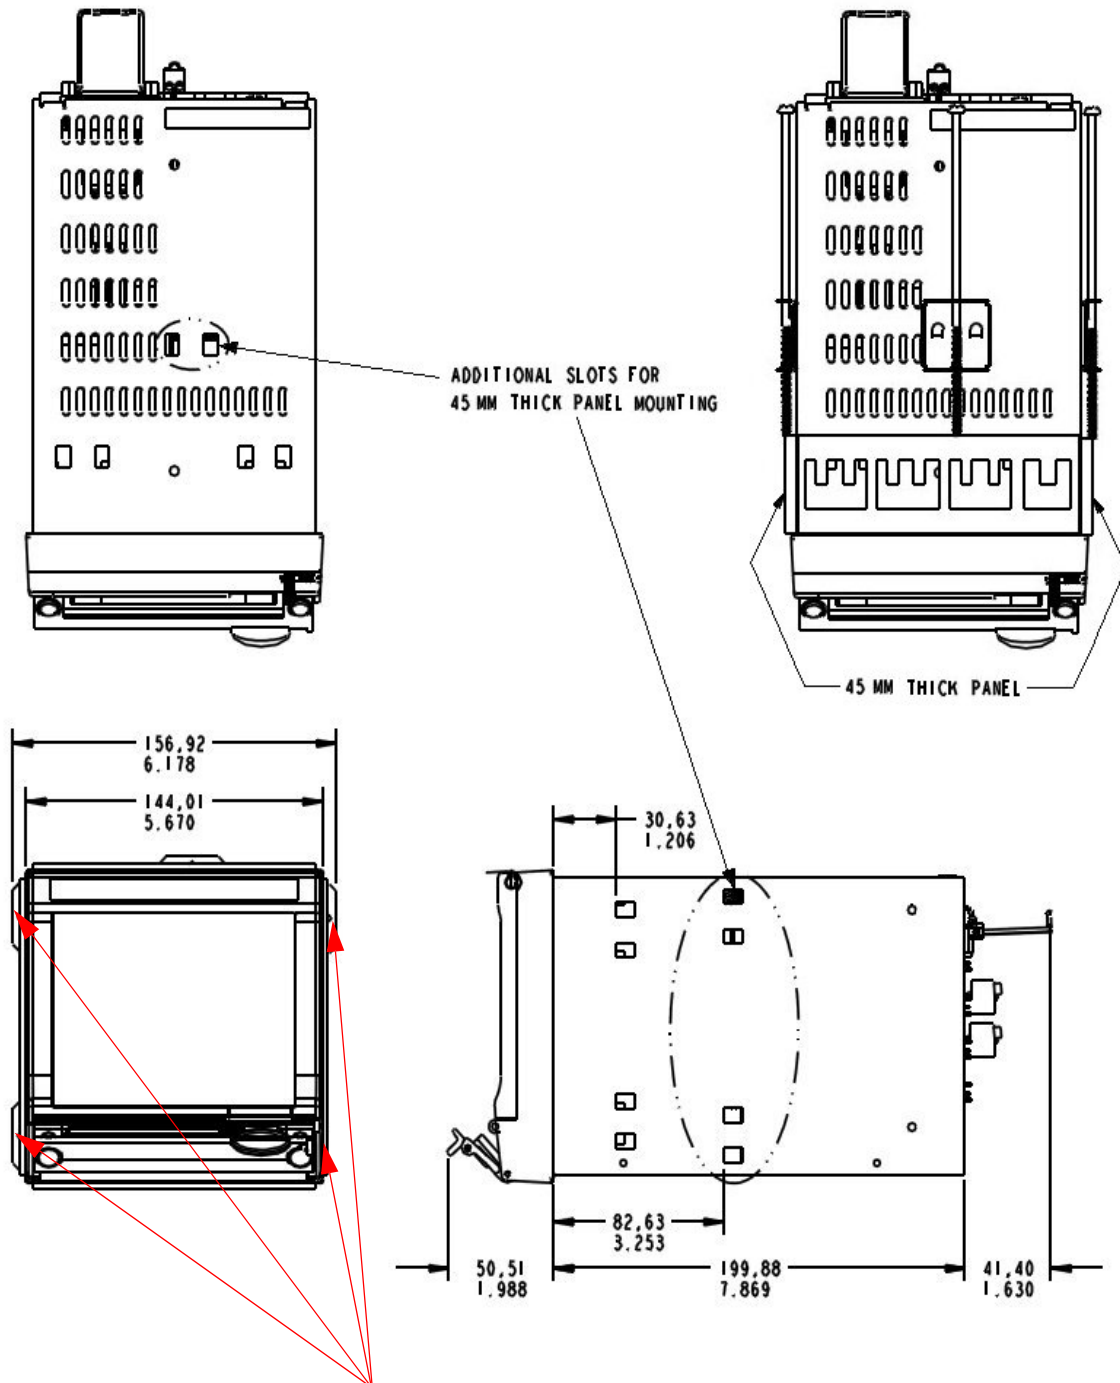

4 Mounting clamp positions for 2 - 20mm panel thickness. For standard units fit only two brackets on opposite sides of the unit, either top and bottom or left and right slots. NEMA 4X rated recorders require all four mounting brackets to be fitted.

Mechanical Installation

Multitrend GR Dimension details

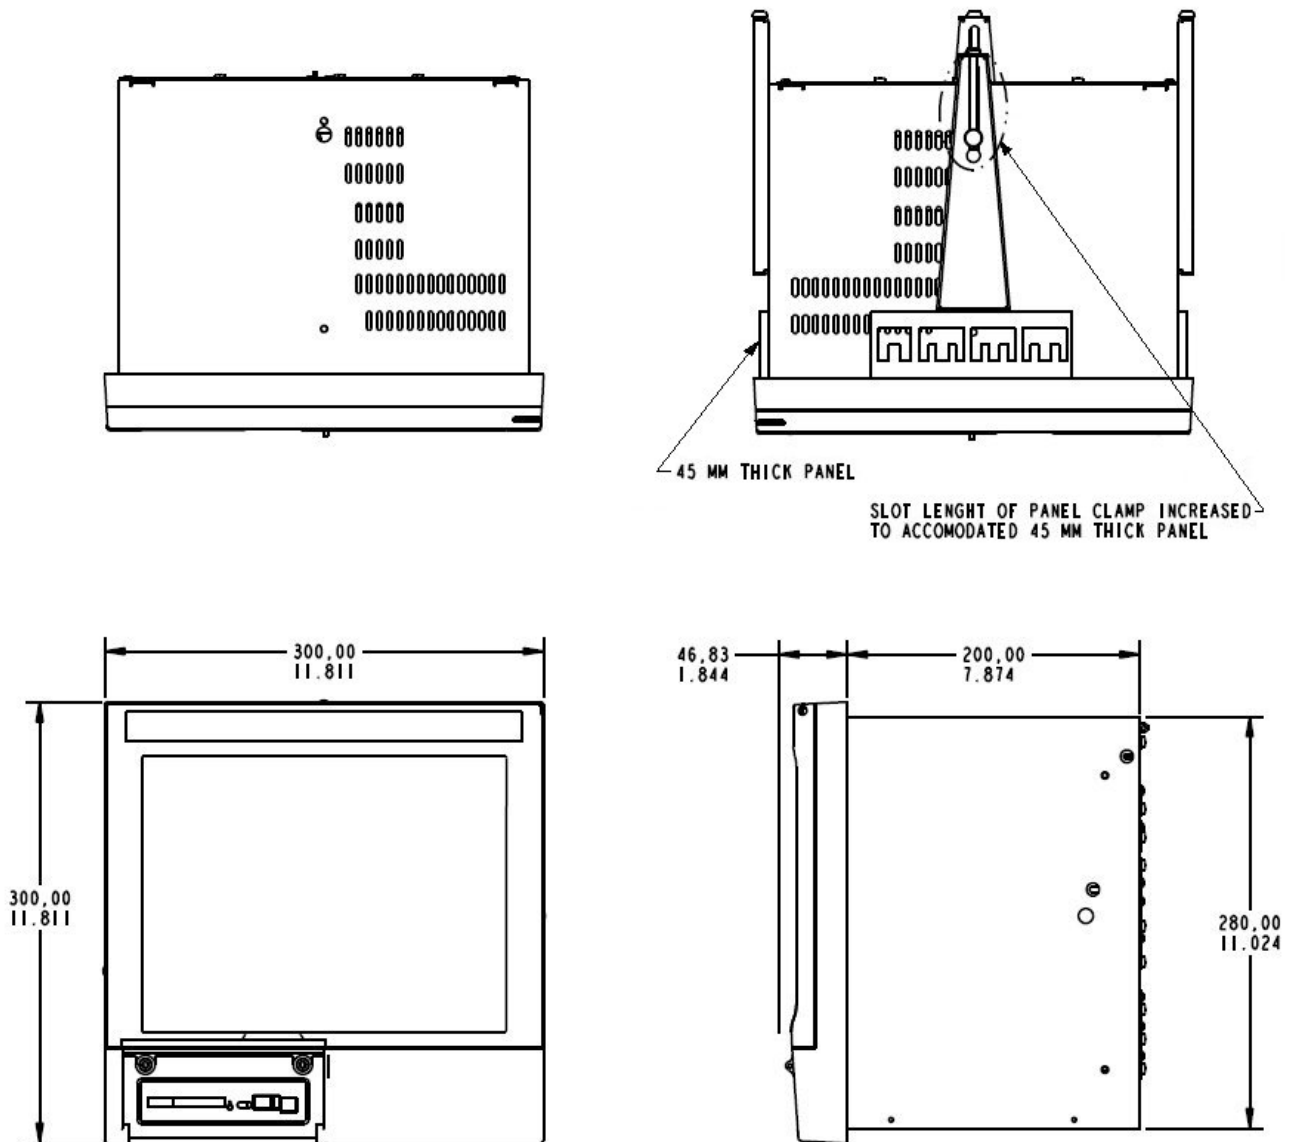


Figure 2.5 Multitrend GRRecorder Dimensions and Mounting slots
(including 45mm panel thickness)

Installation Instructions

- Minimum panel thickness = 2mm (0.078"), max = 20mm (0.78")
- Alternate panel mounting available thickness = 45mm (1.77")
- Both recorders must be inserted from the front of the panel,
- Two mounting clamps are supplied and can be fixed either on the top and bottom sides or on the left and right sides of the case.

Mechanical Installation

eZtrend GRDimension details

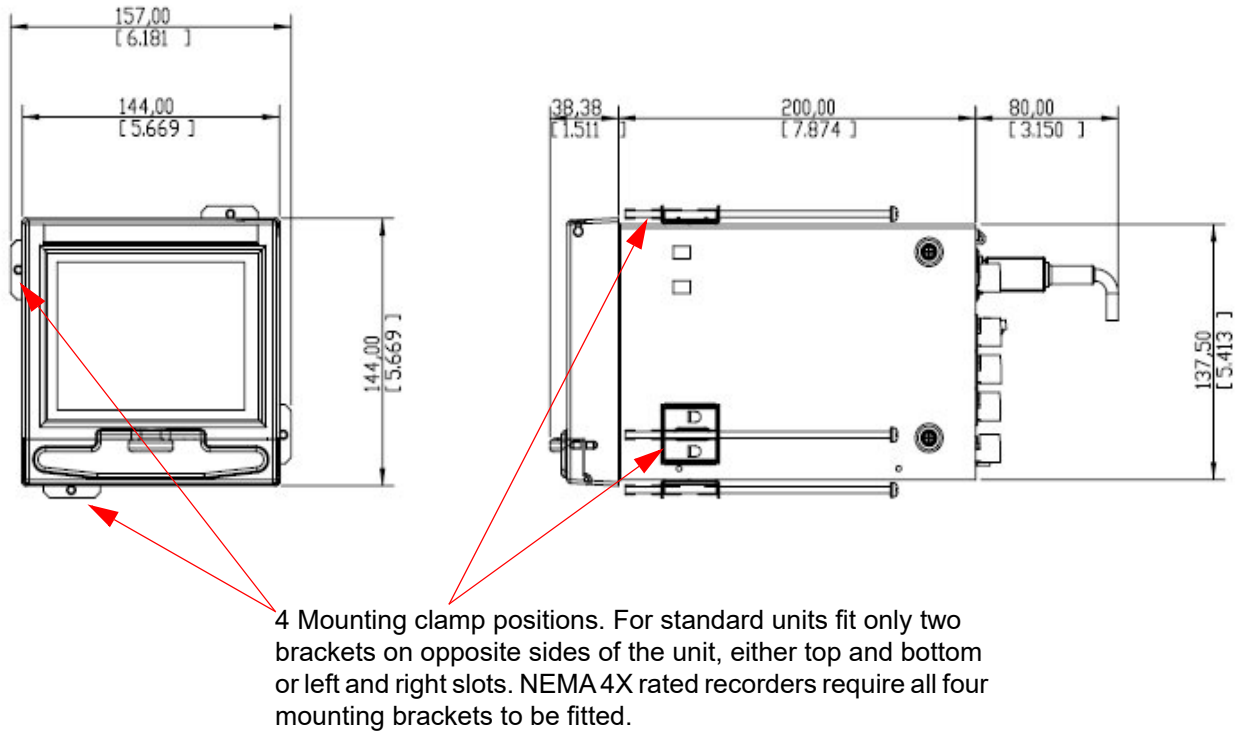


Figure 2.6 eZtrend GRrecorder dimensions

DR Graphic recorder Dimension details

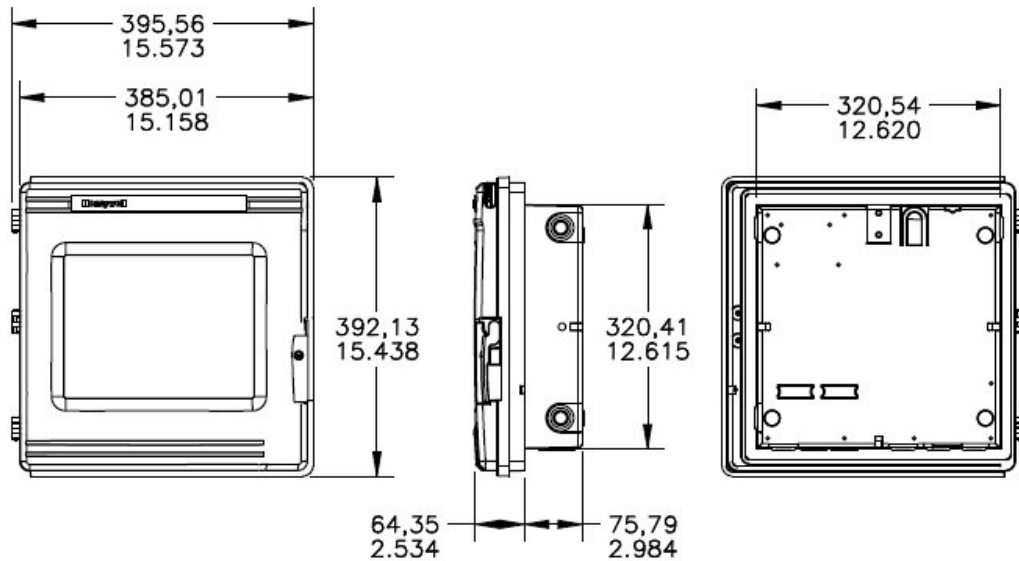


Figure 2.7 DR Graphic recorder dimensions

Mechanical Installation

Panel Mounting Clamp Installation

The **Minitrend GR**, **Multitrend GR** and the **eZtrend** recorders slide into the panel cut-out and are held in place by two or four panel clamps (6 clamps for **Minitrend GR** recorder with 45mm panel thickness). The panel clamps should be fitted on diagonally opposite sides of the unit and tightened against the rear of the panel using two fixing screws.

The mounting clamp assembly and fitting instructions differ slightly for the two recorders.

Minitrend GR and eZtrend GR *See Figure 2.6*

1. Insert the panel gasket onto the recorder so it goes between the back of the recorder bezel and the panel. From the front panel, place unit in the panel and push through the panel.
2. To loosen each clamp, unscrew the long screw to accommodate the panel thickness. Use either a Number 1 Phillips or Straight slot screw driver.
3. From behind the panel, the orientation of the clamp should be with the screw head towards the rear of the unit.
4. Take the first clamp and locate the two lugs on the clamp into the slots on the unit.
5. Take the second clamp and do the same but in the diagonal position to the opposite side. Repeat for all other clamps.
6. Tighten the screw using a Number 1 Phillips or Straight slot screw driver and the clamp will secure against the panel.



CAUTION

CONTROL UNIT DAMAGE

Do not over tighten mounting clamp screws.

Minitrend GR and **eZtrend GR** torque setting should be 0.5 - 0.75Nm/4.4 - 6.6lbf-in

Multitrend GR torque setting should be 0.5 - 0.70Nm/4.4 - 6.2lbf-in

Failure to comply with these instructions may result in product damage

Multitrend GR

1. Insert the panel gasket onto the recorder so it goes between the back of the recorder bezel and the panel. From the front panel, place unit in the panel and push through the panel.
2. To loosen each clamp, unscrew the long screw to accommodate the panel thickness. Use either a Number 1 Phillips or Straight slot screw driver.
3. From behind the panel, the orientation of the clamp should be with the screw head towards the rear of the unit.
4. Position the circular mounting boss in the hole on one side of the case with the lip of the boss inside the case. Ensure the front of the clamp is up against the panel.
5. Fix the second clamp on the opposite side of the unit.
6. Tighten the screw using a Number 1 Phillips or Straight slot screw driver and the clamp will secure against the panel.

Mechanical Installation

DR Graphic recorder *See Figure 2.8*

This section provides instructions for mounting the DR Graphic recorder using one of the following methods:

- Flush in a panel
- Flush in a panel for recorders with NEMA 4
- On the surface of a wall for panel

Choose the method that meets your mounting requirements. Use the associated dimension drawings for reference.

How to remove knockouts for conduits

Before you mount the recorder, remove the appropriate plugs in the bottom and/or sides of the recorder case for wire entry via 1/2" (12.7 mm) conduits. Refer to [Figure 2.8](#) for plug locations. To see recommended use of conduits for various types of wiring, refer to [Figure 2.12](#) and [Figure 2.13](#).

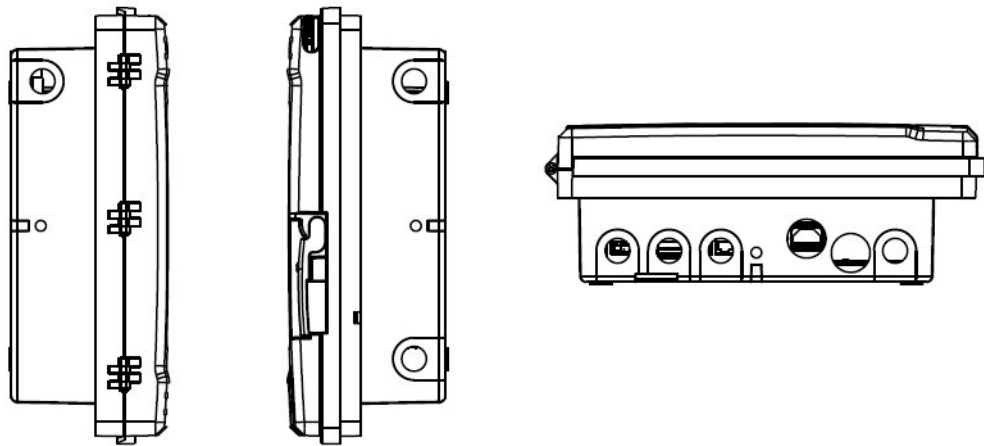


Figure 2.8 DR Graphic recorder dimensions

Mounting Flush in panel (new cut-out)

Procedure

1. At the appropriate location, make a square cutout in the panel. Cutout dimensions should be 12.7 ±0.060 inches by 12.7 ±0.060 inches (322.56 ±1.52 by 322.56 ±1.52 millimeters). [See Figure 2.9](#).
2. Orient the recorder case properly and slide it into the cutout from the front of the panel. Support the recorder as shown in Steps 3 and 4.
3. Refer to [Figure 2.9](#). From the back of the panel, attach a mounting bracket to each side of the recorder case using a 1/4-20 x 1/2 inch hex screw for each bracket (mounting hardware supplied with recorder). Leave the screws slightly loose so you can adjust the brackets.
4. While holding the recorder firmly against the panel, slide each bracket against the back of the panel and tighten the screws.

Mechanical Installation


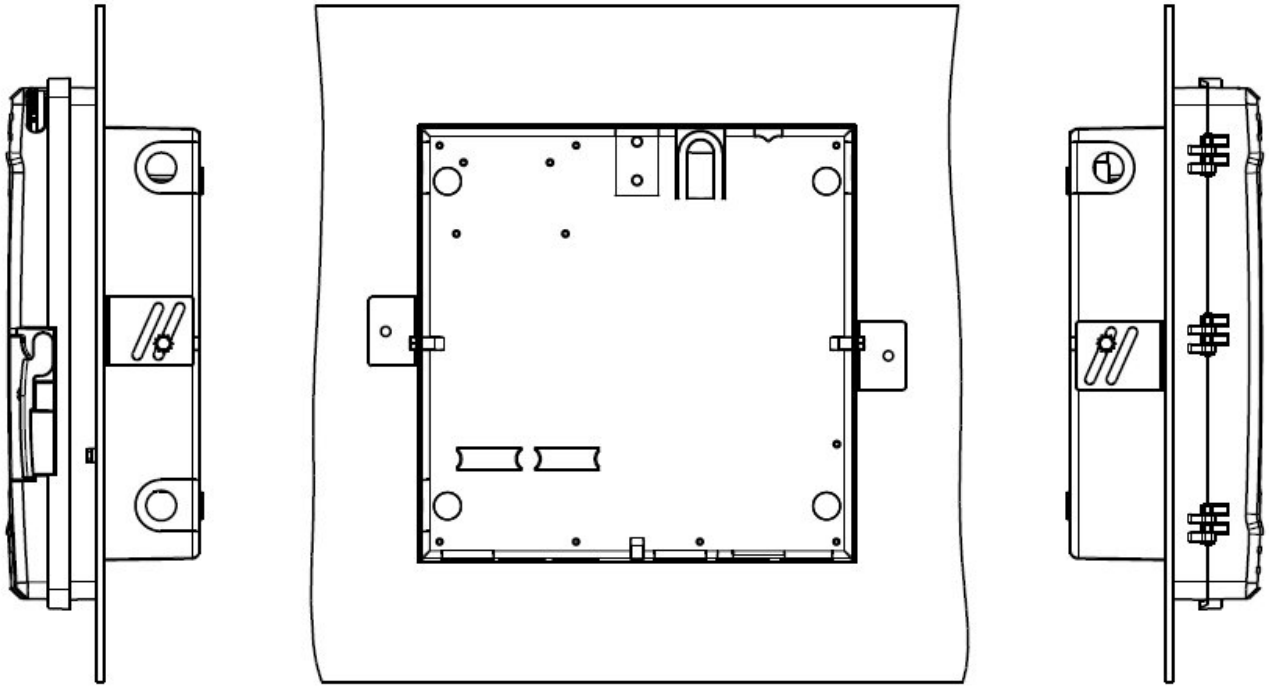


Figure 2.9 Flush Mounting in a panel cutout

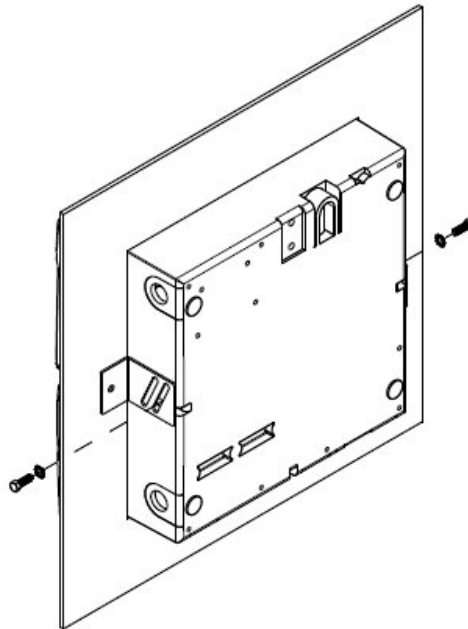


NOTE: Mounting brackets and attaching hardware are included in kit 30755065-501

Mechanical Installation


Mounting Clamp Diagram

Figure 2.10 Minitrend GR Mounting Clamps

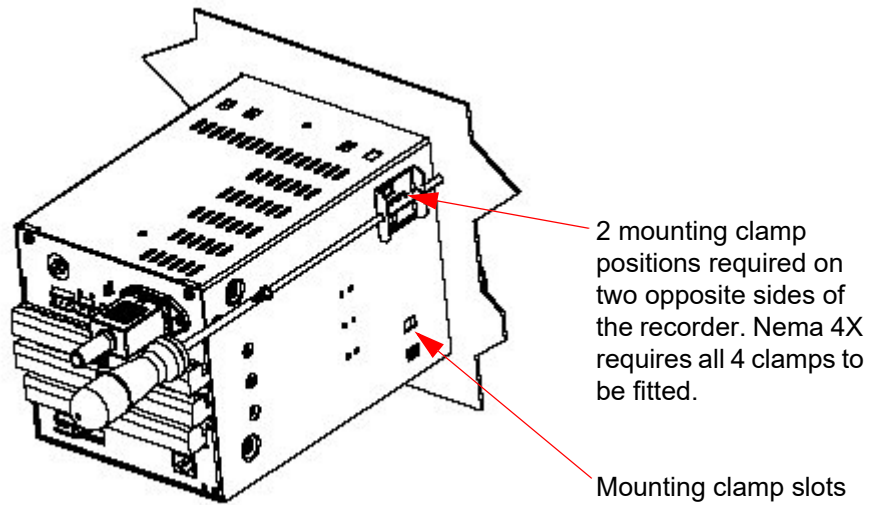

Mechanical Installation

Figure 2.11 Multitrend **GR** Mounting Clamps

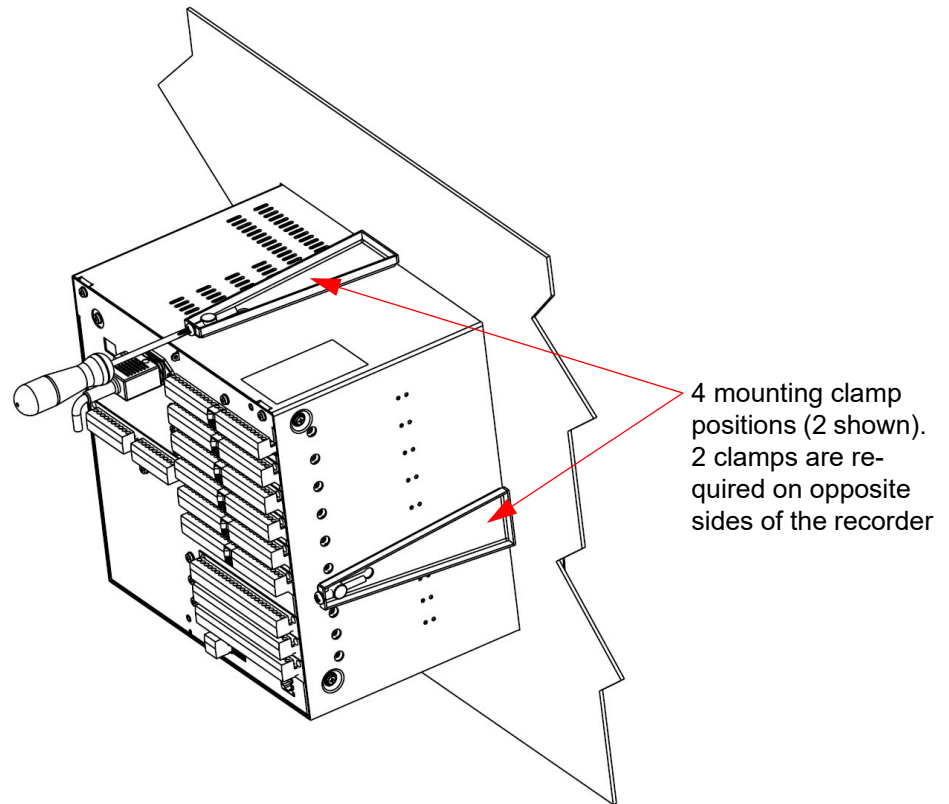

Mounting Clamp Diagram for 45mm panel thickness

Mechanical Installation

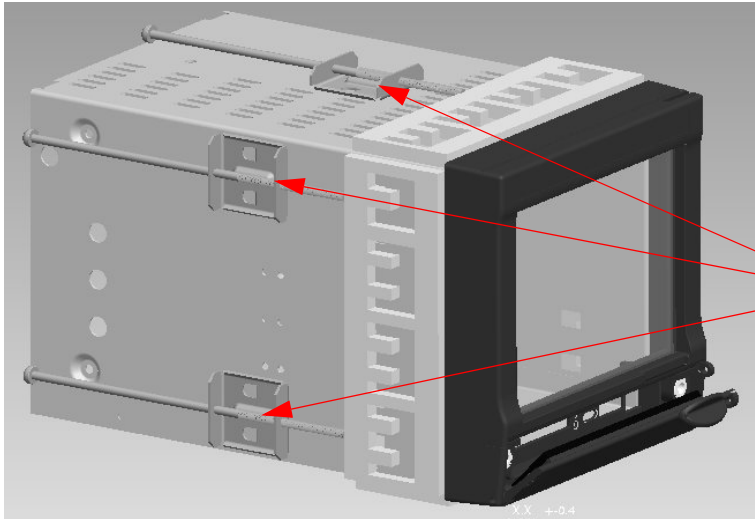


Figure 2.12 Minitrend GR - 45mm Mounting Clamps

6 mounting clamp positions (3 shown) for mounting in 45mm panel thickness. Mounting slots shown in [Figure 2.4](#). Only 2 mounting brackets need to be fixed, in opposite positions.

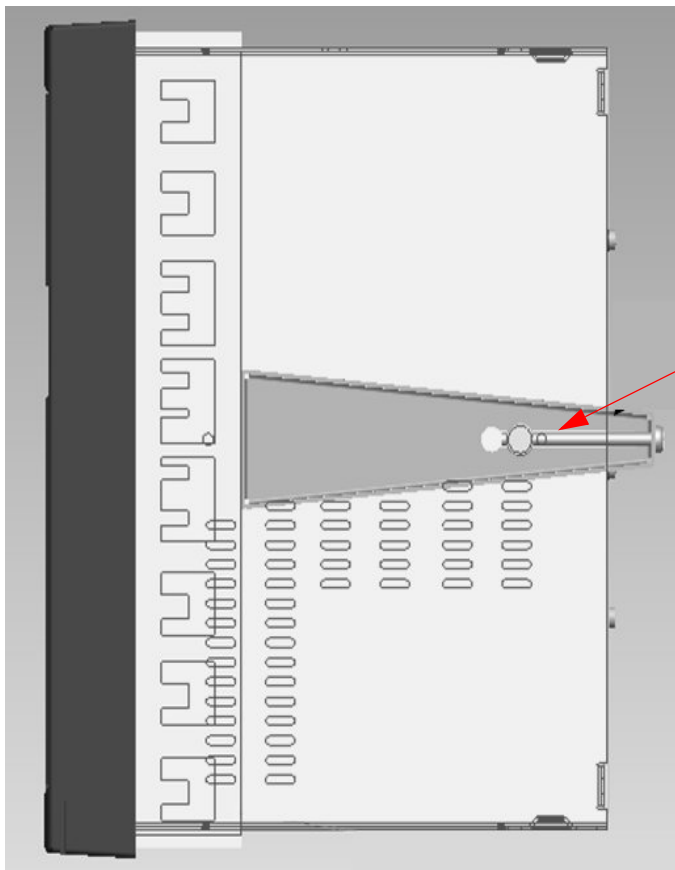


Figure 2.13 Multitrend GR - 45mm Mounting Clamps

4 mounting clamp positions (1 shown) for mounting in 45mm panel thickness on opposite sides of the unit. Mounting slots shown in [Figure](#). Both mounting clamps are required to be fitted

Panel mounting recorder with NEMA4

Mechanical Installation

Refer to [Figure 2.14](#) and follow the procedure below to panel mount your recorder if it has a NEMA4.

1. Place the panel gasket onto the rear flange of the recorder case.
2. Install four #8-32 screws on each of the three mounting brackets so the ends of the screw threads are flush with the face of the bracket.
NOTE: Screw heads to be flange side of brackets.
3. Insert the case with gasket into the panel opening.
4. Install one left hand and one right hand bracket with 1/4 x 3/8 long bolts and lockwashers on each side of the case.
NOTE: The notch on each bracket should be facing upward towards the top of the unit. Do not tighten the hex bolts at this time.
5. Install the remaining right hand bracket on the top with the 1/4 x 3/4 long bolt and lockwasher. Do not tighten the bolt at this time.
6. Place a screwdriver blade on the notch of each bracket and firmly tap so that each bracket firmly mates the case with gasket to the panel.
NOTE: Keep brackets parallel to case. Tighten the three 1/4 hex bolts to hold the brackets in place.
7. Start to tighten the #8-32 x 1/2 screws on the right side bracket. Alternate screws at opposite ends until all four screws have a minimum of 10 lb-in of torque applied. Do the same to both the left side and top brackets.
When completed all twelve screws should have a minimum of 10 lb-in of torque applied. This assures the case and panel gasket are adequately sealed against the panel.

Mechanical Installation


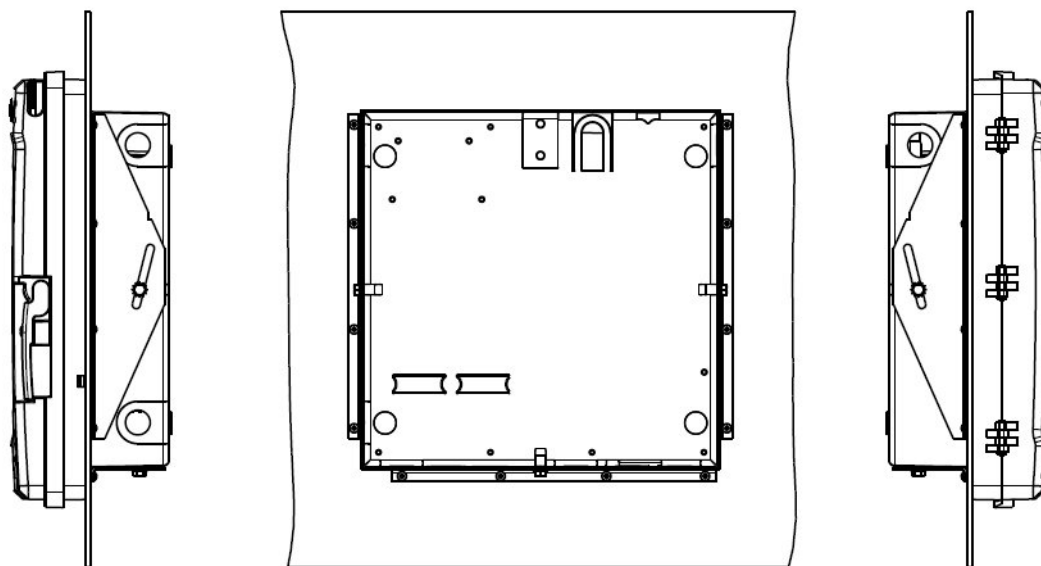


Figure 2.14 CMD Panel Mounting with NEMA4

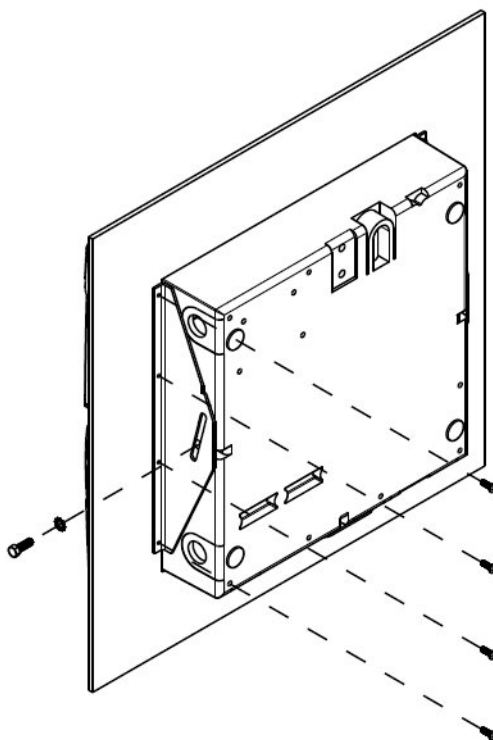

Mounting on Surface of panel or wall

Procedure

Refer to [Figure 2-15](#) and follow the procedure below to mount your recorder on a surface (panel or wall).

NOTE: Three (3) screws must be supplied by the user for attaching the mounting hardware (brackets and support hook) to panel or wall.

Using two flat-head 10-32 x 1/4-inch screws supplied with the recorder, fasten the support hook into the recess at the back of the recorder case as shown in [Figure 2-15](#).

1. Using 1/4-20 x 1/2-inch hex screws and lockwashers, attach a mounting bracket to each side of the case. Leave the screws slightly loose so as to permit some adjustments of the brackets.
2. On the panel, mark the locations for the three holes, as shown by the hole pattern in [Figure 2-15](#).
3. Using a drill of appropriate size for user-supplied screws, drill a hole in the front of the panel for the eye of the support hook.
4. Insert the screws for the support hook into the panel, allowing the screw head to protrude approximately 5/16-inch.
5. Hang the recorder support hook on the screw. Make sure that the locations for the other two holes (marked in Step 3) are correct. If not, make sure that the recorder is aligned vertically, and use the brackets as templates to mark the proper locations.
6. Remove the recorder from the panel and drill the other two holes.
7. Hang the recorder on the screw by the support hook and insert the other two user-supplied screws through the brackets into the panel. Tighten the two hex screws that attach the brackets to the case.

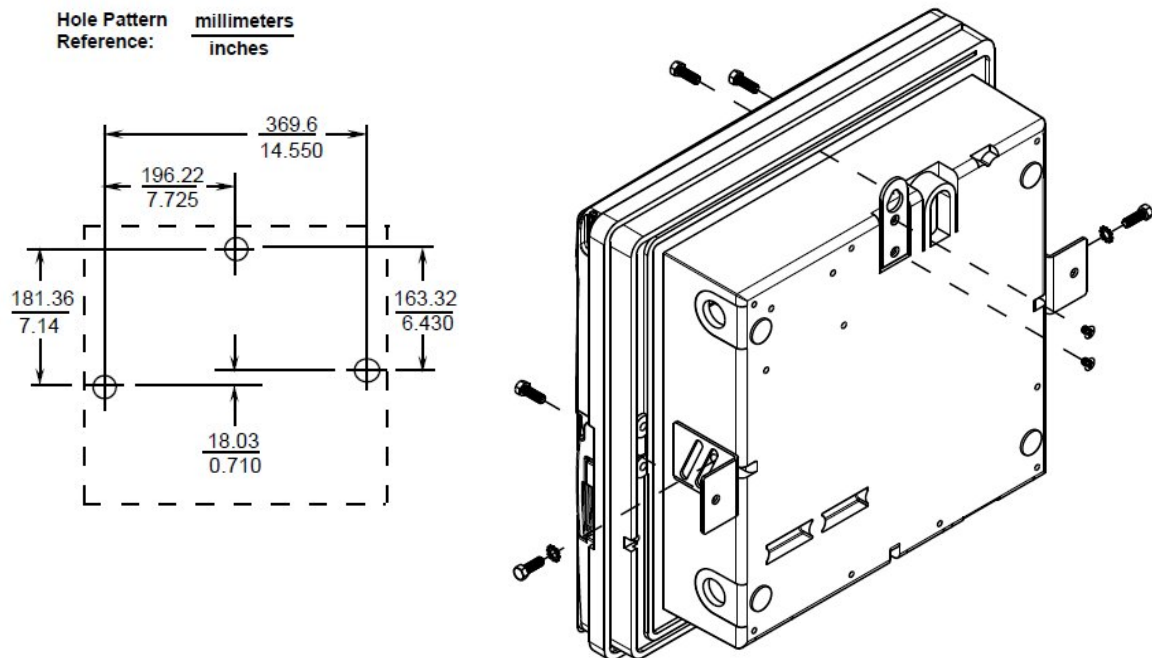


Figure 2.15 Surface Mount on wall or panel

Electrical Installation

Installation Category

- Installation category - Class I, Installation category II, Pollution degree 2 used at maximum altitude 2000m.
- Follow National and local electrical codes for installation in a Class 1, Div.2 area.

For voltage, frequency and power refer to the appropriate Specification sheet: [See “Section 12: Technical Data & Specifications” on page 313.](#)

Fuses

There is a fuse situated on the DC input version power supply, type 2A time-delay, this can be replaced by the user. Replacement of fuses should be carried out by qualified service personnel.

If the fuse should blow again there is probably a problem elsewhere within the unit and the recorder should be returned for inspection to your authorised **Honeywell** distributor or **Honeywell** Service department.

Cables

To fully comply with the requirements of the CE Mark, all cables connected to the rear of the unit should use screened cable terminated at both ends. A low impedance earth cable (<50 mΩ) **must** be connected to the earthing stud on the rear of the recorder, to ensure that the recorder is always earthed.

Before performing any installation please read the section on [“Safety” on page 2](#) and [“Warnings and Safety Precautions” on page 5.](#)

All connections to the unit are made via the rear panel, the layout of which is shown in [page 26.](#)

Note: The **eZtrend GR** Analogue Input card (Slot A). Cable screen must be well connected to the recorder case using a low impedance bond. Also avoid use of a length of wire between the cable screen and the recorder case.

Signal Wiring



WARNING

ENSURE SAFETY EARTH CONNECTION

Always ensure the unit is connected to safety earth when connecting to an AC or DC supply.

Failure to comply with these instructions could result in death or serious injury.

Your recorder is intended for panel-mount use, and only the front face is intended to be exposed to the operator. Disconnection from the supply **MUST** be made possible by means of a switch, circuit breaker or other means of supply isolation.

The disconnection device must be included in the panel installation, clearly marked, in close proximity to the recorder, and within easy reach of the operator. The protective earth terminal must remain connected (even if the recorder is isolated from the mains supply) if any of the analogue or relay terminals are connected to hazardous voltage.



CAUTION

UNIT DAMAGE CONTROL

To protect against component failures the user should fit an external fuse for the DC input power supply. The value should be 4A, time delay, high breaking capacity, minimum 60Vdc.rated.

Failure to comply with these instructions may result in product damage



WARNING

HAZARDOUS VOLTAGES

When using the recorder as portable equipment the optional rear cover must be fitted when hazardous voltages are connected.

Failure to comply with these instructions could result in death or serious injury.

AC Power

AC supply is connected via the standard configuration IEC chassis plug on the power supply, 100 - 240 Vac, 50-60 Hz (40W **Minitrend GR**, **eZtrend GR** and 50VA **DR Graphic** and 60W **Multitrend GR**). Absolute limits 90V-132Vac (110V) and 180V-264Vac (240V).

AC/DC Power Supply

For the **Minitrend GR** the supply range is 12-30V DC (absolute limits are 12V to 30V DC). The **DR Graphic** and **Multitrend GR** the supply range is 24V DC +/- 10% (absolute limits are 20V to 55V DC), the AC range is 20 to 30V AC. The **Minitrend GR** and the **eZtrend GR** also has an 18V option with supply range 12VDC -30VDC / 12VAC -20VAC.

DC power rating are as follows **Minitrend GR** and **eZtrend GR**: 40W, **Multitrend GR**: 60W, **DR Graphic**: 40W.

Power to the D.C.variant is connected via a rectangular 3-way connector as identified in [page 26](#) for the **Minitrend GR** and [page 26](#) for the **Multitrend GR** and [page 28](#) for the **DR Graphic**.

Note: Inrush Current = 75A max (High Line, Cold Start) for all recorders.

Electrical Installation

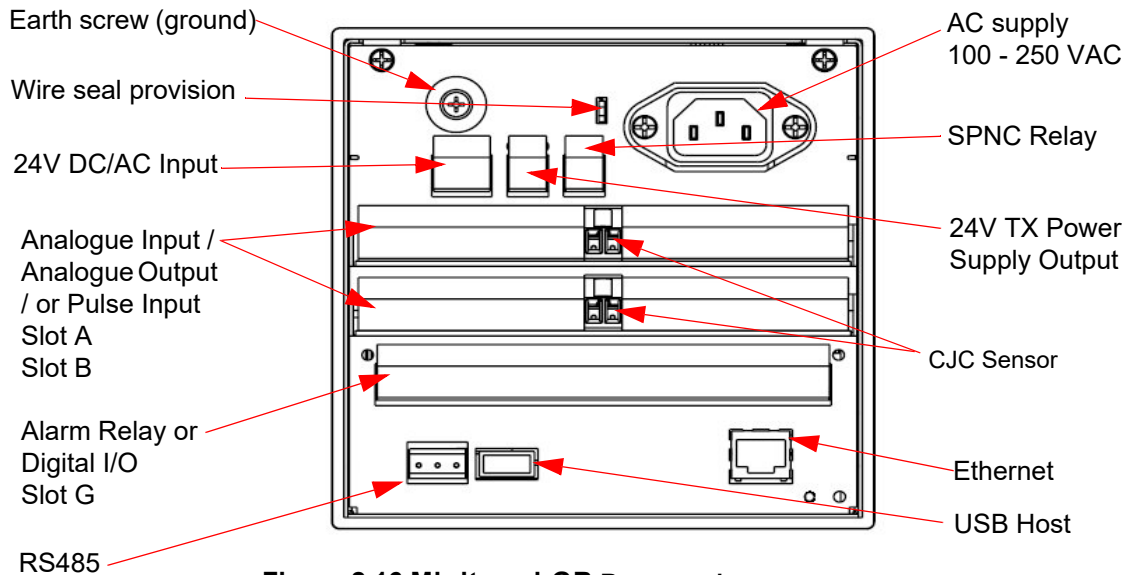


Figure 2.16 Minitrend GR Rear panel

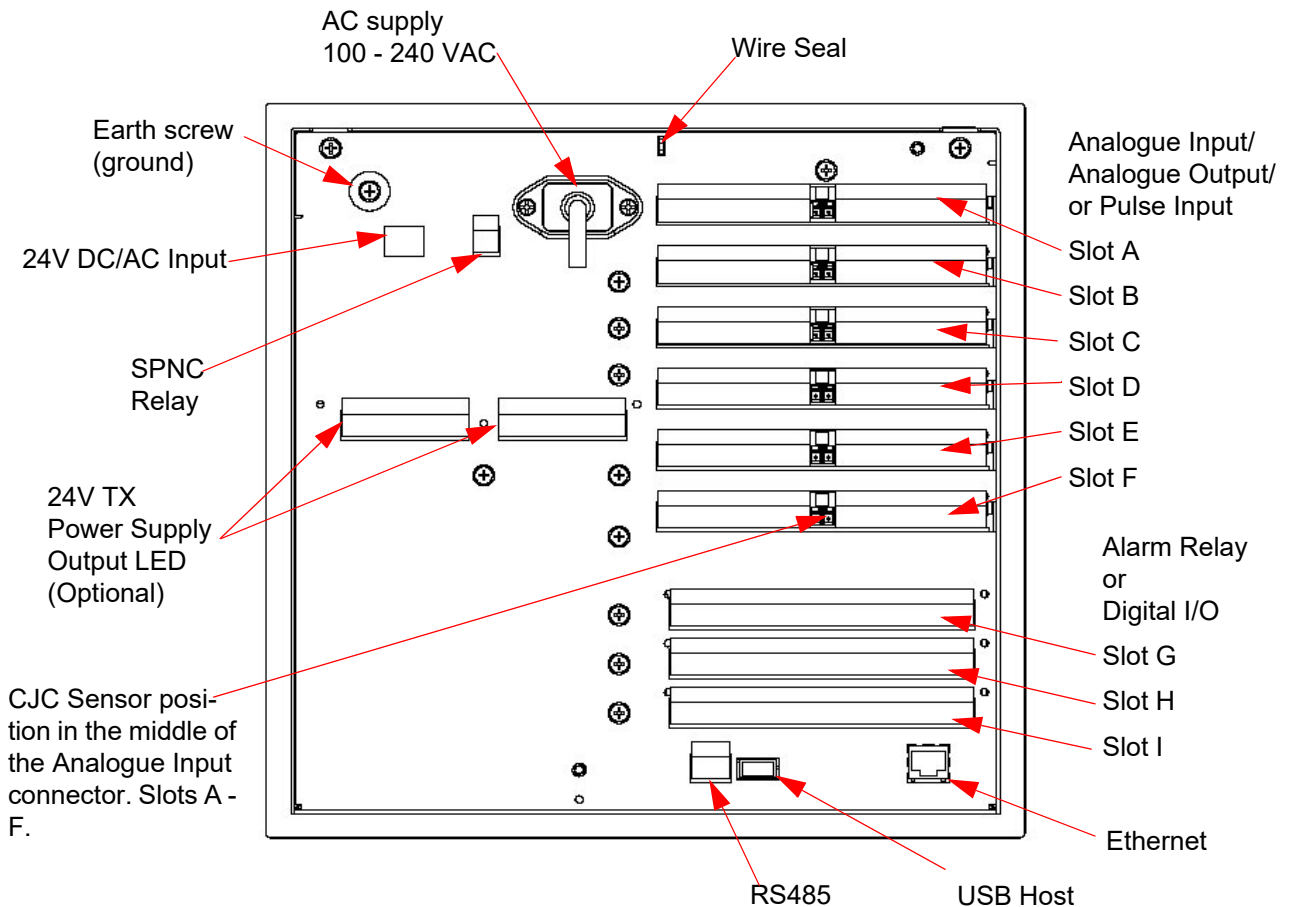


Figure 2.17 Multitrend GR Rear panel

Electrical Installation

Card and Slot positions

Table 2.1 : Card priority positions

Cards	Minitrend GR	Multitrend GR	eZtrend GR	DR Graphic
Analogue Input card	A, B	A, B, C, D, E, F	A*, B (option)	A, B
Analogue Output card	B	E, F	-	B
Pulse Input card	A, B	A, B, C, D, E, F	-	A, B
Alarm Relay or Digital I/O card	G	G, H, I	G	B

Also, [See “Rear USB Port Availability” on page 45.](#)

DR Graphic card positions

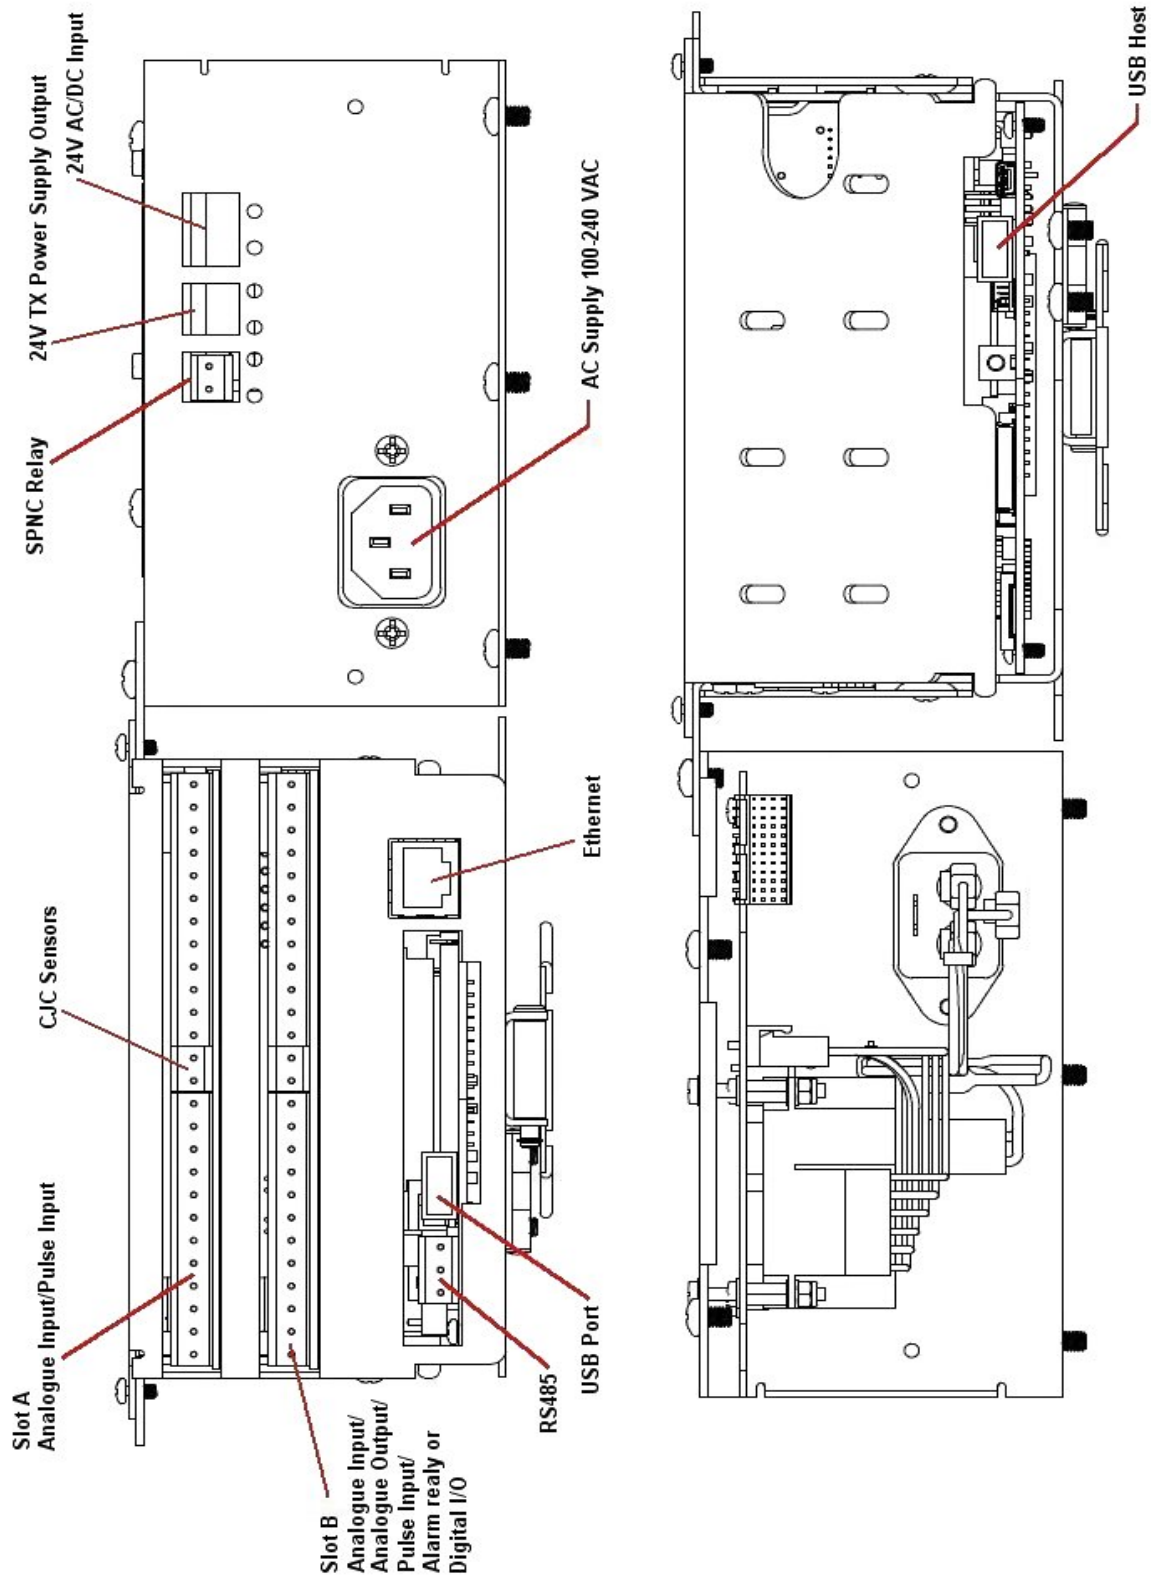


Figure 2.18 DR Graphic slot positions and connections

Electrical Installation

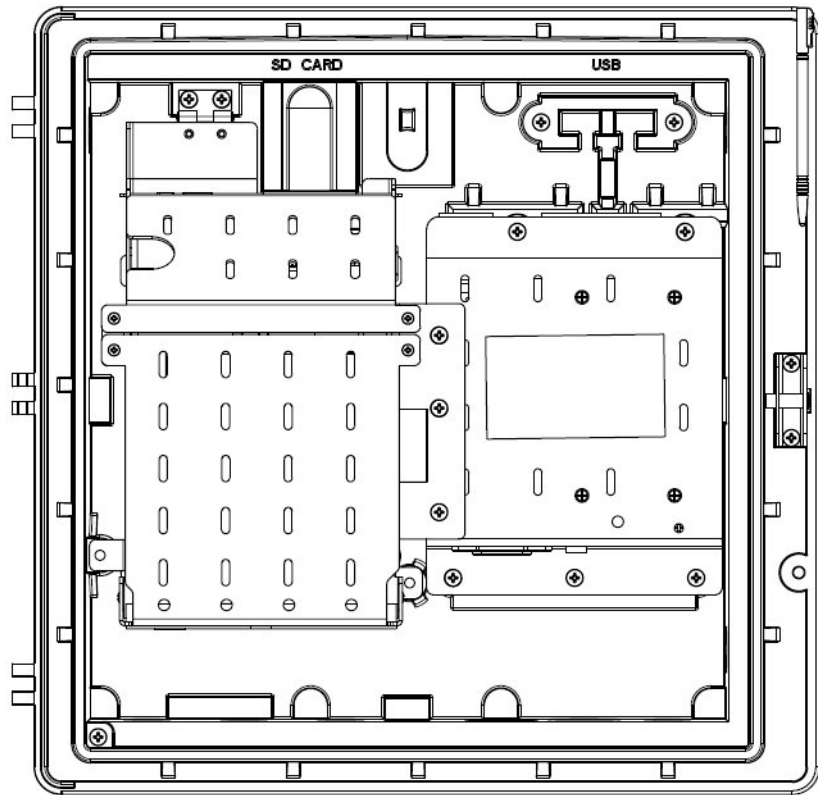


Figure 2.19 DR Graphic Electrical connections

DR Graphic cards; selection jumper table

Table 2.2 :

Slot B	AI/AO/Pulse	J8 & J9: Link 1 & 2
	Alarm/DI/DO	J8 & J9: Link 2 & 3

NOTE: Do not disturb J4 & J5 jumpers in positions 1 & 2 for Slot A. These are for future provision.

Electrical Installation

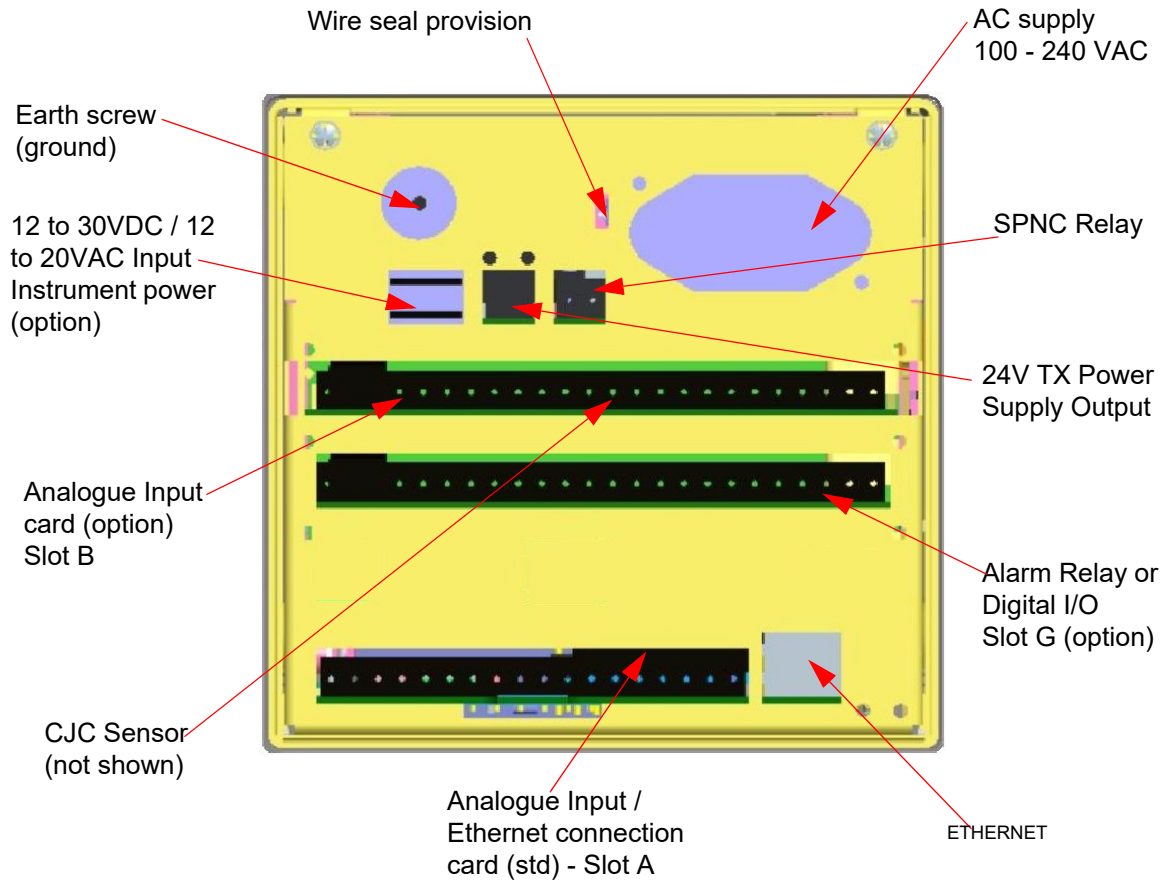


Figure 2.20 eZtrend GR Rear panel

Analogue Input Card

Each **Analogue Input card** has up to 8 input channels for the **Minitrend GR** and the **Multitrend GR** and up to 6 channels for the **eZtrend GR**. Connections are made via 2 x 12-way screw terminal plugs that fit into a PCB header on the rear of the unit. The 2-way CJC sensor should remain fitted in the central 2-way header.

The **Minitrend GR** can have two analogue input cards fitted giving up to 16 input channels (2 x 8 channel cards). The slot positions are A & B, these are identified on the rear panel on the back of the unit. Either slot can be used, it is recommended that slot A is used if only one card is fitted.

The **Multitrend GR** can have up to 6 analogue input cards fitted, up to 48 input channels. The slot positions A, B, C, D, E or F; these are identified on the rear panel. PC boards are fitted in order, slot "A" starts from the top.

The **eZtrend GR** can use this card as an additional Analogue Input card fitted in Slot B, providing up to 6 more channels. This card would be used after using the 3 or 6 channel standard **eZtrend GR** Analogue Input card which is fitted in Slot A, see "[eZtrend GR Analogue Input \(Standard\) card](#)" on page 34. The **DR Graphic Recorders** can have two analogue input cards fitted giving up to 16 input channels (2 x 8 channel cards). The slot positions are A & B, these are identified on the IO card chassis inside the unit. Either slot can be used, it is recommended that slot A is used if only one card is fitted.

Ensure to connect the jumpers on **DR Graphic** backplane card as per **DR Graphic** Cards Selection Jumper Table on [page 29](#) before installing the AI cards. See "[eZtrend GR Analogue Input \(Standard\) card](#)" on page 34.

To fit this option card into the **eZtrend GR** recorder you will require an expansion card to interface to the recorder.

AI Measurement Instructions

AI Max Measuring Input Voltage (+ to -): 60Vdc

AI Max Common Mode Voltage (+ and -) to Chassis GND: 60Vdc.

Temperature measurement directly on live parts are not acceptable.



WARNING

Failure to comply with these instructions could result in death or serious injury. Even with the above restricted AI inputs transient voltage up to 500V can occur on such inputs.

NOTICE

For 12 and 24-way connectors; torque setting 0.4 Nm/3.5lbf-in. Do not over tighten. Recommended wire size for termination connector is 22-12 AWG (American Wire gauge) equivalent to 22-14 SWG (Standard Wire Gauge). AWG metric 0.6426-2.052mm in diameter or SWG metric 0.71 - 2.03mm in diameter.

Electrical Installation

Rear Covers

Optional rear covers are available for these products (except for the **DR Graphic recorder** which does not require a rear cover) and it is recommended to use the rear cover to protect the wiring and to minimize external effects that could impact the performance of the CJC. For the rear cover part number, see [“Section 10: Spares List” on page 291](#).

Analogue Input Channel Numbers

Analogue Input cards are either 4, 6 or 8 channels with a full length connector taking up 8 channels even if only 4 or 6 are operational.

Table 2.3 :

Minitrend GR Multitrend GR and DR Graphic Analogue Input card						
Card Position	Slot A	Slot B	Slot C	Slot D	Slot E	Slot F
Channel number	1 to 8	9 to 16	17 to 24	25 to 32	33 to 40	41 to 48

Table 2.4 : eZtrend GR Analogue Input cards

Card	3 CH.	6 CH.	9 CH.	12 CH.
A	1-3	1-6	1-3	1-6
B			9-14	9-14

Analogue Input Connection Details

Current Input

For Current (mA) Input fit a 10 Ω resistor across the + and - pins of the 12-way mating half analogue connector. [Figure 2.15](#) shows a 10 Ω ($\pm 0.1\%$) resistor fitted to channel 5 for a current (mA) input. **Thermocouples**

Ensure polarity of thermocouple is correct.

Resistance Thermometers

If using 2 wire R/T the + and - terminals must be linked together. See [“Figure 2.22 Input signal wiring” on page 33](#).

Analogue Input Signal Wiring



CAUTION


CONTROL UNIT DAMAGE

Do not apply a hazardous live voltage between + and - pins within a channel. (eg. 60V maximum on voltage ranges, 5V maximum on millivolts ranges). Do not apply a voltage above 1.2V to the * pin.

Failure to comply with these instructions may result in product damage

Electrical Installation


Figure 2.21 Analogue Input connector

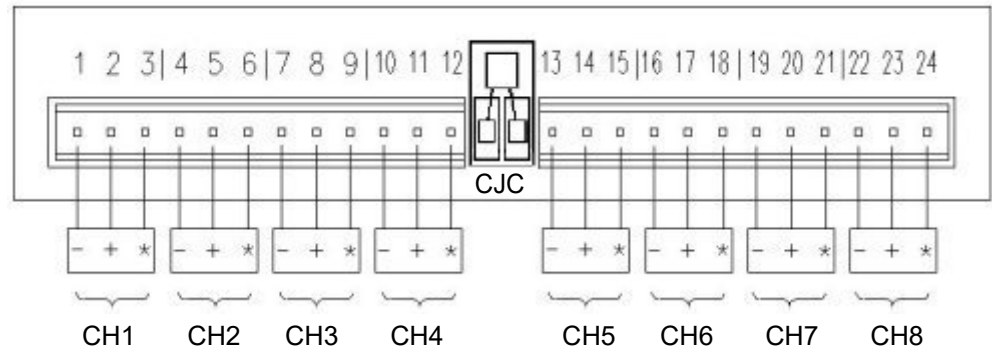

This Analogue Input card can be used as an option to add up to 6 more Analogue Input channels for the **eZtrend GR** recorder. This will fit into Slot B and will display as channel numbers 9 to 14. The standard fit Analogue Input card is fitted in slot A with up to 6 channels (channels numbers 1 to 6).

To fit this option card into the **eZtrend GR** recorder you will require an expansion card to interface to the recorder.

Figure 2.22 Input signal wiring

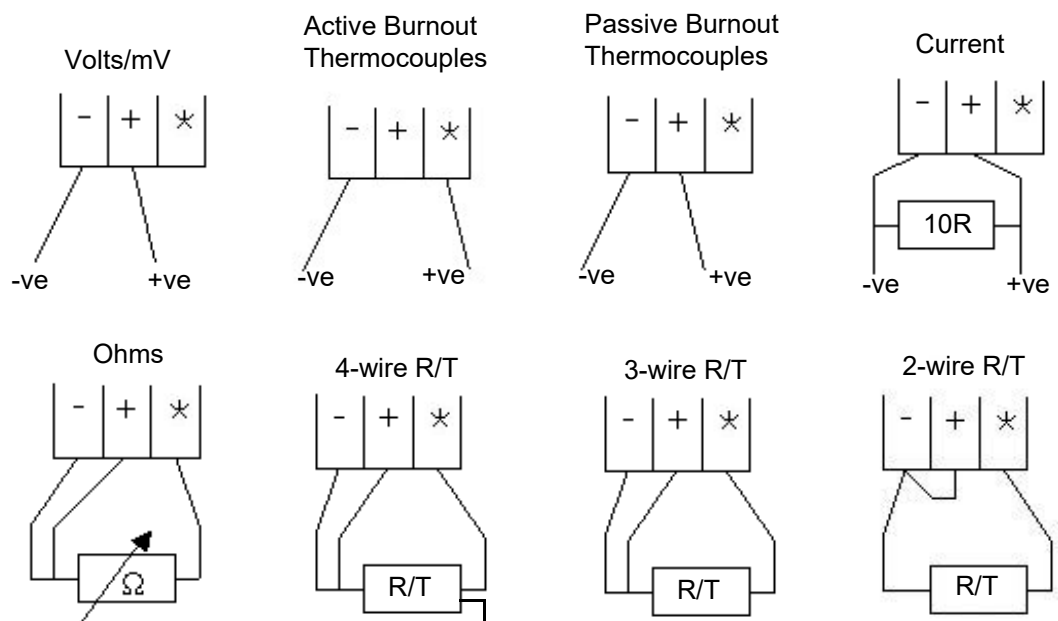

Recorder setup will be required if wiring changes are made for Active Burnout Thermocouples. See [“Thermocouple Wiring Changes.”](#) on page 78.

Electrical Installation

Thermocouple Active Burnout status can be viewed in the *Main Menu > Status > Diagnostics > Analogue Input screen, Input column*. The Health Watch/Maintenance firmware option must be active to access the Maintenance and Diagnostic buttons. [See “Diagnostics” on page 210.](#)

For the **eZtrend GR** recorder Active Burnout is not available. Ohms measurements must have the link between positive (+) and negative (-).

CJC Connectors


The CJC connector resides between channel 4 and channel 5 on the Analogue Input card. For information on connecting the CJC sensor, see [“Figure 2.21 Analogue Input connector” on page 33.](#)

For the **eZtrend GR** recorder this is available on the Analogue Input card (option).

eZtrend GR Analogue Input (Standard) card

The **eZtrend GR** is fitted with a standard Analogue Input card in Slot A, with up to 6 channels. The card is also fitted with an Ethernet port as standard. Connection is made via 1 x 18-way screw terminal plugs that fit into a PCB header on the rear of the unit. To fit up to a further 6 analogue input channels, see [“Analogue Input Card” on page 31](#)

Figure 2.23 eZtrend GR Analogue Input card (std) - Slot A

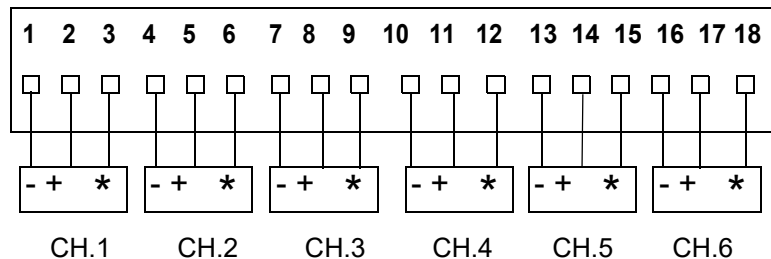



WARNING

HAZARDOUS VOLTAGES

Insulation from channel to channel: Normally a channel can be safely connected to a hazardous voltage up to 150V AC common mode* with respect to earth. However, where a channel is connected to a safety low voltage circuit (i.e. is accessible for operators to touch), any channel within the same 'input bank' must be limited at all times to a maximum of 55Vac or 140Vdc**. This is to ensure that protection of the safety low voltage circuit is fully maintained.

The inputs are divided into two banks: inputs 1 to 3 are one bank, and inputs 4 to 6 (if fitted) are another bank. A voltage of up to 150V AC common mode can be applied on one bank as long as any safety low voltage circuits are on the other bank. The recorder is protected against accidental connection of a voltage up to 240V AC common mode which might occur as a temporary fault condition, provided there are no safety low voltage circuits connected to the same input bank as the channel with the fault.

*Common Mode voltage is a voltage applied between the whole channel and earth, not between pins on a channel.

** this reduces to 33Vrms or 70Vdc if any channel within the input bank is configured as an ohms or R/T measurement.

Failure to comply with these instructions could result in death or serious injury.



CAUTION

CONTROL UNIT DAMAGE

Do not apply a hazardous live voltage between + and - pins within a channel (e.g. 60V maximum on voltage ranges, 5V maximum on millivolts ranges).

The * pin should be connected only as part of ohms or R/T measurements. Ohms and R/T measurements share a common connection (* pin) with all channels in the same bank (the inputs are divided into two banks: inputs 1 to 3 are one bank, and inputs 4 to 6, if fitted, are another bank). To avoid damage, ensure that a channel selected as ohms or R/T remains floating, i.e. the sensor is not connected to any external voltage.

Alternatively, if an ohms or R/T sensor must be biased to an external voltage, ensure that the other two channels within the same input bank are floating or are biased to the same voltage (i.e. - inputs of all three channels connected to the same voltage).

Failure to comply with these instructions may result in product damage

Analogue Output Card

Not available on the **eZtrend GR** recorder.

The **Analogue Output card** connections are made via 1 x 12-way screw terminal plug that fits into a PCB header on the rear of the unit.

The Analogue Output card position for the **Minitrend GR**, **Multitrend GR** and **DR Graphic** shown in [Table 2.1 on page 27](#).

AI Measurement Instructions

AI Max Measuring Input Voltage (+ to -): 60Vdc

AI Max Common Mode Voltage (+ and -) to Chassis GND: 60Vdc.

Temperature measurement directly on live parts are not acceptable.



WARNING

Failure to comply with these instructions could result in death or serious injury. Even with the above restricted AI inputs transient voltage up to 500V can occur on such inputs.

Analogue Output Channel Numbers


The Analogue Output cards are either 2 or 4 channels using a connector that only takes up half the length of the connector slot. Looking from the rear of the unit the Analogue Out connector is on the left of the Analogue slot with a blanking plate on the right.

Table 2.5 :

Analogue Output card			
Card Position	Slot B	Slot E	Slot F
Channel number	9 to 12	33 to 36	41 to 44

Electrical Installation

Analogue Output Connection Details

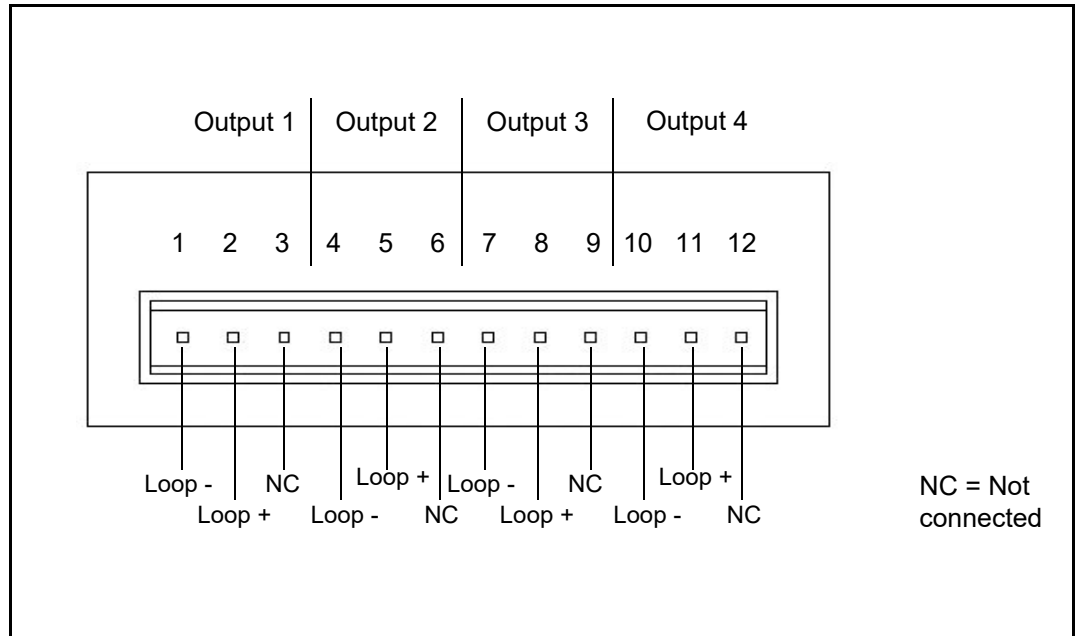

Pulse Input Card

Not available on the eZtrend GR recorder.

The **Pulse Input card** connections are made via 1 x 12-way screw terminal plugs that fits into a PCB header on the rear of the unit.

The Pulse Input card position for the **Minitrend GR** and for the **Multitrend GR** and **DR Graphic** are shown in [Table 2.1 on page 27](#)

The Pulse Input card is not available on the **eZtrend GR** recorder, however, the 8 Digital I/O option card has 4 channels that can be set as pulse inputs (channels 1 to 4). The operating frequency for pulse inputs on the Digital I/O card is 1kHz max.

Input: Low < 1V, High >4V to <50V DC (8V to 50V p-p AC) or Volt free input: Low = short circuit, High = open circuit.

AI Measurement Instructions

AI Max Measuring Input Voltage (+ to -): 60Vdc

AI Max Common Mode Voltage (+ and -) to Chassis GND: 60Vdc.

Temperature measurement directly on live parts are not acceptable.



WARNING

Failure to comply with these instructions could result in death or serious injury. Even with the above restricted AI inputs transient voltage up to 500V can occur on such inputs.

Pulse Input Channel Numbers


The Pulse Input card has channels using a connector that only takes up half the length of the connector slot. Looking from the rear of the unit the Pulse Input connector is on the right of the slot with a blanking plate on the left.

Table 2.6 :

Pulse Input card						
Card Position	Slot A	Slot B	Slot C	Slot D	Slot E	Slot F
Channel number	1 to 4	9 to 12	17 to 20	25 to 28	33 to 36	41 to 44


Pulse Input Connection Details

Do not connect anything to terminals marked **NC** (Not Connected). For Frequency and Voltage levels see [“Specification Tables” on page 317](#).

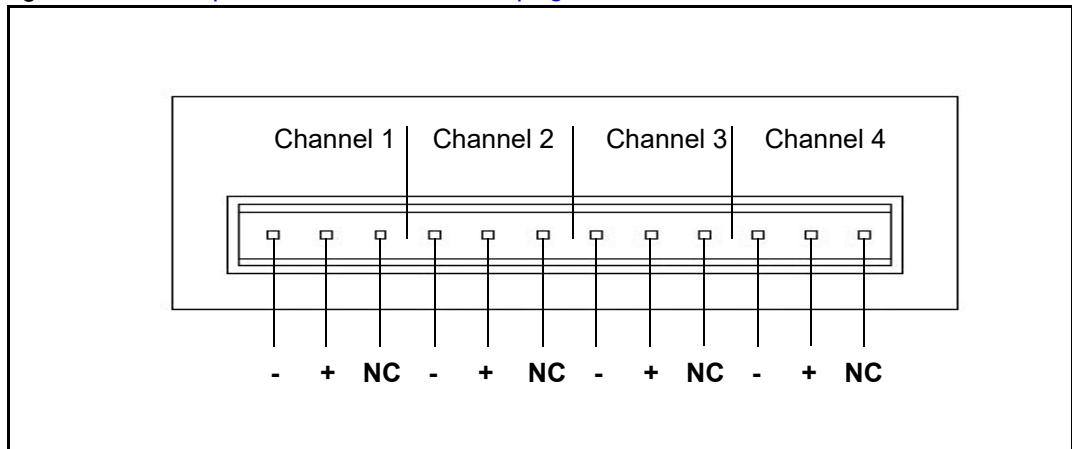

Transmitter Power Supply Card


The **Minitrend GR** and the **eZtrend GR** and the **DR Graphic recorder** **Transmitter power supply** option is 24V DC 200 mA and is fitted to the power supply card within the unit. Connection is made via a 2-way connector at the rear of the unit, the mating half is supplied with this option. For connector position see [page 26](#). The 24V transmitter power supply is not isolated from the recorder, and is not referenced to ground.

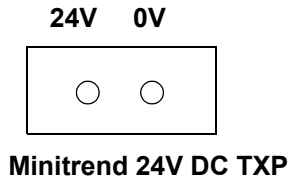

The **Multitrend GR** **Transmitter power supply** option is 24V DC 1 A and is fitted below the power supply card within the unit. Connection is made via two 10-way connectors, see [page 26](#), mating halves supplied with this option. The **Multitrend GR** transmitter power supply is isolated from the recorder.

A red LED light will illuminate when there is voltage on the connectors. The LED is situated between the two connectors at the back of the unit. See [page 26](#).

Recommended wire size for termination connector 22-12 AWG (22-14 SWG).

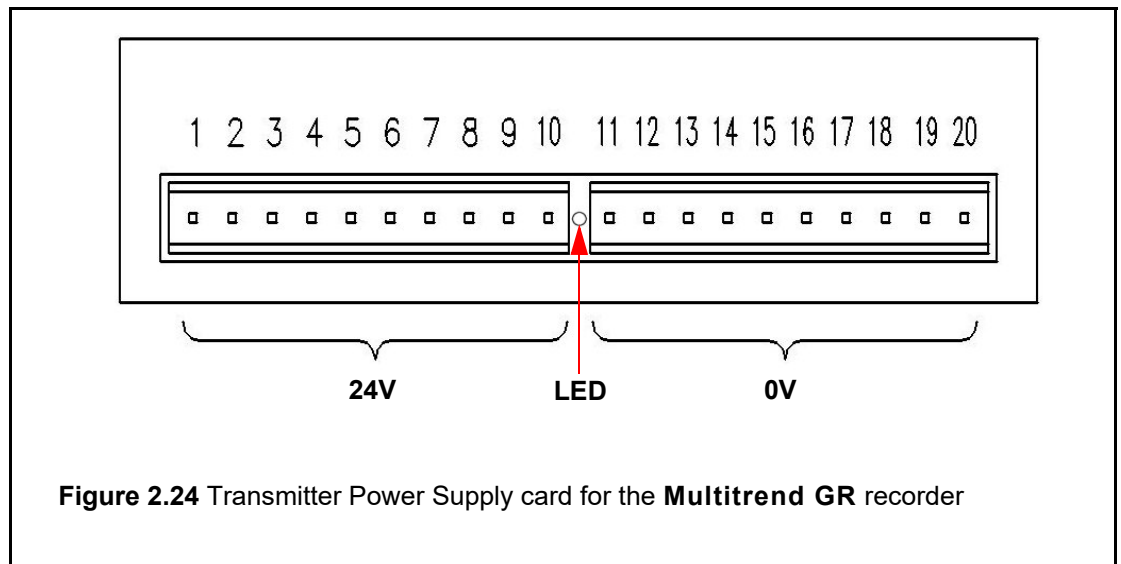

Alarm Relay Cards & Digital Input/Output Cards

The **Alarm Relay Cards** and the **Digital Input/Output Cards** are both options available for the **Minitrend GR**, **Multitrend GR**, **eZtrend GR** and the **DR Graphic** recorders.

To fit these option cards into the **eZtrend GR** recorder it requires an expansion card to interface to the recorder.

All Alarm Relay card outputs provide 240V AC isolation channel to channel and channel to recorder. Digital Input/Outputs will provide isolation to 100V AC test voltage (not for mains connection).

All digital inputs have volt free contacts, and are sampled at 10Hz max.

The **Minitrend GR**, **eZtrend GR** and the **DR Graphic** recorders have only one slot available for digital inputs and relay outputs for either a 4 or 8 channel Alarm Relay card or an 8 or 16 channel Digital I/O card fitted in slot G, the position is identified on the rear panel. The 16 channel Digital I/O card is not available on the **eZtrend GR** recorders.

The **Multitrend GR** can have up to three Alarm Relay cards fitted in any combination of Alarm Relay card or Digital I/O cards. The first Alarm Relay card or Digital I/O card is fitted in slot G, any additional cards will locate in positions H and I.



WARNING

HAZARDOUS VOLTAGES

Digital Input/Output card channels must not be connected to any hazardous live voltages (no higher than 30V AC rms or 60V DC).

Alarm Relay Card channels

Alarm Relay Card channels can be connected to hazardous voltages up to 300V AC, at Measurement Category CAT II (Overvoltage Category II)

Failure to comply with these instructions could result in death or serious injury.

NOTICE

For 12 and 16-way connectors; torque setting 0.4 Nm/3.5lb-in. Do not over tighten.
Recommended wire size for termination connector is 22-12 AWG (22-14 SWG)

4 and 8 Alarm Relay Cards

The 24-way connector for the **Alarm Relay Card**, connects to 3 A, 240 VAC SPCO relays. The pin-outs for 4 and 8 relay Alarm Relay cards are numbered from left to right and they read as follows for each channel; NC (normally closed), C (common), NO (normally open). Devices driven by the relays are connected via two 12-way screw terminal plugs.

The last two channels, 7&8, 23&24 or 39&40, can be used as digital inputs, connect across Common (C) and Normally Open (NO).

CAUTION

IMPROPER MAINS SWITCHING

For 8 channel Alarm Relay cards.

Switching mains on the normally-open contact on channels 7 and 8 is not recommended, as surges and spikes on the mains supply could cause damage to the input circuitry. The normally-closed contact is unaffected, and can be used like all the other channels.

A Form C dry contact relay is used for this type of card. The inputs are designed to accept "Dry contact, no volt inputs". The relays should be used for non-inductive loads only where a device requires a voltage to operate it, such as a 12 Volt buzzer, connect it to the normally open (NO) contacts (unless the fail-safe setting is activated).

The maximum voltage which may be used with the alarm relays is 240V

Alarm Relay Channel Numbers

The Alarm Relay cards are either 4 or 8 channels with a full length connector taking up 8 channels even though the cards only operate on 4 channels or 8 channels. The 8 channels Alarm Relay card has 2 digital inputs available on the last 2 channels. There are no Digital Inputs available on the 4 channels Alarm Relay card.

Table 2.7 :


Alarm Relay card 4 channel			Alarm Relay card 8 channel		
Card position	Channel number	Digital Inputs	Card position	Channel number	Digital Inputs
Slot G	1 to 4	N/A	Slot G	1 to 8	7 & 8
Slot H	17 to 20	N/A	Slot H	17 to 24	23 & 24
Slot I	33 to 36	N/A	Slot I	33 to 40	39 & 40

DR Graphic recorders alarm card slot position and channel number mapping

Table 2.8 :

Alarm Relay card 8		
Card position	Channel number	Digital Inputs
Slot B	17 to 24	7 & 8

Figure 2.25 Alarm Relay Card connector details

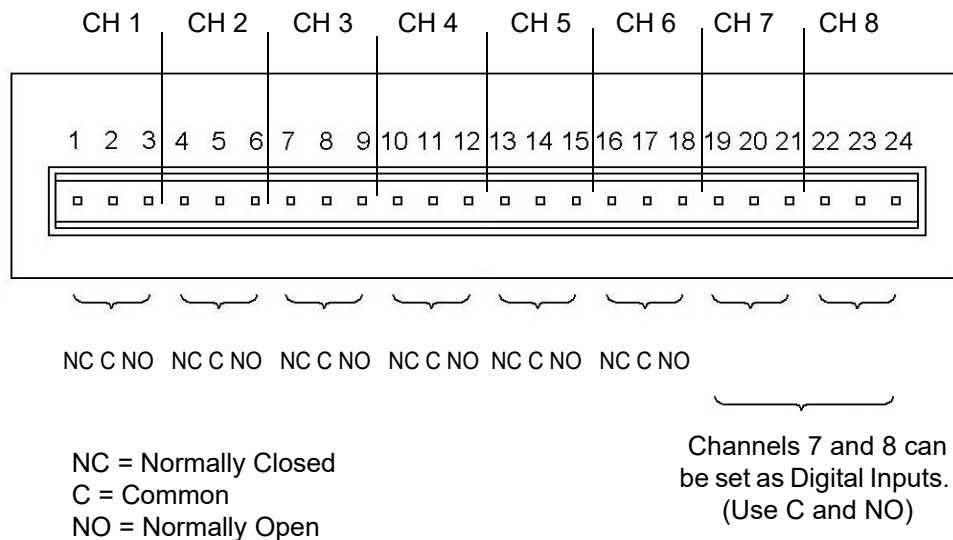

8 and 16 Digital Input/Output Card

The 16 channel Digital I/O card is not available on the **eZtrend GR** recorders.

The **Digital Input/Output Card** has 1A 24V DC rated relays that are connected via two 16-way connectors, the left connector for the first 8 channels and right connector for the second 8 channels. The pin-outs for 8 and 16 I/O cards are labelled from left to right, 1 to 16 on the left side and 17 to 32 on the right. Each channel can be set up as an input or an output. For output the relay is normally open type.

A Form A dry contacts relay is used for this type of card. The inputs are designed to accept "Dry contact, no volt inputs".

NOTICE


For Digital Inputs, short together the 2 pins of the channels with a switch or a relay.

Pulse Inputs

The 8 and 16 Digital I/O option card has 4 channels that can be set as pulse inputs (first 4 channels). The operating frequency for pulse inputs on the Digital I/O card is 1kHz max.

Input: Low < 1V, High >4.5V to <10V DC (9V to 20V p-p AC) or Volt free input: Low = short circuit, High = open circuit.

Figure 2.26 Digital Input/Output card connector details

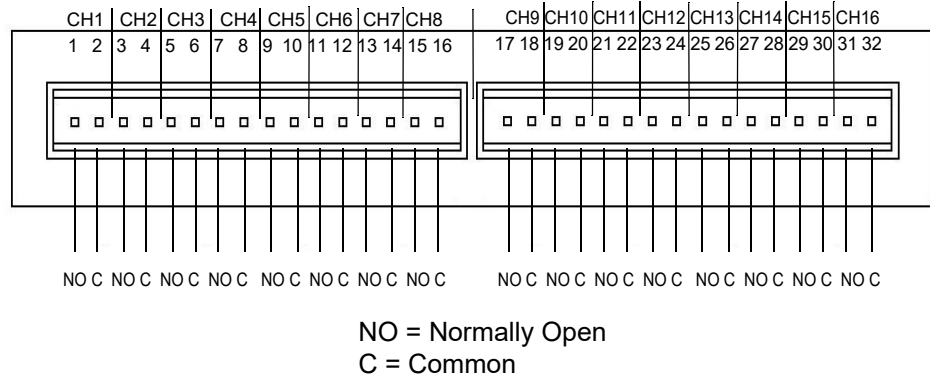

Digital Input Card Channel Numbers

The Digital input cards are either 8 or 16 channels with a full length connector taking up 16 channels even if only 8 channels are in operation. Both the digital input cards can be used as a relay card if required.

Table 2.9 :

Digital Input card 8 channel		Digital Input card 16 channel	
Card position	Channel number	Card position	Channel number
Slot G	1 to 8	Slot G	1 to 16
Slot H	17 to 24	Slot H	17 to 32
Slot I	33 to 40	Slot I	33 to 48

The 16 channel Digital I/O card is not available on the **eZtrend GR**.

DR Graphic recorders Digital I/O card slot position and channel number mapping


Table 2.10 :

Digital Input card 8 channel		Digital Input card 16 channel	
Card position	Channel number	Card position	Channel number
Slot B	17 to 24	Slot B	17 to 32

Communications Connections


Ethernet

The Ethernet port is fitted to all **GR Series** recorders as standard and uses a standard RJ45 Ethernet connection. After connection, select the Ethernet port from the Comms menu and select the required protocol from the Protocol menu eg. Modbus.

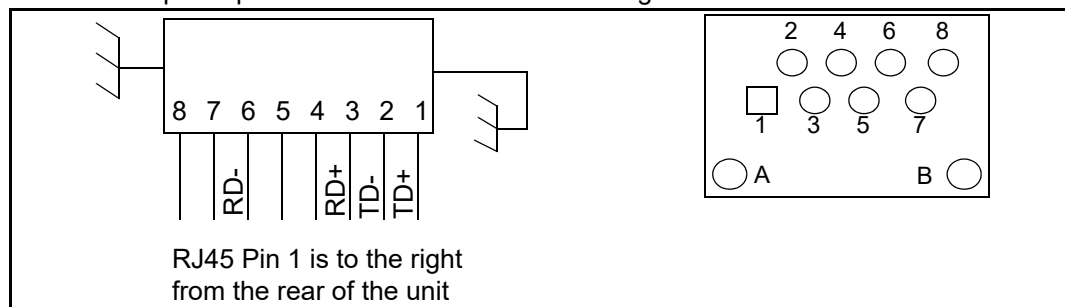


24V DC Instrument Power Input

24V DC instrument power is available on all **GR Series** recorders as an option. It is connected using 3-way connector, mating half is supplied. Diagram shows a view looking from the rear of the unit.

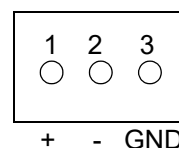


RS485 Minitrend GR, Multitrend GR and DR Graphic recorders.

The RS485 port is fitted as standard as a part of the processor card and uses a 3-way connection. After connection, select the RS485 port from the Comms menu and select the required protocol from the Protocol menu eg. Modbus. Diagram shows a view looking from the rear of the unit. See [“Comms Services Menu” on page 108](#).

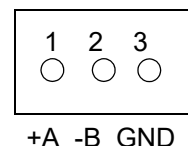

SPNC Relay Minitrend GR, Multitrend GR and DR Graphic recorders.

 (Single Pole Normally Closed). 2-way connector. This is a fail safe relay which means if the power goes off the relay closes and can be set to trigger an alarm. So should the power fail the relay is in a “fail safe” condition. Diagram shows a view looking from the rear of the unit. Either pins can be Common or Normally closed.

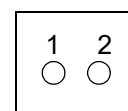

NOTE: Once the recorder is powered up, if there are no active alarms associated with the “Fixed Relay”, the contacts will open. When the alarm is on they will close.

eZtrend

GRExpansion Card

This is an interface card that is required when fitting the following option cards:

- Analogue Input card in Slot B (up to 6 channels)
- Four Relay output card
- 8 Relay/2 Digital Inputs card (6 fixed Outputs/2 Configurable DI/DO)
- 8 Configurable Digital Inputs/Discrete 24V Output card

USB Devices

Print Support (USB 2.0 or Network)

Print Support is a firmware option that can be activated using the credit system, refer to the Options item in [“Credits” on page 140](#).

Not all printers will be compatible with the print support feature on the recorder. The guide lines recommend using a USB printer or network that supports as a PCL3 or PCL3 GUI or PCL5 (Printer Command Language). The system will not support multi function devices or printers that require specific drivers. Avoid photo printers and printers that allow stand alone operation with cameras or media specific printers such as pictbridge.

There isn't a constant factor to which printers work. We recommend that you follow the guidelines outlined here.

To set up your printer configuration go to [“Printer Menu” on page 151](#).

Keyboards

All keyboards are native USB 2.0 keyboards. English and US keyboards are recognised as US layout (QWERTY) for all languages except French and German keyboard layouts. French and German keyboards are activated when the recorder is set to that language. There is no keyboard support for Asian languages (Chinese simplified, Japanese or Korean).

Barcode Reader

Most USB barcode readers emulate keyboards and cause no recognition problems. Examples of tested barcode readers are:

- Peninsula Phoenix 2
- Wasp - WWR 2905 Pen Scanner
- Quick Scan QS2500
- Barcode Traders LC4400 Series

USB Keys (USB 2.0)


Please test your USB key before using it for recording and transferring data.

Rear USB Port Availability

The rear USB ports are blocked (i.e. not available) with a blanking plate for ***Minitrend GR*** and ***Multitrend GR*** when ordered with FM Class1, Div2 approvals.

Section 3: Overview

Functions and Features

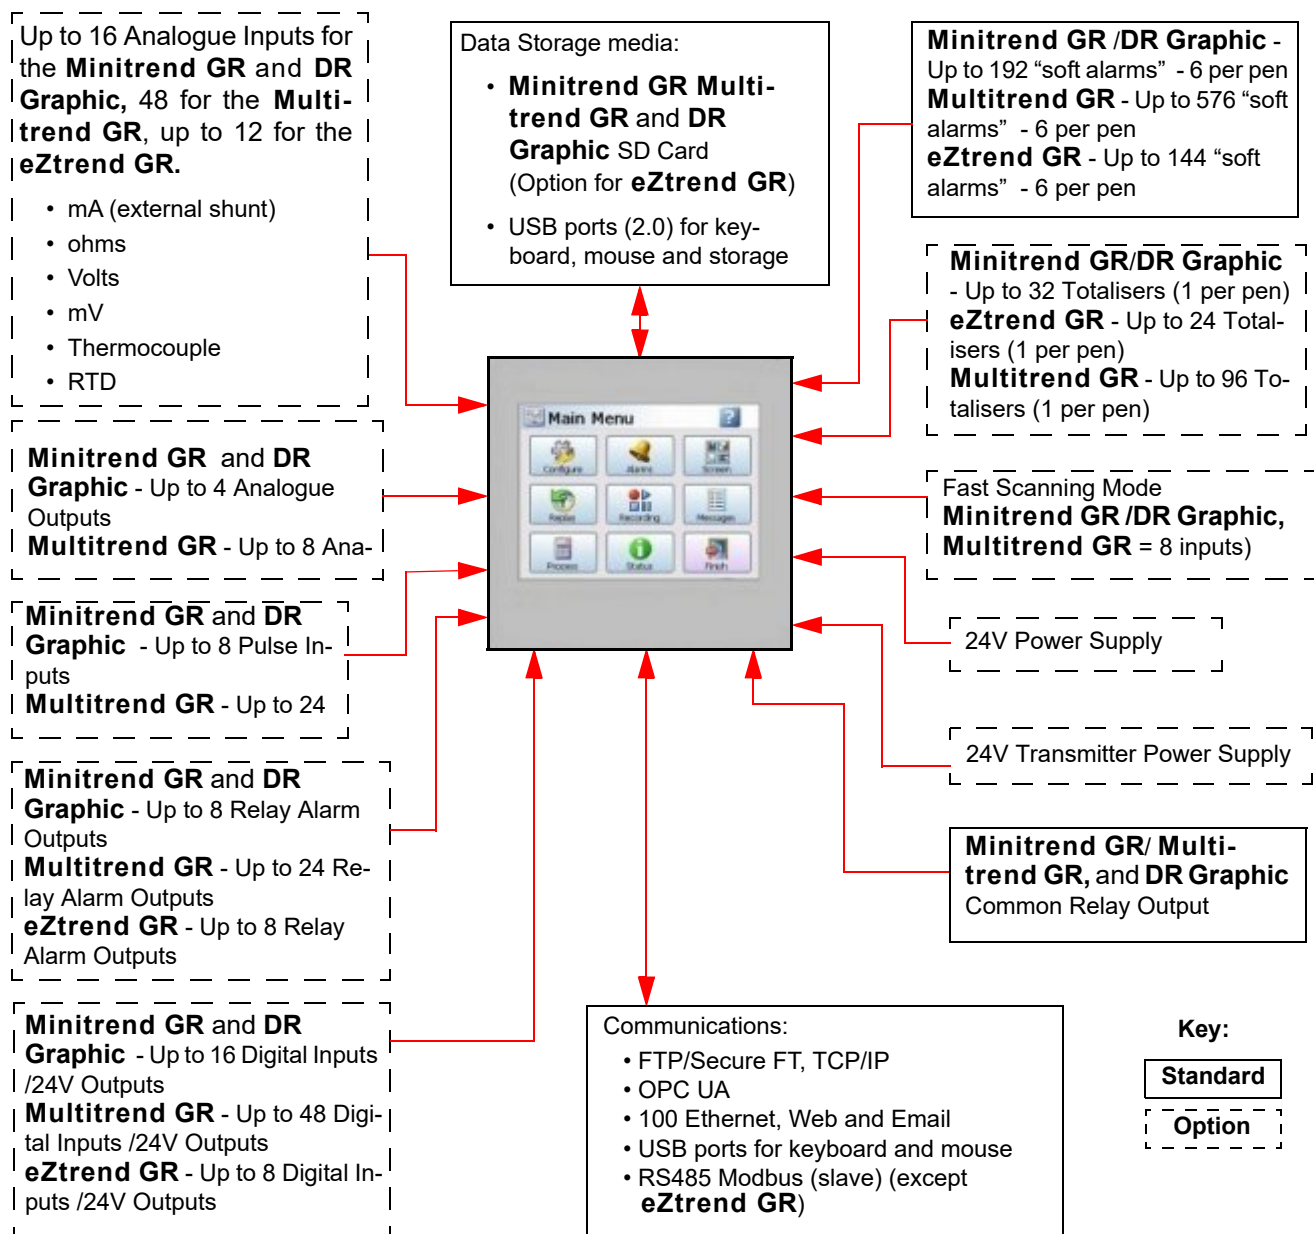

Functions and Features

Crystal Clear Display

- **Minitrend GR** has a 5.7" Digital Colour LCD (TFT), VGA Resolution (640 x 480 pixels)
- **Multitrend GR** has a 12.1" Digital Colour LCD (TFT), VGA Resolution (1024 x 678 pixels)
- **eZtrend GR** has a 5.7" Digital Colour LCD (TFT), QVGA Resolution (320 x 240 pixels)
- **DR Graphic** has a 12.1" Digital Colour LCD (TFT), XGA Resolution (1024 x 768 pixels)
- Clear and intuitive operation, Industrial rugged Touch Screen with rapid navigation
- Custom build screens in the recorder or using Screen Designer (not **eZtrend GR**)

Comprehensive Connectivity

- 100 Ethernet (DHCP), Web and E-mail
- OPC UA (Data Access)
- FTP/Secure FT and TCP/IP transfer of encrypted data by using **Trend Server Pro** software.
- RS485 Modbus Protocol (not available for the **eZtrend GR**).
- USB ports for keyboard, mouse and printer.

Data Storage

- On-board non-volatile Flash memory - up to 4GB for **Minitrend GR**, **Multitrend GR** and the **DR Graphic** recorders - up to 2GB for **eZtrend GR**.
- Removable SD card and USB storage ([See "Storage Media Format" on page 194.](#)) for formatting information of SD cards and USB keys). SD card is an option for the **eZtrend GR**.
- No moving parts - all solid state flash memory

Security Stringent - Total Data integrity

- Password Protection - 21CFR Part 11
- ESS - Extended Security System
- Secure Password Network Synchronization
- Hardware Configuration Lock

Plus..

- Health Watch for preventative maintenance
- Remote Access - Advanced Software Data Analysis at your PC
- Independent Chart and Logging speeds
- Global Language Support
- Rapid review and replay of data at recorder
- Approvals - CE, cCSAus, UL, FM approval for the **Minitrend GR**, **Multitrend GR** .
- NEMA 4X / IP66 option.
- AMS2750 functionality (option)
- Active X control

Functions and Features

- French and German USB keyboard compatibility
- Time Sync on Digital inputs
- Password Net Sync a group of up to 32 recorders (1+ sync 31)
- Temperature Uniformity Survey functionality option (AMS 2750) only **Multitrend GR** and the **DR Graphic** recorders
- Logging speed up to 50Hz (20 msec), 10Hz (100msec) for **eZtrend GR**.
- Up to 16 Analogue Inputs for the **Minitrend GR** and the **DR Graphic**
- Up to 48 Analogue Inputs for the **Multitrend GR**
- Up to 12 Analogue Inputs for the **eZtrend GR**
- Remote Viewer via the recorder web page
- Events - set up occurrences to trigger actions
- Single and concurrent batch capability
- Print Support
- Counters
- Modbus master communications (Optional)
- Alert System
- Sound system - add sound effects to identify occurrences
- Email facility - the recorder will email an event notification and include a screen shot of the occurrence as an attachment.
- Pre and Post Trigger alarm function
- CSV Export

Recorder Functionality

- **GR** recorders provide flexible electronic data acquisition and recording in a high functionality instrument. **Minitrend GR** is a DIN standard 144mm format recorder with a 5.7" VGA display and the **Multitrend GR** is a large 12.1" diagonal VGA display format recorder. The **eZtrend GR** is a DIN standard 144mm format recorder with a 5.7" QVGA display.
- The **Minitrend GR** and the **DR Graphic** recorders have up to 16 Analogue inputs, and the **Multitrend GR** has up to 48 Analogue inputs and the **eZtrend GR** has up to 12 Analogue inputs.
- **Minitrend GR, Multitrend GR** and the **DR Graphic** recorders have 1GB to 4GB of expandable non-volatile flash memory available plus additional removable storage media, the **eZtrend GR** has 1Gb to 2GB.
- All recorders use digital colour TFT LCD screens to provide easy to read displays with wide viewing angles for the best all around data viewing.
- The touch screen operator interface provides fast, easy access to the recorder menus making set up and data analysis quick and efficient. Navigation through the menus and text entry are direct and intuitive.

Functions and Features

Example of a recorder menu path from the Main Menu to change the Pen Scale configuration with clear rapid navigation



Features

Display

- **5.7" Colour Active TFT** for the **Minitrend GR** and **12.1" Colour Active TFT** for the **Multitrend GR** and the **DR Graphic** and **5.7" Colour Active TFT** for the **eZtrend GR** - with more than 256,000 colours makes it easy to interpret process data and take action with the intuitive bar charts, digital values, trends or customised displays. A screen saver function can be set from 1 to 720 minutes to extend the life of the backlight.
- **Touch Screen** - the heavy duty durable touch screen provides easy data entry and rapid navigation through the menus.
- **Help Files** - A complete contextual help system can be accessed and visualised on the screen of the recorder.

Communications

- **Ethernet Connectivity** - the Ethernet (DHCP standard) connection, with support for various protocols, provides comprehensive connectivity to local area networks (LANs). The standard Ethernet interface makes networking of the recorder to a LAN or the world wide web fast and convenient. Dynamic Host Configuration Protocol (DHCP) automatically acquires the settings (IP address) for network communications from a DHCP server. Modbus Master and Modbus Slave facility now available for all recorders.
- **RS485 Modbus** - the RS485 connection allows process data to be transferred to other devices, or to record data received in MODBUS RTU protocol (slave mode only). Modbus Master and Modbus Slave facility now available for all recorders. (RS485 is not available for **eZtrend GR** recorder).
- **Simple Network Time Protocol (SNTP)** - The recorder can be synchronised over the ethernet network via a SNTP client or synchronise other recorders via a Server.
- **Web Server** - with the recorder connected to a LAN, all process variables, alarm and messages can be viewed from an internet browser; values are automatically refreshed.
- **OPC UA** - with the recorder connected to a LAN, process variables (pens and totalizers) are available via an OPC UA server.

Functions and Features

Data Storage

Internal Data Storage - 1GB to 4GB of expandable internal non-volatile flash memory is available for data storage and chart history (replay of data on the display)

Internal memory / Logging rate = 1 sec Chart Speed = (Fast:600, Medium:20, Slow:5) mm/h Storage Bias: User available memory divided equally between charting and logging (The higher the bias percentage allocated to logging by the end user, the longer the storage time frame will become)				
Type	Pens	1GB	2GB	4GB
eZtrend GR	4	107 days (15.2W)	424.9 days (60 W) (1Yr+)	-
Minitrend GR	4	107 days (15.2W)	424.9 days (60 W) (1Yr+)	1145 days (163 W)(1Yr+)
Multitrend GR	4	107 days (15.2W)	424.9 days(60 W) (1Yr+)	1145 days (163 W)(1Yr+)
DR Graphic recorders	4	107 days (15.2W)	424.9 days(60 W) (1Yr+)	1145 days (163 W)(1Yr+)
eZtrend GR	8	52 days (7.4 W)	210 days (30W)	-
Minitrend GR	8	52 days (7.4 W)	210 days (30W)	558 days (80W)(1yr+)
Multitrend GR	8	52 days (7.4 W)	210 days (30W)	558 days (80W)(1yr+)
DR Graphic recorders	8	52 days (7.4 W)	210 days (30W)	558 days (80W)(1yr+)
Minitrend GR	16	25 days (3.5W)	103 days (14.7W)	274 days (39W)
Multitrend GR	16	25 days (3.5W)	103 days (14.7W)	274 days (39W)
DR Graphic recorders	16	25 days (3.5W)	103 days (14.7W)	274 days (39W)
Multitrend GR	32	12 days (1.7W)	48 days (6.8W)	128 days (18.2W)
Multitrend GR	48	6 days (.85W)	27 days (3.8W)	73 days (10.4W)
Multitrend GR	96	2 days (.28W)	10 days (1.4W)	27 days (3.8W)

Data Export - Removable SD Card and USB flash (2.0) storage device provides multiple data storage alternatives. Data is stored in a secure binary encrypted format, with the recorder's configurations, providing added security of the data files. SD Card is available for the **eZtrend GR** recorder as an option. Optional CSV export capability

Removable SD Card and USB flash storage devices. (SD card option for **eZtrend GR**)



Functions and Features

External USB (2.0) Devices

- The **Minitrend GR** and the **Multitrend GR** recorders have two USB host ports, one front and one at the rear.
- 2 USB ports for **DR Graphic** are extended inside the case to a dual panel mount receptor above the power supply. USB peripherals/wires can be connected on the panel mount connector for inside the case.
- The **eZtrend GR** recorder has one front USB Host. The USB ports can be used for attaching external USB devices such as a keyboard, mouse or a USB data storage key. The keyboard and mouse can be used to navigate the recorder's screen along with text entry.

Remote Viewer

- This is a firmware option that extends the user interface of the recorder onto the desktop PC. Providing remote viewing of the unit launched from a web browser. Full remote control is available as an option which is password protected to prevent unauthorized access. Compatible with Microsoft™ Internet Explorer 6 to IE10. Separate Remote Viewing option is available for viewing the recorder screen remotely over the Ethernet link.
- Download "Remote Display Tool" from the Honeywell website for free. The latest version (R211) of Remote Viewing option provides secure communication.
- The Remote Viewing option can enable/disable in the recorder from Security Options.

SD CARD

CAUTION

SD CARD Handling precautions

- Do not store or use the SD memory card in places with static electricity, near electrically charged objects, or
- where electrical noise is present. Doing so can result in shock or damage.
- Do not disassemble or modify the SD memory card. Doing so can result in damage.
- Do not physically shock, bend, or pinch the SD memory card. Doing so can lead to malfunction.
- During reading/writing of data, do not turn OFF the power, apply vibration or shock, or pull out the card. Data can become corrupt or permanently lost.
- Only use recommended SD memory cards. Operation cannot be guaranteed with other brands of card.
- When inserting the SD memory card into the instrument, make sure you orient the card correctly (face up or down) and that you insert it securely. If not inserted correctly, the card will not be recognized by the instrument.
- Never touch the SD memory card with wet hands. Doing so can lead to shock or malfunction.
- Never use the SD memory card if it is dusty or dirty. Doing so can lead to shock or malfunction.
- You can use SD/SDHC cards (1GB to 32 GB)

Security

- **Total Data Integrity** - data is stored in secure encrypted files.
- **Password Protection** - Up to 4 levels of password protection with up to 50 different users are available. Multiple levels of password protection and an audit trail of actions enhance the security of the data.
- **Password Network Synchronisation** is a credit function in the recorders that provides a means of keeping the passwords of users in sync for network connected recorders. It uses a Password Master/Slave setup to update password changes.
- **Extended Security System (option)** - ESS provides features including entry of unique User ID's and associated passwords, time-out of password entry, password expiration, and traceability of user actions. ESS is compatible with the requirements of 21CFR part 11.
- **Hardware Configuration Lock** - The Hardware Configuration Lock feature located on the processor card and works in conjunction with the Credit function to prevent any configuration changes once the configuration switch has been set to the "locked" position. See ["Options" on page 206](#). The switch must be reset to the "unlock" position to make configuration changes. See ["Hardware Configuration Lock" on page 235](#).

Events

Events is a firmware option that can be activated using the credit system. Events are certain conditions or operations which can be set up and logged according to the time and date of the occurrence. Subsequently events can be reviewed in a list or represented on a graph. An Event is made up from a Cause and an Effect. For example, set up a cause such as Pen 1 going into an alarm state and the effect of this could be to start a totaliser or acknowledge the alarm.

Batch

The Batch function allows the user to segment portions of data for further analysis. Batch enhances the management of data collected in a non-continuous process, known as batch processing, used in thermal treatment, sterilisation, food processing and chemical reactions. Concurrent batch mode is now available where each batch is associated to a group of pens. Other features include Batch logging control, Automated batch counters and Event driven batch control.

Batch feature for the **GR Series** has been enhanced to have all the data entry on a single screen. Batch Wizard is still available.

The Single Screen Batch allows you to view and enter all the batch details on a single screen. The batch fields viz. Batch Name, User Id, Lot Number, Description and Comment are available for viewing and entering details on a single page which is unlike the batch wizard where you navigate each page to enter details of subsequent fields. The Lot number is unique for each batch on a recorder and user can enter the Lot number from the recorder. This is irrespective of whether you are using Batch Wizard or Single Screen Batch to enter the batch details. You can also set the above fields except Lot Number from a set of predefined list.

Batches are controlled with command lines entered into the recorder, these include Start, Stop, Pause, Resume and Abort batch. Batch Markers are placed on to the recorder's chart and entered into the messages system for every batch command applied.

Counters

Up to 16 User Counters are available and can be used as a part of the Events system. User Counters can be set up as a Cause or an Effect of an Event. A Counter Effect can be used to count an occurrence or to reset different types of counters depending on hardware availability. Other counters available are Alarm, Event, Digital Input, Relay Output and Pulse counters.

Functions and Features

Other Standard features ..

- **CE Mark** - Conformity with 2006/95/EC, Low Voltage and 2004/108/EC EMC Directive.
- **Soft Alarms** - 6 "software" alarms per pen are easily set up to display and record selected out-of-limit conditions. These can be tied to the relay or digital outputs to activate the user's external equipment.
- **Common Relay Output** - A separate relay output at the rear of the unit can be set up as an alarm output.
- **Communications** - the recorder supports FTP/Secure FT, Modbus TCP/IP (master (optional) and slave mode), Web and E-mail over Ethernet (DHCP standard) communications port and Modbus RTU (master (optional) and slave mode) via an RS485 port (**Minitrend GR, Multitrend GR and DR Graphic** only). USB ports allow the use of an ASCII barcode reader. Email sent to your network connected PC triggered by an Alarm or an Event.
- **Independent Display Chart Speeds and Logging rates** - logging rates can be programmed completely separate from the chart display speed, allowing the data to be displayed and stored at the rates that best suit the application.
- **Language Support** - standard language prompts for English UK & US, French, German, Italian, Spanish, Brazilian, Polish, Hungarian, Slovak, Czech, Turkish, Romanian, Russian, Greek, Portuguese, Chinese, Japanese, Korean and Bulgarian. Also Asian languages including Chinese (simplified), Japanese and Korean (options).
- **Logarithmic Scales** - all displayed scales can be set as linear or logarithmic. max 20 decades
- **Enclosure rating** - Standard NEMA 3R/IP55 for **Multitrend GR** recorder, NEMA3/IP55 for **Minitrend GR, DR Graphic** recorders and **eZtrend GR** recorders. NEMA 4X / IP66 available as an option.
- **Fuzzy Logging** - this standard feature provides a unique method to increase the storage capacity of the recorder. The data is monitored to determine changes in process data; if no changes are observed data is logged periodically. If data is changing rapidly, it is recorded normally at the programmed rate. By not logging data that is static, data compression of up to 100:1 or more can be achieved saving valuable memory.
- **Security tag** - "wire seal provision" provides added security to seal the front door and rear when using optional rear cover to prevent undetected entry to these areas of the recorder.
- **USB Ports** - (USB 2.0) Front and rear USB host ports for data and setup transfers. Attach external devices (keyboard or mouse).

Note: eZtrend has no Rear USB.

- **Replay with Zoom** - Select replay mode and zoom-in on a specific area on the screen. The data can easily be replayed at the recorder with the ability to "zoom". The touch screen makes it fast to review and analyse historical data. A "Jump" function allows you to go from the alarm list directly to the trend showing the occurrence of the alarm. Hide pens function allows you to display only the pens required for analysis.
- **Print Support** - Network printing from status, message and replay screens. Plus screen capture facility of process screens instantly using a basic USB standard or Network printer, PCL3 or PCL3 GUI or PCL5 are supported (Printer Command Language).


Options - Hardware

- **Alarm & Digital IO Cards** - 4 or 8 outputs relay contacts SPCO 240V, 8 Digital I/O or 16 Digital I/O - SPNO 24VDC. (16 Digital I/O not available for the **eZtrend GR** recorder). Programmable alarm set points can be configured to activate up to 16 outputs for the **Minitrend GR** and **DR Graphic**, 8 outputs for the **eZtrend GR** recorders and 48 outputs for the **Multitrend GR**.
- **Analogue Output** - 2 or 4 outputs available per card for the **Minitrend** and **DR Graphic** with 2, 4, 6 or 8 outputs available for the **Multitrend** recorder. Output type: 0-20mA or 4-20mA. (Not available for the **eZtrend** recorder).
- **Nema 4X / IP66** - Nema 4X / IP66 protection available as an option.
- **Portable Recorders** - Portable cases available as an accessory item.
- **Digital Input** - 2 inputs on 8 channel Alarm card, 8 inputs on 8 Digital I/O card and 16 inputs on a 16 Digital I/O card. The digital inputs allow users to initiate, from a remote location through a dry contact closure, selected recorder functions. (only 8 Digital I/O available for the **eZtrend GR** recorder).
- **Pulse Frequency** - four frequency inputs per board, are available to measure pulse signals up to 25 kHz (max. 2 cards). (Not available for the **eZtrend GR** recorder, but 4 pulse inputs can be used on the Digital I/O option card to 1kHz max.).
- **Pulse Inputs** - The 8 Digital I/O option card has 4 channels that can be set as pulse inputs (first 4 channels). The operating frequency for pulse inputs on the Digital I/O card is 1kHz max.
- **Approvals** - CE, cCSAus, cULus approvals for **Minitrend GR**, **Multitrend GR** and **DR Graphic** Recorder. CE, cCSAus Approval for **eZtrend GR** Recorder. **Minitrend GR**, **Multitrend GR** also have FM class 1 Div 2 approval.
- **24VAC/DC or 48VDC Power Supply** - 20 to 55VDC / 20 to 30VAC for the **Multitrend GR** and **DR Graphic**. 12-30 VDC/12-20 VAC for **Minitrend GR**, and **eZtrend GR**
- **24VDC Transmitter Power Supply** - **Minitrend GR**, **eZtrend GR** and **DR Graphic** can supply up to 200mA to external transmitters, **Multitrend GR** up to 1A.


Functions and Features

Multitrend GR and DR Graphic Standard Screens


The **Multitrend GR** recorder has up to 32 screens available for displaying combinations of charts, bars and DPMs can be configured, 4 examples below.

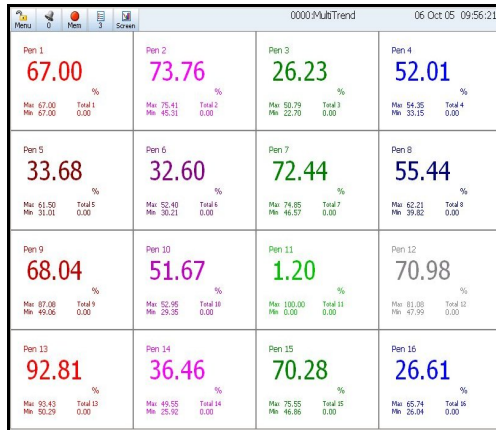


16 Digital Panel Meters
showing Max/Min values and Totals for each pen

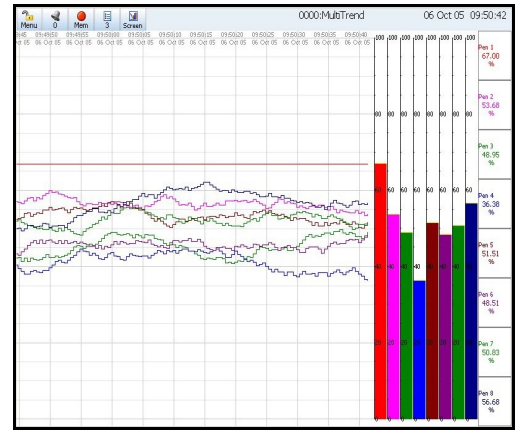

Horizontal Chart, 8 Vertical Bars & 8 DPMs

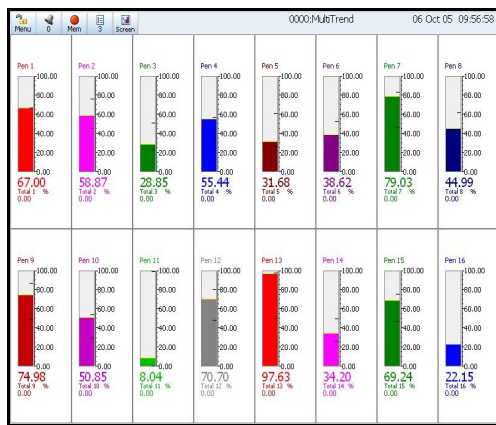


DPM and Scales

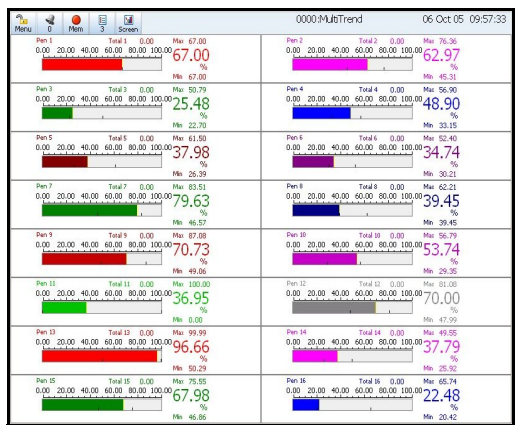

16 Horizontal Bars
showing Max/Min values and Totals for each pen



Charts Menu

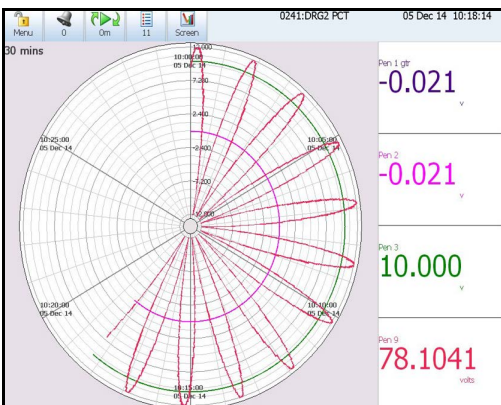


Circular Chart and DPMs

Functions and Features

Minitrend GR Standard Screens


The **Minitrend GR** recorder has up to 20 screens available for displaying combinations of charts, bars and DPMs can be configured, 6 examples below.

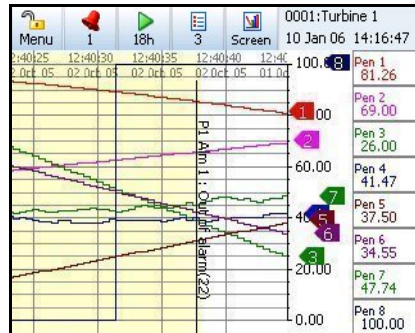


Horizontal Chart and DPMs




Horizontal Chart, 4 Vertical Bars and 4 DPMs

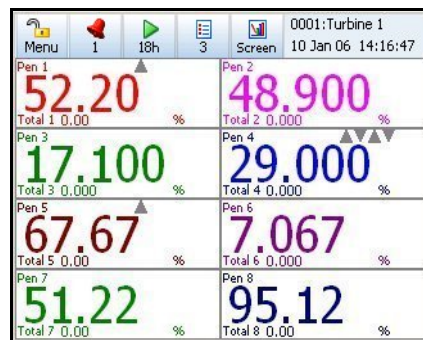


8 Digital Panel Meters

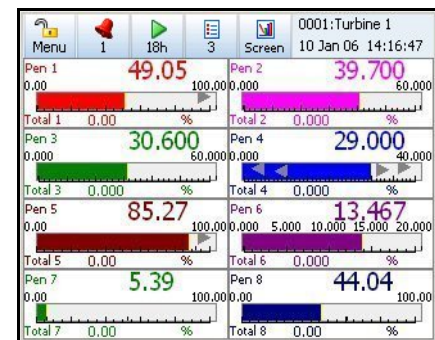

8 Horizontal Bars

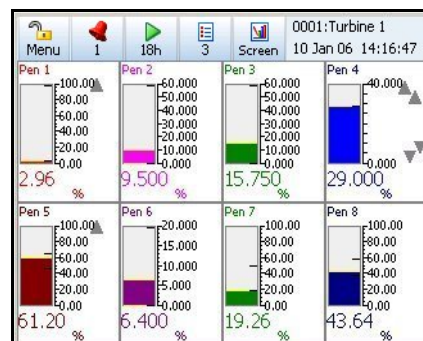

DPMs and Scales

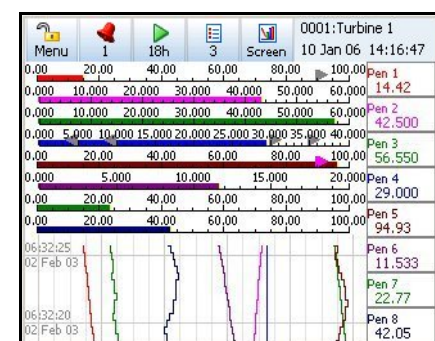


Vertical Chart, 8 Horizontal Bars and 8 DPMs


Functions and Features

eZtrend GR Standard Screens


The **eZtrend GR** recorder has up to 12 screens available for displaying combinations of charts, scales and DPMs can be configured, 6 examples below.

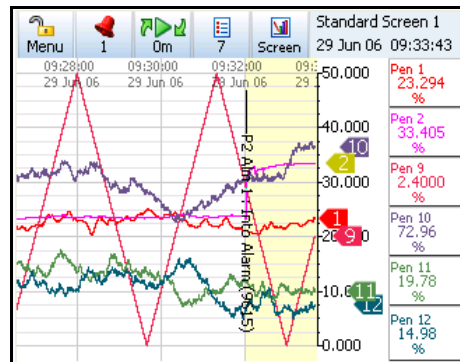


Horizontal Chart and 6 DPMs

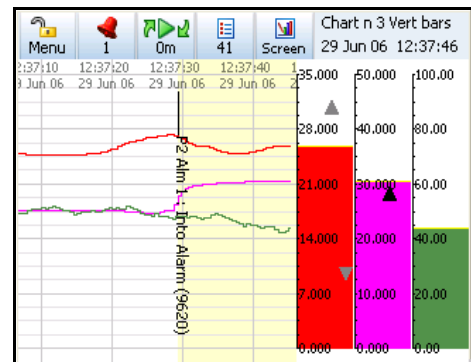


Horizontal Chart, 3 Vertical Bars

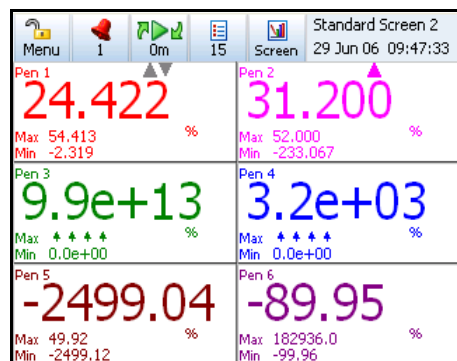


6 Digital Panel Meters

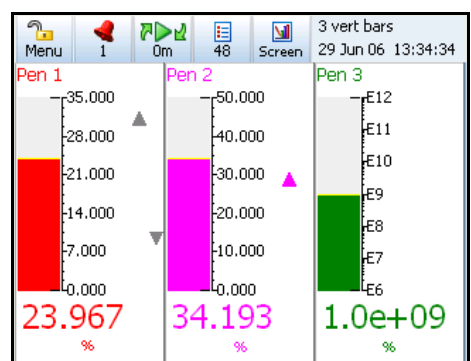

3 Horizontal Bars

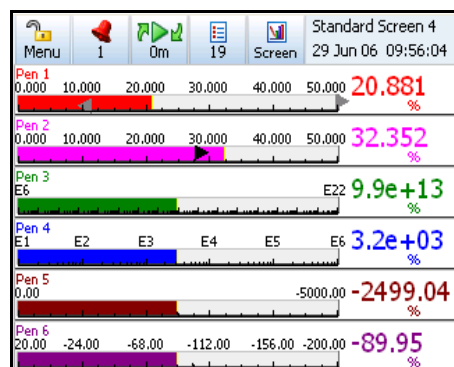


Horizontal Bars and DPMs

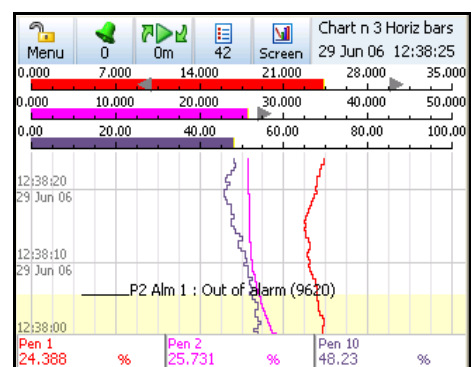

Vertical Chart, 3 Horizontal Bars and 3 DPMs

Functions and Features


Minitrend GR Rear Connections

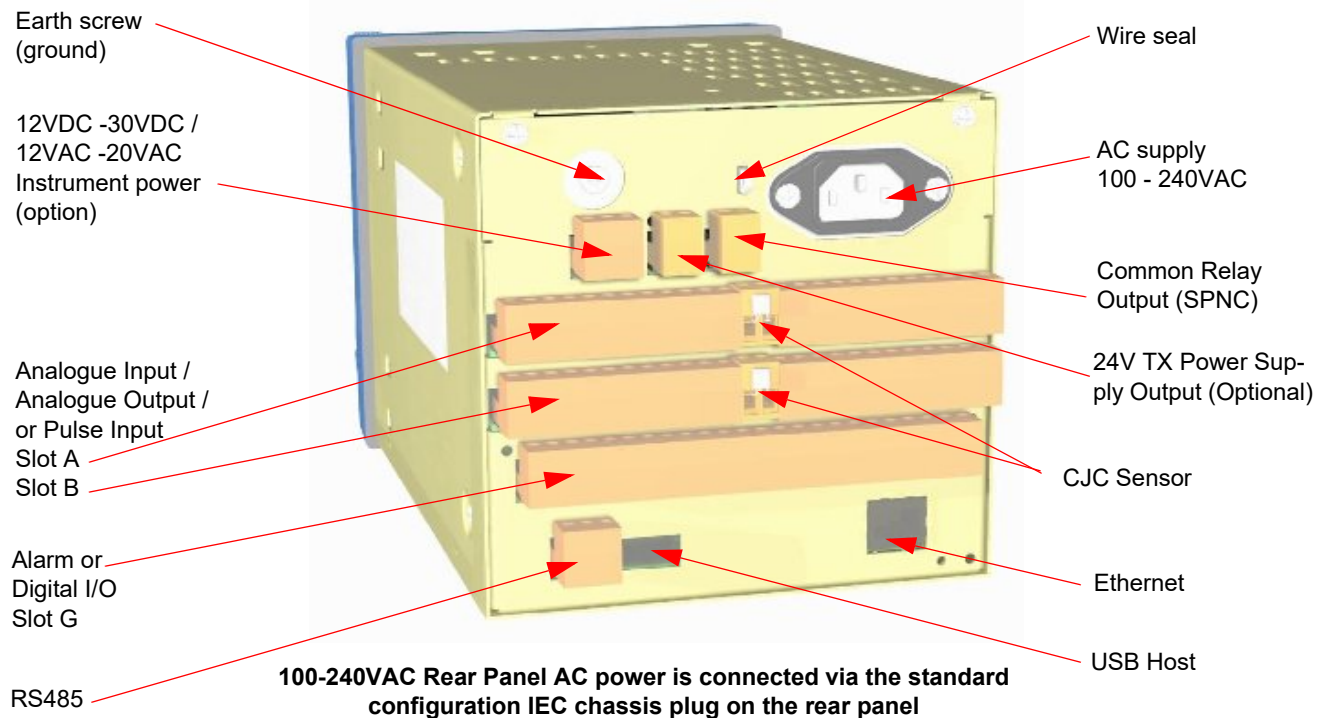

An optional rear cover is available for this recorder, it is recommended when using Thermocouples as the measurement device and to protect the wiring and terminals
For the rear cover part number, see [“Section 10: Spares List” on page 291](#).

Functions and Features

eZtrend GR Rear Connections

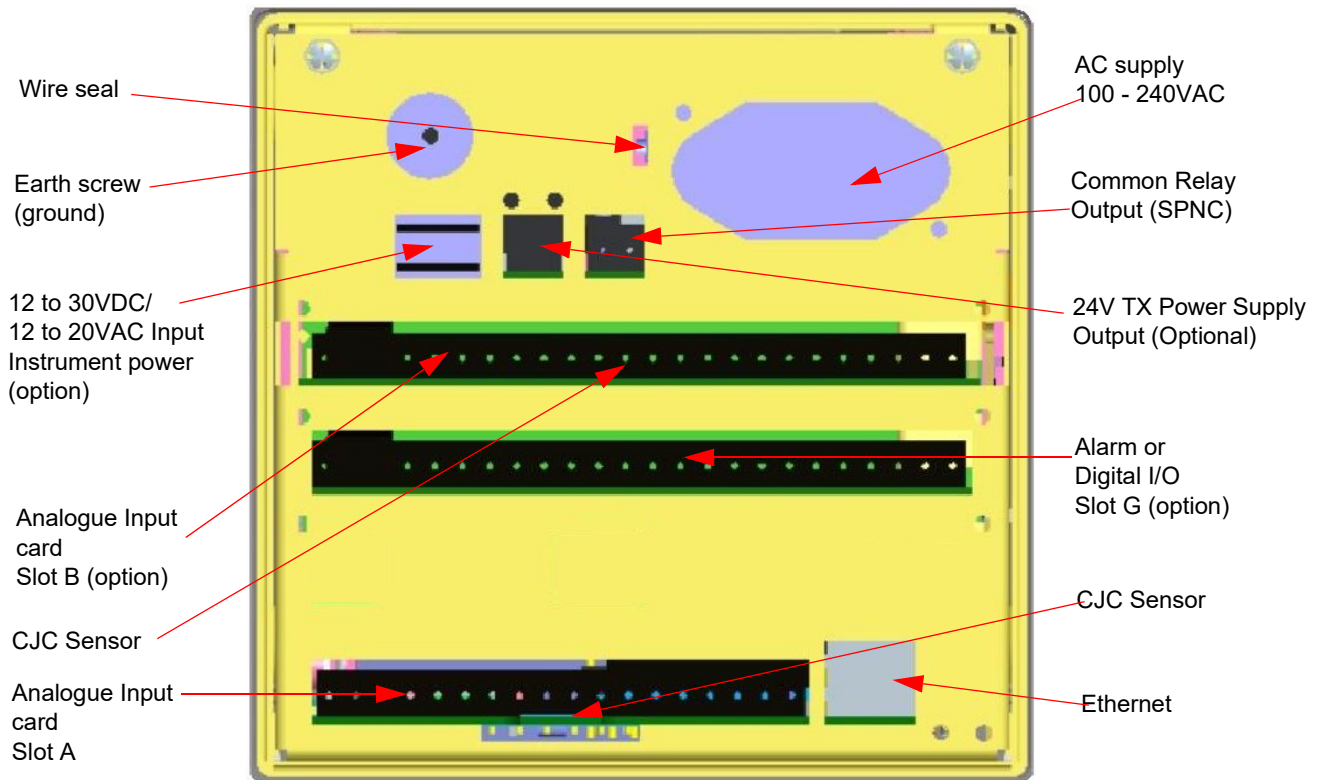


100 - 240VAC Rear Panel AC power is connected via the standard configuration IEC chassis plug on the rear panel

An optional rear cover is available for this recorder, it is recommended when using Thermocouples as the measurement device and to protect the wiring and terminals
For the rear cover part number, see [“Section 10: Spares List” on page 291](#).


CAUTION

When installing the eZtrend GR recorder in the panel, make sure you do not damage or scrape off the CJC sensor on the PCB at slot A. Slot A is at the bottom of the back panel and the CJC Sensor is part of the analog card itself. See below for snapshot of the sensor. Rubbing this or scraping the sensor while installing in the panel can damage the sensor. If damaged, this will affect the ability of the unit to correctly calculate Cold Junction Compensation values for Thermocouple measurements.

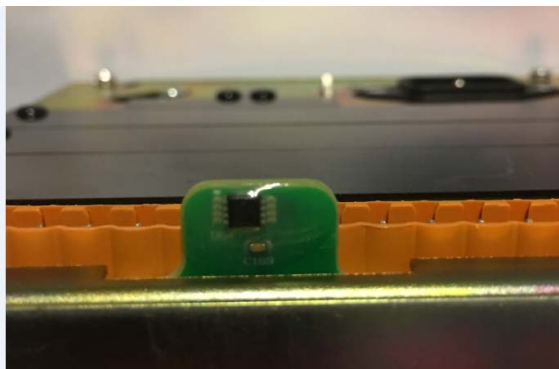

Functions and Features

Multitrend GR Rear Connections

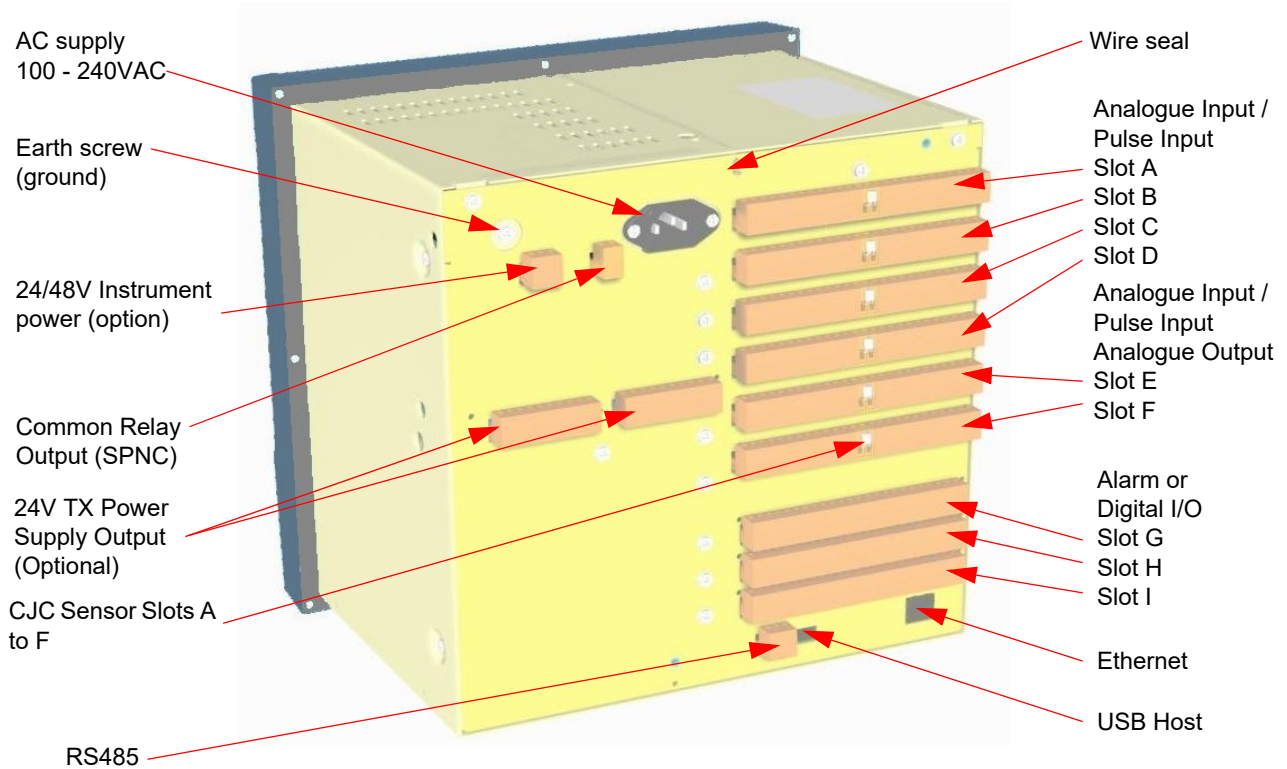

100-240VAC Rear Panel AC power is connected via the standard configuration IEC chassis plug on the rear panel

An optional rear cover is available for this recorder, it is recommended when using Thermocouples as the measurement device and to protect the wiring and terminals
For the rear cover part number, see [“Section 10: Spares List” on page 291](#).

Section 4: Recorder Setup

Configuration of the recorder is performed in the Menu screens and the data is displayed in the Process screens. This section takes you through the Menu system and how to set up your recorder. See [“Section 6: Screen Configuration” on page 237](#) for information on setting up screens to display the data.

User Interface Control

All user actions can be performed via the touch screen using the stylus. All on-screen selection and navigation areas are large enough so the unit can be operated without falsely selecting an adjacent option using the stylus provided.

The stylus is to be used to operate the touch screen. It has a rounded end to avoid damage to the screen. Only a light touch is required to activate the screen. Two styluses are provided and there is a special slot at the top of the recorder to slide the stylus in from the right. If the touch screen does not match correctly to where you are touching it with the stylus the screen may need calibrating. See [“Calibrate” on page 189](#).

Other User Interface Control

All user actions can be performed using a mouse or keyboard attached to a USB host port.

Power up


1. Menu Access

When the recorder is powered up the display will show a splash screen followed by an initialisation screen displaying the default language flag.

The first screen to appear on the recorder is a default process screen with the menu bar at the top. Select the Menu button to access the menu system to configure the recorder. The Menu button takes you to the Main Menu.

From the Main Menu you may be required to Log In, if the Password function is active, see [“2. Log On/Off” on page 66](#). If not, the next configuration required is to set the recorder to the correct local settings, see [“3. Local Settings” on page 67](#).

Figure 4.1 Default process screen

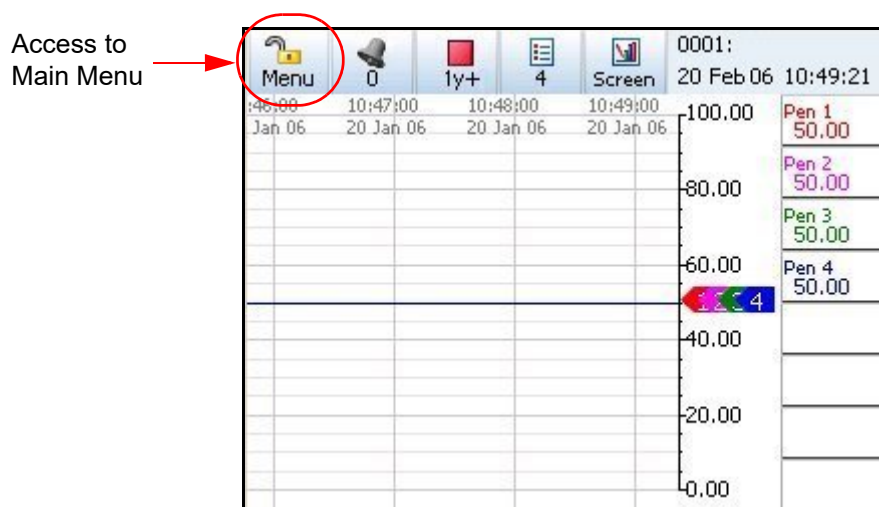


2. Log On/Off

If Password (ESS - Extended Security System, 21CFR) security is active on your recorder a password is required to enter the menu system and process screens. Limited access is available without logging on.

For ESS recorders only, locate the First Time Password System Setup sheet included in with your recorder or see [“First Time’ Password System Setup” on page 220.](#)

All Users

When Log On is required the Log On button will appear in the top right of the Main Menu screen. The Log On button can be set to switch to auto Log Off at a specified period of time. To Log On select the Log On button at the top right of the Main Menu screen.

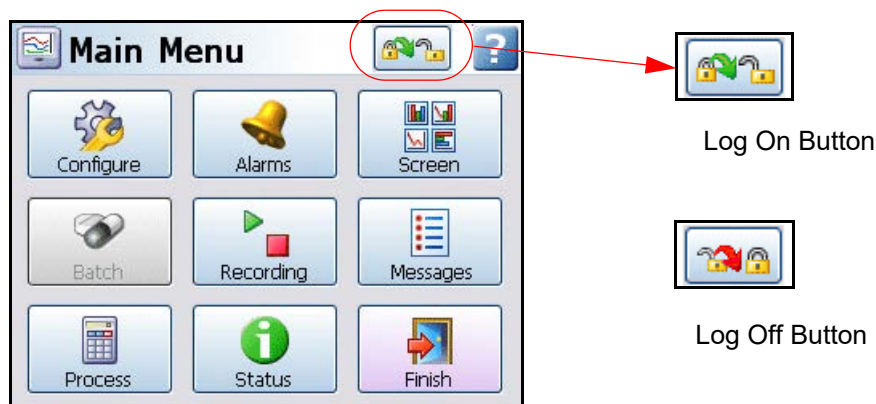

- **Log On** - User is presented with a user name and password entry box. First time user login is “Admin”. No password is required. Access for the first time user is removed once the password system has been configured.
- **Log Off** - Once the user has logged on, the option in the Main Menu will turn to Log Off, once selected the user is logged off and returned to the current process screen.

First Time Log On

The first time the system is used with ESS, a default user name and password is available, the user name is “Admin” and will have no password, this is known as the “first time” user. Access to the first time user is removed once the password system has been configured. The first time user is reinstated if the password system is reset.

For more detailed information see [“Section 5:Security” on page 219.](#)

Re-Start Recorder

NOTICE

After re-start, if the recorder asks for “Scan and Fix” or “Continue”, always select “Scan and Fix”. If you chose “Continue” you may lose the data. In case of “Scan & Fix” the recorder may take couple of more minutes more than normal to re-start, up to 2-3 minutes.

3. Local Settings

Go from the Main Menu to Configure > Setup > Edit > General > Localisation

All text is displayed in the currently selected language. Help system language can be selected independently, currently English only available. To configure local settings, languages, time zones, daylight saving, temperature units and mains frequency for input filtering, see [“Localisation” on page 146](#) section.

Default Time Zone

Go from the Main Menu to Configure > Setup > Edit > General > Localisation > Time Zone

The recorder is set to the default Time Zone for Eastern Time (US, Canada), (GMT -5.00). When the configuration is complete select the Finish button to Commit.

4. Time and Date Settings

Go from the Main Menu to Configure > Settings > Set Time

Set the Recorder Time and Date settings, see [“Set Time” on page 183](#).

When the configuration is complete select the Finish button to Commit.

5. Firmware Options


Go from the Main Menu to Configure > Setup > Edit > General > Factory > Credits

Check your recorder has been set up with the correct amount of credits, displayed as a number against the Credits item in the menu. Then select the Options item in the Credits menu and enable the firmware options you require by changing the cross to a tick/check symbol

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Menu Path

As each button is selected in the menu system a menu path will appear at the top of the screen to enable the user to know where they are in the system. The user can select these buttons to return to previous menus and enables the user to jump back more than one menu at a time.

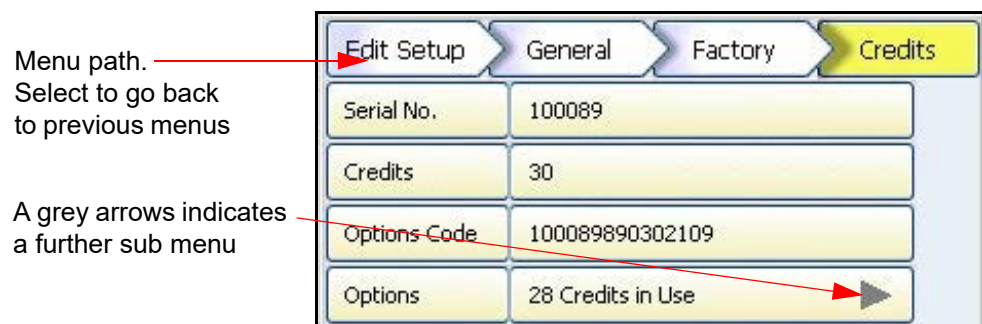

Main Menu



Help

Help is available on all menu screens and is context sensitive from each screen. The Help icon will reside either in the top right or bottom right on all menu screens. All the Help files have a **Home** button that will take you to the Help System main index. Navigating in the help does not stop the logging.

Main Menu

Select a button
to take you to
the next menu



- **Configure** - Configure the recorder through the Setup, Layout, Passwords and Settings menus. [See "Configure Menu" on page 69](#)
- **Alarms** - Acknowledge Alarms, Alarm configuration and their associated condition and View the current alarm status. [See "Alarms Menu" on page 185](#)
- **Screen** - The Screen Menu includes an Edit button to configure Pen/Channel mapping, Replay previous data, Screen List to change the screen currently being displayed and Clean Screen facility. There are Calibrate and Touch Test features to re-calibrate the screen. [See "Screen Menu" on page 186](#)
- **Batch** - The Batch function manages sections of data. Batch markers are configured by the user and are used to identify and analyze batches of data. [See "Batch Setup/ Batch Groups" on page 190](#)
- **Recording** - Start or Stop recording. Export Now will transfer data to external media such as SD card, USB key or Network Share folder (NAS). [See "Recording Menu" on page 194](#)
- **Messages** - The messages screen will display certain message areas. Specific types of messages have been put into categories or all messages can be viewed. [See "Messages Menu" on page 197](#)
- **Process** - Controls for any process in use e.g. Max/Mins, Totals, Counters, User Variables, Script Timers and Reports can be controlled from this screen [See "Process Menu" on page 200](#)

Main Menu


- **Status** - Displays status information screens that are available to the user, these will provide information for reporting and diagnostic purposes. [See “Status Menu” on page 204](#)
- **Finish** - When an operation is complete use the Finish button to Commit, Discard or Commit Later. [See “Finish” on page 216](#)
- **Help** - The Help icon appears as a question mark on all menu screens. The Help files are context sensitive and will supply information for each menu screen where the icon appears. [See “Help” on page 68](#)

Configure Menu

(Main Menu > Configure >)

The Configure screen gives access to the Setup, Layout, Password menus and Settings (Time and Date). The majority of the recorder configuration is done in the Setup menus.

- **Setup** - In the Setup menu the user can configure how the recorder acquires, stores and actions data. The Edit Setup gives access to sub-menus for Field IO, Pens, Comms, Events/Counters, General, Screen and Recording set up. [See “Edit Setup” on page 71.](#)
- **Layout** - The user can configure how the data is presented on the screen. From the Layouts screen choose to Edit, Saved or Load layouts in the recorder. [See “Layout” on page 167](#)
- **Passwords** - Manages the security and access to full password configuration that allows restricted access within the recorder, providing password protection at different levels. Administrate, Load and Save passwords from this menu. [See “Passwords” on page 174.](#)
- **Settings** - Recorder settings such as Set Time to configure the recorder's time and date. [See “Settings” on page 183](#)

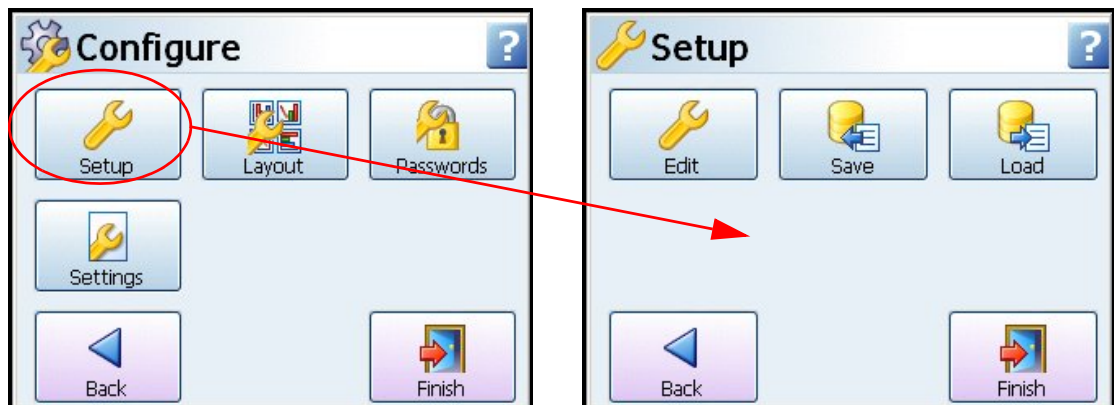

Select a button to take you to the next menu

Main Menu

Setup Menu

(Main Menu > Configure > Setup)

In the Setup menu the user can configure how the recorder acquires, stores and actions data. The Setup screen gives access to the Edit menu where the majority of the recorder configuration is done, also Save and Load setup from this screen.

Edit Setup

(Main Menu > Configure > Setup > Edit Setup)

The Edit Setup gives access to sub-menus for Field IO, Pens, Comms, Events/Counters, General, Screen and Recording set up. See [“Edit Setup” on page 71](#)

Save Setup

(Main Menu > Configure > Setup > Save)

The Save button will produce a list of destinations to save the set up to and allow for naming the setup file. Maximum of 50 characters. File format is “.set”.

The SD card and the front USB device port are found under the front flap on the recorder. There is another USB port at the rear of the recorder. The first USB device fitted will be USB1, therefore the second USB device fitted is USB2.

SD card is available as a credit option for the **eZtrend GR**.

Load Setup

(Main Menu > Configure > Setup > Layout)

Setup can be loaded from SD card, USB key or Network Share folder (NAS). The Load button will produce a list of source files to load setup from.

The SD card and the front USB device port are found under the front flap on the recorder. There is another USB port at the rear of the recorder. The first USB device fitted will be USB1, therefore the second USB device fitted is USB2.

SD card is available as a credit option for the **eZtrend GR**.

Back Button

Takes you back to the previous menu.

Edit Setup

(Main Menu > Configure > Setup > Edit Setup)

Edit Setup will access the main configuration of the recorder through further sub-menus for: Field IO, Pens, Comms, Events/Counters, General, Screen and Recording set up.

The Edit button may display a warning message if the Commit Later option has been selected. This means changes to the configuration have been made but the changes have not been committed to the recorder. [See “Commit Later” on page 217](#)



Select a button to take you to the next menu

- **Field IO** - This button displays a sub menu containing Analogue In, Analogue Out, Alarm/Digital IO and Pulse Inputs card menus. [See “Field IO Menu” on page 72](#)
(If AMS2750 mode is selected in the credits, this button will show IO+AMS2750, refer to [“Appendix L: GR Series AMS2750 capabilities” on page 405](#))
- **Pens** - This button displays all the configuration areas for setting up Pens including Scales, Maths, Alarms, Logging and Totalisers. [See “Pens Menu” on page 85](#)
- **Comms** - This button displays Services, TCP/IP and Network Admin. Services takes you to a sub menu containing Modbus, Web, Email, SNTP, FTP and Peers menus. [See “Comms Services Menu” on page 108](#)
- **Events/Counters** - Events and counters are firmware options that can be activated using the credit system. Events are certain conditions or operations which can be set up and logged according to the time and date of the occurrence. [See “Events Menu” on page 120](#). User Counters can be set up and used as a Cause or Effect in the Events system to count an occurrence. [See “Counters Menu” on page 135](#) Pre-set Markers are also available to be configured for use in the event system and as a mark on chart and Time Synchronisation on recorders on a Digital Input.
- **General** - This button displays a sub menu containing general recorder information including recorder Ident, Error Alert, Factory, Batch, Printer set up and Groups (Pens) menus. [See “General Menu” on page 137](#)
- **Screen** - This button displays a sub menu containing Screen Saver, Tabular Display, Chart speed and screen Brightness set up. [See “Screen Saver” on page 153](#)

Main Menu


- **Recording** - Set up Scheduled export to media and specify the Storage Bias for recording logged and chart data. [“Edit Recording” on page 158.](#)
- **Reports** - Reports can be generated manually or on a periodical basis using event system to show daily/weekly/monthly total, max, min, average etc., the reports can be printed, e-mailed as attachments or exported to external media. The report details must be set up first before a report can be run, see [“Reports Menu” on page 163.](#) To run a report see [“Reports \(Process\)” on page 202.](#)

Field IO Menu

(Main Menu > Configure > Setup > Edit Setup> Field IO)

Select which type of Field Inputs/Outputs are required for configuration depending on what type of cards are fitted in the recorder.

For AMS2750 mode the Field IO button will change to IO+AMS2750. Please refer to [“Appendix L: GR Series AMS2750 capabilities” on page 405.](#)

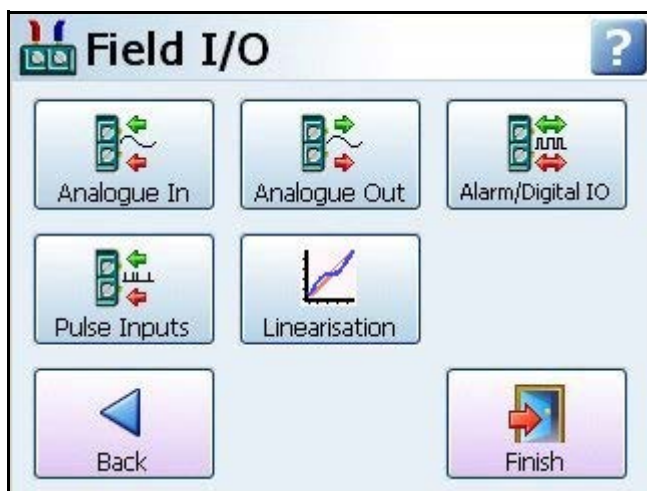

- **Analogue In** - Select this to configure each Analogue Input channel. [See “Analogue In Menu” on page 75.](#) (If AMS2750 mode is selected in the credits, this button will show Sensors, refer to [“Appendix L: GR Series AMS2750 capabilities” on page 405](#))
- **Analogue Out** - Select this to configure each Analogue Output channel. [See “Analogue Out Menu” on page 78](#) (Not available for the **eZtrend GR** recorder).
- **Alarm/Digital IO** - Select this to configure Relay Alarm Output card or Digital Input/Output card. [See “Alarm / Digital IO” on page 79](#)
- **Pulse Inputs** - Select this to configure each Pulse Input channel. [See “Pulse Input” on page 81.](#) (Not available for the **eZtrend GR** recorder).
- **Linearisation Tables** - To be used with Analogue Input type Volts, Amps or Ohms. These are user defined tables that can be set up to allow a non-linear input signal to be used. [See “Linearisation Tables” on page 82](#)

Main Menu

Table 4.1 : Card Positions and Channel Numbers

Minitrend GR		
Slot position	Card type	Channel numbers
Slot A	8 Analogue In Pulse Inputs	1 to 8 1 to 4
Slot B	8 Analogue In Pulse Inputs 4 Analogue Out	9 to 16 9 to 12 9 to 12
Slot G	4 Relay Output 8 Relay/2 Digital In 8 Digital Input/Output 16 Digital Input/Output	1 to 4 1 to 8 1 to 8 1 to 16

Multitrend GR		
Slot position	Card type	Channel numbers
Slot A	8 Analogue In Pulse Input	1 to 8 1 to 4
Slot B	8 Analogue In Pulse Input	9 to 16 9 to 12
Slot C	8 Analogue In Pulse Input	17 to 24 17 to 20
Slot D	8 Analogue In Pulse Input	25 to 32 25 to 28
Slot E	8 Analogue In Pulse Input 4 Analogue Out	33 to 40 33 to 36 33 to 36
Slot F	8 Analogue In Pulse Input 4 Analogue Out	41 to 48 41 to 44 41 to 44
Slot G	4 Relay Output 8 Relay/2 Digital In 8 Digital Input/Output 16 Digital Input/Output	1 to 4 1 to 8 1 to 8 1 to 16
Slot H	4 Relay Output 8 Relay/2 Digital In 8 Digital Input/Output 16 Digital Input/Output	17 to 20 17 to 24 17 to 24 17 to 32
Slot I	4 Relay Output 8 Relay/2 Digital In 8 Digital Input/Output 16 Digital Input/Output	33 to 36 33 to 40 33 to 40 33 to 48

Main Menu

eZtrend GR		
Slot position	Card type	Channel numbers
Slot A	3 Analogue Inputs 6 Analogue Inputs	1 to 3 1 to 6
Slot B option card	6 Analogue Inputs	9 to 14
Slot G	4 Relay Output 8 Relay/2 Digital In 8 Digital Input/Output	1 to 4 1 to 8 1 to 8

DR Graphic		
Slot position	Card type	Channel numbers
Slot A	4 Analogue Inputs 6 Analogue Inputs 8 Analogue Inputs 4 Pulse Inputs	1 to 4 1 to 6 1 to 8 1 to 4
Slot B	6 Analogue Inputs 8 Analogue Inputs 4 Pulse Inputs 8 Relay/2 Digital In 8 Digital Input/Output 16 Digital Input/Output 2 Analogue Outputs 4 Analogue Outputs	9 to 14 9 to 16 9 to 12 17 to 24 17 to 24 17 to 32 1 to 2 1 to 4

To fit the Analogue Input option card (Slot B) into the **eZtrend GR** recorder you will require an expansion card to interface to the recorder. See *"eZtrend GR Analogue Input (Standard) card"* on page 34

Main Menu

Analogue In Menu


(Main Menu > Configure > Setup > Edit Setup > Field IO > Analogue In)

For AMS2750 mode the Analogue In button will change to Sensors. Please refer to [“Sensors Configuration Menu \(Process Mode\)” on page 414](#)

Press the Analogue In button to display all the analogue inputs available.

Click on individual Analogue In number to set up each channel profile. Each channel has a list of menu items to be configured.

Refer to connection details and [“Analogue Input Channel Numbers” on page 32..](#)

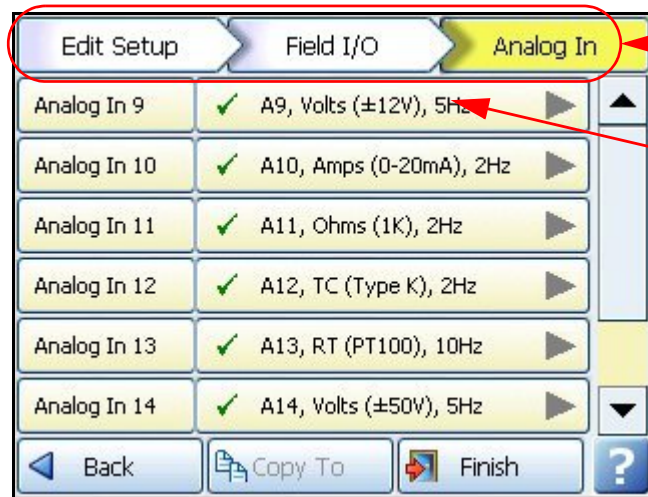


Menu path to current menu

The Analogue In screen displays all the available Analogue Input channels. Each channel displays its individual settings. Select a numbered channel to edit the configuration of each input

- **Enabled** - Toggle On and Off.
- **Type** - Select this for a list of available Signal Inputs.
- **Sample Rate** - Select this for a list of available Analogue Input sample speeds. A Fast Scanning range of 50Hz (20ms) is available as a firmware option (not available for the **eZtrend GR** recorder). See [“Firmware Credit System” on page 253](#). Arranged in 2 banks of 3 inputs, and sample rate must be the same within each bank, only for **eZtrend GR** recorder.
- **Range** (Ohms, Volts and Amps only) - Toggle between Pre-set and User Defined. The Pre-set option will make available a list of Range Types or select User Defined to specify High and Lower Limits.
- **Range Type** (Ohms, Volts and Amps only) - Only available when Range is set to Present. Select for a list of available ranges. The factory default range is +/-12V. See [“User Defined Maximum Input Ranges” on page 314](#)
- **Damp Level** - The damping filter is an advanced algorithm offering improved response over more traditional methods. It works by producing configurable levels of damping - but at the same time being able to respond rapidly to large input changes. Enter the Damp Level in Engineering Units.

Figure 4.2 Effects of Damping and Rolling Average example

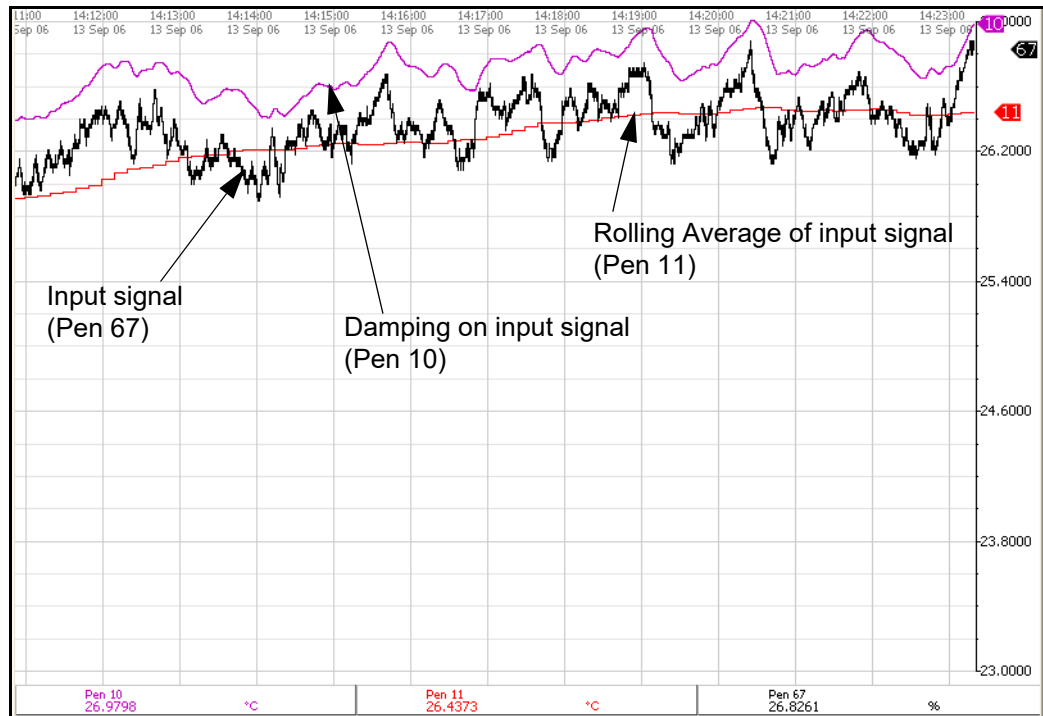

Note: the Damping (Pen 10) has been offset for this example to be able to see the damping effect clearly

- **Linearisation Tables** (Ohms, Volts and Amps only) - Select a table from the drop down list if required. [See "Linearisation Tables" on page 82.](#)
- **Use Pen Scale** - Toggle On and Off, this is enabled by default. Analogue # defaults to the corresponding Pen #, e.g. A1 will default to Pen 1. If you change A1 to display another pen scale eg. Pen 3, you must go into Pen 3 and change the maths to A1. This will ensure that Pen Scale 3 will display A1 input. With this enabled the Engineering zero and span is the same as the pen scale. Disable this and the Engineering zero and span will not reflect the pen scale. When disabled, see Eng. Span & Eng Zero bullet points below. This is not available when using Linearisation Tables.
- **Units** - (Ohms, Volts and Amps only). This is the Units of Measurement for each input. Select and enter a value. Max 13 characters. For Thermocouple and Resistance Thermometer units, see ["Localisation" on page 146.](#)
- **Label** - Select and enter a identification label for the input. Select and enter a label. Max 15 characters.
- **SQRT Extract** - (Volts and Amps only). Toggle On and Off. The Square root extraction in the analogue input is used to linearise certain sensors that have a non linear output - for example in the calculation of flow. So when you check the Square root extraction in the Analogue input section it carries out the following calculation. It ratios the analogue input range that you set, to 0 to 1. So any sensor input is represented by a number from 0 to 1. We then take the square root. We then re ratio the result back to the user set range.

Main Menu

- **Sensor Comp** - Sensor Compensation may be required to improve accuracy on a sub range. This is an adjustment to the value of the signal input on each channel, based on the Engineering units settings. Choose from Single Point, Dual Point or Multi Point Cal, see [“Sensor Compensation” on page 377](#)
- **High Limit** - Available when Range is User Defined. Select and enter the high limit value.
- **Lower Limit** - Available when Range is User Defined. Select and enter the lower limit value.
- **RT Type** - Only available when Type is set to RT (Resistance Thermometer). Select this for a list of available RT types.
- **Burnout Type** - Only available when Type is set to TC (Thermocouple). Toggle between Active and Passive. Active means it will send out a current to the TC. Set to Passive means it takes a reading without sending out a current. The T/C is wired differently for Active and Passive Burnout (see [Figure](#), [“Figure 2.22 Input signal wiring,” on page 33](#)). (Active Burnout is not available for the **eZtrend GR** recorder).
Active Burnout checks the health of the thermocouples every 30 seconds, if your process requires continuous check of the thermocouples to see if they are in burnout you should use Passive Burnout. Active burnout is an implementation of thermocouple health and provides error warning messages for a range of thermocouple activity/failure conditions. Passive burnout does not provide any error warning messages.
If the thermocouple wiring changes and the channel is set to Active, select Passive and Commit the change. Then return to the menu and select Active and Commit the change to update burnout settings.
- **Show Burnout** - Only available when Type is set to TC. Toggle between Upscale and Downscale Burnout.
- **TC Type** - Only available when Type is set to TC. Select this for a list of available TC types.
- **CJ Comp** - Only available when Type is set to TC. Select this for a list of available CJ Compensation. See [“Thermocouple CJC Compensation” on page 364](#).
 - **Int Automatic** - *Uses the cold junction sensor in the recorder as a variable reference temperature*
 - **Ext 0 Deg C** - *Assumes the cold junction is held at 0°C to provide a 0mV reference, external to the recorder*
 - **Ext with Spec Temp** - *Uses a reference junction held at a constant temperature. Specify the temperature that the cold junction sensor is to be set at.*
 - **Ext Input** - *Use a thermocouple or resistance thermometer from another channel to measure the cold junction sensor*
- **External Input** - Only available when CJ Compensation is set to Ext Input. Select the input required as an external input.
- **Eng. Span** - (Ohms, Volts and Amps only). Only available when not using “Use Pen Scale” option. This is the highest value of the engineering range and corresponds to the top of the input range. Select and enter a value using the on-screen keyboard.
- **Eng. Zero** - (Ohms, Volts and Amps only). Only available when not using “Use Pen Scale” option. This is the bottom of the engineering scale and represents the bottom of the input scale. Select and enter a value using the on-screen keyboard.

Main Menu

- **Demo Setup** - Only available if there is no Analogue Input card fitted. Examples of various inputs are available without having an actual signal input coming into the recorder.
 - **Demo Type** - Select this for a list of available Demo Type inputs.
 - **Cycle Time** - Enter the Cycle Time, in seconds, of the Demo Input. Select and use the on-screen keyboard.
 - **Add Noise** - This is to Add Noise to the Demo Input as a percentage value. Select and use the on-screen keyboard.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

*Thermocouple Wiring Changes.

If the recorder is set to active and user wants to change to passive, then select Passive and commit the change” similarly if Recorder is set to Passive and user wants to change to active, then select Active and commit the change

Analogue Out Menu


(Not available for the **eZtrend GR** recorder).

(Main Menu > Configure > Setup > Edit Setup> Field IO > Analogue Out)

Only available when an Analogue Out card is fitted as an option, 2 or 4 outputs are available per card.

The outputs are factory calibrated to meet the published specification and cannot be field calibrated.

Refer to connection details and [“Analogue Output Channel Numbers” on page 36](#)

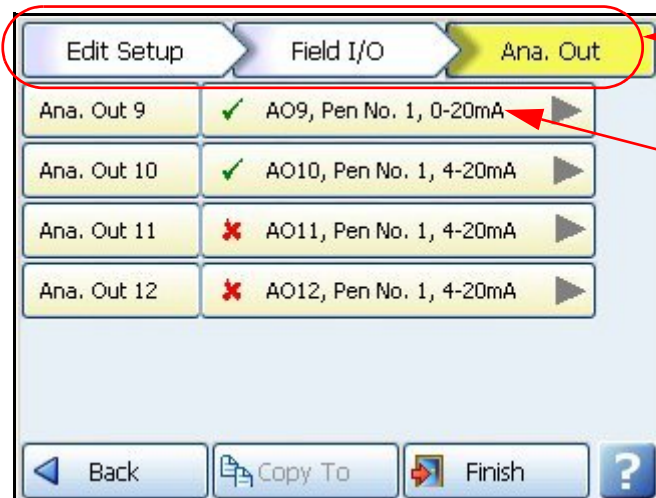

Menu path to current menu

The Analogue Out screen displays all the available Analogue Output channels.

Each channel displays its individual settings.

Select a numbered channel to edit the configuration of each output

Press the Analogue Out button to display all the analogue outputs available. Click on individual Analogue Out number to set up each channel profile.

- **Enabled** - Toggle On and Off.
- **Allow Overrange** - Toggle On and Off. Disabled as default, this will allow the output signal to go overrange to 21mA, if disabled the maximum is 20mA.

Main Menu

- **Transmit Pen** - Eg. Select a pen to output 4-20 mA loop. This will take the scale value from the pen it is transmitting and convert to 4-20mA output signal. eg if the scale is 0-50% this signal will fit the scale so 4mA = 0% and 20mA = 50%. For 0-20mA output signal with the same 0-50% scale, this would read 0mA = 0% and 20mA = 50%.
- **Output** - Select either 4-20mA or 0-20mA.
- **Label** - Select and enter an identification label. Select and use the on-screen keyboard. Up to 16 characters.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Alarm / Digital IO

(Main Menu > Configure > Setup > Edit Setup> Field IO > Alarm/Digital IO)

The Alarm/Digital IO button will display all the digital inputs/outputs available. Click on each individual Alarm IO or Digital IO number to set up each channel profile.

Cards available are:

2 types of Alarm Relay cards

- 4 Alarm Relay Output
- 8 Alarm Relay Output with 2 Digital Inputs

2 types of Digital IO cards

- 8 Digital Inputs or Outputs
- 16 Digital Inputs or Outputs. (Not available for the **eZtrend GR** recorder).

Alarm Relay Card

4 Alarm relay output card or 8 Alarm relay Output with 2 Digital Inputs (6 fixed outputs and 2 configurable Digital Input or output) cards.

Digital IO Card


There are 8 or 16 Digital channels per card that can be setup as inputs or outputs. The Digital I/O card also has 4 channels that can be set as pulse inputs (channels 1 to 4). The operating frequency for pulse inputs on the Digital I/O card is 1kHz max.

Input: Low < 1V, High >4.5V to <10V DC (9V to 20V p-p AC) or Volt free input: Low = short circuit, High = open circuit.

To view and log a channel selected as a Pulse input, set up an extra pen with a Maths function of LPULn in Edit Maths in the Pens menu. For more information see [“Appendix B: Maths Expressions” on page 347](#).

For connection details [See “Alarm Relay Channel Numbers” on page 41](#)

Main Menu

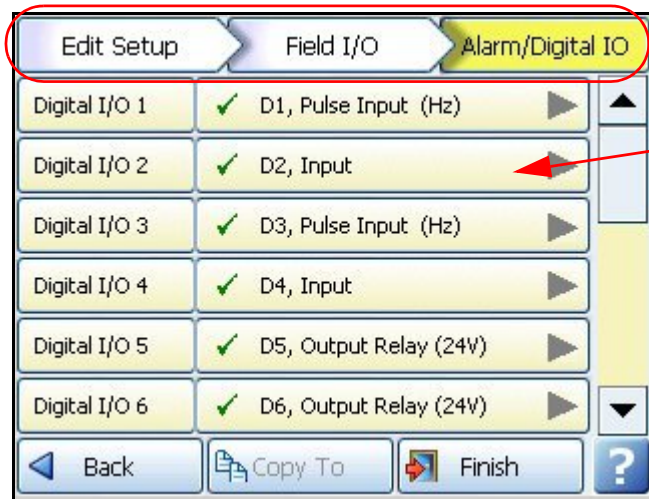

Menu path to current menu

The Digital IO screen displays all the available channels that can be set up to be digital inputs or outputs.

Each channel displays its individual settings.

Select a numbered channel to edit the configuration of each input or output.

For all cards select an Alarm/Digital # to display the configuration menu. Each Alarm/Digital has a list of menu items to be configured.

- **Enabled** - Toggle On and Off
- **Digital Type** - Set to Output Relay contact (Power) for the Alarm Relay cards. Toggle between Input and Output or Pulse Input for the Digital IO card. On the 4 Relay Alarm card, only output type is available. Channels 1 to 6 on the 8 Alarm Relay card are outputs, channels 7 & 8 can be either inputs or outputs.
Note: Pulse Input only available on channels 1 to 4 for slot G, 17 to 20 for slot H and 33 to 36 for slot I.
- **Output** - (Output only). The relay outputs can be set to be either Latched or Single Pulse. A Latched relay will be maintained in its active state until the trigger source has returned to a non-alarm state (unless acknowledged). For Single Pulse the relay will go active for a period of time, specified by the user, then return to a non active state. The time out period remains independent of the length of time the active state remains. If the output is set to Single Pulse, when the alarm is activated the signal will display a single pulse for the duration set. See Pulse Duration. The alarm will trigger again when it goes back into an active alarm state.

NOTICE

Outputs that are set to Single Pulse should not be used as a part of a maths expression as it can cause spurious values.

- **Pulse Duration** - (Output only). Available when Single Pulse is selected as an Output. Specify the pulse length in seconds from 0.1 (100ms) to 6480 (108 minutes) in 0.1 second increments. Select and enter the pulse length.
- **Failsafe** - (Output only). Toggles On and Off. Each relay channel can be independently selected with the fail safe option. This will invert the state of the relay output. With Failsafe Off, normally open (NO) relays have open contacts when the power is off, and open contacts when there is no active alarm. The contacts will close when an associated alarm goes active. With Failsafe On, normally open relays have closed contacts when the recorder is powered on and there are no open active alarms, and the contacts open with an alarm active or when the power is removed. [See "Failsafe Relay Positions" on page 316](#)

Main Menu

- **Label** - Select and enter an identification label. Up to 16 characters.
- **Active Label** - (Input and Output only). This is the label that is shown when an alarm becomes active. Select and enter a label. Not available for Pulse Input. Up to 12 characters.
- **Inactive Label** - (Input and Output only). This is the label that is shown when an alarm becomes inactive. Select and enter a label. Not available for Pulse Input. Up to 12 characters.
- **Reports To** - This will acknowledge the Alarm/Digital IO to a selected destination. Select User message to add the Digital IO occurrence to the messages list only. Select Mark On Chart to display the occurrence on a chart and to the messages list.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Pulse Input


(Not available for the **eZtrend GR** recorder).

(Main Menu > Configure > Setup > Edit Setup> Field IO > Pulse Input)

Only available when a Pulse Input card is fitted as an option. The Pulse Input card operates up to a frequency of 25kHz max. [See "Pulse Input Channel Numbers" on page 38.](#)

Input: Low < 1V, High >4V to <50V DC or Volt free input: Low = short circuit, High = open circuit.

If a Pulse input card is fitted in slot A the first 4 pens will display the maths function of HPULn in Edit Maths in the Pens menu as default to display the pulse reading. For more information see ["Appendix B: Maths Expressions" on page 347.](#)

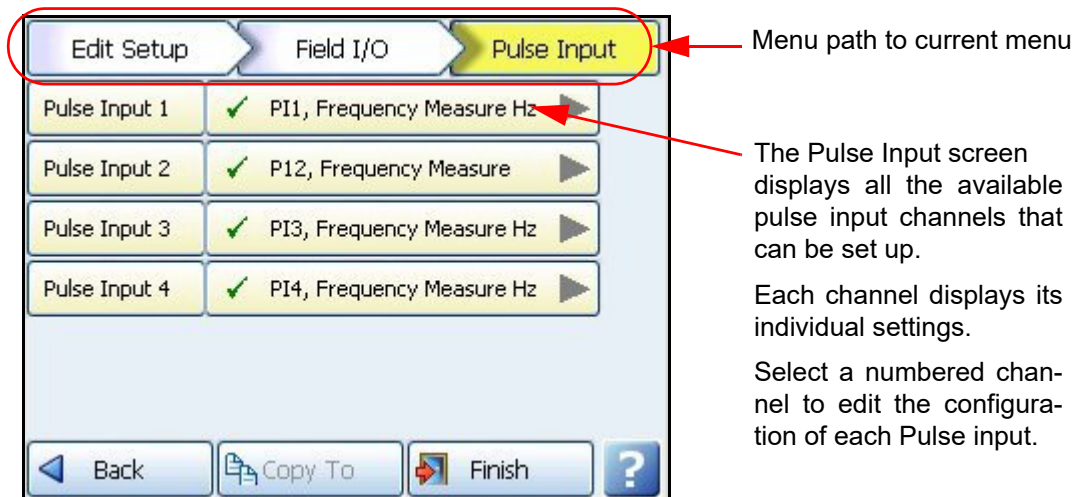

Press the Pulse Input button to display the available pulse inputs.

Click on individual Pulse Input number to set up each channel profile.

- **Enabled** - Toggle On and Off.
- **Hertz** - Fixed as Frequency Measure (in Hertz).

Main Menu

- **Update Rate** - Fixed at 1Hz
- **Label** - Select and enter an identification label for the pulse input. Select and enter a label. Up to 16 characters.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Linearisation Tables

(Main Menu > Configure > Setup > Edit Setup> Field I/O > Linearisation)

Linearisation Tables - To be used with Analogue Input type Volts, Amps or Ohms.

These are user defined tables that can be set up to allow a non-linear input signal to be displayed on the recorder. By entering a set of non-linear signal input values (X) into the linearisation table, the recorder will use the table to generate linear output (Y) in engineering units, to be displayed and/or log on the recorder.

- Select the next available table and rename it for ease of identification by selecting the name button.
- Select the Values button to take you to the start of a new table. Press the Add button to produce the first line. Up to 50 points are available in the table. More than one set of points are required to do the conversion.

Edit Setup	Field I/O	Linearisation	Table 1
Name	0-10V table		
Values	2 Points		

- Click into the text entry boxes under the X and Y boxes and enter the required values (or leave it if your table starts at 0). The Signal Input (X) goes in the first column and the Engineering units (Y) in the second column.
- To add a line at the bottom, click on Add. To add a line above or below, click on a line and use the Insert Above and Insert Below buttons. To delete a line, click in the line and select Delete.

Ins/Del	X (Signal input)	Y (Eng. units)
1	0.0	0.0
2	2.0	6.0
3		

Delete

Insert Above

Insert Below

Cancel

Add

✕

Ins/Del	X (Signal input)	Y (Eng. units)
1	0.0	0.0
2	2.0	6.0
3	4.0	8.0
4	6.0	8.5
5	8.0	9.8
6	10.0	10.0

Add

✓

✕

- When you have finished your table select the tick box, this will also verify the table and produce a Data Error box if there are any problems.


Data Error box

If incorrect values are entered a Data Error box will appear saying "Data line * is invalid". This will appear when you select the tick box at the bottom of the screen. The error box will indicate which line has the error. There may be more than one error in the table, if so the data error message box will appear for each error starting from the top line down going to the next as each error is fixed.

Linearisation Table examples

[Figure 4.3](#) shows an example of a set of non linear signal inputs (X) and the required values in engineering units (Y) that have been entered into a linearisation table. They would produce the following curve.

Figure 4.3 Example of a 0-10V non-linear input signal

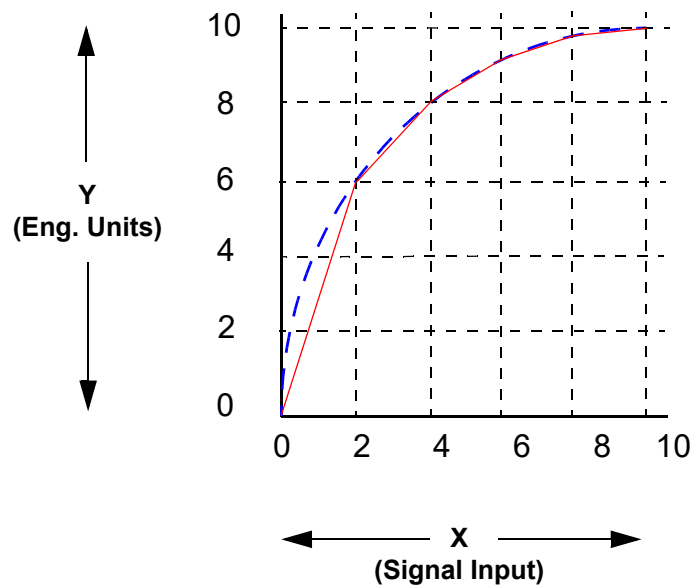


A straight line is drawn between each point, as shown by the continuous (red) line in [Figure 4.3](#). For a more accurate curve, as shown by the dotted line (blue), add more data points into the linearisation table.

The Linearisation tables that you set up here can then be used in the [“Analogue In Menu” on page 75](#)

If the full input range is greater than the range used in the linearisation tables then the signal will carry on following the slope of the last two inputs. For example if we had a -50 to +50V range and just used the 0 to 10V linearisation table then the signal would look like [Figure 4.4](#).

If the Analog input has been set to millivolts, and that the span is greater or equal to 1000 mV, then the linearisation table X values should be specified in Volts

Figure 4.4 Linearisation table used for part of the range

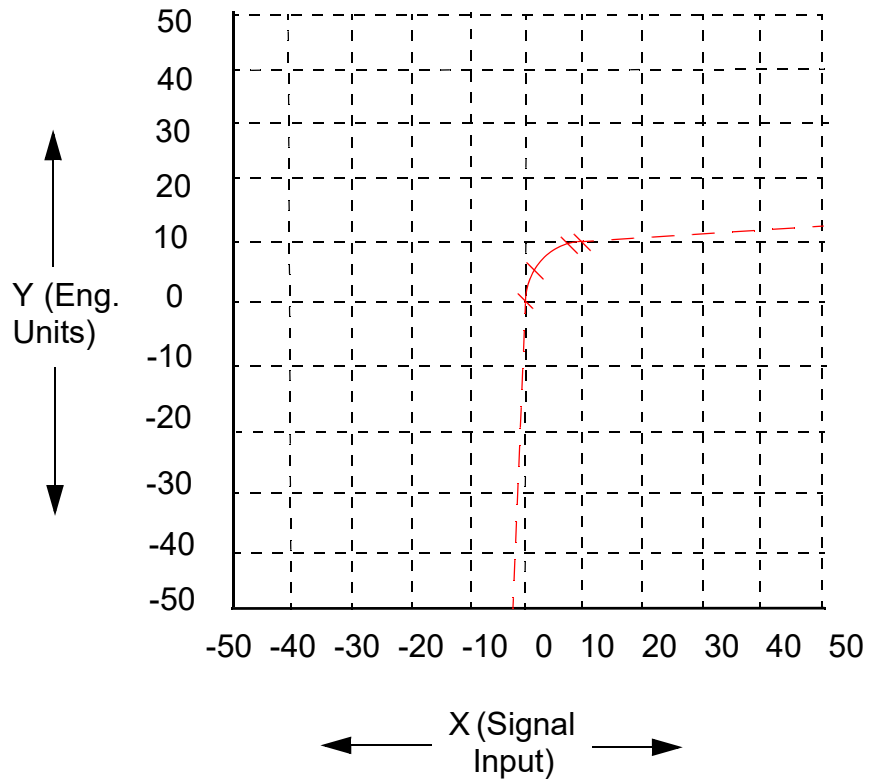

The last two points are used to follow the slope for the rest of the signal.
 At the bottom of the 0-10V table the last two inputs are $X=0$, $Y=0$ and $X=2$, $Y=6$.
 At the top of the 0-10V table the last two points are $X=8$, $Y=9.8$ and $X=10$, $Y=10$.
[Figure 4.4](#) shows these last two inputs at the top and bottom of the 0-10V signal.

Main Menu

Pens Menu

(Main Menu > Configure > Setup > Edit Setup> Pens)

Select the Pens button to display all the pens available.



Menu path to current menu

The Pens screen displays all the available pens.

Each pen displays its scale settings.

Select a pen number to edit the setup of each pen including the Scale, Logging, Alarms and Totaliser

Click on individual pen number to set up each pen profile.

- **Enabled** - Toggle On and Off.
- **Tag** - Select and use the on-screen keyboard to type in an identifier for the pen. Up to 47 characters.
- **Description** - (Screen Designer screens only) Enter a screen description in this field that will then be displayed on the Screen Designer screen.
- **Maths Type** - Analogue signals may have a mathematical calculation performed on them before they are represented as a pen. Basic maths is standard in all recorders. Full Maths or Math Scripting are options that must be activated. [See "Options" on page 206.](#)
- **Edit Maths** - Edit the Maths for this particular pen. For details see ["Appendix B: Maths Expressions" on page 347.](#)
- **Scale** - Select Scale to go to a sub menu to set up the scale parameters. [See "Scale Menu" on page 86](#)
- **Logging** - Select Logging to go to a sub menu to set up the logging configuration. [See "Logging Menu" on page 87](#)
- **Alarms** - Select Alarms to go to a sub menu to set up the alarm profile. [See "Alarms Menu" on page 89](#)
- **Totaliser** - Select Totaliser to go to a sub menu to set up the totaliser settings. [See "Totaliser Menu" on page 91](#)
- **RAV** - This will display the Rolling Average for this pen. The recorder takes an average of the number of samples entered.
For example: a 1 hour rolling average made up of 1 minute averages it would be 60 seconds per sample with 60 samples, and you can increase the time span accordingly, so 1440 samples at 60 seconds per sample would give you a 24 hour rolling average made of 1 minute averages.
Enable the RAV function. Enter the **Number of Samples**.
Then enter the **Sample Interval**, or how often a reading is taken, in seconds.
Prefill works as follows, if you setup a 60 sample rolling average a 10 second samples that will create a 10 minute rolling average, with each sample being accumulated as an average from the current recorder processing rate (10Hz say), so each 10 second sample is added to a queue of 60 samples, and each 10 seconds the new rolling average is calculated. The prefill simply takes the current pen value and fills the queue with that average, causing the "damping" effect to be baselined at the current reading. No prefill will cause the first few samples to have a greater effect on the average, as they will not be diluted by 60 samples but 1, 2, 3, 4 up to 60 after the 10 minutes.

Main Menu

Group - This pen can be allocated to a Group with other pens to display information, be used for batch control or run reports on groups of pens. Select this to display the list of available Pen Groups. If you select a group here this pen will be added to it. Maximum 24 pens per group for **Multitrend GR**, 16 for **DR Graphic** and **Minitrend GR** and 8 for **eZtrend GR**. The group can then be renamed, to rename these groups, see [“Groups” on page 152](#). Groups are used as a part of the Batch system, see [“Batch Menu” on page 148](#). Groups are also used as a part of AMS2750, see [“AMS2750 Process Menu” on page 407](#).

- **Colour** - Each Pen has a Default Pen Colour but this can be changed if required. Select and use the colour palette to set the pen colour.
- **Trace Width** - Select and set the Trace Width for this pen when it is displayed on a chart. The default trace width is 1 with a maximum of 7.


When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Scale Menu

(Main Menu > Configure > Setup > Edit Setup> Pens > Scale)

Individually configure each scale per pen in the scale menu.

Menu path to current menu

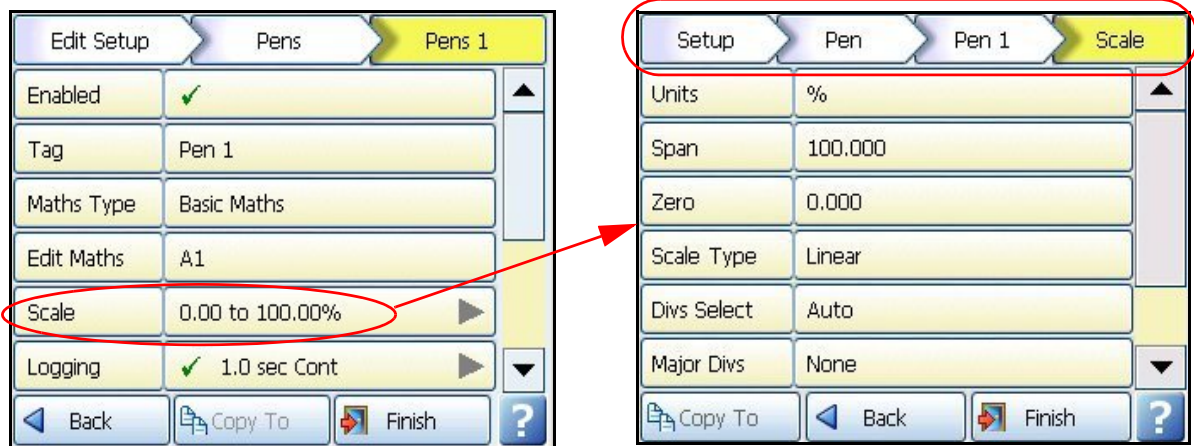

Select the Scale button to take you to the Scale menu

Click on Scale to set up each scale profile per pen.

- **Units** - Scale measurement Units. Select this and enter the units. Up to 16 characters.
- **Span** - This is the highest value of the scale. Select to enter the Span value.
- **Zero** - This is the bottom of the scale. Select to enter the Zero value.
- **Scale Type** - Toggle between Linear or Logarithmic (Log).
- **Divs Select** - Only available with Linear Scale Type. Toggle between Auto or User Defined.
- **Major Divs** - Only available when Divs Select is set to User Defined. Select and enter the major division position.

Main Menu

- **Minor Divs** - Only available when Divs Select is set to User Defined. Select and enter the minor division position.
- **Start Decade** - Only available when the Scale Type is set to Log. Select and enter the start value of the first decade.
- **No. Decades** - Only available when the Scale Type is set to Log. Select and enter the number of decades required. Max 20 decades (although not all will be displayed on the recorder).
- **Numb Format** - Displays the Notation of the number format, Scientific or Normal.
 - **Notation** - Toggle between Scientific or Normal number format. The scientific format displays the value to the power of 10 shown here. Notice the value has been rounded up.
 - **Auto** - Toggle Between Automatic number formatting and User Defined.
 - **After Decimal** - Only available when User Defined is selected. Select and enter the number of decimal places. (up to 15 decimal places)

Pen 2
26,670
%

Normal

Pen 2
2.7e+01
%

Scientific

When this pen setup is complete go back to the Pen # menu and complete the pen setup for all other pens.

Logging Menu

(Main Menu > Configure > Setup > Edit Setup> Pens > Logging)

Menu path to current menu

Field	Continuous (Left)	Fuzzy (Right)
Enabled	✓	✓
Type	Continuous	Fuzzy
Rate Units	Seconds	Seconds
Rate	10 Sec	10 Sec
Alarm Rate Units	Milliseconds	
Alarm Rate	500ms (2Hz)	
Auto Fit		✓
Band 1 %		0.5

Pen Logging can be set to log as Continuous or Fuzzy

Click on Logging to set up each logging profile per pen.

- **Enabled** - Toggles On and Off to activate or de-activate logging for this pen.
- **Type** - Toggles between Continuous or Fuzzy logging. Continuous logs every value based on the Method chosen (Sample, Average or Max/Min). Fuzzy Logging has been developed as a secure data storage technique which has a self teaching data storage algorithm so the recorder stores data at a variable rate to match the process being monitored. Fuzzy Logging has intelligent resources to enable the most effective and efficient way of using the scan rate, storage capacity and recording time. [See "Appendix F: Fuzzy Logging" on page 371](#)

Main Menu

- **Rate Units** - Set the Units for the logging rate to be displayed. Select and choose the logging rate units from the drop down menu.
- **Rate** - This is the speed at which data is required to be logged.
If the Millisecond option is selected as the **Rate Units** for the logging, then a drop down menu of options will appear. When all other **Rate Units** are selected a keypad will appear for user entry. Fastest rate is 20mS and slowest is 60 hours.
- **Alarm Rate Units** - Only available if the logging Type is set to Continuous. Set the Units for the Alarm logging rate to be displayed. Select and choose the alarm logging rate units from the drop down menu.
- **Alarm Rate** - Only available if the logging Type is set to Continuous. This is the new logging rate used when this pen goes into an active alarm state. To enable this feature to change the logging rate in an alarm state, see **Change Log** in the Alarms menu.
If the Millisecond option is selected as the **Alarm Rate Units** for the logging, then a drop down menu of options will appear. When all other **Alarm Rate Units** are selected a keypad will appear for user entry.
- **Pre-Trigger** - activate pre-triggering for that pen, any alarm on that pen will cause the pre-trigger system to be activated. Only the first 16 pens can be configured for pre-triggering. For details on the Pre-Trigger function and configuration for the pre-trigger time is held in the recording menu in the setup configuration under a separate button called pre-trigger, [“Pre-Trigger” on page 161](#).
The alarm rate for each pen will be used for the pre trigger rate. The alarm rate must be set to less than 10 seconds per sample for pre-triggering to operate.
Pre trigger will only operate when the logging is in continuous sample mode, pre-triggering will not be available with fuzzy logging or Max Min.
Note: Pre-Trigger is not supported for CSV export format.
- **Method** - Only available if the logging Type is set to Continuous. Select from a list of Methods.
Sample: logs the last sampled reading.
Average: logs the average of all the samples taken since the last log.
Max/Min: logs the highest and the lowest of the sampled readings since the last log.
- **Align** - Only available if the logging Type is set to Continuous. Select and enter a value from the list to align the logging at specified intervals. This will hold the start of logging until the aligned time selected occurs based on the recorders real time clock.
- **Auto Fit** - Only available if the logging Type is set to Fuzzy. Toggles On and Off. AutoFit ensures that the last sampled data point is logged before the signal goes out of the tolerance set in Band 1 or Band 2. When displayed on a graph, the input signal will automatically fit to this last logged point. This gives a better fit for stepped input changes.
- **Band 1%** - Only available if the logging Type is set to Fuzzy. This is where the tolerance is set for the input signal. Specify, as a percentage of the scale range, the tolerance band allowed above and below the input signal. Select and enter a value.
- **Fuzzy Band 2** - Only available if the logging Type is set to Fuzzy. Toggles On and Off. This is to enable a second tolerance to be set, configure it to be On to activate. Only used in conjunction with Autofit On, to specify the Band 2%.
- **Band 2%** - Only available if the logging Type is set to Fuzzy. This is where a tighter tolerance can be specified which must be set within the limits of Band 1. Specify, as a percentage of the scale range, the tolerance band allowed above and below the input signal. Select and enter a value.

When the setup is complete go back to the Pen # menu and complete the pen setup.

Main Menu

Alarms Menu

(Main Menu > Configure > Setup > Edit Setup> Pens > Alarms)


This is for setting up alarms on this pen only, a maximum of 6 alarms per pen are allowed. Select the first available alarm e.g. Alarm 1 and configure each alarm.



The Pen Alarms screen displays up to alarm set points per pen.

Each alarm displays its individual alarm setting.

Select an alarm number to edit the setup of each alarm

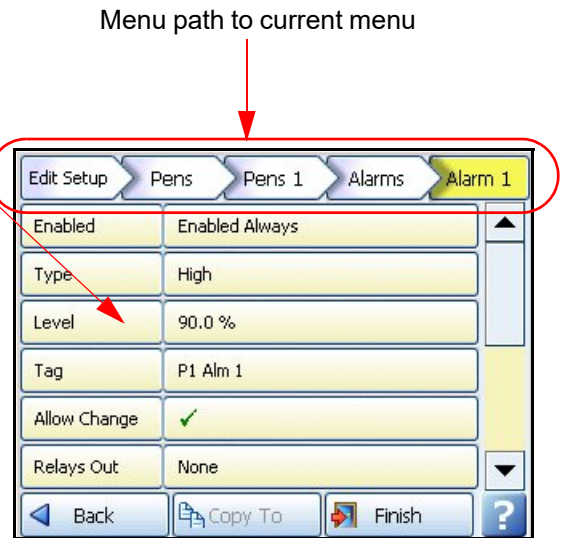

When an alarm has been configured an Alarm Marker or Pen Pointer will appear for each alarm depending on the type of process screen. [See "Alarm Markers" on page 248](#)

- **Enabled** - Select Enable to see a list of ways to enable or disable the alarm. Disable, Enabled Always or Dig Enabled.
- **Enabled by Digital** - Only available when Enabled is set to Dig Enabled. Select and choose which digital signal(s) will enable this alarm (on this pen only).
- **Type** - Select this to display a list of different types of Alarms. High, Low, Deviation, Rate Up or Rate Down. Set a High alarm to activate when the signal goes above the Alarm Level, or set a Low alarm to activate when the signal goes below the Alarm Level. Deviation is the how far this pen can deviate from the Ref Pen before triggering an alarm. See "Deviation Level" and "Ref Pen".
Rate Up and Rate Down Alarms are used to trigger an alarm when the signal changes a defined amount over a specified time. See "Deviation Level" and "Time Period".
- **Level** - Select and enter a figure at which the alarm is to be triggered.
- **Deviation Level** - Only available when Alarm Type is set to Deviation, Rate Up or Rate Down. Select and use the numeric keypad to enter the amount of deviation (in engineering units). For Deviation enter the amount of deviation allowed on a designated pen (Ref Pen) before an alarm is triggered.
For Rate Up and Rate Down enter, as a percentage, how far the signal can deflect before an alarm is triggered.
- **Ref Pen** - Only available when the Alarm Type is set to Deviation. Select and enter the pen that this alarm is referenced to. This works like an actual pen that dynamically tracks a designated pen.
- **Time Period** - (Only available when the Alarm Type is set to Rate Up or Rate Down). Enter (in seconds) how long the signal is allowed to deviate, at the specified deviation level, before an alarm is triggered.

Main Menu

- **Tag** - Enter a tag or name to identify this alarm. Up to 16 characters.
- **Allow Change** - If activated this will allow quick configuration changes to this alarm level from the Alarms > Configure button on the Main Menu. This does not change the original setup.
- **Relays Out** - Select and choose which Relay Output(s) is triggered by this alarm (on this pen only). The Fixed button will use the common relay output on the power board (24V relay). (Common relay output is not available for the **eZtrend GR** recorder).
- **Latched** - A latched alarm will maintain in its active state until the trigger source has returned to a non-alarm state and the alarm has been acknowledged. A latched alarm will continue to flash, if an alarm marker or pen pointer is displayed, until it is acknowledged and in a non-alarm state. [See “Acknowledging Alarms” on page 367](#) A Reflash option is available to keep the alarm flashing whilst in an alarm state even after it has been acknowledged. See **Reflash**.
- **Change Log** - Toggles On and Off. Select this to change the Log speed when an alarm occurs. The Log rate changes when alarm is active and stays at the alarm rate for as long as the alarm is active then returns to the normal logging rate. Set up the new alarm logging rate in **Alarm Rate** in [“Logging Menu” on page 87](#).
- **Mark Chart** - Toggles On and Off. Selecting On will place a Mark on the Chart with automated messages when the alarm becomes active. From the position of the Mark on Chart the chart background colour will change to show it is in an alarm state.
- **Email Alarm** - Enable this to send an email when any alarm is triggered on this pen. This function is a firmware option that is activated from the Factory menu > [“Credits” on page 140](#).
- **Recipients** - Only available when email has been enabled. Select your recipients from the list provided. Email addresses and Server names must be entered in [“Email” on page 113](#).
- **Hysteresis** - (not available for Deviation). Toggles On and Off. When this is activated, you can set a tolerance level for an alarm. It allows a specified percentage value of the span of the scale to be added to the alarm level.
- **Hyst Level %** - (not available for Deviation alarm). Enter as a percentage of the span of the scale. This is how much tolerance the signal can have past the set alarm activation point until the alarm is de-activated. The example in [Figure 4.5](#) shows the alarm activating at 40% which is the set low alarm level. The alarm is not de-activated until the signal is at 50%, which is 10% past the set alarm level. So the **Hyst Level %** would be set to 10%. Reverse the process for a high alarm.
- **Damping** - Toggles On and Off. Damping is a time delay that works going into alarm only. When switched On, the alarm level must be breached for a specific period of time before an alarm is triggered.
- **Damping Time** - Set the amount of Damping time in seconds. Damp level can be from 1 seconds to 64800 seconds.
- **Reflash** - Toggles On and Off. Activate this to re-enable an active alarm that has been acknowledged. Set the Reflash Time.
- **Reflash Time** - Only enabled when Reflash is active. Set the time period after the alarm has been acknowledged for the alarm to reflash if it is still in an alarm state.

When the setup is complete go back to the Pen # menu and complete the pen setup.

Main Menu

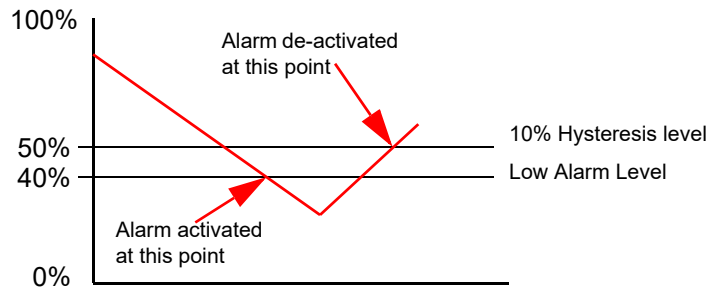


Figure 4.5 Hysteresis Level

Totaliser Menu

(Main Menu > Configure > Setup > Edit Setup> Pens > Totaliser)

The Totals option must be active to use this option. See [Table 7.1, "Firmware Options," on page 253](#).

To Start, Stop, Reset and View Totals, see ["Totals" on page 200](#).

The Totaliser function is normally associated with flow monitoring applications. The input to the recorder would be a measure of flow rate (eg. In litres per second) and the total amount that has flowed over a specified time period. Multiple totalisations are possible with the use of extra pens (firmware Credit option). Totalisations values are 10 digits plus exponent.

NOTICE


IEEE floating point numbers with large unit factors beyond the IEEE range may incur incremental errors, specially if incrementing by a small amount each time. If this is your type of application a work around would be to set the Unit factor to 1 and then divide the total by your original unit factor.

Main Menu

Click on Totaliser to set up the totalising profile per pen.

Totaliser menus showing Normal and Sterilisation types

Menu path to current menu

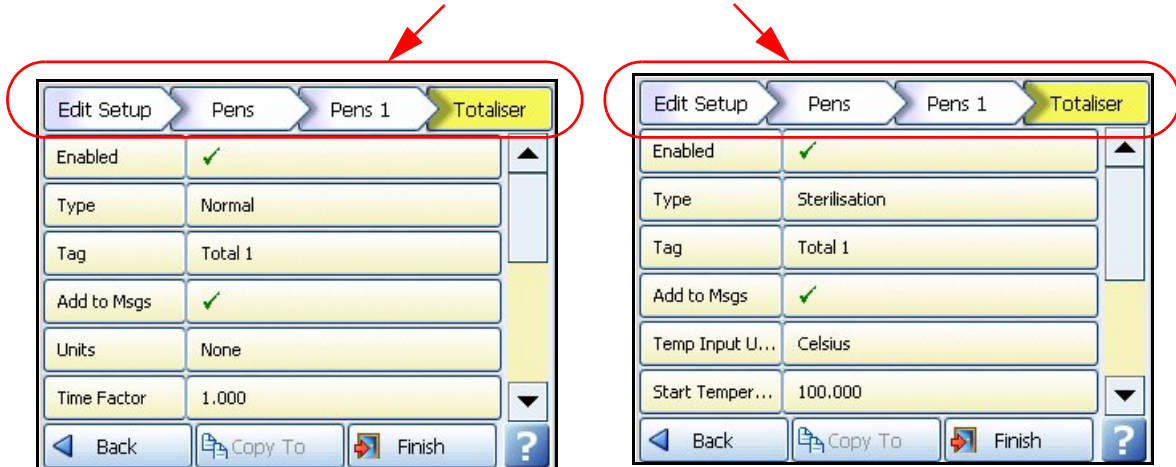

Select Totaliser from the Pen screen to display the totalising setup menu

- **Enabled** - Toggles On and Off to activate or de-activate totalising for this pen.
- **Type** - Select this for a list of Types of totalising. Normal or Sterilisation. Normal totaliser function is usually associated with flow monitoring applications. Sterilisation* is where items are subjected to heat over a period of time. Each pen can be totalised according to the Fo or Po sterilisation* function at 250 °F (121.11°C). The Standard Reference Temperature and Thermal Resistance (Z Value) are adjustable. All temperature limits are adjustable. Start temp, Reference temp and Z factor are all user defined, allowing support for many different types of sterilisation applications. [See "Sterilisation" on page 94](#)
- **Tag** - Select and enter an identifier for the pen. Up to 17 characters.
- **Add to Msgs** - Toggles On and Off. Select this to add a totaliser to the messages screen. Eg. Total1: Total 1 Reset
- **Units** - Normal Totaliser only. This is the Units of Measurement for the totaliser. Select and enter the units. Up to 12 characters.
- **Time Factor** - Normal Totaliser only. Time factor – Totaliser adds a value once per second, so you need to Divide by this factor. For example:
If your flow meter is in units/second Time factor is 1.
If your flow meter is in units/minute, the unit will DIVIDE by the time factor, in this case 60 – so every 1 second, 1/60th of the unit is added.
If your flow meter is in units/hour, the unit will DIVIDE by the time factor, in this case 3600 – so every 1 second, 1/3600th of the unit is added.
- **Unit Factor** - Normal Totaliser only. The Totaliser adds the engineering unit from the instrument, onto the total (after the time factor is applied). You then need to Divide by the unit factor. For example:
If your flow meter is in litres/time and you want to Totalise in litres – there 1 litres in 1 litre, so your unit factor would be 1, so every 1 second 1/1 unit is added.

Main Menu

If your flow meter is in litres/time and you want to Totalise in Cubic meters – there are 1000 litres in 1 cubic meter, so your unit factor would be 1000, so every 1 second 1/1000th of a unit is added.

- **No Backflow** - Normal Totaliser only. If the flow reading should go into a negative value, eg. The flow meter has been switched off, and “No Backflow” is inactive, the totaliser will subtract from the total value. When “No Backflow” is active any negative values are ignored and the total value is held while the flow meter is off until the backflow level is exceeded.
- **Backflow Level** - Only active when No Backflow is set. Set the level at which totalising will stop if the signal flow goes below this limit and if the No Backflow option is active.
- **Restrict Range** - Normal Totaliser only. Toggles On and Off. When active the totaliser restarts at Min range once it reaches Max range.
- **Min. Range** - Normal Totaliser only. Only available when Restrict Range is active. Select and enter the minimum limit for the totals to range to.
- **Max. Range** - Normal Totaliser only. Only available when Restrict Range is active. Select and enter the maximum limit for the totals to range from.
- **Use Remainder** - Normal Totaliser only. Only available when Restrict Range is active. Toggles On and Off. If the total exceeds the maximum range set, the total will reset to the minimum range set. When Use Remainder is active, it will carry over any amount in excess of the maximum range set.
- **Temp Input Units** - For Sterilisation, select the temperature input units.
- **Start Temp** - For Sterilisation, select the Start Temperature.
- **Ref. Temp** - For Sterilisation, select the Reference Temperature.
- **Z Factor Temp** - For Sterilisation, select the Z factor temperature
- **Include Cooling** - For Sterilisation, Include Cooling if required
- **Completion Value** - For Sterilisation, if cooling is not required, enter a Completion Value. The totaliser will stop at this value.
- **Reset at 16M** - Enabled by default. The upper limit for the totaliser count is fixed to 16777215 to prevent an inaccuracy. The totaliser will get reset after this count. To go above the 16M limit disable this function, but be aware that the count will add some inaccuracies in the calculation above this upper limit, see [Table 4.2 on page 94](#).
- **Numb Format** - Displays the Notation of the number format, Scientific or Normal.
 - • **Notation** - Toggle between Scientific or Normal number format.
 - • **Auto** - Toggle Between Automatic number formatting and User Defined.
 - • **After Decimal** - Only available when User Defined is selected. Select and enter the number of decimal places. (up to 15 decimal places)

When the setup is complete go back to the Pen # menu and complete the pen setup.

Sterilisation

*Specification for Sterilisation. The definition Fo/Po is the sterilisation/pasteurisation time in minutes required to destroy a stated number of organisms with a known z at temperature T. For example, "F18/250" represents the time in minutes required to destroy a stated number of organisms at a temperature of 250°F (121.11°C) with a z = 18 degrees °F. F values are used to compare the sterilizing values of different processes, however, F values cannot be compared unless the z values are the same. When temperature is not specified (for example, F = 8.6) it is understood that the temperature is 250°F (121.11°C); the subscript O (as in the term Fo = 7.4) is used to indicate that the z = 18 degrees F and the temperature is 250°F (121.11°C). See ["Appendix G: F sub zero Sterilisation" on page 375](#).

Displaying Totals

Totals can be displayed by setting up a separate pen to display the totalised value. Totals are best displayed in a DPM screen. If you use a separate pen to display a total be aware that if the total is stopped the pause symbol will not appear as it does for a totaliser pen.

First, select a pen you are going to use to display the total of another pen. Extra pens are available as a Firmware option see ["Credits" on page 140](#). For this example this will be Pen 4. To Start, Stop, Reset and View totals, see ["Totals" on page 200](#).

In the pens menu for the totalising pen (Pen 4), select Edit Maths and enter "T" followed by the pen number you wish to totalise eg.T3. Pen 4 is now set to totalise the value of Pen 3.

It may be necessary to set a larger scale for the totalising pen (pen 4) as the totalising value may become larger than the pen scale of the pen being totalised (pen 3).

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Go to the recorder's process screen and select a screen showing DPMs. The totalising pen (pen 4) will display the totalising value of pen 3.

Rest at 16M

Accuracy table for totaliser count over 16 million (Totaliser menu "Reset at 16M" - disabled)

Table 4.2 :


Exponent	Data Range	Loss in Recorder Precision (Accuracy Error)
23	8388608 – 16777215	0
24	16777216 – 33554431	1
25	33554432 – 67108863	2
26	67108864 – 134217727	4
27	134217728 – 268435455	8
28	268435456 - 536870911	16
29	536870912-1073741823	32
30	1073741824 - 2147483648	64
31	2147483648 - 4294967296	128

Main Menu

Comms Menu

(Main Menu > Configure > Setup > Edit Setup> Comms)

- **Services** - See [“Comms Services Menu” on page 108](#)
- **TCP/IP** - See [“TCP/IP” on page 95](#)
- **Network Admin** - See [“Network Admin” on page 98](#)
- **Load Certificates** - See [“Load Certificate” on page 100](#)
- **Security Options** - See [“Security Options” on page 107](#)

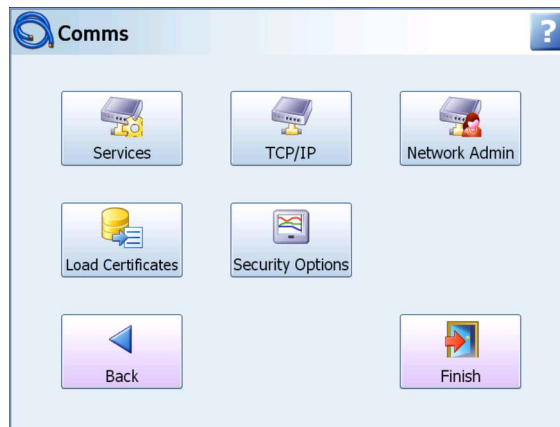

Services

Modbus, Web, Email, SNTP, FTP/Secure FT and Peers. See [“Comms Services Menu” on page 108](#)

TCP/IP

(Main Menu > Configure > Setup > Edit Setup > Comms > TCP/IP)

Transmission Control Protocol/Internet Protocol.

A protocol for communication between computers, recorders and other devices.

Automatic DNS Names - The recorder will automatically register a unique Network ID using the serial number. The format is **xs-nnnnnn**, where nnnnnn is the serial number of the recorder. This allows you to locate the recorder for browsing if you are using DHCP (Dynamic Host Configuration Protocol).

TCP/IP Settings

- **Static IP** - Toggle On and Off. With this enabled the IP address will be the same every time the recorder is powered up. With this feature Off, the recorder's IP address is created dynamically using a DHCP (Dynamic Host Configuration Protocol) Server. With this feature On the IP address can be fixed by entering a known available IP address. Preceding 0 should not be added when entering a Decimal Static IP address for example 192.168.015.019 must be entered as 192.168.15.19.
- **IP Address** - (Available when Static IP is On). This is an identification address for communications between two devices. The IP Address identifies a specific recorder. Please see [“Entering IP address details” on page 96](#).

Main Menu

- **Sub Net Mask** - (Available when Static IP is On). Acts as a filter when identifying an IP address. Please see [“Entering IP address details” on page 96](#).
- **Gateway** - (Available when Static IP is On). A configuration parameter transmitted to each network device. Please see [“Entering IP address details” on page 96](#).
- **DNS/WINS/MDNS** - Set to Automatic, click on this to activate and de-activate options. DNS = Domain Name System, WINS = Windows Internet Name Service, MDNS = Managed Data Network Services. See [“DNS/WINS/MDNS” on page 97](#). Please see [“Entering IP address details” on page 96](#).
- **Ports** - The Port numbers are associated with the IT system in use. Port numbers are set to a default but can be changed by the user to allow data traffic to use a specified port. See [“Ports” on page 97](#).

Entering IP address details

The IP Address in TCP/ IP Settings can be set in different number systems (Octal, Decimal, and Hexadecimal). The number system depends upon the leading character of each octave. (0x for Hexadecimal, 0 for Octal and decimal otherwise).

Using the SIP to enter the IP address, the number gets stored in a Decimal number system and will be displayed in decimal number system only.

Below left is the snapshot for octal representation of IP Address and to the right is the snapshot after it gets converted to decimal.

The screenshot shows a numeric keypad interface for entering an IP address. The input field at the top displays '077.077.077.077', which is circled in red. The keypad includes buttons for digits 1-9, 0, and a decimal point, as well as function buttons like 'Del', 'E', and '?'. Navigation buttons like '←' and '→' are also present.

Octal IP address entered

The screenshot shows the 'TCP/IP Settings' configuration screen. The 'IP Address' field displays '63.63.63.63', which is circled in red. Other fields include 'Static IP' (checked), 'Sub Net Mask' (255.255.255.0), 'Gateway' (0.0.0.0), 'DNS/WINS/M...' (Automatic), and 'Ports' (80, 502). Navigation buttons like 'Back', 'Copy To', and 'Finish' are at the bottom.

Decimal IP address representation

The Address range that can be entered in different number system is as shown in Table 4.3 on page 96.

Table 4.3 : Number systems

	Minimum Value		Maximum Value	
	Entered	Decimal Value	Entered	Decimal Value
Octal	000.000.000.000	0.0.0.0	077.077.077.077	63.63.63.63
Decimal	0.0.0.0	0.0.0.0	255.255.255.255	255.255.255.255
Hexadecimal	0x0.0x0.0x0.0x0	0.0.0.0	0xf.0xf.0xf.0xf.	15.15.15.15

Main Menu

Remember: When entering a Decimal Static IP address no preceding 0 should be added for example 192.168.015.019 must be entered as 192.168.15.19.

The provision for Entering IP information in different number system is applicable for TCP/IP Address, Subnet Mask, Gateway, DNS and WINS.

DNS/WINS/MDNS

(Main Menu > Configure > Setup > Edit Setup > Comms > TCP/IP > DNS/WINS/MDNS)

Set to Automatic, click on this to activate and de-activate options. DNS = Domain Name System, WINS = Windows Internet Name Service, MDNS = Managed Data Network Services.

- **Auto DNS** - This is a sub menu for DNS/WINS/MDNS. Toggles On and Off. With this deactivated the DNS Server address can be changed from the default, if required.
- **Pri. DNS Address** - This is a sub menu for DNS/WINS/MDNS. Only available when Auto DNS is deactivated.
- **Sec. DNS Address** - This is a sub menu for DNS/WINS/MDNS. Only available when Auto DNS is deactivated.
- **Auto WINS** - This is a sub menu for DNS/WINS/MDNS. Toggles On and Off. With this deactivated the Windows Internet Name Service can be changed from the default, if required.
- **Pri. WINS Address** - This is a sub menu for DNS/WINS/MDNS. Only available when Auto WINS is deactivated.
- **Sec. WINS Address** - This is a sub menu for DNS/WINS/MDNS. Only available when Auto WINS is deactivated.
- **Auto MDNS** - This is a sub menu for DNS/WINS/MDNS. Toggles On and Off. This will deactivate the Managed Data Network Services.

When the setup is complete go back to the TCP/IP menu and complete the Comms setup.

Ports

(Main Menu > Configure > Setup > Edit Setup > Comms > TCP/IP > Ports)

The port numbers are associated with the IT system in use. Port numbers are set to a default but can be changed by the user to allow data traffic to use a specified port.

- **HTTP** - Hypertext Transport Protocol is the communications protocol that enables Web browsing. Select and enter the desired port number if required. (Defaults to 80)
- **Modbus** - communications protocol used for automation applications. Select and enter the desired port number if required. (Defaults to 502)

When the setup is complete go back to the TCP/IP menu and complete the Comms setup.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Main Menu

Network Admin

(Main Menu > Configure > Setup > Edit Setup > Comms > Network Admin)

This must be set up to ensure network printing can be performed, and emailing made easier, without being prompted for this information each time you want to print or email. This information will remain after a firmware upgrade.

Network Admin is required for printers on a network and shared or work group printers. Shared or work group printers must contain the correct file path, see [“Printer Menu” on page 151](#).

The Network Share Path (NAS) can be used for loading and saving layouts (.lay) and/or set-up files (.set), saving (exporting) reports, saving (exporting) data, any messages (Diagnostic, system etc), loading sound files from this network share to recorder. This can also be used to print to file and this file can be saved to this network shared folder.

The Network Share Path (NAS) feature needs active network connectivity all the time to effective operation. Any issues with network can lead to missing (exported) data.


Note. The network share folder cannot be used to upgrade firmware remotely. Firmware upgrade needs to be done locally using local USB or local SD card.

- **Username** - Enter your network Login/Username
- **Password** - Enter you network password. For a local printer connected directly to the recorder via USB no domain is required. Ensure the printer name is set to the default (LPT1:), see [“Printer Menu” on page 151](#).
- **Domain** - For network printers enter your network domain. No domain is required for Local printers connected directly to the recorder via USB.
- **Use Share Path** - Check this to enable or disable the Share path
- **Share Path** - enter network path to folder
Note: Share Path Should be in “\\<Machine Name>\<Shared Folder Path>” Format.
Machine Name should not be IP address.


Main Menu

Share Path Access

This network shared folder must have Permission and Security rights (read for loading files) or write (for writing files) or both (for loading as well as writing files) to access the shared path for each user. If the user does not have access rights to shared path then user will not be able to access shared path.

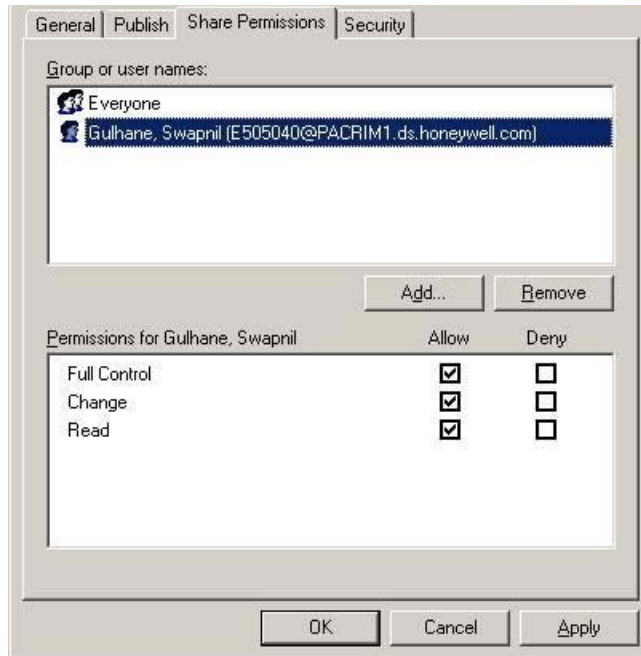

This must be done on a local pc or server where the user wants to have access for any particular folder. User (Administrator of local pc or server) needs to right click on any folder that needs access for any particular folder.

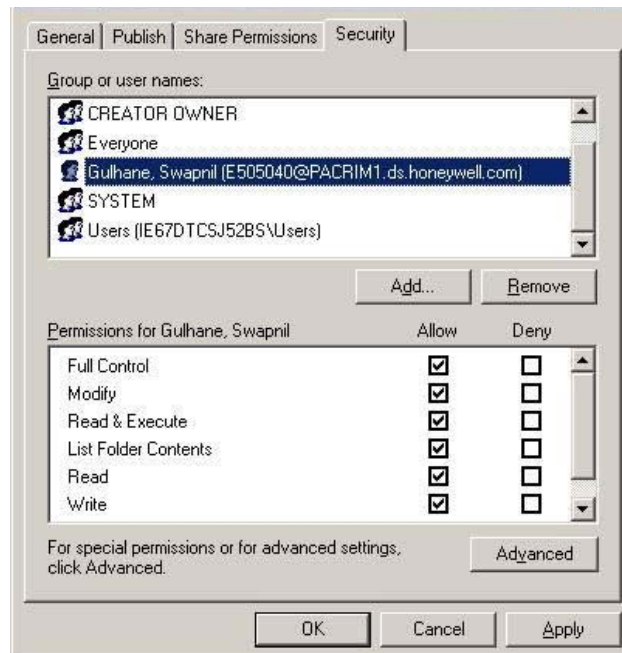

If in doubt, contact your IT Administrator for advice on entering Network Admin requirements.

Main Menu

Load Certificate

(Main Menu > Configure > Setup > Edit Setup > Comms > Load Certificates)

This functionality can be used to load the Device Certificate and Email Certificate.

Load a certificate in the devices to establish a secure communication between them.

Device Certificate - To load a certificate for communication between recorder to recorder and recorder to TMS use Device Certificate option.

Email Certificate - To load a certificate for communication between recorder and email server use Email Certificate option.



Device Certificate

This functionality can be used to load the Custom CA certificate in the system.

To check the certificate version refer [Table 4.11, "Example: System Version Status," on page 205](#).

Loading a Custom CA Certificate:

The Custom CA certificate is a certificate which should be obtained from a reputed Certification Authority. Install this certificate in a device for enhanced security, better control on certificate management and tracking.

For example, certification authorities like DigiCert, VeriSign, GoDaddy, Commodo etc.

Ensure to complete the following prerequisites criteria before loading the Custom CA Certificate in a recorder.

Prerequisite

1. Obtain Custom CA Certificate.
 - a. Check with your IT department to get the certificate for this device. Otherwise, procure certificate from a reputed certification authority.

Note: Generally CA requires a CSR (Certificate Signing Request) to be raised from a PC. The same PC requires to complete the CSR and extract the device certificate once the certificate received from CA.
 - b. Every certification authority will have their own procedures to obtain a certificate. Please check with the concern CA.
2. Once the certification is obtained, complete the installation procedure as per the concern CA guidelines.

Caution: Make sure to use the folder and file names as mentioned in the steps below.

Main Menu

3. Export Custom Device Certificate having "Private Key" to "Device.pfx" with a password.
Note: The password used to export the custom device certificate will be used for installing "Device.pfx" certificate in the recorder. This should be provided in the Security Options > CERT Password.
4. Convert Custom Root Certificate as "Root.cer".
5. Create a new folder "CertificatesCA" in the SD card/USB and copy "Device.pfx" and "Root.cer" files.
6. Insert the SD card/USB in the front SD card/USB port of the recorder.
7. Before loading the certificate in the recorder, perform the following steps to enable custom certificate option in security options.

a. Enable Custom Certificate.

Comms > Security Options > Custom Certificate.

The screenshot shows the 'Security Options' menu with the following settings:

Option	Value
TLS Version	TLS 1.2
Custom Certificate	✓
CERT Password	*****
RDT	✓

At the bottom, there are buttons: Back, Copy To, Finish, and a help icon (?)

b. Enter CERT Password of the Custom CA Certificate.

Comms > Security Options > CERT Password

Note: The password used to export the custom device certificate will be used for installing "Device.pfx" certificate in the recorder. This should be provided in the Security Options > CERT Password.

The screenshot shows the 'CERT Password' entry screen with a numeric keypad and a QWERTY keyboard. The password field is filled with asterisks. There are also navigation buttons (Back, Forward, Help) and a confirmation button (green checkmark).

c. Click **Finish** > **Commit**. Recorder Reboots.

This is the same 'Security Options' menu as in step a. The 'Finish' button at the bottom right is highlighted with a red box.


The screenshot shows the 'Configuration Actions' menu with three buttons: 'Commit' (with a green checkmark), 'Discard' (with a red X), and 'Commit Later' (with a blue P). The 'Commit' button is highlighted with a red box. There is also a 'Back' button at the bottom left.

Main Menu

To load the Custom CA Certificate

Perform the following steps to load the Custom CA certificate in a recorder after completing the “Prerequisite” on page 100.


1. Click **Device Certificate** button.

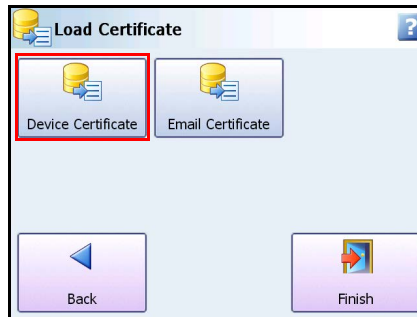

2. Click “**Import**”.



3. Click **OK** to reboot the recorder.

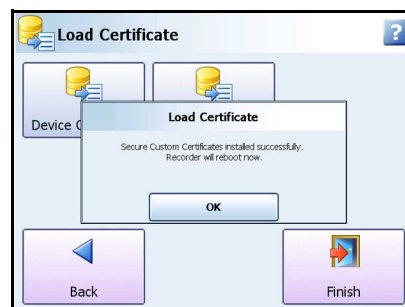

If the installation fails, [See “Appendix K: Troubleshooting”](#) to troubleshoot.

Main Menu

To Reload the Custom CA Certificate:

Ensure to perform the “Prerequisite” steps before re-loading the Custom CA Certificate in a recorder:

1. Click **Device Certificate** button. This displays a “Certificate Information” window.



2. Click **Yes**. This displays “Import Certificates” window.



3. Click **Import**. This displays “Load Certificates” window.



4. Click **OK** to reboot the recorder.

If the Custom Certificate installation fails, [See “Appendix K: Troubleshooting”](#).

Main Menu

Email Certificate

This functionality can be used to load the Root Certificate in the recorder to establish secure communication with email server.

A secure communication will be established between the recorder and email server when the server certificate is verified against the root certificate over TLS 1.2 communication.

A few Root Certificates from well known Certification Authorities will be available in the recorder by default. Install a new (external) Email Root Certificate in the recorder only when the existing certificates (which are already available in the recorder) does not verify server side installed certificate.

Loading an Email Root Certificate


Prerequisite:

1. Create a new folder "EmailCertificates" in the SD card/USB.
2. Rename the Email Root Certificate file as "Root.Cer" and save it.
3. Place the "Root.Cer" file in the folder "EmailCertificates" which was created in the SD card/USB.
4. Insert the SD card/USB in the front SD card/USB port of the recorder and go to the following path:


Menu > configure > Setup > Edit > Comms > Load Certificates

To Load the Email Root Certificate

1. Click **Email Certificate** button.

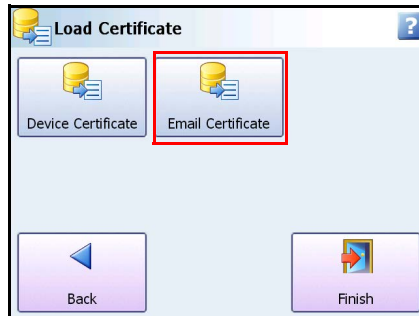

2. Click **Import**.

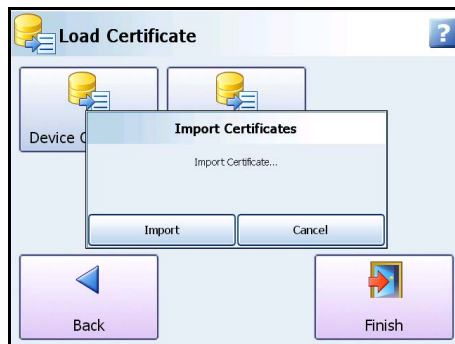

Main Menu

3. Click **OK** to reboot the recorder.




To Reload the Email Root Certificate

Perform the following steps to reload the new Email Root Certificate.

1. Click **Email Certificate** button.
2. Click **OK**.



3. To reload the new Email Certificate, Insert SD Card/USB in the front SD Card/USB port of the recorder (Insert the SD Card/USB which has a "EmailCertificates" folder (Root.cer)).
4. Click **Yes**.

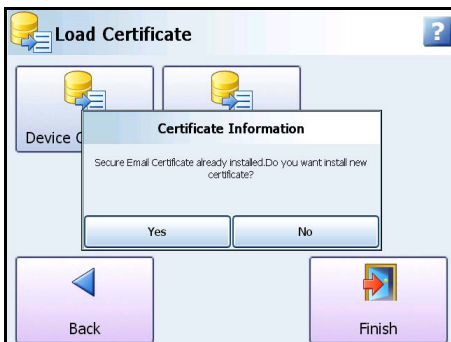

Main Menu

- Click **Import**.



- Click **OK** to reboot the recorder.



- If the Email Certificate Installation fails, the following screen appears. See ["Appendix K: Troubleshooting"](#).



Main Menu

Security Options

(Main Menu > Configure > Setup > Edit Setup > Comms > Security Options)

The user can enable/disable the Security Options from the below screen.

Edit Setup Comms Security Options	
TLS Version	TLS 1.2
Custom Certificate	✓
CERT Password	*****
RDT	✓

Back Copy To Finish ?

- **TLS Version** - Displays TLS version currently in use
- **Custom Certificate** - Check this to enable or disable the Custom Certificate
- **CERT Password** - Provides option to enter the password when the custom certificate is enabled.
Note: This is the password to use for the device certificate (*.pfx).
- **RDT** - Check this to enable/disable the RDT (Remote Display Tool) which allows Remote Viewing Tool to connect to the recorder.

Secure Communications for File Transfer

This sections describes about the secure communication protocols for data exchange between recorders and TSP.

Secure FTP Over WSD (Web Services on Devices).

The Secure FTP protocol uses WSD and can be used to transfer data to and from a recorder. This protocol uses certificate to host a secure web service. WSD is no longer supported from R211 firmware recorders

- WSD is a web service that can run on devices and conforms to the Devices Profile for Web Services (DPWS). WSD web service can be secured with SSL certificates and can work over HTTPS.
- To ensure secure data upload in the **GR Series** recorders, WSD (Web Services on Devices) is used by default with **GR Series** recorders (Default from R200 release onwards, support until R200.3). Recorder device will host web service and have server certificate installed on it. The **Trend Server** software, will have root authority certificate of server in trusted root certificates. Whenever **TrendServer** software connects to WSD service, SSL handshake will take place and on successful handshaking secure communication channel will be established and data flowing between these two end points will be encrypted. Only WSD clients with valid certificates can connect to WSD service. Data transfer between Recorder and **TrendServer** software will be in secure mode.

Main Menu


Secure FT (Secure File Transfer)

The Secure FT protocol uses socket communication through TLS1.2 protocol and can be used to transfer data to and from recorder.

To ensure secure data upload in the GR Series recorders, Secure FT is enabled by default with GR series recorders (from R211 release onwards). Recorder device will host secure socket server and have server certificate installed on it. The Trend Server software, will have root authority certificate of server in trusted root certificates. When TrendServer Software connects through Secure File Transfer, SSL handshake will take place and on successful handshaking secure communication channel will be established and data following between these two end points will be encrypted. Only Secure FT clients with valid certificates can connect to Secure FT service. Data transfer between Recorder and **TrendServer** software will be in secure mode.

Comms Services Menu

(Main Menu > Configure > Setup > Edit Setup> Comms > Comms Services)

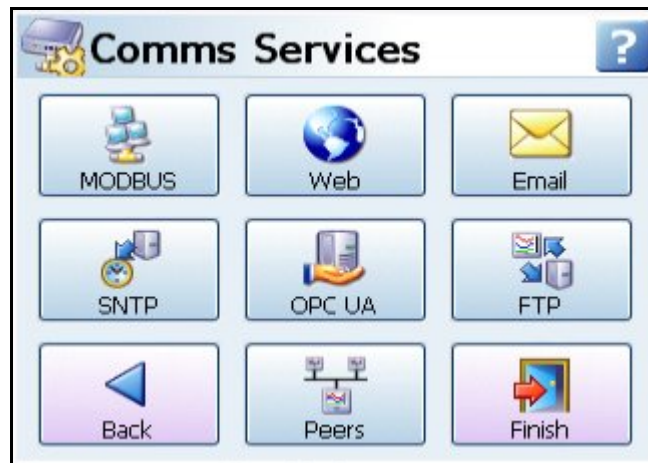

- **Modbus** - Communications protocol for Ethernet and RS485. [See "Modbus" on page 109.](#)
- **Web** -Browse your recorder using the web browse feature. [See "Web" on page 113.](#)
- **Email** - Setup email accounts to send alarm and event information. [See "Email" on page 113.](#)
- **SNTP** - Simple Network Time Protocols is a protocol for synchronising the clock on the recorder with a Network Server. [See "Simple Network Time Protocol \(SNTP\)" on page 115.](#)
- **FTP** (File Transfer Protocol) - used to transfer data to and from the recorder. [See "FTP/ Secure FT \(File Transfer Protocol/Secure File Transfer\)" on page 118.](#)
- **Peers** - Sets up the recorder to be identified on a network (Peer to Peer). [See "Peers" on page 119.](#)
- **OPC UA** - Monitor recorder data (pens and totalizers) by connecting to the recorder's OPC UA server

Main Menu

Standard Communication Interfaces

Rear Ethernet Communication Port

The rear of the recorder is fitted with an Ethernet 100 port and RS485, except for the DR Graphic recorder which has these communication ports inside the recorder housing, which supports:

- RS485 Modbus protocol and TCP/IP Modbus.
- Web Browser. [See “Web” on page 113](#)

Rear RS485 Port

(Not available for the **eZtrend GR** recorder).

- RS485: 2 wire to support Modbus RTU.

The RS485 connector plugs into the back of the recorder. Recorders can be setup as either Master or Slave devices. See [“Modbus Master Communications” on page 110](#).

Front and Rear USB Communication Ports

The front and rear of the **Minitrend GR** and **Multitrend GR** recorders are fitted with a USB communication port. The **eZtrend GR** recorder has a USB port at the front, as standard.

2 USB ports for the DR Graphic are extended inside the case to a dual panel mount receptor above the power supply. USB peripherals/wires can be connected on the panel mount connector inside the case.

The USB Host ports will provide an interface for:

- Save and Load Data
- Save and Load Setups
- External keyboard & mouse
- Barcode reader
- Mass storage device (USB key)
- Local printer


Modbus

(Main Menu > Configure > Setup > Edit Setup> Comms > Comms Services > Modbus)

Modbus is available as a Firmware option see [“Credits” on page 140](#)).

Main Menu

Modbus can be used with the Ethernet or RS485 ports. The Modbus protocol defines a message structure that devices will recognise and use, regardless of the type of network over which they communicate. (RS485 is not available for the **eZtrend** recorder)

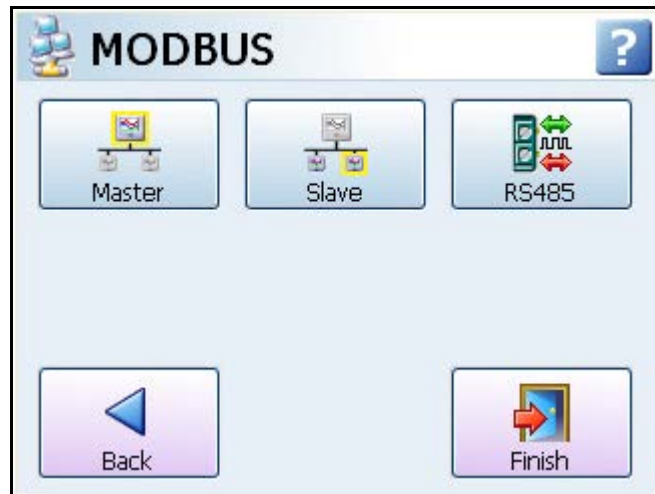


Modbus Master Communications

The recorder can communicate with up to 32 slave devices on both RS485 and/or Ethernet at a maximum poll rate of 1 second (slowest 1 hour). Each slave can perform up to 8 “transactions”, where a transaction can retrieve or send 1 or more registers from a slave, or retrieve or send 1 or more Pens to a slave. When requesting multiple transactions it is recommended not to request more than 24 at one time to allow the recorder to process the information. So for 32 registers/pen values we would recommend 2 requests of 16 devices.

Access to slave registers within the maths function has been provided using SCV (Slave Comms Variable). For example SCV[x,y,z], where x = Slave number, y = Transaction Number, and z is the each successive register retrieved starting from 1 (Item).

The Modbus master can be used in conjunction with the Modbus slave functionality of the recorder to enable the recorder to act as a communications bridge. Data from the slaves connected to a Modbus master is made available as a map on the slave side of the Modbus master; this allows another master to get access directly to another master's slaves data without the master having to re-process that information. Or a Modbus master can process the data and expose it to the network as its own pens in Modbus.

Modbus master must be enabled as a firmware option and requires Full Math or Scripting to assign values to a pen, see [“Credits” on page 140](#).

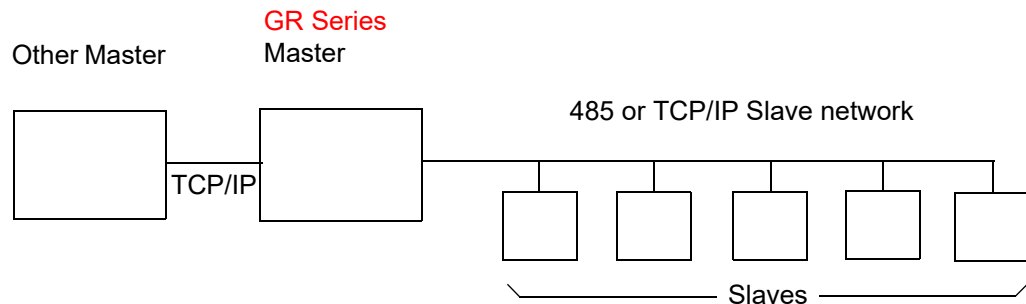

Main Menu

Full Modbus status can be viewed in [“Modbus Status” on page 214](#).

Refer to the Modbus Master Installation Instructions that are on the DVD to help set up other modbus devices to talk to the recorder. (Instruction sheets 43-TV-33-89 - 43-TV-33-102).

Master

- **Enabled** - Toggle On to make this recorder a Master device
- **Poll Rate** - Enter a time period in seconds of how often there is a request for data
- **Legacy Ethernet** - Tick this to connect to **Honeywell V5** recorders.
- **Slave 1 ..32** - Up to 32 slaves can be setup per master device. Setup each Slave in turn starting with number 1.
 - **Enabled** - Toggle On to enable Slave #
 - **Friendly name** - Enter a name to easily identify this slave device
 - **ID** - This is to connect to slave ID
 - **Port** - Select this for a list of available ports, either Ethernet or RS485. For port configuration see [“Ports” on page 97](#).
 - **Network Name** - (Ethernet only). Enter the Modbus Slave IP address.
 - **Protocol** - Select this for a list of available protocols. Modbus or Modbus X*. Modbus and Modbus X can both use the Ethernet or RS485 ports. Protocols define the format in which the data is transferred from the recorder to a PC or transfer between other devices and peripherals. **FPLB** – Floating Point Little Endian Byte Swapped Format & **FPB** - Floating Point Big Endian Format are standard notations.
 - **Transaction 1 ..8** - A request for a register or set of contiguous registers
 - Enabled** - Toggle On to enable the first transaction request
 - Direction** - Direction for the data to flow; In to or Out from the recorder
 - Command** - This is the type of Registers used by the slave device. Refer to the individual memory map for the register type used for each type of device.
 - Data Type** - Refer to individual memory maps for each type of device to determine the type of data. Eg. signed 16-bit int, unsigned 16-bit int or IEEE float. **GR Series** devices use IEEE float.
 - Start Addr.** - This is the register address number to start the transaction from
 - No. Of Items** - Enter the number of items from the start address that are included in the transaction. For example displayed here will be
10 SCV[1,1,1] - [1,1,10].
This means the transaction will take 10 items from the start address with a Serial Comms variable of Slave [1], Transaction [1], Register [1] - to Slave [1], Transaction [1], Register [10]

Main Menu

Comms	Comms ...	MODBUS	Master	Slave 1
Enabled	✓			
Friendly Name	Slave Device			
ID	1			
Port	RS-485			
Protocol	Modbus			
Transaction 1	In 1 1			
Back	Copy To	Finish	?	

Comms S...	MODBUS	Master	Slave 1	Transac...
Enabled	✓			
Direction	In			
Command	Coil Status(1)			
Data Type	short			
Start Addr.	1			
No. Of Items	10 SCV[1,1,10]			
Back	Copy To	Finish	?	

Each Master device can have up to 32 slaves and each slave can perform up to 8 transactions.

Slave

- **Enabled** - Toggle On to make this recorder a Slave Device
- **Port** - Select this for a list of available ports, either Ethernet or RS485 ports. For port configuration see [“Ports” on page 97](#).
- **Protocol** - Select this for a list of available protocols. Modbus or Modbus X*. Modbus and Modbus X can both use the Ethernet or RS485 ports. Protocols define the format in which the data is transferred from the recorder to a PC or transfer between other devices and peripherals. **FPLB** – Floating Point Little Endian Byte Swapped Format & **FP B** - Floating Point Big Endian Format are standard notations.
- **Slave ID** - This is a unique Modbus ID/Address used by the recorder to identify Modbus messages. Applications that talk to the recorder with Modbus will need to know this number to return messages to the device. If you are using the Communication Server on **Trend-Server Pro** the same Slave ID number must be entered. (1-254)

RS485

- **Baud Rate** - Select this for a list of available Baud Rates. This is the speed, in bps (bits per second), at which data is transferred.
- **Byte Options** - Select this button for a list of available Byte Options. The Byte Options consist of 3 digits comprising of Parity (set to None N, Even E or Odd O), 8 Data Bits and Stop Bits, signifying the end of the character string, 1 or 2.
- **Line Turn Around** - This is for a 2-wire line type. Data has to be fully transmitted before the line can be turned-around and data can be received, or vice versa.
- **Reply Delay** - Enter a delay time, in milli seconds, before the recorder sends a reply. Recommended delay should be set to 12mS (min.) if using the Comms Server.

*Modbus X

Modbus X protocol differs from standard Modbus by the 4 floating point order which is reversed for application compatibility.

To check communications connections and trouble shooting network settings versus SCV parameters see “Comms Status” on page 182. This screen will help to identify which area to focus on if the recorder connections are not doing what you expected.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Main Menu

Web

(Main Menu > Configure > Setup > Edit Setup > Comms > Comms Services > Web)

The Web browse function is enabled/disabled from this menu. Select this to enable and allow the recorder to be browsed on a web page. Internet access is required. The Web button is password protected if passwords are enabled. For web browsing information see [“Web Browser” on page 286](#) and [“Internet Security Settings” on page 287](#).

See [“Level Permissions” on page 223](#) for information on password level access. Correct permission level must be selected to use remote control function of the remote display tool. The Remote View function is a firmware option that is activated from the Factory menu > [“Credits” on page 140](#).

Email

(Main Menu > Configure > Setup > Edit Setup > Comms > Comms Services > Email)

Set up this email menu in order to send emails for the following:

1. When an Alarm is triggered, see Email Alarms in the [“Alarms Menu” on page 89](#)
2. An Email can be sent as a part of an Event occurring, such as:
 - **Alarms** – In to, Out of or Acknowledged
 - **Totaliser** – Start, Stop or Reset
 - **Digital Inputs** – On, Off or State change
 - **TC Burnout** – on a specific Analogue Input channel
 - **Scheduled Events** – Once, Interval, Specific days, Month End.

For more information on setting up events that will send emails, see [“Event Effects” on page 128](#).

Edit Setup	Comms	Comms Services	Email
Server Name	192.168.0.1		
Port	25		
Secure Communication	✓		
STARTTLS Support	✓		
Authentication	✓		
Username	Not set		
Password	*****		
User Address	Not set		
Recipient's Email	Recipient's Email		
Back		Copy To	Finish ?

To use the old (<R211 version) Email Communication feature, disable the Secure Communication from the Email menu.

Main Menu

Server Name - Enter your server name that will handle the transfer of the emails. Ask your IT Admin for the server details. One method of finding this information is to go to Microsoft Outlook™, Tools, Email Accounts, select "View or change existing email accounts". Select your email server from the box eg. Microsoft Exchange Server™ and click on the Change button. The server name you require is displayed in the Exchange Server Settings dialog. Enter this name exactly using the on-screen or USB keyboard.

Port - Internet port number that is being used for the email communication on the email server. Default port number is 25.

Secure Communication - Enable Secure Communication option to establish secure communication with email server. Disable to establish the non secure communication with email server.

Recorder supports TLS1.2 protocol for sending secure emails from R211.4 firmware.

To establish the Secure Email Communication with email server, load the Email Root Certificate in the recorder. See section "Loading an Email Root Certificate" on page 104".

STARTTLS Support - Enable STARTTLS Support option to connect Email Server which needs STARTTLS command to establish secure communication.

Authentication - Indicates whether a username or password is read by the server. Check with your IT Admin.

For Network printers and drivers, if you intend to connect the recorder on a Microsoft network administered as a domain, you may have to authenticate the recorder as a user with sufficient permissions to use the resources that you want (network printer, network drive). Usually, several devices (computers or recorders) can be authenticated on the same network with the same name.

Username - Your network email address. (or this could be a generic name used to identify the recorder)

Password - Enter your password associated with your user name. If you have a system where the log in password expires and requires you to change it periodically, you will need to update the login password in the recorders when you are forced to change your PC password.

User Address - Your network email address. Or this could be a generic name used to identify the recorder. No spaces!

Recipients Address - Enter up to 50 email addresses of the destination you want the email to be sent to.

Templates - These are user defined templates containing email text. If you require standard text to be sent out in an email then set them up here and give it a template name.

These templates can be used with the events function to send an email as an effect of an occurrence. [See "Event Effects" on page 128.](#)

Select a template from the list, add a Subject heading (up to 50 characters) and Message Body text as you would for a normal email. Type into the message body text box up to 80 characters per line and up to 100 lines of text can be entered including ["Embedded Process Values" on page 128.](#) This will include specific pen data to your email.

Contact your IT Administrator for advice on entering Server name requirements.

Main Menu

Figure 4.6 Templates for Email using Embedded Values

Comms > Comms ... > Email > Templates > Template 3

Subject: Pen 1 Temperature Test

Message Body: [[P1.T]] [[P1.V]] [[P1.U]]

Back Copy To Finish ?

Message Body

>> [[P1.T]] [[P1.V]] [[P1.U]]

Edit Insert Delete Confirm Cancel ?

Simple Network Time Protocol (SNTP)


(Main Menu > Configure > Setup > Edit Setup > Comms > Comms Services > SNTP)

Simple Network Time Protocols is a protocol for synchronising the clock on the recorder with a Network Server.

- **Server Enable** - Toggle On and Off. Activate this to make this recorder the server. Other recorders, set up as clients, can synchronise their time to this server recorder.
- **Client Enable** - Toggle On and Off. Activate this to set this recorder to synchronise time with the server. See [Figure 4.7 on page 116](#).
- **Server Name** - (up to 32 characters). Only available when Client Enable is active. This is the name of the Network Server (or IP Address) that can be used for time synchronisation. Enter the server name (or IP Address) to be used for time synchronization (this could be a Time Server on the internet or on your network). If a recorder is acting as the Server, the Client recorders must have the recorder's network ID. eg. **xs-nnnnnn**, this is the 6-digit Serial number. See ["System" on page 205](#) for the recorder's serial number.
- **Period** - Only available when Client Enable is active. Select and enter the time period in seconds required between checking and updating the time using the on-screen keyboard. **X Series** recorders have a period limit of 60 to 3600 seconds, **GR-Series** recorders have a period limit of 600 to 3600 seconds.
- **Threshold** - Only available when Client Enable is active. This is a specified amount of time (in seconds) that the recorder clock must be within to ensure synchronisation with the network server. Eg. if set to 3600 the recorder time must be within 1 hour of the network server to ensure time sync will take place.

Main Menu

Figure 4.7 Client/Server network

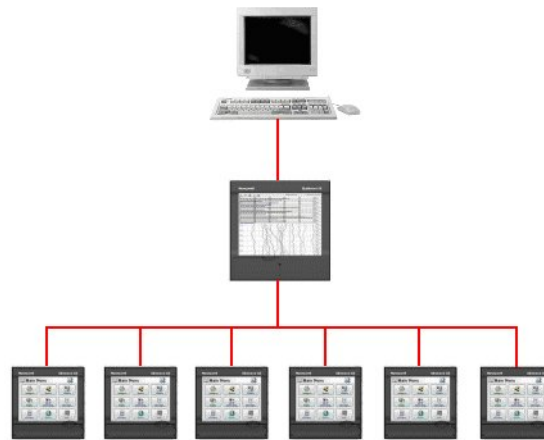

When using time synchronisation via SNTP, always make sure that the recorders and the PC if any are configured to the same time zone. See [“Localisation” on page 146](#)

Client/Server Network

[Figure 4.7 on page 116](#) shows a Network Server at the top, a recorder acting as both a server and a client in the middle and a string of client recorders at the bottom. A recorder can be set up to be a server and a client. Setting it as both means this recorder will synchronise time with the network server. But will also allow other recorders to time sync with it. This saves many recorders trying to time sync with the network server.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

OPC UA

(Main Menu > Configure > Setup > Edit Setup > Comms > Comms Services > OPC UA)

OPC UA (Unified Architecture) is a firmware option that can be activated using the credit system.

OPC UA is a platform independent service-oriented architecture that integrates all the functionality of the individual OPC Classic specifications into one extensible framework.

When the OPC UA server is enabled, OPC UA clients can easily connect to the recorder's OPC UA server, and subsequently monitor/subscribe to recorder data.

Edit Setup	Comms	Comms Ser...	OPC UA
Enabled			
Port	4840		
<div>Back Copy To Finish ?</div>			

Enabled – Tick to enable the OPC UA server capability on the recorder.

Port – Default port number for the OPC UA server on the recorder.

Main Menu

The default port number corresponds to OPC UA's registered port number with IANA (Internet Assigned Numbers Authority), and is a standard default used by clients.

It is recommended that the port not be changed unless specifically requested by your IT Network administrator.

How to connect to OPC UA using an OPC UA client

The most straight-forward approach is to use an OPC UA client to connect to the recorder's OPC UA server. The maximum number of clients that can connect to the recorder at any one time is 3.

Assuming that you have an OPC UA client, then you will need the OPC UA server's endpoint URL to connect to it.

The standard endpoint URL is as follows: `opc.tcp://<your recorder's ip address>:4840`

Port 4840 is the standard OPC UA server port, and is a configurable parameter in the recorder.

As an example, if your recorder's IP address is 192.168.10.100, and your port is left at the default of 4840, then the endpoint that your client will use is: `opc.tcp://192.168.10.100:4840`

Once your OPC UA client is connected to the server, you can browse the address space of the recorder with your client.

Browse the recorder using OPC UA client

The Pen and Totalizer readings are available under the Root/Objects folder ("Objects" being a standard entry point in to the UA address space). Pen and Totalizer values being provided by the OPC UA server allow read access only.

You can also set up subscriptions to monitor data changes on the server.

When setting up subscriptions, please ensure that you review the sampling and publish rates for your subscriptions.

NOTE: Over-sampling, or incorrect configurations, can place an unnecessary load on the network and recorder.

OPC UA Security

Currently, the recorder's OPC UA server is based on the Embedded UA server profile, and is implemented with the lowest security level.

Main Menu

FTP/Secure FT (File Transfer Protocol/Secure File Transfer)

(Main Menu > Configure > Setup > Edit Setup > Comms > Comms Services > FTP)

Setting	Status
FTP	✗
Secure FT	✓
Allow Upload	✓
Allow Download	✓
Log Messages	✓
Mark Chart	✗

Back Copy To Finish ?

This is a method of transferring data and setup to and from **TrendManager Software Suite** and the recorder either in non-secure mode or secure mode.

- **FTP** - Tick to enable FTP transfer. By defaults it is disabled.
- **Secure FT** - Tick to enable Secure FT transfer. By default it is enabled.
- **Allow Upload** - Tick to allow FTP transfer **from** the **TrendManager Software Suite** to the recorder.
- **Allow Download** - Tick to allow FTP transfer **from** the recorder to **TrendManager Software Suite**.
- **Log Messages** - Tick to add a message to the messages list when an FTP transfer is performed
- **Mark Chart** - Can only be active when Log Messages is enabled. Tick to mark the chart when an FTP transfer is performed.

Refer to "[Section 8: Communication](#)" on [page 257](#) in this manual and the **TrendManager Software Suite** manual for setting up FTP transfer.

The **GR Series** recorders support secure communication data transfers since the normal FTP protocol is an unsecure protocol. See "[Secure Communications for File Transfer](#)" on [page 107](#)

Main Menu

Peers

The Peer services communication function sets up the recorder so it can be recognised on a network containing other **GR Series** recorders. This means that multiple recorders will be able to discover other recorders on the same local network in order to share data between them. For example basic unit information such as firmware version, recorder name and network identity. This will be used mainly with the **Trend Server** software to allow discovery of recorders in order to transfer data via FTP or Modbus.

- **Enabled** - tick to enable
- **Set Number** – Default to set 1, this should not have to be changed unless a lot of recorders are being used on the same network.
- **Start Port** - Default port number 8955
- **End Port**- Default port number 8970

The port numbers have been specially selected for this type of network communications. It is recommended that the ports are **not** changed unless specifically requested by your IT network administrator. If this is changed on the recorder it must also be changed on all other recorders, **TrendServer** and Comms Server.

If you experience and security issues using peers, see [“Internet Security Settings” on page 287](#).

OPC UA

- **Enabled** - tick to enable
- **Port** - Communications point for OPC UA server endpoint.

Main Menu

Events/Counters

(Main Menu > Configure > Setup > Edit Setup > Events/Counters)

Events - See [“Events Menu” on page 120](#).

Counters - See [“Counters Menu” on page 135](#).

Preset Markers - See [“Preset Markers” on page 136](#).

Time Sync - See [“Time Sync” on page 136](#)



Events Menu

(Main Menu > Configure > Setup > Edit Setup > Events/Counters > Events)

Events is a firmware option that can be activated using the credit system.

All Event occurrences can be viewed in [“Events Status” on page 213](#).



Events are certain conditions or operations which can be set up and logged according to the time and date of the occurrence. Subsequently events can be reviewed in a list or represented on a graph.

Main Menu

An event is made up from a Cause and an Effect. For example set up a cause, such as Pen 1 going into an alarm state and the effect of this could be to start a totaliser or acknowledge the alarm.

Select the first available event e.g. Event 1. In the Event 1 menu tick to enable and change the Event tag if required. Each Event has four Causes and four Effects available, these can be used in different combinations:

NOTICE

Remember that any of the Causes will trigger All the Effects.
Cause 1 and Effect 1 are not linked.

- An event can have up to 4 causes that triggers just one effect e.g. A pen going into alarm, a Totaliser starts, Max/Mins reset and a Batch starts. This could have the effect of starting Logging.
- An event can have one cause that has up to 4 effects, e.g. A pen could go into alarm and the effects could be that the alarm is acknowledged and a Totaliser is started, there is a Mark placed on the chart and an Alarm is sounded. See [“Event 1 example:” on page 123](#).
- An event can have up to 4 causes that have up to 4 effects, e.g. A pen goes into alarm and a Totalisers is started, A scheduled export starts and Max/Min values are reset. The effects could be the alarm is acknowledged and a mark on chart is displayed to show the start of the totaliser, an Email is sent to notify a scheduled export has been made and a sound effect is played to identify the Max/Min values have been reset.

In summary Cause 1, 2, 3 **or** Cause 4 will trigger Effect 1, 2, 3 **and** Effect 4.

When selecting Totalisers and Alarms etc. ensure they are enabled and configured in the Pens menu.

Main Menu

Table 4.4 : Events - Cause and Effect

Cause		Effect
Alarm	Into Alarm Out of Alarm Acknowledge Alarm	Mark on Chart Logging Totaliser Digital Outputs Alarm Acknowledge Email Screen Change Print Screen Counters Max Mins (Reset) Chart Control Clear Messages Delayed Event Script Timers Play Sound Display Alert Batch Reports Update Tabular Readings Enter Replay Screen Exit Replay Screen Change Chart Speed
Totalisers	Start Stop Reset Rollover	
Digital Inputs	On Off State Change	
T/C Burn Out	Analogue Input #	
Scheduled	Once Interval Specific Days Month End	
User Counters	User Counter #	
Max Mins (Reset)	Reset Max/Min values	
System	Power On Setup Change Internal Mem. Low Export Mem Low FTP Mem Low	
User Action	Mark Chart Hot Button	
Batch	Start Batch Stop Batch Pause Batch	
TUS	Start Soak Started Stability Achieved Soak Complete Stop	
AMS2750 Timer	TC Timers	
	Process Timers	
TC Health Monitor	Analogue Inputs	

Main Menu

Figure 4.8 Event 1 example:

Event 1 example: Adding Cause 1

Edit Setup > Events > Event 1 > Cause 1	
Enabled	✓
Type	Alarms
Sub Type	Into Alarm
Pen	2
Alarms	None

Buttons: Back, Copy To, Finish, ?

Event 1 example: Adding Effect 1

Edit Setup > Events > Event 1 > Effect 1	
Enabled	✓
Type	Alarm Ack
Pen	2
Alarms	1

Buttons: Back, Copy To, Finish, ?

Select which Pen number and which alarm on that pen, will have the alarm acknowledged.

Event 1 example: Adding Effect 2

Edit Setup > Events > Event 1 > Effect 2	
Enabled	✓
Type	Totaliser
Sub Type	Start
Pens	None

Buttons: Back, Copy To, Finish, ?

Event Causes

- **Alarms** - Set to cause an event when a pen goes Into Alarm, Out of Alarm or an Alarm is Acknowledged. Set the pen number and the Alarm that will trigger this event.
- **Totalisers** - Set to cause an event when a totaliser Starts, Stops, is Reset or a Rollover is required. Select which pen has been set up as a totalise pen to trigger this event. The upper limit for the totaliser count is can be selected to prevent an inaccuracy in the calculation above this upper limit. Totalizer rollover is also selectable. The Totaliser Rollover occurs automatically once the count reaches the accuracy limit and totaliser starts counting from zero. If the user fails to configure the event totaliser it will auto reset. The Rollover cause gets triggered each time the totaliser rollover occurs, above the accuracy limit.
- **Digital Inputs** - Set to cause an event when a Digital Input is turned On, Off or has a State change. Select the Digital to trigger this event.
- **TC Burn Out** - Select which analogue input has a thermocouple on that will trigger this event when it goes into a burnout state.
- **Scheduled** - See [“Scheduled Events” on page 125](#).
- **User Counters** - See [“User Counters” on page 126](#).
- **Max Mins (Reset)** - A manual reset of the Max/Min values by the user can be used as a cause to then trigger an effect. Max Min values can be reset in the process menu, see [“Max/Min” on page 200](#).
- **System** - An occurrence in the system can be used as a cause to trigger an event effect. System occurrences include Power On, Setup Change, Internal Memory Low, Export Memory Low and FTP Memory Low. The system monitors the memory storage levels and triggers the alert when the low level set is reached. To set the memory low level go to the Edit Recording menu, go to [“Storage Alarm” on page 160](#).
- **User Action** - Select a User Action for placing a Mark on the Chart as a cause to trigger and event. Or add a Hot Button which can be displayed on an active Trend screen.



- • *The Hot Button function, when active as a cause. The user can click the Hot Button on the active screen and the corresponding event (that the user needs to set) will be triggered. The hot button will display on active trend screens in top right of screen if enabled.*

- **Batch** - Use a batch control as a cause to trigger an event effect. An event cause can be set up so that when you Start, Stop or Pause a batch it will cause an effect to occur. Batches work using groups of pens so when setting up an event with a batch control as a cause you must assign a group of pens. See [“Groups” on page 152](#).
- **TUS** (Temperature uniformity Survey) - This will only be enabled if the AMS2750 TUS or AMS2750 Process option has been enabled in the recorder credits menu. Select the required cause from the provided options. It can be used to trigger effects when a TUS is started, soak is started, stability is achieved, soak is completed or TUS is stopped. See [“Appendix L: GR Series AMS2750 capabilities” on page 405](#)
- **AMS2750 Timer** - This will only be enabled if the AMS2750 TUS or the AMS2750 Process option has been enabled in the recorder credits menu. Select TC Timers or Process Timers as a cause and set the Alert Type to Warning or Expired. See [“Appendix L: GR Series AMS2750 capabilities” on page 405](#)

Main Menu

- **TC Health Monitor** - TC Health Monitoring allows monitoring the health of a thermocouple using Event/Cause Effect system. Following errors can be generated on each channel of TC:-
 - *Active burnout almost failed on AI channel*
 - *Active burnout S/C detected on AI channel*
 - *Upscale burnout on AI channel*
 - *Downscale burnout on AI channel*
 - *Out of burnout on AI channel*

Configure the event/effects for the above mentioned errors accordingly. The diagnostic messages are logged in the recorder.

Scheduled Events

A scheduled event can be set up as a cause so that when a scheduled event occurs it triggers an effect. With scheduled events you can specify the time and date for something to happen. Eg. A schedule can be setup every weekday at 12.00pm to send an Email.

Edit Setup	Events	Event 1	Cause 1
Enabled	<input checked="" type="checkbox"/>		
Type	Scheduled		
Sub Type	Specific Days		
Day of the W...	Mon, Tues, Weds, Thurs, Fri		
Time Of Day	12:00:00 PM		
Count	10		
Back		Copy To	Finish ?

- **Enabled** - Tick to enable
- **Type** - Scheduled
- **Sub Type** - Set Once, Interval, Specific Days or Month End
 - Once** – This is a once only occurrence
 - Interval** - A scheduled can be setup at timed intervals e.g. every 12 hours.
 - Specific days** - Select the day(s), time and how often (count) the schedule will occur Eg. Friday at 12.00 with a count of 10 will carry on for 10 weeks or Monday through to Friday at 12.00 with a count of 10 will carry on for two weeks.
 - Month End** - If Month End is selected with a count of 10 it will carry on for 10 months. The recorder refers to a built in calendar and clock and will schedule the event to occur at mid-night on the last day of each month.
- **Date/Time** - Only available when Once is selected as a Sub Type. Select the time and date for a one off occurrence.
- **Period** - Only available when Interval is selected as a Sub Type. Set the time interval for how often this event should occur, e.g. every hour would be 1h:00m:00s

Main Menu

- **Alignment** - Only available when Interval is selected as a Sub Type. Select and enter a value from the list to align the scheduled event at specific intervals.
For certain applications it maybe desirable for a relatively fast schedule interval event, for example every 10 minutes, to be aligned with a particular time. For example on the hour. When the alignment function is not used, the schedule interval starts immediately on committing the configuration. When the alignment function is used, the schedule interval starts when the first interval event coincides with a subsequent interval that lines up with the desired alignment i.e. Top of the hour.

Figure 4.9 Interval alignment

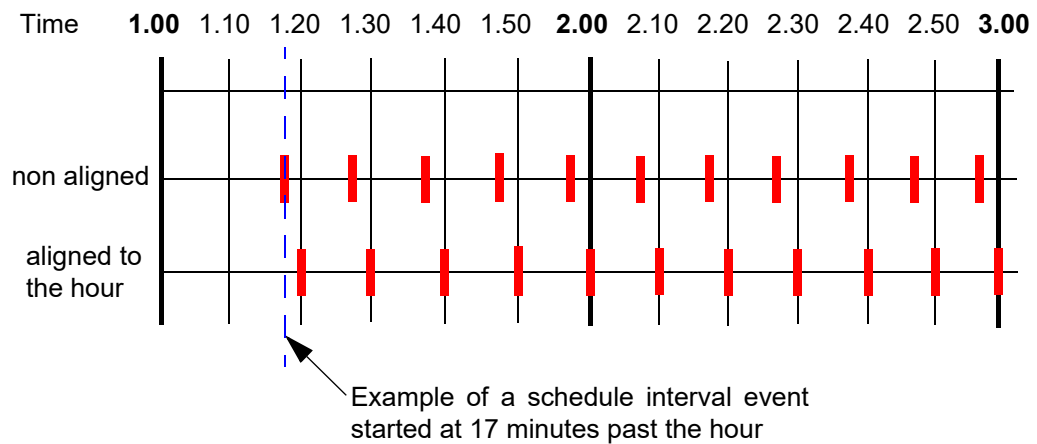


Figure 4.9 shows if a 10 minutes schedule is required to align with a whole hour, and the configuration is committed at 17 minutes past, the recorder will wait until 20 past before starting the schedule interval. As starting at 20 past with 10 minute increments will ensure alignment with a whole hour.

- **Count** - Only available when Interval, Specific Days or Month End are selected as a Sub Type. This is how often you want this to occur. The recorder will carry on with this schedule for the amount entered in the count. Eg. If 24 is entered into the count the scheduled event will occur at the specified time for 24 hours. A count of zero will carry on indefinitely.
- **Days of the Week** - Only available when Specific Days is selected as a Sub Type. Select the days of the week when this scheduled event is to occur.
- **Time of Day** - Only available when Specific Days is selected as a Sub Type. Select the Time Of Day when this scheduled event is to occur.

User Counters

User Counters are quite simply counters that are set up by the user. User Counters can be used as a Cause to trigger an Event Effect. The User Counter information must be setup in the before it can be used as a part of the event system. [See “Counters Menu” on page 135.](#)

For a User Counter to be used as a Cause, a User Counter must already be set up and be counting something. e.g. a User Counter as an Effect of another Event.

Main Menu

An example of this could be:

First setup your counter in the Counters menu. Enable it, Name it, enter the number the count will Start At and enter at what number it will Rollover and start again. [See “Counters Menu” on page 135](#)

Event 1 has been set up with Cause 1 as a Scheduled interval every 30 seconds. The Effect is that User Counter 1 is set to increment by 1. When the scheduled interval occurs, every 30 seconds, Counter 1 will increment by 1.

The image displays three overlapping screenshots of a software interface for configuring events. The first screenshot shows the 'Event 1' setup screen with 'Cause 1' as 'Scheduled' and 'Effect 1' as 'Counters'. The second screenshot shows the 'Cause 1' details screen with 'Type' as 'Scheduled', 'Sub Type' as 'Interval', 'Period' as '0m:30s', 'Alignment' as 'Day', and 'Count' as '0 (Repeat)'. The third screenshot shows the 'Effect 1' details screen with 'Type' as 'Counters', 'Event Action' as 'Increment', 'Sub Type' as 'User', 'User Counters' as '1', and 'Increment By' as '1.0'.

Event 1 example

Cause = Scheduled interval every 30 seconds

Effect = User Counter increments by 1

A second Event can then be set up using the User Counter Effect in Event 1 as the Cause for Event 2. In this example the Cause will be triggered by User Counter 1 (in Event 1) reaching an count of 50. The Effect of this will be a Mark on Chart.

The image displays three overlapping screenshots of a software interface for configuring events. The first screenshot shows the 'Event 2' setup screen with 'Cause 1' as 'User Counters' and 'Effect 1' as 'Mark Chart'. The second screenshot shows the 'Cause 1' details screen with 'Type' as 'User Counters', 'User Counters' as '1', and 'Trigger At' as '50.0'. The third screenshot shows the 'Effect 1' details screen with 'Type' as 'Mark Chart' and 'Mark Chart Text' as 'User Counter 1 (every 50)'.

Event 2 example

Cause = User Counter 1 triggers at 50 increments

Effect = A Mark is placed on the Chart

Main Menu

In summary: every 30 seconds a scheduled interval will cause a counter to increment by 1. When the increments reach 50 a mark will be placed on the Chart.

Event Effects

- **Enabled** - Tick to enable
- **Type** – Choose from Mark on Chart, Logging, Totaliser, Digital Outputs, Alarm Ack, Email, Screen Change, Print Screen, Counters, Max Mins (Reset), Chart Control, Clear All Messages, Delayed Event, Script Timers, Play Sounds, Display Alert, Batch, Reports and Update Tabular Readings.

Depending on the Type of effect selected the menus will change as follows:

- **Mark on Chart** - If a pen goes into an alarm state the effect would be a mark will be placed on a chart and will display, for example: "Pen 2 Alm 1: Into Alarm (37)". Select Marker Type as Preset to display a list of all available markers that have been previously added to the recorder. To add Preset Markers go to ["Preset Markers" on page 136](#). Select the Marker Type as User Defined to add pen information using Embedded Process Variable.

Embedded Process Values

Adding Embedded Process Values in a Mark on Chart means you can display information such as:

Table 4.5 : Embedded Process Variables

Variable	Description
V	Value
T	Tag
Z	Zero range
S	Span range
U	Unit Text
time.v	Time in HH:MM:SS format
date.v	Date in DD:MM:YY format
td.v	Time and Date in HH:MM:SS and DD:MM:YY format
name.v	recorder name
id.v	recorder ID
serial.v	serial number

Main Menu

Table 4.6 : Embedded examples

Text Entry	Function	Examples
[[P1.V]]	will embed the current Value of P1	<<16.233>>
[[P1.T]]	will embed the current Tag of P1	<<Pen 1>>
[[P1.Z]]	will embed the Zero point of P1	<<0>>
[[P1.S]]	will embed the span point of P1	<<100>>
[[P1.U]]	will embed the Unit text of P1	<<deg C>>
[[time.v]]	will embed the current time	<<11:51:23>>
[[date.v]]	will embed the current date	<<10:11:06>>
[[td.v]]	will embed the current time and date	<<11:51:23 10:11:0>>
[[name.v]]	will embed the current recorder name	<<Furnace1>>
[[id.v]]	will embed the current recorder ID	<<21>>
[[serial.v]]	will embed the recorder serial number	<<200034>>
[[BATMD1.v]]	will embed the batch mode. 1 = Running, 2 = Stopped, 3 = Paused	<<Batch-1- 0001234 Stopped >>
[[BATMD1.t]]	will embed the batch name	<<Batch-1-0001234 Group 1>>

Batch mode is for each group BATMD1 to BATMD6. Used in embedded variables as [[BATMD1.v]], will also allow the current batch name to be embedded using [[BATMD.t]].

Maths variables as embedded variables

Other information can be accessed by exchanging the Pn with the following variables, see [Figure 4.7](#).

Table 4.7 : more embedded variables


Syntax	Syntax	Syntax
An	GLBVn	HPULn
BATMDn	HPC1	LPULn
BLKVn	INTHRS	RAn
CFFREE	IOC1	RTCOMPn
CJCh	LPC1	RTCALn
CJChC	Pn	Tn
CVn	PnAnL	UC1
Dn	PnMINU	USB1FREE
DIOh	PnMAXU	USB2FREE
EC1	PSTVn	UV1
FTPHRS	PRC	

Main Menu

In [Figure 4.12](#) is an example that shows pen information can be used as an embedded variable.

An example for pen information, in Mark on Chart enter: `[[name.v]] [[P1.T]] [[P1.V]] [[P1.U]]`.

Figure 4.10 Embedded variables for pen information

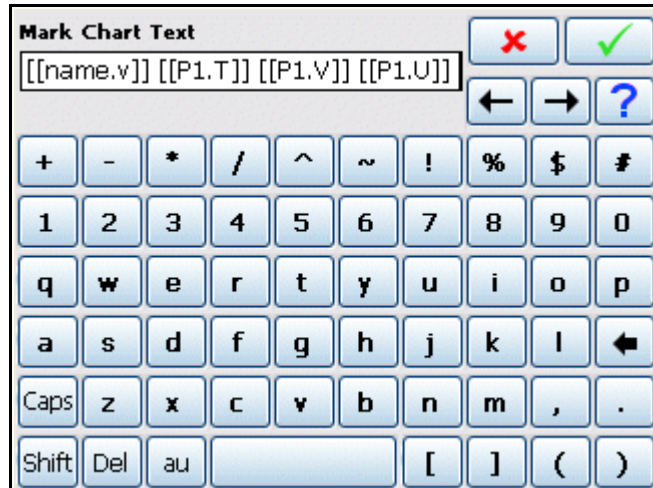


This will display the marker as: Furnace1 Temperature is 14.81 Deg C.

If Pen 1 name is Furnace1, Tag is "Temperature", the current value is 14.81, and the Unit text is "Deg C".

Embedded process variables can be used for Pen reports. [See "Pen Report Syntax" on page 166](#)

Embedded variable are not case sensitive and spaces are allowed.

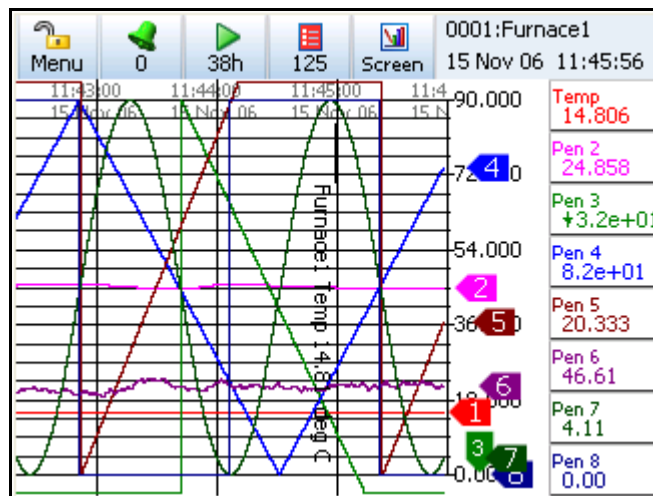

Event Effects (continued)

- **Logging** - Is an event effect that can Start or Stop logging, enter which one in Sub Type. From Selection Type choose either Multiple pens, Pen group or All Pens and select the relevant pen(s) below.
- **Totaliser** - Is an event effect that can Start, Stop, Reset or Reset and Start a Totaliser in Sub Type. From Selection Type choose either Multiple pens, Pen group or All Pens and select the relevant pen(s) below.
- **Digital Outputs** - Is an event effect that can switch a Digital Output On or Off. Enter which one in Sub Type and select the relevant relay output(s)
- **Alarm Acknowledge** - this is an effect of an event that can acknowledge a latched alarm on a Single Pen, Pen Group or All pens. Select the pen and the number of alarm to be acknowledged.
- **Email** – Is an event effect that will send an Email when triggered by a Cause. Eg. Cause = Totaliser Starts, Effect = Email is sent.
 - **Sub Type** - Auto, Single Line User or Multiline User. Auto will enter what the Event was e.g. Scheduled or Alarm triggered. Single Line User can have up to 69 characters of text or use [“Embedded Process Values” on page 128](#). Multiline User can have up to 80 characters per line with up to 1000 characters including spaces, carriage returns and line feed in total. They can also include embedded process variable. [“Maths variables as embedded variables” on page 129](#) can be used in an email.
 - **Recipients** - Enter email recipients from the list. If no email recipients are present in the list, they must be entered first in the Email menu, see [“Email” on page 113](#).
 - **Embed Screenshot** - This feature allows a screen shot of the current screen to be attached to an out-going email, the attachment is in Portable Graphics Network (.png) format.
 - **Email Text** - Only available when Single Line User is selected as a Sub Type. Enter text here to add a Mark on Chart when the Email is sent.
 - **Email Template** - Only available when Multiline User is selected. These are sets of text scripts that can be pre-written and assigned to an Email. Select a template from the list. To set up templates for multiline text, see [“Email” on page 113](#).

Main Menu

Figure 4.11 Event Effect using a Template with Embedded values

The screenshot shows the 'Event 1' configuration window with the 'Effect 1' tab selected. The form contains the following fields:

Enabled	<input checked="" type="checkbox"/>
Type	Email
Sub Type	Multiline User
Recipients	phil.d.gap@underground.com
Email Text	Pen 1 Temperature Test

At the bottom are buttons for 'Back', 'Copy To', and 'Finish'.

To the right is a preview of the email that will be sent:

```


From: Gap, Phil D (loc 5)    Sent: Wed 13/09/2006 10:29
To:
Cc:
Subject: Pen 1 Temperature Test

Event Cause:      Scheduled
Sub Type:         Interval
Trigger Time:     2m:00s
Pen 1 Temp 18.197 deg C
  
```

- **Screen Change - (or Backlight On/Off)** Select Screen Change as an effect to change the screen when triggered by an active alarm or system alert message. Eg. Pen 1 goes into Alarm and the screen changes from a chart to a DPM screen where Alarm markers are visible.
 - *Backlight: select On or Off. When the Event is triggered the effect is to turn the backlight to what state has been selected, On or Off. If an active alarm is triggered it will override this state as it has a higher priority.*
 - *Screen Name - select which screen will be the result of the Screen Change effect, to now including non-process screens*
- **Print Screen** – As an Effect, this will print the current screen when triggered by a Cause. Eg. Cause = Digital turns on, Effect = Print Screen. To set up network printer information see [“Network Admin” on page 98](#).
- **Counters** - Counters can be used as an Effect of an Event to count an occurrence or to reset different types of counters. A User Counter must be set up first before it can be used as a part of an Event. See [“Counters Menu” on page 135](#).
 - **Enabled** - Tick to enable Event
 - **Type** - Counters
 - **Event Action** - Increment will add by whatever value is entered in “Increment By”. Reset will restart the counter to whatever number is entered in Reset To.
 - **Sub Type** - (only available when Reset is selected as the Event Action). Select to reset User, Pulse, Events, Digital Inputs, Relay Outputs or Alarm counters. Selecting any of these Sub-Types will activate the corresponding menu item(s) so you can then specify the number of the Sub-Type to be reset. To view counters using a maths equation, see [“Maths Variable Table” on page 348](#).
 - **User Counters** - (only available when Sub-Type is set to User). Select the User Counter number to be used from the available list. Counters will only be available if they have first been set up in the User Counters Menu.
 - **Increment By** - (only available when Increment is selected as the Event Action). Enter the number at which you want the counter to increment by when the event cause is triggered.
 - **Reset To** - (only available when Reset is selected as the Event Action and Sub-Type is set to User). Enter the number at which you want the counter to reset to when the event cause is triggered.

Main Menu

- **Max Mins Reset** - Use this as an effect of an event to reset all Max Min values
- **Chart Control** - The chart activity can be controlled as an effect of an event. The chart control options are; Pause, Stop, Resume, Clear and Prefill.

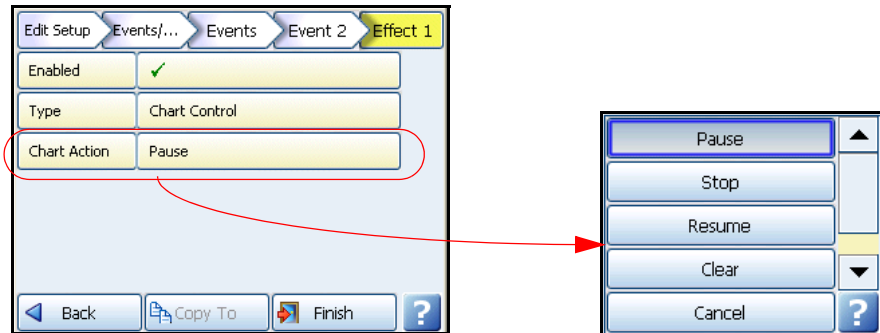

- **Pause** - this will pause the chart until it is resumed. Resuming a paused chart will display continuous chart data from when it had been paused. The chart can be stopped if in a paused state. If the Event is disabled the chart will need to be restarted using Resume as an event effect or by resetting the recorder.
 - **Stop** - this will stop the chart and no chart data will be displayed for the length of time the chart is stopped. If a stopped chart is resumed there will be a gap in the displayed chart data. If the Event is disabled the chart will need to be restarted using Resume as an event effect or by resetting the recorder.
 - **Resume** - this can be used after the chart has been stopped or paused. The chart data will continue from where it has been paused with no gaps displayed. But if the chart has been stopped the displayed data will display a gap in data until it is resumed.
 - **Clear** - this will clear all the data from the chart being displayed. Data will not be cleared if the chart has been stopped. This will not clear recorder data from the memory, only the chart.
 - **Prefill** - this will clear the chart and then fill it with the current reading. A stopped chart cannot be prefilled.
- **Clear All Messages** - this will clear all the messages in the message list. [See “Messages Menu” on page 197.](#)
 - **Delayed Event** - This will allow one event to trigger one or more other events after a specified period of time. The time period can be set in seconds from 1 to 3600 (1 hour). Select Delayed Event and select the event(s) this will apply to. Enter the time delay.
 - **Script Timers** - Script timers provide 20 independent timers to be used as desired, previously control and access of script timers was limited to maths functions for use in script but this has now been extended allowing the timers to be controlled using the event system, allowing them to be stopped, started and reset. Script timers can also be viewed in [“Script Timers” on page 202](#). Access to timers via the Maths scripting feature is still available, see [Table 15.4 on page 352](#).
 - **Play Sound** - Sound effects can be used to alert the user that an event effect has occurred. Set the Sub Type to Start to reveal two more menu options, Sound name and Play Mode. The user can pick from a list of 20 different sounds these can be configured to play a single time or repeat continuously. **Please be aware that continuous mode will repeat continuously until a corresponding “stop” event is triggered for that sound.** Also like ring tones the sounds themselves can be replaced on the recorder with custom sounds. To update the sounds see [“Update Sounds” on page 184](#).

Main Menu

- **Display Alert** - Display alert as an event effect – this feature is available from within the event system where the Alert Display can be used as an event effect to display a preset or user defined marker.
Select Message Type as Preset to display a list of all available markers that have been previously added to the recorder. To add Preset Markers go to [“Preset Markers” on page 136](#). Select the Message Type as User Defined to enter your own text.
For more information on the Alert system and how to customise it see [“Error Alert” on page 138](#).
- **Batch** - Batch controls can be used as the effect of an event occurring. An event cause must be set up so that the effect of the event is to Start, Stop or Pause a batch. Batches work using groups of pens so when setting up an event with a batch control as a cause you must assign a group of pens. Up to 32 Pens in any single batch group. See [“Groups” on page 152](#).
- **Reports** - A report can be created as an effect of an event. Reports can be generated on a periodical basis using event system to show daily/weeks/monthly totals, max mins, averages e.t.c. the reports can be printed, e-mailed as attachments or exported to external media. A batch report for a Temperature Uniformity Survey can be produced. Before a report can be run the report details must be entered in [“Reports Menu” on page 163](#).
- **Update Tabular Readings** - Triggering this event causes the tabular display to update and show the latest set of readings.
- **Enter Replay Screen** - An event can be set so that the effect is to change the screen to enter the Replay Screen.
- **Exit Replay Screen** - An event can be set so that the effect is to change the screen so that the recorder will Exit the Replay Screen.
- **Change Chart Speed** - An event can be set so that the effect is to change the Change Chart Speed. The speed of the chart can be set in the Sub Type section for Fast (6000mm/h), Medium (120mm/h) or Slow(10mm/h). When that event gets triggered, selected chart speed will be set to the current active screen.

Event triggering from scripts

- **Trigger an Event**: This feature allows any enabled event with an enabled effect (does not have to have any causes enabled) to be triggered from within the scripting system using the following function, TRIGE[x] where x is the event 1 to 20.
- **Clear Event**: Once an event is triggered using scripting the event is locked and cannot be triggered again from scripts until the lock is cleared using the clear event function CLRE[x] where x is the event number 1 to 20. This prevent successive executions re-triggering the same event. As a further measure to avoid the system being overloaded by events from within the script system, each time an event is triggered from within a script it will apply a 1 second automatic lock preventing the same event from being triggered more then once a second, irrespective of the CLRE[x] being called for that event.
- **Set/clear a digital output**: This feature allows a digital output to be set or cleared from a script, using the function SETD[x,y] where x is the digital output 1 to 49 (where 49 is the power relay) and y is the value 1 to set or 0 to clear. The function will return the value set if successful, if not successful it will return -1.0, this would be caused by trying to set and digital input rather then output.

See, [Table 15.2, “Maths Function Table,” on page 350](#).

Main Menu


Counters Menu

(Main Menu > Configure > Setup > Edit Setup > Events/Counters > Counters)

Up to 16 User Counters are available and can be used as a part of the Events system. User Counters can be set up as a Cause or an Effect of an Event.

Setup a User Counter

Select the next available Counter number.

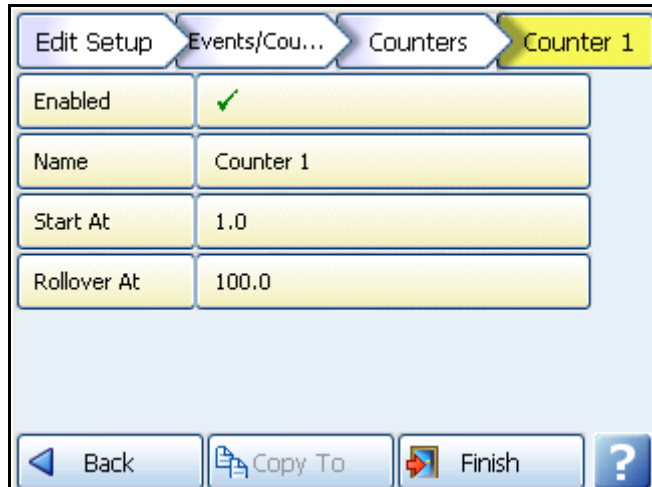

Edit Setup > Events/Cou... > Counters > Counter 1	
Enabled	✓
Name	Counter 1
Start At	1.0
Rollover At	100.0
◀ Back Copy To Finish ▶ ?	

- **Enabled** - In the Counter # menu tick to Enable.
- **Name** - Name the counter for ease of identification.
- **Start At** - Enter the number at which you want the counter to Start At
- **Rollover** - Enter the number at which you want the counter to Rollover At. The default maximum Rollover value is $3.3\text{e}+38$. When the count reaches the rollover number entered it will restart the count from your Start At number

Once a User Counter is setup it has to be assigned something to count e.g. as a part as an Event. [See "User Counters" on page 126](#)

Preset Markers

(Main Menu > Configure > Setup > Edit Setup > Events/Counters > Preset Markers)

Set up marker text that can be used to mark the chart as a part of an Event Effect or manual added from the process screen as a Mark on Chart.

The mark on chart functionality has been extended to include the use of 20 separate preset markers. With some markers configured when using mark on chart the user has the option of starting with blank text, the previously entered text or one of the preset markers. Preset markers are also used in the Mark on chart effect and the Alert system effect. [See “Error Alert” on page 138.](#)

To add text to a marker, select the next available marker and enter the text via the on screen keypad. Hit the tick mark to accept the text and then go to Finish to confirm.

Time Sync

(Main Menu > Configure > Setup > Edit Setup > Events/Counters > Time Sync)

This provides Time Synchronisation on recorders on a Digital Input.

- **Enabled** - Select the tick to enable Time Sync.
- **Trigger** - When recorder receives the Digital Input and there is a state change, i.e. On or OFF, then the recorder time will be synchronized to the nearest hour.
- **Digital Input** - Choice the input pulse through one of the channels supported (1 to 4). Time sync will only happen on the configured channel when digital input is received on that configured channel.

Once the time synchronization is complete, message will be send in the system messages to show time changed on digital input. This will notify the user that system time has been synchronized to the nearest hour due to digital input. Time synchronisation is, at best, precise to +/- 1 second.

Time changes (e.g. daylight saving)

During resetting the time or updating the time change in the recorder, no data gets collected during this interval and a system message will show evidence of time change. In the case of daylight saving, if recorder clock is behind the hour, there will be a gap in data collection. For example, when recorder receives the digital input and there is a state change, the recorders system clock is showing 11.58 AM, i.e. behind the hour then there will be a gap of 2 minutes in data collection as the time will be synchronized to the nearest hour.

If recorder clock is ahead of the hour then there will be duplicate data entry. For example, when recorder receives the digital input and there is a state change, the recorders system clock is showing 12.02 PM, i.e. ahead of the hour then there will be a duplicate data entry of 2 minutes as the time will be synchronized to the nearest hour. The data collected before synchronization will be preserved.

Main Menu

General Menu

(Main Menu > Configure > Setup > Edit Setup > General)

From this screen select the buttons required for General recorder configuration.



- **Identity** - Unique recorder information; Name, Description and ID. [See “Identity” on page 137](#)
- **Error Alert** - Setup and customise the Alert box information. [See “Error Alert” on page 138.](#)
- **Factory** - This menu contains Credits (for activating recorder options), Firmware Upgrade, Calibration, Demo Traces, Reset Setup and Localisation. [See “Factory” on page 140](#)
- **Batch** - The Batch menu is for entering the Batch requirements for starting a new batch, including using a Barcode reader. [“Batch Menu” on page 148.](#)
- **Printer** - The Printer menu allows configuration for setting up a printer. [See “Printer Menu” on page 151.](#)
- **Groups** - Groups of Pens can be specified and named with a Group name or number. [See “Groups” on page 152.](#)

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Identity

(Main Menu > Configure > Setup > Edit Setup> General > Ident)

Unique recorder information.

- **Name** - Enter the recorder's name. Maximum characters 32
- **Description** - Enter a description for the recorder using the on-screen keyboard. Maximum characters 64
- **ID** - This is a unique 4 digit identifier specific to this recorder. This is a unique four digit identifier, specific to the recorder ranging from 0001 to 9999. It is advised to change the ID as all recorders will default to 0001. If Modbus communications are used, it is highly recommended to use the same number as the Modbus slave ID.


When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Main Menu

Error Alert

(Main Menu > Configure > Setup > Edit Setup > General > Error Alert)


A new alert system has been implemented to allow on screen alerts to be displayed for serious errors and for early warning on potentially serious issues like available media space. When an alert is detected a large message box will be displayed on the screen, it has a flashing border for which colours are user defined and will display the current error state. An acknowledge button is available and a re-flash can be set to warn the user again if the error condition is not rectified.

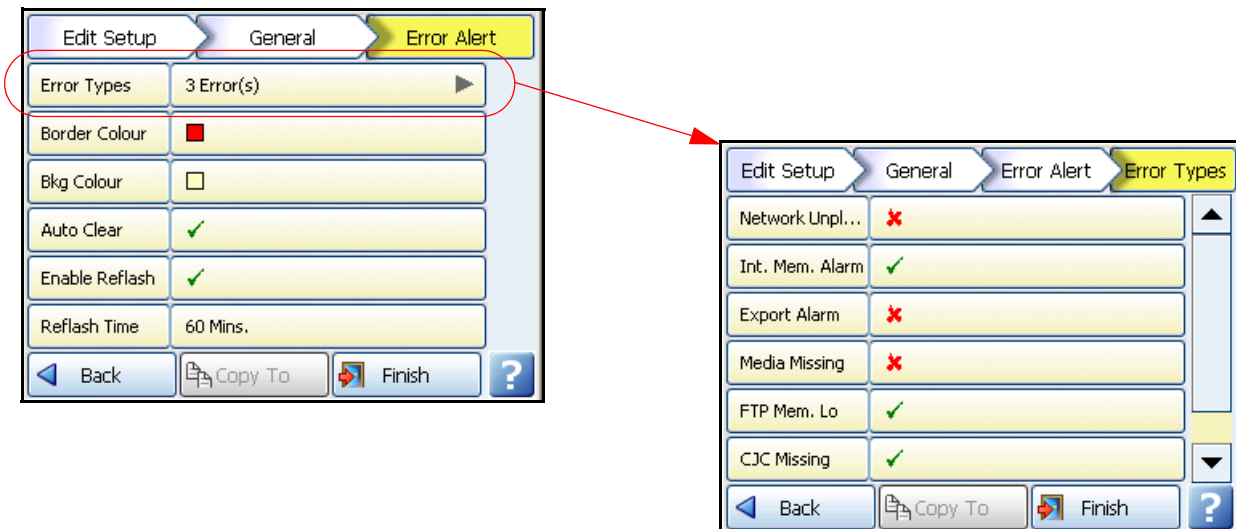

- **Error Types** - The following conditions are available to be enabled:
 - *Network Unplugged* (will detect hub/switch failure also)
 - *Internal Memory Alarm* – Display when internal memory is going to start overwriting non-exported data within a defined period of time. Storage Alarm level must be set.
 - *Export Alarm* – Where external media capacity will run out within a defined period of time. Storage Alarm level must be set.
 - *Media Missing* – External media is missing so a scheduled export is not possible.
 - *FTP Memory Low* - Display when internal memory is going to start overwriting non-FTP'd data within a defined period of time. Storage Alarm level must be set.
 - *CJC Missing* – CJC Sensor is not plugged into AI Card.
 - *TC Burnout* - A TC burnout has been detected.

Storage Alarm Levels need to be set as to when the system is alerted that the three different memory areas are low. This is done in the Edit Recording menu, go to [“Storage Alarm” on page 160](#)

Main Menu

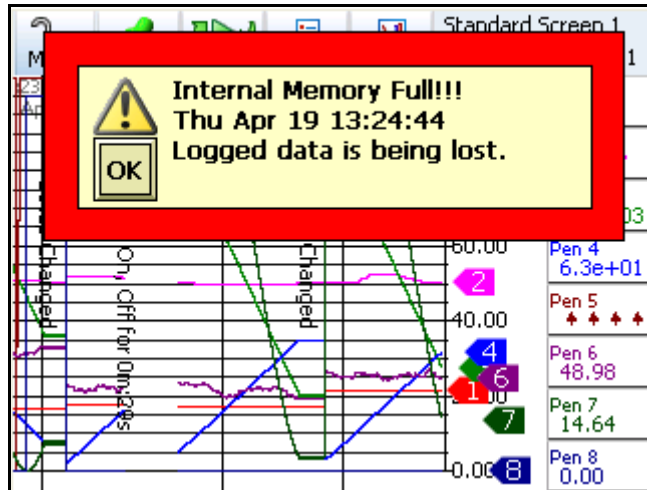

- **Border Colour** - Use the on-screen colour palette to change the message border colour.
- **Background Colour** - Use the on-screen colour palette to change the message background colour.
- **Auto Clear** - When Auto clear is switched on the recorder will automatically detect if something has been done to rectify the problem and the message will disappear. Eg if the removable external storage media being used for a scheduled export is full and is replaced with media that has sufficient memory available then the error alert box will disappear. If Auto Clear is switched off you will be required to press OK on the screen error alert message
- **Enable Reflash** - If Reflash is enabled and a time set the error alert message will appear again at the time specified until the error is resolved. With Reflash enabled pressing the OK button on the screen message will only make the message disappear until the next reflash time occurs.
- **Reflash Time** - Set this to how often you want the error alert message to repeat until the problem is solved.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Display alert as an event effect

This feature is available from within the event system where the Alert Display can be used as an event effect to display a preset or user defined marker. [See "Event Effects \(continued\)" on page 131.](#)

Main Menu

Factory

(Main Menu > Configure > Setup > Edit Setup> General > Factory)

The Factory menu contains information on the Firmware Credit System, Upgrading the recorder Firmware, CJC and Analogue Input Card Calibration, Demo Traces, Reset Setup function and a Localisation menu.



- **Credits** - The Credit menu contains the Serial no. of the recorder, how many credits are available, displays the Options Code and lists what Firmware Options are currently active. [See "Credits" on page 140](#)
- **FW Upgrade** - The Firmware Upgrade button allows new versions of the recorder firmware to be loaded into the recorder. [See "Firmware Upgrade" on page 141](#)
- **Calibration** - Analogue In and CJC Calibration can be performed per slot (card). [See "Calibration" on page 142](#)
- **Demo Traces** - A set of demo traces are available for demonstration or simulation purposes. [See "Demo Traces" on page 145](#)
- **Reset Setup** - Select this to clear the current setup. A Warning message will appear before activating the reset. [See "Resets" on page 145.](#)
- **Localisation** - Set up the recorder for native language use and global settings. [See "Localisation" on page 146](#)
- **Media Config** - contains the list of Storage media with Save and Load Options. [See "Media Config" on page 146.](#)

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Credits

(Main Menu > Configure > Setup > Edit Setup> General > Factory > Credits)

The Credit menu contains the Serial No. of the recorder, how many credits are available, displays the Options Code and lists what Firmware Options are currently active.

- **Serial No.** - read only and cannot be edited.
- **Credits** - read only and cannot be edited. It displays the number of Credits available to activate additional firmware functionality.
- **Options Code** - The Options code is a unique coded number for this recorder that contains information that enables certain functionality including the total credit value.
- **Options** - This displays how many credits are currently in use. Select this to produce a list of Firmware options available and their credit values. Toggle each option On or Off to enable the feature within the recorder. If there are not enough credits available. More credits are available from your supplier. For a complete lists of all the firmware options and their functionality see [Table 7.1, "Firmware Options," on page 253](#)

Main Menu

Firmware Upgrade

(Main Menu > Configure > Setup > Edit Setup> General > Factory > FW Upgrade

The Firmware Upgrade button allows new versions of the recorder firmware to be loaded into the recorder via a USB key or a SD card. The file type required to upgrade the Firmware has the file extension .xsu. Contact **Honeywell** for more information. **Firmware downloads are available from <http://www.honeywellprocess.com>**

Insert the SD card or USB key with the latest revision of Firmware (.xsu file format) and press the FW Upgrade button. The recorder will scan and check the files on the external device with the current version running in the recorder. Any later version files on the external device are copied into the recorder.

If there is no external media fitted or the file is corrupt a Firmware installation dialog will appear. If this occurs check the file is the correct format (.xsu). Secondly download the file to another SD card or USB key. Firmware Upgrade will not impact recorder calibration details.

See *“Storage Media Format” on page 194* for formatting information of SD cards and USB keys. SD card is available as a credit option for the **eZtrend GR**.

Note: The network share folder cannot be used to upgrade firmware remotely. Firmware upgrade needs to be done locally using local USB or local SD card.

To check the firmware upgrade has been successful, see the Status Menu, *“General” on page 205*.

Firmware Downgrade

Do not attempt to downgrade firmware as this feature does not support.

Instructions to upgrade the Firmware for GR Series recorders in the following scenarios:

Scenario	Description	Instructions for FW upgrade	Comments
1	When the recorder is in Powered On state	Export data Perform FW Upgrade When the recorder indicates “Battery low” warning message, replace the battery as per SOP.	N/A
2	When the recorder is in Powered Off state	Turn on the recorder	N/A
2.1	Unit is up and running, date is also correct	Export data Perform FW Upgrade When the recorder indicates “Battery low” warning message, replace the battery as per SOP.	Indicates the battery condition is good. User can follow usual FW upgrade procedure.
2.2	Unit is up and running, date is set to 2006	1. Set Date and time 2. Export Data 3. Perform Data Reset 4. Perform FW Upgrade 5. Replace the battery as per the SOP	Indicates Battery is drained completely and power up sequence would treat it as first time use scenario. All the data on the SD Card would be lost.
2.3	Unit Locked up on Power ON	1. Power off the recorder 2. Remove Battery for 30 minutes 3. Replace with New Battery 4. Power On the recorder 5. Set date and time 6. Export Data 7. Perform Data Reset 8. Perform FW Upgrade 9. Battery Reset (Refer to Battery Replacement document “43-TV-33-75” for more information on Battery Reset)	Indicates Battery voltage is low (0.4 to 0.7V) and SRAM data is corrupted causing the unit to lock up.

Note: For Standard Operating Procedure (SOP), refer to 43-TV-33-75 Application Note.

Main Menu

Calibration

(Configure > Setup > Edit Setup> General > Factory > Calibration)

Cards will be calibrated in the factory. All ranges are factory calibrated and set to the default range of +/-12V. [Table 4.9, "Calibration Input range table," on page 143.](#)

Date & Type of last calibration is stored in ["Maintenance" on page 208.](#)

Analogue In and CJC Calibration can be performed per slot (card). Select the AI or CJC calibration button to go to the next menu.

Recommend use of CJC Clips and the Rear Cover to help maintain a uniform temperature around the terminal blocks and cold junction when using thermocouple actuators.

AI Calibration


In this menu there is a button for each Analogue Input card fitted in the recorder. Calibration is done per channel.

Cards may be reset to original 'factory' cal, i.e. a card holds two sets of calibration constants (factory & user) for all ranges. [Table 4.9, "Calibration Input range table," on page 143.](#)

Factory Cal - The recorder is calibrated in the factory. These are pre-stored calibration values that cannot be changed by the user. If the recorder is re-calibrated to a User Cal the factory values can be restored at any time.

User Cal - User calibration can be applied at any time. To meet the accuracy values specified (see ["Input Range Performance Accuracy Table" on page 322](#)), calibration source should be accurate to 0.01% full scale or better.

On initial power up the Factory Cal and the User Cal are the same.

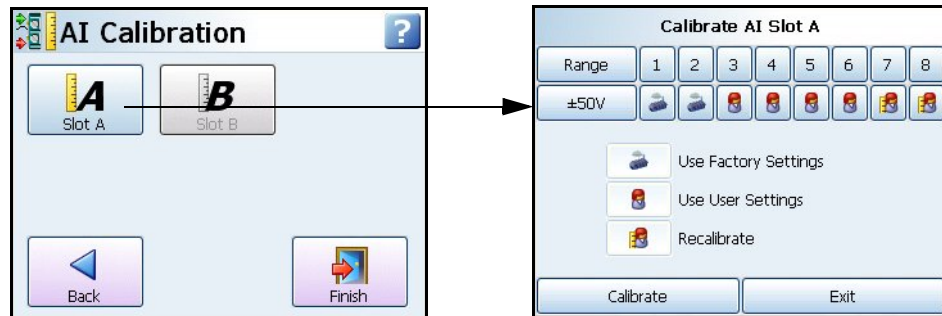


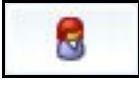



The AI Calibration menu displays a button for each Analogue Input card fitted.

- Select the desired slot button and select the Range required to be calibrated from the drop down list eg. +/-50V.
- Each card has channels numbered 1 to 8. Underneath each channel is the type of calibration.

Main Menu

- Select the button below the corresponding channel number and select the type of calibration from the list, in this case Recalibrate. The Recalibrate icon will appear under that channel.

Table 4.8 : Analogue In Calibration

	Calibration Type
	Factory
	User
	Recalibrate
	Recalibrate All
	Factory All

- The Calibration Positive Range box appears with instructions to connect the top limit of the input range. Once this is done press the Calibrate button. Next, the Calibration Negative Range box appears instructing the user to apply the bottom range limit. When this is done press the Calibrate button.
- When the calibration is complete the icon changes to the User cal icon under the channel to show that the channel is using the user cal.

Calibration Input Ranges

This table shows which input range is used for each input type.

Table 4.9 : Calibration Input range table

Input Type	Input Range
K Type TC	50mV
R Type TC	25mV
S Type TC	25mV
B Type TC	10mV
J Type TC	50mV
T Type TC	25mV
E Type TC	100mV
N Type TC	50mV
C (W5) Type TC	50mV

Main Menu

Table 4.9 : Calibration Input range table

Input Type	Input Range
G (W) Type TC	50mV
Chrome Copel	50mV
L Type TC	50mV
M Type TC	50mV
P (Platinel)	100mV
D Type TC	50mV
PT100 RTD	100mV
PT200 RTD	250mV
PT500 RTD	500mV
PT1000 RTD	1000mV
Nickel 100	100mV
Nickel 120	100mV
Cu10	50mV
Cu53	50mV
200 Ohms	50mV
500 Ohms	100mV
1000 Ohms	250mV
4000 Ohms	1000mV
0-20mA	250mV
4-20mA	250mV

CJC Calibration

For Thermocouple Input calibration only.

There is a single CJC sensor for each AI card, but the temperature across the connector will not be constant. The CJC calibration allows the user to compensate for temperature gradient.

CJC Calibration

Slot A (1 - 8) Slot B

Back Finish

Calibrate CJC AI Slot A

Card Input No	CJ Temp	Offset Value	Calibrated CJ Temp	Measured Temp
1	27.88	0.50	28.38	60.77
2	27.88	0.30	28.17	58.70
3	27.88	0.20	28.08	59.33
4	27.88	0.10	27.98	No TC
5	27.88	0.00	27.88	No TC

Back Finish

Main Menu

In this menu there is a button for each slot for Cold Junction Calibration. Calibration is performed per slot/card.

- Select the desired slot button. If a CJC connector is not fitted a message box will appear.
- The CJC temperature reading is displayed in the **CJ Temp** column.
- If the known temperature is different to the recorder's reading an Offset can be entered to make an adjustment to future values. The Cold Junction temperature should be measured at the point where the thermocouple is connected in the terminal block. Ensure the measured temperature is accurate to within 0.1°C.
- Enter the difference between the **CJ Temp** on the recorder and the measured reading as the **Offset Value**. The offset is added to all future readings and displayed in the **Calibrated CJ Temp** column.
- The **Measured Temp** column will display the actual temperature using the **Calibrated CJC Temp**, on channels with T/C fitted. For more details of how a thermocouple works, refer to ["Appendix C: Thermocouple Connections" on page 363](#).
- Select the tick box to go back and the Finish button to Commit, Discard or Commit Later.

Demo Traces

(Main Menu > Configure > Setup > Edit Setup> General > Factory > Demo Traces)

A set of demo traces available for demonstration or simulation purposes when no Analogue cards are fitted.

Options for each demo trace are:

- **No Simulation** - Demo traces are deactivated and no simulation traces are available.
- **Simulate if board not fitted** - Simulation is activated when an Analogue In card is not fitted in one of the top two slot positions. Configure the **Demo Setup** in ["Analogue In Menu" on page 75](#).

Resets

(Main Menu > Configure > Setup > Edit Setup> General > Factory > Resets)

Setup

This will remove the current setup from the recorder and return to the default setup. When you select this button the **"Reset Setup Warning"** box will appear with a message: **"Are you sure you want to clear your current setup? This is irreversible and will restart the recorder"**. Select OK to reset the setup or Cancel to ignore and return to the Factory menu.

Layout

This will remove the current layouts from the recorder and return to the default layout. When you select this button the **"Reset Layout Warning"** box will appear with a message: **"Are you sure you want to clear your current layouts? This is irreversible and will restart the recorder"**. Select OK to reset the layouts or Cancel to ignore and return to the Factory menu.

Data

This will remove all log and chart data from the recorder. When you select this button the **"Reset Data Warning"** box will appear with a message: **"This will delete ALL log and chart data, taking approx 80s to complete and will restart during the process"**. Select OK to reset the data or Cancel to ignore and return to the Factory menu.

Main Menu

Reset All

This will remove the current setup, current layouts and chart and log data from the recorder and return to the default setup. When you select this button the “**Reset All Warning**” box will appear with a message: “**This will reset all data including setups, layouts, and chart and log data. This is irreversible and will restart the recorder. Are you sure you wish to continue?**”. Select OK to Reset All or Cancel to ignore and return to the Factory menu.

Localisation

(Main Menu > Configure > Setup > Edit Setup > General > Factory > Localisation)

Set up the recorder for native language use and global settings including:

- **Language** - Select native language menu prompts from list. For French and German the corresponding keyboard layout will be selected.
- **Help Language** - Select native language for Help Files, currently English only available.
- **Time Zone** - Select the corresponding time zone from the drop down list.
- **Daylight Saving** - Toggle On or Off to activate daylight saving, if applicable. When the time zone is selected and daylight saving is active the recorder will change the daylight saving hour automatically. The date this occurs depends on the time zone selected. Some time zones do not have daylight saving. Data being recorded will be affected, either with a 1 hour gap of data or a 1 hour overlap of data.
- **Temp.Units** - Select the Temperature Units that the recorder is set to for temperature measurement. Pen scale units may need to be changed accordingly. See Pen Scale.
- **Line Hz** – Toggle between 50Hz or 60Hz. Mains power frequency. Used to optimise analogue input filtering. Note: The default value is set based on the model number but can be changed here.
- **Paper Size** - Switch between A4 or Letter

Media Config

(Main Menu > Configure > Setup > Edit Setup > General > Factory > Media Config)

This menu contains the list of Storage media with Save and Load Options.

Main Menu

Edit Setup	General	Factory	Media Conf
Load USB 1	✓		
Save USB 1	✓		
Load USB 2	✓		
Save USB 2	✓		
Load SD Card	✓		
Save SD Card	✓		
Load NAS	✗		
Save NAS	✗		

Back Finish ?

Enable this option if you want to allow user to access specified storage drive or disable (X) if you want to restrict user from accessing the device.

Load NAS, Save NAS - Only available if "User Share Path" is enabled in the Network Admin screen, see ["Network Admin" on page 98](#).

NOTE: If device is already configured for Scheduled Export or Report then user will not be able to restrict access to that device. For restricting access to that media device user need to go Scheduled Export or Report and change the Export device.

Main Menu

Batch Menu

(Configure > Setup > Edit Setup> General > Batch))

Batch is a firmware option that can be activated from [“Credits” on page 140](#).


The Batch function allows the user to segment portions of data for further analysis. Setting up a batch requires information to identify and control batches of data. Batch data can also be paused, for viewing, and resumed. A batch can be aborted at any time, if so this will not register as a batch; a batch is only complete when it has been stopped.

This Batch menu is the setup menu where you can configure all the Batch and Group properties before starting a batch.

Concurrent Batch Mode

Batch mode has changed to allow concurrent batches, where each batch is associated with a group, so all pens within Group 1 will belong to the batch that is controlled by Group 1. Screens can now be set to display groups, in this mode only messages associated with that group (i.e. pens within that group, or batch messages for that group) will be shown on the chart.

Remember when you have set up your batch requirements you need to assign pens to the batch group. Up to 32 Pens in any single batch group.

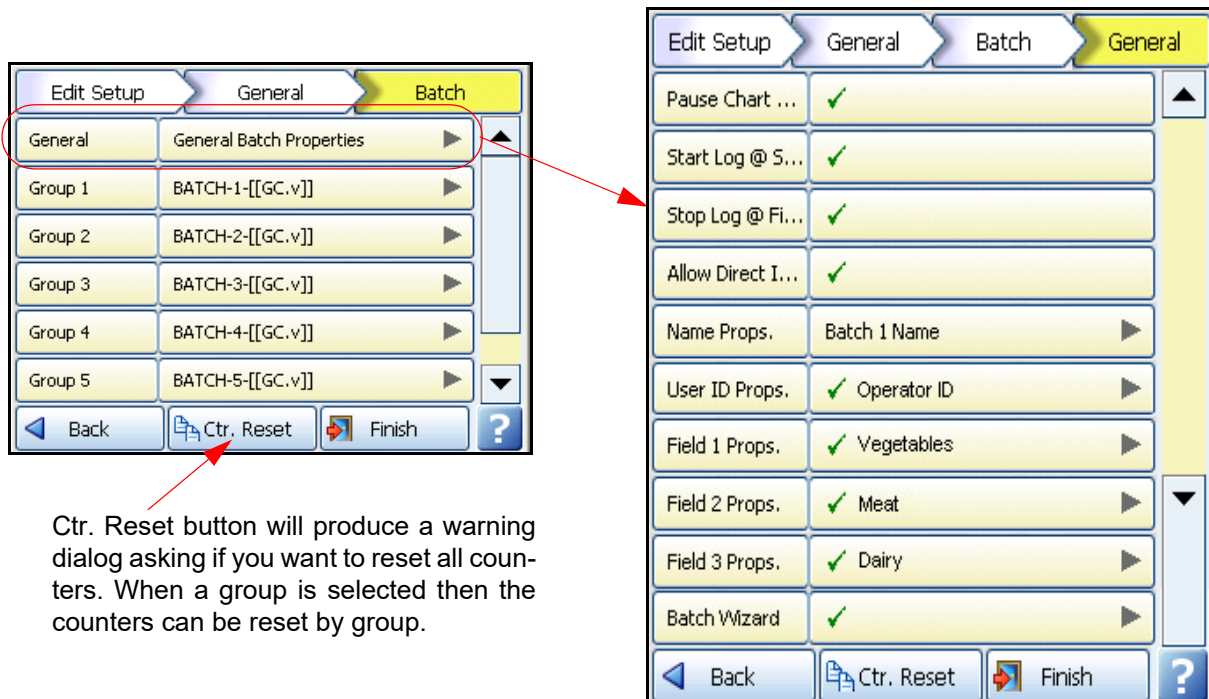

General Batch Properties

- **Pause Chart@Finish** - Enable this if you require the chart to be paused at the end of the batch. The chart will restart when another batch is started for that group.
- **Start Log @ Start** - Enable this if you require logging to start when the batch starts. Batch logging control – Pen logging can be controlled by batch start and stop, the stop and start logging can be independently controlled so a batch could start the pens logging but choose not to stop them logging when the batch stops, or start logging independently of a batch but have all pens stop logging when a batch stops. Only pens within the group of the associated batch will be controlled.

Main Menu

- **Stop Log @ Finish** - Enable this if you require logging to stop when the batch ends. See **Start Log @ Start** for details.
- **Allow Direct Input** - Enable this to allow the Batch control properties (listed below) to be edited directly from the batch control screen. A barcode reader can be plugged into the front of the recorder and the barcodes scanned in directly.

NOTICE

List driven data fields – The next 5 fields are available for data entry associated with a batch. The names can be overridden to suite the end user application, all fields are now 69 character long with the exception of the User ID which is 20. A pre-defined list of up to 30 items can be configured to allow users to select input for these fields from a list rather than type them in every time. E.g. a user might have 8 different products running though the same process, these can be pre-configured so when starting a batch the user can pick from a list of products. The pre-defined lists have to be enabled in the individual group screen, e.g. Show *** List.

Sets of functions are available to retrieve the list index from within Maths, allowing state based processing during user selection. See [Figure 15.1, "Maths Variable Table," on page 348.](#)

- **Name Props.** - Enter the name of the batch name and setup a list of additional names to appear as a pick list as a part of the Batch Control screen, see ["Batch Setup/Batch Groups" on page 190.](#)
- **User ID Props.** - Enable this to make this a requirement when starting a new batch. The User ID display name can be renamed and a list of additional names can be setup to appear as a pick list during the Batch Control setup. If Passwords are active on the recorder then the User ID page will be skipped for user entry and the name of the person logged in through the password system will be automatically entered.
- **Field 1 Props.** - Defaults to Lot. Enable this to make this a requirement when starting a new batch. The Lot number display name can be renamed and a list of additional names can be setup to appear as a pick list during the Batch Control setup. The addition list names will not appear in a drop down list in the Batch Control screen unless you enable Show "n" List in the group properties menu. [See "Group #." on page 150](#)
- **Field 2 Props.** - Defaults to Description. Same as **Field 1 Props** but for Description.
- **Field 3 Props.** - Defaults to Comment. Same as **Field 1 Props** but for Comment.
- **Single Screen Batch** - The Single Screen Batch allows you to view and enter all the batch details on a single screen. If this is not selected the Batch Wizard will enable separate screens to enter the same information. The batch fields are: Batch Name, User Id, Lot Number, Description and Comment are available for viewing and entering details on a single page using the Single Screen batch enabled, if disabled a separate screen will be required for each field. [See "Batch Setup/Batch Groups" on page 190](#)
The Lot number is unique for each batch on a recorder and can be modified by the User. The Lot number starts at 1 and increments by 1 or can be selected from a predefined list. This is irrespective of whether the user is using Batch Wizard or Single Screen Batch to enter the batch details. Groups must be set up, see ["Groups" on page 152.](#)

Main Menu

Group #.

In the Batch menu select a Group #


- **Auto Pop. Wizard** - When enabled this will automatically populate the Batch Control screen with the properties entered into that specific Group.
- **Auto Pop Name** - This is the name of the group that will have its properties populate the Batch Control screen
- **Zero Pad Count** - This refers to the amount of zeros that will be added to the embedded batch counter. Eg. BATCH -2 -[[GC.000001]]. This has to have the same amount of digits to accommodate the largest number the counter will reach, which will be the Rollover value. If this is not enabled the leading zeros will not be shown.
- **Ctr. Start** - This refers to the number at which the batch counter will start.
- **Ctr. Increment** - This is how much the counter will increase or increment by.
- **Ctr. Rollover** - Enter the number at which you want the counter to reach before it starts again.
- **Show *name* List** - (only appears when Auto Pop Wizard is off). Enable this to allow any additional list item names to appear in a drop down list in the Batch Process screen. *See below.
- **Show User *ID* List** - enable this to allow any additional list item id's to appear in a drop down list in the Batch Process screen. *See below.
- **Show Lot No. List** - Add a batch Lot No., if required (up to 11 characters)
- **Show Desc List** - Enter a description of what the batch is (up to 17 characters)
- **Show Comment List** - Add any further comments

NOTE: Batch mode no longer operates on pens that do not belong in a group, so when upgrading to the new version existing users need to add pens to a group to use the batch functionality.

Batch process screen

To show a batch related process screen the screen must be configured to display the group being used for that batch. Under the message count icon it will show the current status for the batch related to that group. The message list status bar will also show the Batch name, state and group name in rotation with the date/time display. An extra button is now available within the message button on the status bar to show the current status of the batches for all groups.

Main Menu

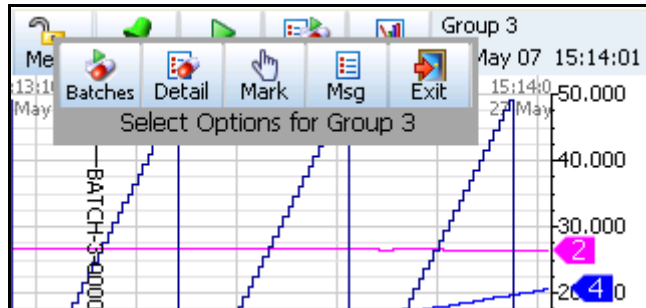

Note: on non batch screens the message list icon no longer shows the batch state as there are potentially 6 batches running in different states

Printer Menu

(Configure > Setup > Edit Setup > General > Printer)

The Printer function is a firmware option that is selectable from the Factory menu > [“Credits” on page 140](#). The screens that currently can be printed are all Status screens, Message lists, Process screens and Replay screens.

The printer network information should be entered prior to printing, see [“Network Admin” on page 98](#). If the information is not entered in the Network Admin menu a dialog box will appear prompting you to enter Username, Password and Domain. Entering this information into the dialog will not populate the Network Admin menu. It is recommended that you fill in this information into the Network Admin menu as it will not be affected by Firmware upgrades in the recorder.

Edit Setup	General	Printer
Allow Printing	✓	
Paper Size	A4	
Orientation	Landscape	
Port Type	USB	
Printer Name	LPT1:	
Protocol (PCL)	PCL3	
Colour Printer	✗	
Fit To Page	✗	

The Printer menu allows configuration for setting up a printer. The printer option displays a Print button from various screens using a or Network printer with PCL3 or PCL3 GUI or PCL5 supported (Printer Command Language) printer. For details on suitable printer types see [“Print Support \(USB 2.0 or Network\)” on page 45](#).

Main Menu

- **Allow Printing** - Tick to enable On and Off
- **Paper Size** - Toggles between A4 and Letter
- **Orientation** - Toggles between Landscape and Portrait
- **Port Type** - Toggles the type of connection used by your printer. The available port options are USB and Network. In case of Network port the printer can be connected to the Ethernet port of the recorder and Printer Name should be provided.
- **Printer Name** - Enter the printer name as found on the network. This option is used only if the selected port type is Network. You can use a network address including IP address and port (i.e. 192.168.0.1:900) or a network path (i.e. \\ComputerName\\PrinterName).
- **Protocol (PCL)** - Select the protocol supported by the printer. The available PCL options are PCL3, PCL3GUI and PCL5
- **Colour Printer** - Tick if a colour printer is being used for the screen capture facility. Screen captures can be printed as an Effect of an Event. [See “Events - Cause and Effect” on page 122.](#)
- **Fit to Page** - Tick if recorder screen printing to be stretched to Paper Size selected

If in doubt, contact your IT Administrator for advice.

When complete go to Finish > Commit to implement the new set up

Groups

(Configure > Setup > Edit Setup> General > Groups)

This menu is used for re-naming the groups. Groups are used as a part of the concurrent batch system. Each batch is associated with a group, pens are assigned to a group and all the pens within group 1 will belong to the batch that is controlled by group 1. [See “Batch Menu” on page 148.](#) Up to 32 Pens in any single batch group.

The same pen can only be associated with one group. To add a pen to a Group see [“Pens Menu” on page 85.](#)

Groups of pens can also be used in order to:

- Acknowledge Alarms in pen groups
- Reset Max/Min, Reset Max or Reset Min in pen groups
- Start, Stop and Reset Totals in pen groups

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.


Main Menu

Screen Menu

Screen Setup

(Main Menu > Configure > Setup > Edit Setup> Screen)

Set up the recorder's screen configuration.

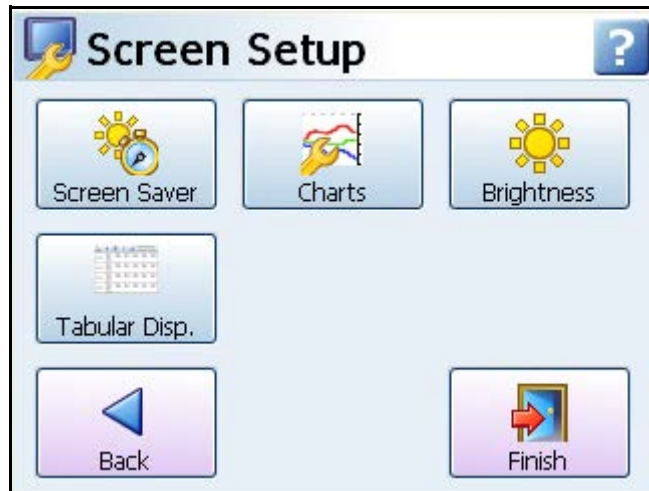

- **Screen Saver** - In this menu you can configure the Screen Saver functions. [See “Screen Saver” on page 153](#)
- **Charts** - In this menu you can set the Fast, Medium and Slow chart speeds. [See “Charts” on page 154](#)
- **Brightness** - Adjust the brightness of the screen using the instant brightness slider. [See “Brightness” on page 155](#)
- **Tabular Display** - Configure Tabular Screen Display.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Screen Saver

(Main Menu > Configure > Setup > Edit Setup> Screen > Screen Saver)

Configure the screen display and Screen Saver functions. The default state for the Screen Saver is disabled. The Screen Saver function helps to reduce backlight wear. When active, the back light is off and nothing on the display is visible. The screen saver will not function in Setup Menus or in test mode.

- **Enabled** - Toggle On and Off.
- **Timeout** - Only available when the Screen Saver function is active. This is how long the Screen Saver will display on the screen. Programmable between 1 and 720 minutes in software, when disabled the screen will remain on permanently (enter 0 to disable).
- **Saver Type** - Only available when the Screen Saver function is active. This is set to Normal.

Main Menu

- **Dim Saver** - Only available when the Screen Saver function is active. Dim Saver will help to increase the life of the backlight and lower the screen brightness for night time use. Use Saver Brightness or Off Always.
- **Saver Level** - Only available when the Dim Saver function is set to Use Saver Brightness. Select this to use the instant dimming slider which lowers the screen brightness. Default screen brightness is 80%. Adjustable between 10% and 100% of full brightness. Normal backlight MTBF at 100% brightness is 50,000 hours at 100% brightness (operating at 25°). For backlight life and brightness see "[Specification Tables](#)" on page 317

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Note: Once you enable the screen saver it will **not** turn off the backlight if at the time of the Timeout there is a pen in alarm. The screen will stay on until the alarm is gone and the Timeout is passed. Once the Saver is active and screen is Dark (backlight is off), it will turn back on if a pen goes into alarm.

Exit Screen Saver

If the screen saver is active on the recorder, any of the following will deactivate the screen saver:


- User touches the recorder screen.
- Any USB device is plugged in or unplugged.
- On alarm - An alarm is triggered, the unit will not return to screen saver till the alarm state is inactive and another screen saver time-out period has expired.

Charts

(Main Menu > Configure > Setup > Edit Setup> Screen > Charts)

The Chart Speed sets how fast, in mm/hr the chart moves across the screen. The recorder has 11 different chart speeds. There are 3 categories that can be set; Slow, Medium and Fast. From each of those categories the actual speed of the chart can be selected.

Figure 4.12 Strip Chart Speed selection

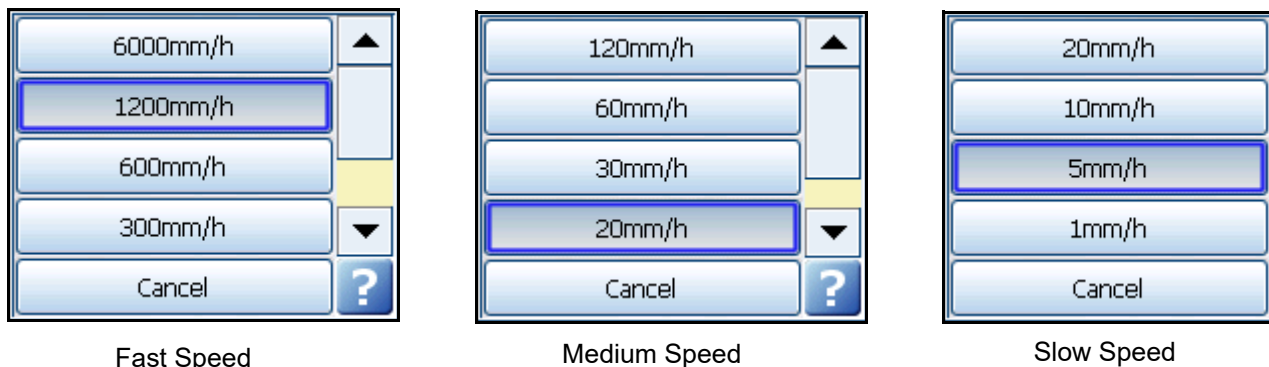

Note: It is recommended to configure different speed for each chart speed category.

- **Fast Speed** – 60mm/h, 120mm/h, 300mm/h, 600mm/h 1200mm/h and 6000mm/h
- **Medium Speed** - 10mm/h, 20mm/h, 30mm/hr, 60mm/hr and 120mm/h
- **Slow Speed** – 1mm/h, 5mm/h and 10mm/h, 20mm/h

Once the charts speeds have been set up in the strip for circular chart menu go to a process screen displaying data on a chart and touch the screen. This will activate the Settings menu

Main Menu

in the top right of the screen, select this to display the 3 categories set. [See “Chart Speeds” on page 247.](#)

Circular Chart Speed Selection

Edit Setup	Screen Setup	Charts
Strip Slow Speed	5mm/h	
Circ Fast Speed	1 hour	
Circ Med Speed	1 day	
Circ Slow Speed	1 week	
Hour Alignment	23	
Day Alignment	Sun	
Back		Copy To Finish

Circ Fast Speed – the required to fill circular chart data in 1 hr.

Circ Med Speed – the required to fill circular chart data in 1 day.

Circ Slow Speed – the required to fill circular chart data in 1 week.

Hour Alignment – the alignment hour for daily charts

Day Alignment – the alignment day (Sunday = 0, Monday = 1, etc.) for week charts.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Brightness

(Main Menu > Configure > Setup > Edit Setup> Screen > Brightness)

Set the recorder's screen brightness using the instant brightness slider. Default screen brightness is 80%. Adjustable between 10% and 100% of full brightness.


Set the brightness level, tick to agree, then go to Finish, Commit to permanently apply the change.

For information on increasing the display life by reducing backlight brightness see [“Back-lights” on page 311.](#)

Main Menu

Tabular Display

(Main Menu > Configure > Setup > Edit Setup> Screen > Tabular Display)

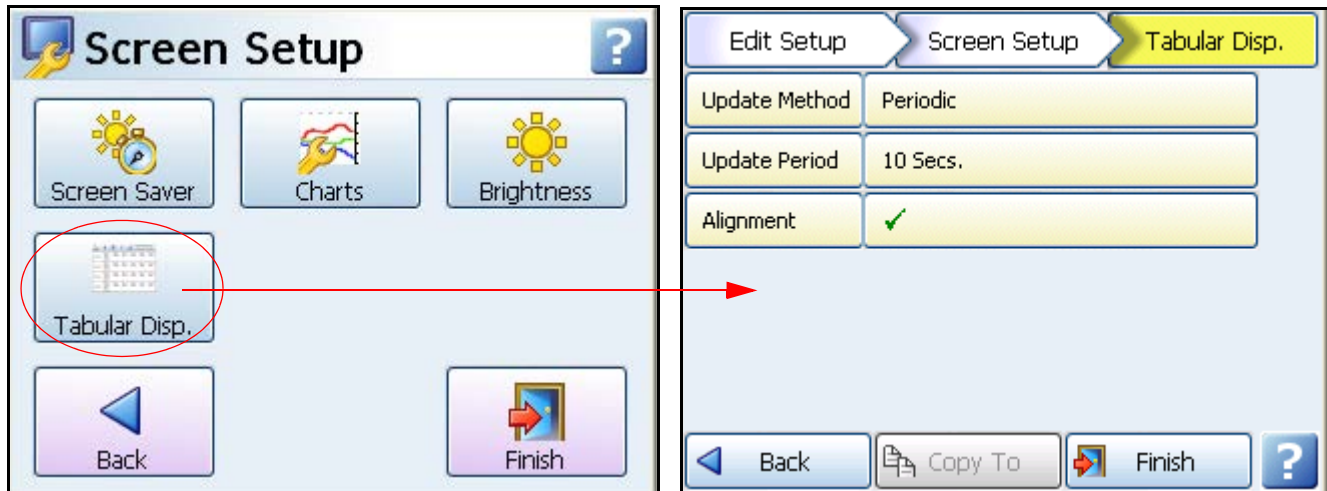


- **Update Method** - Periodic or Event
- **Update Period** - Configuration of periodic display can be set from 10 seconds (default) per update to 86400 secs (or 1440 minutes = 1 day) per update, this will show a new line of data readings at this elapsed time period.
- **Alignment** - an align configuration would be provided to align the tabular display to the nearest minute or hour.

Tabular Screen

Main Menu > Screen > Edit > Screens

(or Main Menu > Configure > Layout > Edit > Screens.

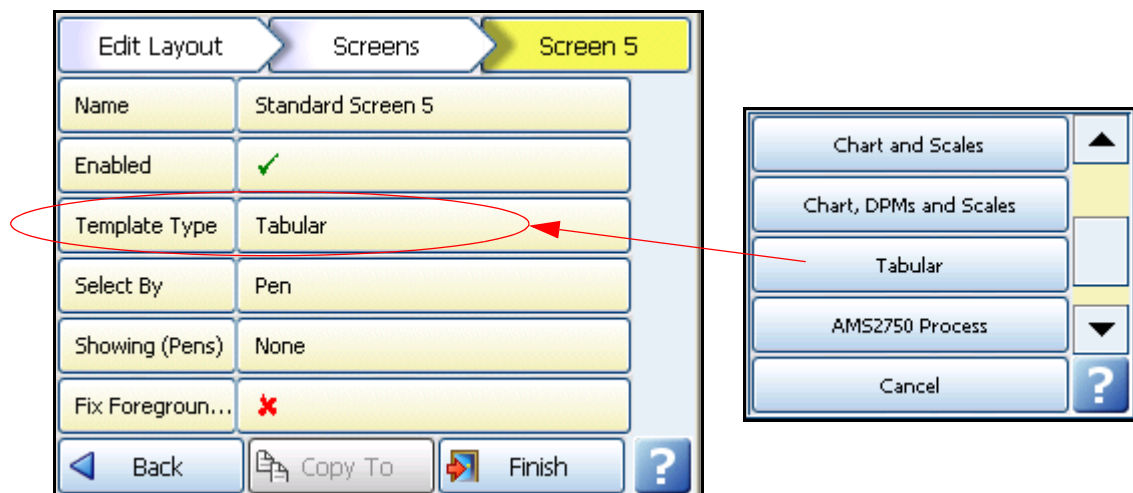

Main Menu

A Tabular screen will display tabular readings in lines from top to bottom of the screen, with the latest readings at the top of the screen.

The template will auto size for **Minitrend**, **eZtrend** and **Multitrend** recorders, allowing 6 pen values per line for a **Minitrend** and **eZtrend**, and 12 pen values per line for an **Multitrend**. Spacing will be fixed so that there will always be room for 6 and 12 per line on default screens, custom screens can be created to display more.

Up to 32 pens can be configured to be displayed on the tabular display screen as with other canned screens.

An Event Effect can be setup whereby the tabular readings can be updated each time it was triggered.

If the recorder is put into Replay mode the standard chart replay screen will be shown.

					Standard Screen 4	
Menu	0	25d	5	Screen	29 Aug 08 13:52:41	
29 Aug 13:52:39	1:Pen 1 55.49	2:Pen 2 97.00	3:Pen 3 14.92	4:Pen 4 84.21	5:Pen 5 28.27	6:Pen 6 81.37
29 Aug 13:52:29	1:Pen 1 70.57	2:Pen 2 87.00	3:Pen 3 14.13	4:Pen 4 81.40	5:Pen 5 25.94	6:Pen 6 81.46
29 Aug 13:52:19	1:Pen 1 83.65	2:Pen 2 77.00	3:Pen 3 13.49	4:Pen 4 80.87	5:Pen 5 26.11	6:Pen 6 77.67
29 Aug 13:52:09	1:Pen 1 93.43	2:Pen 2 67.00	3:Pen 3 15.81	4:Pen 4 81.71	5:Pen 5 21.80	6:Pen 6 83.00
29 Aug 13:51:59	1:Pen 1 98.96	2:Pen 2 57.00	3:Pen 3 11.36	4:Pen 4 82.42	5:Pen 5 22.65	6:Pen 6 82.13
29 Aug 13:51:49	1:Pen 1 99.70	2:Pen 2 47.00	3:Pen 3 12.19	4:Pen 4 82.88	5:Pen 5 22.04	6:Pen 6 82.87
29 Aug 13:51:39	1:Pen 1 95.57	2:Pen 2 37.00	3:Pen 3 12.45	4:Pen 4 82.32	5:Pen 5 20.10	6:Pen 6 82.42
29 Aug 13:51:29	1:Pen 1 86.98	2:Pen 2 27.00	3:Pen 3 11.71	4:Pen 4 80.50	5:Pen 5 17.21	6:Pen 6 87.51

Main Menu

Edit Recording

(Main Menu > Configure > Setup > Edit > Recording)

Scheduled, see below

[“Storage Bias” on page 159](#)

[“Storage Alarm” on page 160](#)

[“Pre-Trigger” on page 161](#)

[“Export Format” on page 162](#)



Scheduled

(Main Menu > Configure > Setup > Edit > Recording > Scheduled)

Set up Scheduled exports to transfer data at timed intervals, from internal flash memory to externally attached devices, SD card or USB storage key. SD card is available as a credit option for the **eZtrend GR**.

Note: The use of the network folder for Scheduled export is not recommended since network connectivity and network problems could result in the risk of missing data due to the Scheduled export not being performed at the scheduled time and the folder. It is advisable to use other media (USB, SD card) for scheduled export.

[See “Recording Methodology” on page 194](#) and [“Storage Media Format” on page 194](#).

Select the Scheduled button to reveal the scheduled menu.

Schedule Export - Tick to enable.

Export Device - Select the device you wish to export data to. USB1 is the first USB device to be fitted and USB2 is the second one fitted, front or rear of the recorder. SD card is available as a credit option for the **eZtrend GR**.

A network share path may be available here if configured, but use USB or SD card for scheduled export if possible. See note above.

Update Period - Select how often you wish data to be exported from the list provided; 10, 30 minutes, 1, 2, 12 or 24 hours.

Log Messages - Tick to add a message to the messages list when a scheduled export has been performed.

Main Menu

Mark Chart - Only active when Log Messages is enabled. Tick to mark the chart when a scheduled export has been performed.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

If a manual Export Now is in progress during the time when a Scheduled export is to occur, the scheduled export will hold off until the manual export is finished.

Storage Bias


(Main Menu > Configure > Setup > Edit > Recording > Storage Bias)

An adjustable slider can be used to determine how much internal flash memory is allocated for storing chart data and how much internal flash memory is allocated to storing logged data. The User can adjust the slider to increase and decrease the internal flash memory storage allocation.

Displayed under the Total Available Space bar is the amount of internal flash memory allocated to chart and log data. This will update as you move the slider. The amounts shown display how much time it will take to fill the internal flash memory allocations, at the current chart speed, before the data will start to be recycled.

The default for the slider, time coverage wise, is set to a bias in the recorder to initially provide more space for data storage than chart replay. You should set the bias to what best meets your data storage vs. chart replay requirements. The recorder is set to balance, time coverage wise, the chart and logged data equally depending on how many pens are enabled and what current chart speeds are set.

As you move the slider to the right, towards Chart, you will notice the allocated internal flash memory space for the chart data will increase in the bar above the slider. As you move the slider to the left, towards Log, you will notice an increase in the internal flash memory for the Log data in the bar above the slider.

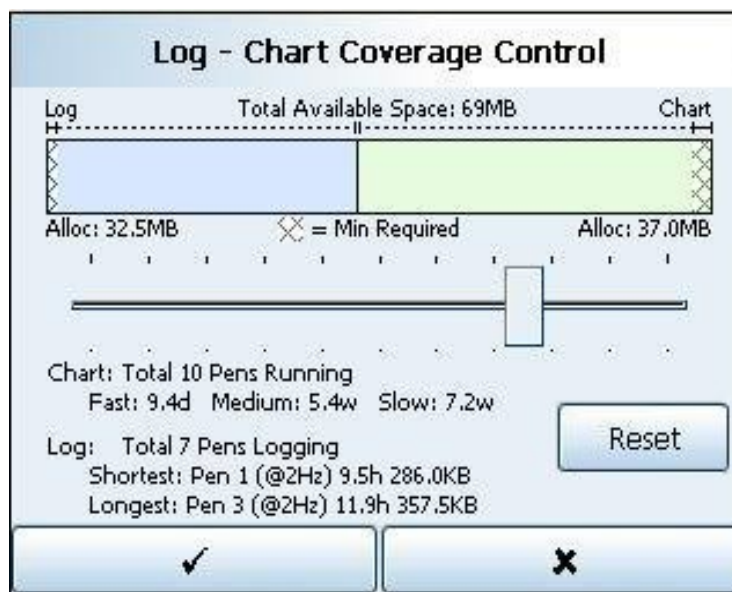

Default Storage Bias screen

Main Menu

The Total Available Space bar also contains minimum chart and log memory allocation, this is shown in the hatched areas at both ends of the bar. You cannot use this reserved internal flash memory.

The Reset button will return the slider and the memory allocation to its original position when you entered the Storage Bias screen.

The screen also shows chart information regarding how many pens are currently enabled and how much time it will take to fill the chart memory depending on the chart speeds selected. When you move the slider to increase the chart memory the amount of time to fill the chart memory will also increase. If you decrease the chart memory, thus increasing the log memory, the amount of time to fill the chart memory, i.e. chart history, will decrease accordingly. Note that as you allocate more chart memory the recorder gives preference to medium and slower chart speeds.

The log information displays how many pens are currently set for logging/recording. The shortest pen means the pen that will take the shortest amount of time to fill its part of the log memory before it starts recycling, that is, overwriting the oldest data with the newest. The longest pen is the pen that will take the longest amount of time to fill its part of the log memory before it starts recycling. The recorder will, where possible, balance the times so the shortest and longest pens fill the log memory at approximately the same time. Depending on the different log rates, the allocation of memory will vary per pen.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Internal SD Memory

The SD card is the internal memory architecture inside the recorder which has two partitions. One partition has OS image, used by the recorder, and the size reserved for this partition is 256MB (fixed). The second partition is available space for use. So for example a 1GB card then 256 MB is used by recorder for storing OS image and is never released for use.

NOTICE

Because pens only begin to use extra memory when it is required there will be some delay in how quickly other screens update the memory allocation information. Eg. the Recording screen will adjust "Export Required In" time depending on chart speeds, pens rate and how far the slider is moved.

Storage Alarm

(Main Menu > Configure > Setup > Edit > Recording > Storage Alarm)

The storage alarm function is linked to the Error Alert system when there is a requirement for a time period to be set to alert the user before the storage media is full.

- **Internal memory** - Set the amount of time before the internal memory becomes full and data is lost and for the Error Alert Message to display on the screen. Enter a time period of between 0.5 and 48 hours.
- **Export media** - Set the amount of time before the data being exported to a media becomes full, and data is lost, for the Error Alert Message to display on the screen. Enter a time period of between 0.5 and 48 hours.

Main Menu

- **FTP Memory** - Set the amount of time before the FTP memory becomes full, and data is lost, for the Error Alert Message to display on the screen. Enter a time period of between 0.5 and 48 hours.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Pre-Trigger

(Main Menu > Configure > Setup > Edit > Recording > Pre-Trigger)

The pre-trigger functionality function captures a high resolution trend leading up to an event triggered by an alarm, and optionally after the event (Post-Trigger), where the information can then be viewed in **TrendManager Pro** for analysis.

Configuration

The pre-trigger system is simply configured by selecting which pens they wish to be included in the pre-trigger by enabling the Pre-Trigger item in the pen logging menu, "[Logging Menu](#)" on page 87, and setting the desired pre-trigger time which is common to all pens, this is done here in the recording menu.

- **Pre-Trigger Time** - The pre-trigger system can be configured to allow between 1 and 10 minutes at whole minute increments of pre-trigger data to be stored for each pen, each pen will store the same time span. The default will be set to 5 minutes.
- **Post-Trigger Time** - specified in seconds from 0 (disabled and the default) to 3600 for 1 hour of post trigger time, extending the alarm log rate for all pre-trigger pens by the specified time after the last pre-trigger pen alarm has cleared.

Acquiring

In the running state the pre-trigger buffers are being filled with pen readings dependant on the alarm logging rate when no pre-trigger pen alarms are asserted. The buffer will cycle when they reach the maximum pre-trigger time as configured.

If power is lost when the pre-trigger is acquiring then the pre trigger information will be lost.

Event processing

All pens enabled for pre-trigger will be put into their alarm logging rate and remain in the alarm logging rate while any pre-trigger pen alarm is asserted.

Once one or more alarms on a pre-trigger enabled pen(s) fire, the readings in the pre-triggered buffers will be saved to internal flash memory. The pre-trigger system will request an export to be performed if scheduled export is enabled. If Post-Trigger is enabled, the alarm log rate will continue for this period after all alarms have cleared.

If during the post trigger time a pre-trigger alarm re-occurs, but the previous pre-trigger event has not been exported then the post trigger timer will be reset and will start again after all pre-trigger alarm have cleared.

Pre trigger information is only secure when it has been saved into the internal flash memory or exported.

Export

The pre-trigger files are exported from the internal flash memory via the scheduled or manual export to the externally selected device, OR when an FTP download occurs. The pre-trigger data is appended to the Pen data files during export.

It is recommended to set up a scheduled export as the pre-trigger files will only be exported once and to the first device on which an export occurs following a pre trigger event occurring.

Main Menu

If power fails when the pre-trigger information is waiting to be exported or is being exported, then the system will restart into the export state, allowing the files to be exported. If the power fails before the Pre-Trigger alarm is activated data will be lost and the recorder will restart.

Restart

Once the files for a pre-trigger have been exported and all alarms on pre-trigger enabled pens have cleared, the pre-trigger buffers are reset and the existing pre-trigger information has been exported, then the system returns to the acquiring state.

If a configuration change is performed then the pre-trigger system will be restarted, the user will be warned before committing that they will restart the pre-trigger buffering, if an export is pending they will also be asked to perform the export procedure or lose the existing pre-trigger information.

Importing

Once exported, the import into **TrendManager Pro** can be performed from removable media or via FTP, the imported information will show the pre-trigger pens as overlapped data. This will automatically be displayed utilising the **TrendManager Pro** overlapped pens feature to clearly show the pre-trigger data. See **TrendManager Pro** software manual.

Export Format

(Main Menu > Configure > Setup > Edit > Recording > Export Format)

Export Format decides the format in which the logged data is to be exported to the client. There are two options:

- **TV Encryption Scheme:** Exports the data as DAT files. The client then uses the **TrendManager Pro** to analyse the data.
- **CSV format:** The CSV format exports all or new data based on the selected option in CSV format. This data is can be exported to the client using USB or SD card. The data is useful to the client who does not wish to use **TrendManager Pro**.

Note: If the CSV data is huge in several MBs like more than 50MB it may take more time to export. It is recommended to use the schedule export once or twice a day to avoid huge accumulation of data.

Messages during export (new /all) operation

- **Export new data initiated:** Displayed when export is initiated.
- **Export new data performed:** Displayed on successful completion of the previous export.
- **Export Failed- (* additional details*):** Displayed when export operation failed.
- **Export Failed- The external media is full:** Displayed when media is full.

Note: If Export was aborted with “Export Failed-“message, the complete data will be available upon completion of next successful export. Refer to the multiple folders created during failed and successful export.

Main Menu


Reports Menu

(Main Menu > Configure > Setup > Edit > Reports)

Reports can be generated manually or on a periodic basis using the event system to show daily/weekly/monthly totals, max mins, averages etc., the reports can be printed, e-mailed as attachments or exported to the external media. The reports will be in RTF format for use in MS Word™ or other compatible word processors.

A batch report for a Temperature Uniformity Survey can be produced.

Before a report can be run the report menu must be configured. In the Reports Menu select the first or next available Report #.

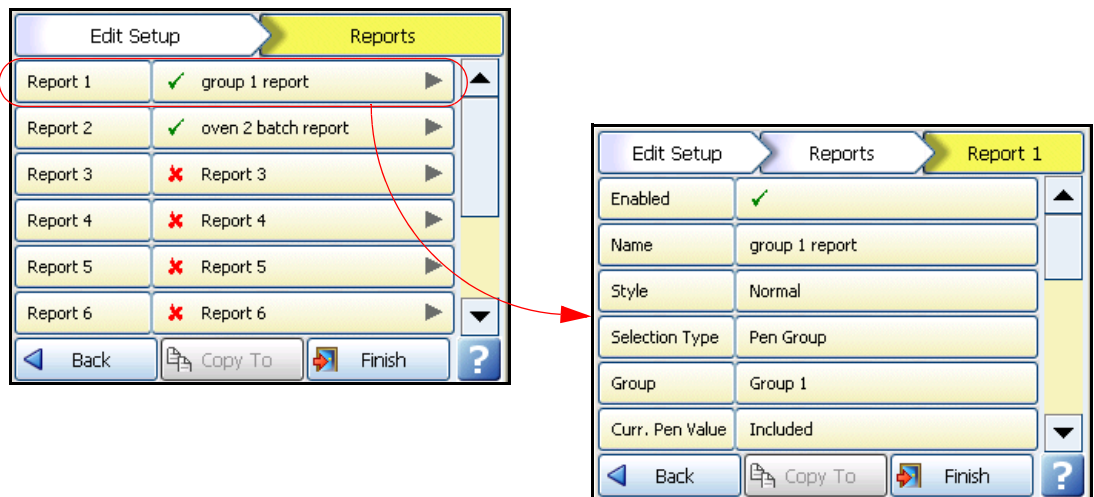

Enabled - Set to a tick to enable

Name - Enter an identifiable name of your report

Style - Select Batch for running reports on current batches. Select Normal to run reports on specific pens, all pens or groups. A TUS report is for a Temperature Uniformity Survey that can only be used if this option is enabled in the credits menu.

This type of TUS report is condensed and should not be used as the final report to comply with AMS2750 specifications. The full report for a TUS should be generated using the TUS procedure following [“Appendix L: GR Series AMS2750 capabilities” on page 405](#).

Selection Type - This will be set to Group if Batch is selected for the Style, select which group of pens the report will be run on. If the Style is set to Normal the following options will be available:

- **Multiple Pens** - This allows you to select which pens to run a report on including Totaliser pens
- **Pen Group** - Allows you to select which group of pens to run a report on
- **All Pens** - This will run a report on all the currently enabled pens

Group - (only available when Pen Group is selected for Selection Type). Select the Pen Group you wish to run a report on from the available groups list. To have groups of pens available in this list, individual pens must be allocated to a group, see Group in the [“Pens Menu” on page 85](#). Use Group to produce an AMS2750 summary report.

Main Menu

Current Pen Value - Select whether to include the Current Pen Values, of enabled pens, in your report.

Max/Mins - Select this to include the Maximum and Minimum values of each selected pen, All pens or Group of pens depending what has been chosen in the Selection Type option. The report can give you the pen Max/Min value for every Hour, Day, Week, Month, the Current max/min pen value or Do Not Include Max/Min values.

Averages - Select this to include the Average values of each selected pen, All pens or group of pens depending what has been chosen in the Selection Type option. The report can give you the pen Average value for every Hour, Day, Week, Month, the Current average pen value or Do Not Include Average values.

Pens - Pens - (only available when either Current Pen Value or Max/Mins is set to Included). Select which pens this report will be run on.

Totals - Select this to include the Total values of each selected pen, All pens or group of pens depending what has been chosen in the Selection Type option. The report can give you the pen Total value for every Hour, Day, Week, Month, the Current total pen value or Do Not Include Total values.

Totaliser Pens - (only available when Multiple Pens is selected for Selection Type). This will display any pens that have been set up as a totaliser pen. [See “Displaying Totals” on page 94.](#)

Messages - Select this to include the Messages of each selected pen, All pens or group of pens depending what has been chosen in the Selection Type option. The report can give you the pen Messages for the Last Hour, Last Day, Last Week, Last Month, All messages or Do Not Include Messages.

Message Lists - Select which type of messages are required for your report: Alarm, System, Diagnostic, Security or User messages. One or more selections can be made. For more information see [“Message Types” on page 197.](#)

Counters - Select which type of Counters are required for your report: Alarm, User, Event, Digital, Digital Input, Relay Output or Pulse. One or more selections can be made. For more information see [“Events/Counters” on page 120.](#)

Include Digital Inputs - Select to Include or Do Not Include this option.

Include Digital Outputs - Select to Include or Do Not Include this option.

Footer Style - Choose between one or two lines of footer at the end of the report. The extra footer lines give you the option to add fields, such as “Checked By” and “Date” etc. See [Figure 4.1 on page 203](#)

Email - Tick to enable the Email function. See [Figure 4.1, “Email Report example,” on page 203.](#) The report is sent as a Word document and to view all the options eg. Footers you may have to change your View to see these options (View > Print layout).

Recipients - (only available when the Email function has been enabled). Select from a list of email recipients. Email addresses and Server names must be entered in [“Email” on page 113.](#)

Print - Set to a tick to enable the Print function. The printer settings must be set up before this feature will operate, see [“Printer Menu” on page 151.](#)

Export Device - Select from a list of options if you require your report to be exported to an external media device (SD card/USB key), Network Share folder (NAS) or select Do not export. The removable media device needs to be fitted to the recorder when the report is run and have enough memory available.

To Export to a NAS folder “Use Share Path” needs to be set up in [“Network Admin” on page 98](#) and NAS devices enabled in [“Media Config” on page 146.](#)

Main Menu

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Run a Report

Once the report details have been completed in the report menu you can run your report either manually or by using the Event system.

- For a manual report see [“Reports \(Process\)” on page 202.](#)
- For a report triggered using the Event system see [“Event Effects” on page 128.](#)

Pen Report Information

Currently pens provide real-time values, max, min and totals. Reports need some history of these values to be maintained, so a set of period based data is maintained. The periods being an hour, day, week and month. The recorder builds up the current hour, day, week and monthly data and keeps the previous (completed) hour, day, week and month stored.

At any time it is possible to access the current hour, day, week or month for Max, Min, Average and Totals, also you can get access to the previously complete whole hour, day, week or month for each pen.

- An hour is a whole hour starting on the hour e.g. 10.00 to 11.00
- A day starts at one second passed midnight.
- A week starts one second passed midnight on Sunday
- A month starts at one second passed midnight on the 1st of the month

Access to this is provided automatically via reports but this information can also be included in maths/scripts and by using embedded variables.

Examples below:

Pen Report Maths

In maths the following syntax is available:

prmax[x,y,z] = Pen report Max value

prmin[x,y,z] = Pen report Min value

prave[x,y,z] = Pen report Average value

prt看[x,y,z] = Pen report Totaliser value

where ...

x = Pen Number 1 to 96

y = period 1 = Hour, 2 = Day, 3 = Week, 4 = Month,

z = report set 1 = Current, 2 = Previous completed

e.g. **P1 =prmax[23,2,1]** - Max value so far for current day for Pen 23

Continued on next page

Main Menu

Pen Report Syntax

the syntax for the embedded variables is as follows:

[[PRPtttxynn.v]]

ttt is the type of variables required and can be

MAX = Max value

MAT = Time max value was recorded

MIN = Min Value

MIT = Time min value was recorded

AVE = Average Value

TOT = Totaliser value

STM = Start time of the reports set

x is the report set and can be

C = Current working hour, day, week, month

L = Last completed hour, day, week, month

y is the period and can be

H = Hour

D = Day

W = Week

M = Month

nn is the pen number from 1 to 96

e.g. of some embedded variables

[[PRPTOTLM1.v]] Total for last complete month for pen 1

[[PRPMAXCD23.v]] Max so far for current day for pen 23

[[PRPMATCD23.v]] Time max was recorded for current day for P23


[[PRPSTMCD23.v]] Start time of report for current day for pen 23

Main Menu

Layout

(Main Menu > Configure > Layout >)

The user can configure how the data is presented on the screen. From the Layouts screen choose to Edit, Save or Load layouts in the recorder.

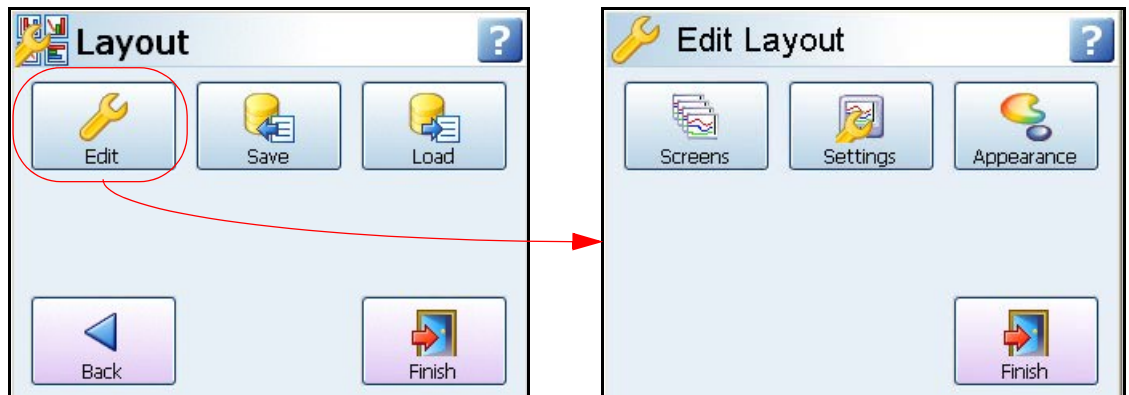

Edit Layout

(Main Menu > Configure > Layout > Edit)

The Edit Layout menu displays a Screen button to enable and display Standard and Custom screens. The Settings button is used to enable screen cycling, alarm screens and replay screens. The Appearance button is used to change the chart background colour for normal charts and charts in replay mode.

Screens

(Main Menu > Configure > Layout > Edit > Screens)

This section allows the user to configure and modify the standard screens on the recorder. The Edit button will produce a list of available screens in the recorder. In each screen you can enable, check and change the screen properties.



The Edit button may display a warning message if the Commit Later option has been selected. This means changes to the configuration have been made but the changes have not been committed to the recorder. [See "Commit Later" on page 217.](#)

Select a standard or a new screen to view the following menu list:

- **Name** - Select to Change the name of the Standard Screen. 21 characters max, including spaces.
- **Enabled** - Toggle On and Off to activate this Standard Screen
- **Template Type** - Select from a list of pre-defined templates.
 - *DPMs* - Select which pen is displayed. Activate to display Max/Min readings and/or activate to display Total values
 - *DPMs and Bars* - Select which pen is displayed. Activate to display Max/Min readings and/or activate to display Total values
 - *Charts and DPMs* - Select which pen is displayed.

Main Menu

- *Charts and Scales* - Select which pen is displayed. Select and activate which scale is required to be displayed.
- *Charts, DPMs and Scales* - Select which pen is displayed. Select and activate which scale is required to be displayed.
- *Tabular* - Select which pens are to be displayed in a table style layout. See [“Tabular Screen” on page 156](#).
- *Circular Chart and DPMs* - Select which pens are to be displayed in a circular and DPM style layout. Available for **Multitrend GR and DR Graphic**.

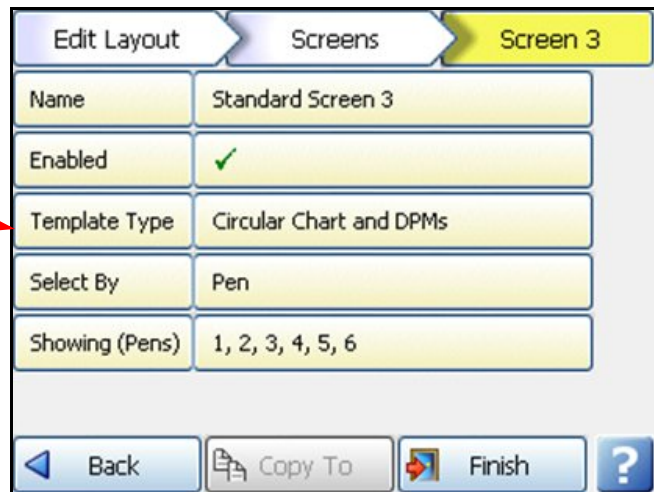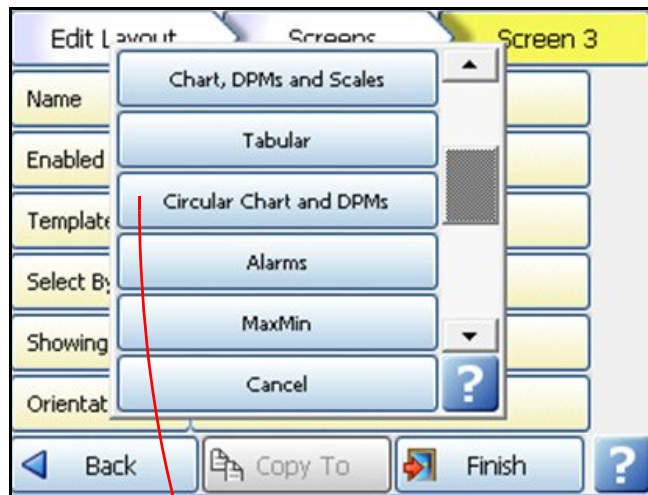

- *AMS2750 Process* - This screen is required when the recorder is being used in AMS2750 Process Mode. Refer to [“AMS2750 Process Menu” on page 407](#).
- *Template #* - If a template is being used it will appear here
- *Alarms* - Select by either Pens or Groups. Showing either the pen numbers or the Group name. Maximum 32 pens per group for **Multitrend GR**, 16 for **Minitrend GR** 8 for **eZtrend GR and DR Graphic**

Main Menu

- *MaxMin* -Select by either Pens or Groups. Showing either the pen numbers or the Group name. Maximum 32 pens per group for **Multitrend GR**, 16 for **Minitrend GR**, 8 for **eZtrend GR** and **DR Graphic**
- *User Variables* -Select from the User variable list
- *Script timers* - Select the Timers required from the list
- *User Counters* - Select this to display any User Counters already set up.
- *Status* - Select this to display the Status screen
- *Totals* - Select this to display the Totals screen
- *Messages* - Select this to display the Messages screen. Options to display All, Alarm, System, Diagnostics, Security or User messages
- **Select By** - This gives you the option of selecting Pens or a pre-defined Group of pens that will be displayed on the screen. This will be the default if AMS2750 Process screen is selected in Template Type.
- **Showing (Pens)** - (Only available if Pens is selected in Select By). Select pens from the on screen selection to be displayed on this screen. Available pens will be in bold text on the selection screen and pens that are already selected will have a blue edge.
- **Group Name** - (only available when Group is selected in Select By). Select which group of pens is to be displayed on this screen. To assign a pen to a group, see [“Pens Menu” on page 85](#).
- **Orientation** - (Not on the DPM screen). Set the orientation to Vertical or Horizontal for Scales and Charts.
- **Cycle Scales** - (active with chart and scale combination). If ticked, the recorder will cycle through each pen in the form of a scale or bar chart depending on which is selected for the Scale Indicator .
- **Scale Indicator** - (active with chart and scale combination). Select which indicator, either bar or pen pointers, will indicate on the scale.
- **Background** - Background colour can be set if no template is used. Select and choose from the Colour palette.

Add Screen

- To add a new screen just select Add Screen and configure as required.

Delete Screen

- To Delete a screen just select Delete Screen to produce a list of current screens. Select the screen to delete and it will be removed immediately.

When the configuration is complete select the Finish button to Commit, Discard or Commit Later. Select the Back button to return to the previous menu.

Main Menu










Settings

(Main Menu > Configure > Layout > Edit > Settings)

Use this menu to set up the layout settings for the screens.


- **Cycle Screens** - Tick this to cycle through each of the recorder's screens
- **Cycle List** - Select which screens you wish to be cycled including non-process screens
- **Cycle Interval** - Enter the amount of time, in seconds, that each of the cycle screens are displayed for. (range 5 to 3600 seconds)
- **Screen Hold** - If during cycling screens you wish to investigate a certain screen for a longer period than the cycle interval you can enter a time period here for the amount of time that screen will be displayed. (range 0 to 3600 seconds)
- **Alarm Screen** - Select which screen is to be displayed when any pen goes into an alarm state. Only changes colour if Mark on Chart is enabled in the ["Alarms Menu" on page 89](#)
- **Alarm Screen Name** - Only active if Alarm Screen is enabled
- **Replay Screen TO (TimeOut)** - If the recorder is in replay mode and there has not been any user activity for a defined amount of time then the replay screen will return to the process screen.
- **Replay TimeOut** - (only active if Replay Screen TO is enabled) Enter how long, in minutes, before the replay screen returns to a process screen. Defaults to 10 minutes.
- **Menu Bar TO** - When you select an item from the menu bar along the top of the process screen it will produce a sub-menu bar. This sub-menu bar can have a display time assigned to it before it automatically disappears and returns to the main menu bar. Enter here the amount of time before the menu bar is hidden.
For screens that have been created in the Screen Designer software and have been designed specifically without the menu bar being displayed. The menu bar at the top of the screen will appear on the recorder automatically but can be hidden so the full area of the screen can be displayed. Enter here the amount of time before the menu bar is hidden.
- **Hourly Stamps** - The Hourly stamps appear on the Trend Screen instead of the date and time stamps for chart speeds of 10mm/hr, 20mm/hr, 30mm/hr and 60mm/hr (if enabled). When the recorder screen is put into replay mode. As you zoom out the time stamps on the chart background change from minutes to hours.
- **Show Chart Start/Stop** - this will show or hide the Chart Start/Stop Message when the chart has been started or stopped.
- **Hot Btn 1** - HB1 to HB4 select Name to rename the Hot Button. Tick to enable the Hot Button appearing at the top right of active trend screens. Once enabled any corresponding event that has been setup will be triggered after clicking on the hot button.
4 Hot Buttons available for the **Multitrend GR and DR Graphic**, 2 Hot Buttons available for the **Minitrend GR**, 1 Hot Button is available for the **eZtrend GR**.

Main Menu

<div><div>Menu</div><div>0</div><div>1y+</div><div>14</div><div>Screen</div></div> <div>0001:Recorder #1</div> <div>03 Jan 06 08:53:32</div>				<div><div>HB 4</div><div>HB 3</div><div>HB 2</div><div>HB 1</div></div>			
<div>Pen 1</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>		<div>Pen 2</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>		<div>Pen 3</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>		<div>Pen 4</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>	
<div>Pen 5</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>		<div>Pen 6</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>		<div>Pen 7</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>		<div>Pen 8</div> <div>PV: 49.92</div> <div>Max:49.92</div> <div>Min:49.92</div>	
<div>Pen 9</div> <div>PV: 49.92</div>		<div>Pen 10</div> <div>PV: 49.91</div>		<div>Pen 11</div> <div>PV: 49.91</div>		<div>Pen 12</div> <div>PV: 49.92</div>	

Appearance

Chart background colour and graduations and the chart background colour when the recorder goes into an alarm state can all be changed. The same set of characteristics can be changed for a chart in Replay mode using the colour picker. The colour of the Time Stamp at the top of the chart and Marker (Mark on Chart) can also be changed.

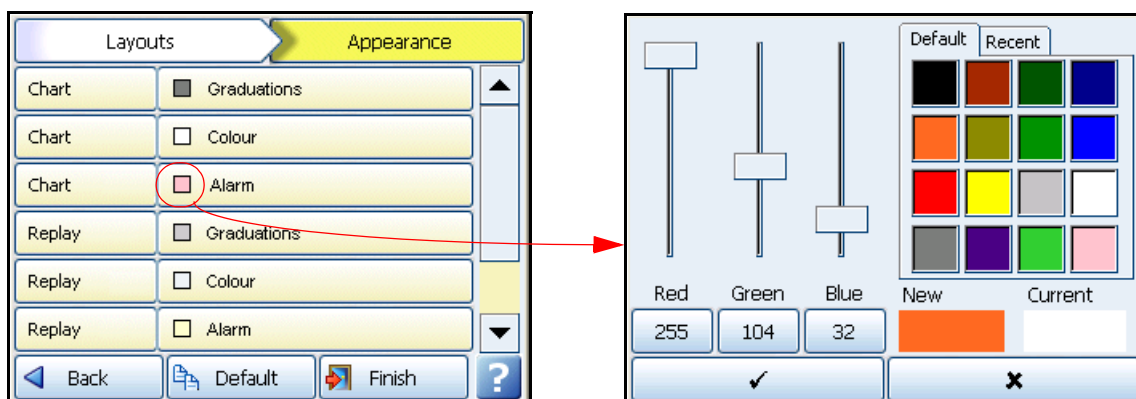

- **Chart/Graduations** - This will change the colour of the graduation lines on the chart
- **Chart/Colour** - This will change the colour of the background of the chart
- **Chart/Alarm** - This will change the colour of the background of the chart when it goes into an alarm state
- **Replay/Graduations** - This will change the colour of the graduation lines on the chart when the recorder screen is in Replay mode
- **Replay/Colour** - This will change the colour of the background of the Replay chart
- **Replay/Alarm** - This will change the colour of the Replay chart when it goes into an alarm state
- **Time Stamp** - This will change the colour of the time stamp/and date at the top of the screen
- **Marker Colour** - This will change the colour of any Mark on Chart displayed on the screen

Main Menu

The **Default** button will return all colours to their original factory settings.

The Colour Picker

On the right side is a selection of default colours which can be used as they are. When a colour is selected it will appear in the New box with the Current colour next to it. Use the sliders labelled Red, Green and Blue to vary the colour displayed in the New box. As you move the slider the colour shade number will change in the box below the slider.

If a specific colour is required, enter the colour number by selecting the box under the Red, Green and Blue sliders and the colour will be change accordingly in the New box.

When the desired shade has been chosen, select the tick box to confirm you choice. Each new colour will be saved and will appear in the Recent tab.

Save Layout

(Main Menu > Configure > Layout > Save)

Layouts can be saved to SD card, USB key removable storage media or to a Network Share folder (NAS). Plug in a removable storage media device and the corresponding button on the screen will become active, select the relevant media button.

Enter the file name required in the File name box. Maximum of 50 characters.
File format is .lay, click on the Save button.

For Network Share folder select the NAS button and the "Save Layout to NAS" dialog will open. Enter the Layout file name in "Filename" and click on Save.

The SD card and the front USB device port are found under the front flap on the recorder. There is another USB port at the rear of the recorder. The first USB device fitted will be USB1, therefore the second USB device fitted is USB2. SD card is available as a credit option for the **eZtrend GR**.



For Saving and Loading Layouts

NAS button will only be enabled if "Use Share path" is toggled on in "Admin Network" and NAS devices are enabled in "[Media Config](#)" on [page 146](#) and an warning "Access Denied for Media" will appear. If the Network Share folder is not available or incorrect then the following error will appear "Please check folder is shared and network admin settings are correct".

Load Layout

(Main Menu > Configure > Layout > Load)

Layouts can be loaded from a SD card, USB key removable storage media or to a Network Share folder (NAS). Plug in a removable storage media device and the corresponding button on the screen will become active. Select the relevant media button to display the layout files available to load. Select the file and click on the Load button.

For Network Share folder select the NAS button and the “Load Layout from NAS” dialog will open. Select the Layout file required and click Load.

All screens loaded from another recorder, via SD card, USB, a Network Share folder (NAS) or Screen Designer will over-write the existing screens on the recorder.

The SD card and the front USB device port are found under the front flap on the recorder. There is another USB port at the rear of the recorder. The first USB device fitted will be USB1, therefore the second USB device fitted is USB2.

See “Storage Media Format” on page 194 for formatting information of SD card cards and USB keys.

SD card is available as a credit option for the **eZtrend GR** recorder.

When loading layouts from Screen Designer see *“Loading a Layout into a Recorder” on page 251.*

Main Menu


Passwords

(Main Menu > Configure > Passwords >)

The Password system manages the security within the recorder menu system. It allows restricted access within the recorder, providing password protection at different levels.

If your recorder has ESS (Extended Security System) enabled the password system cannot be disabled.

An Administrator should be nominated to have control of the password system

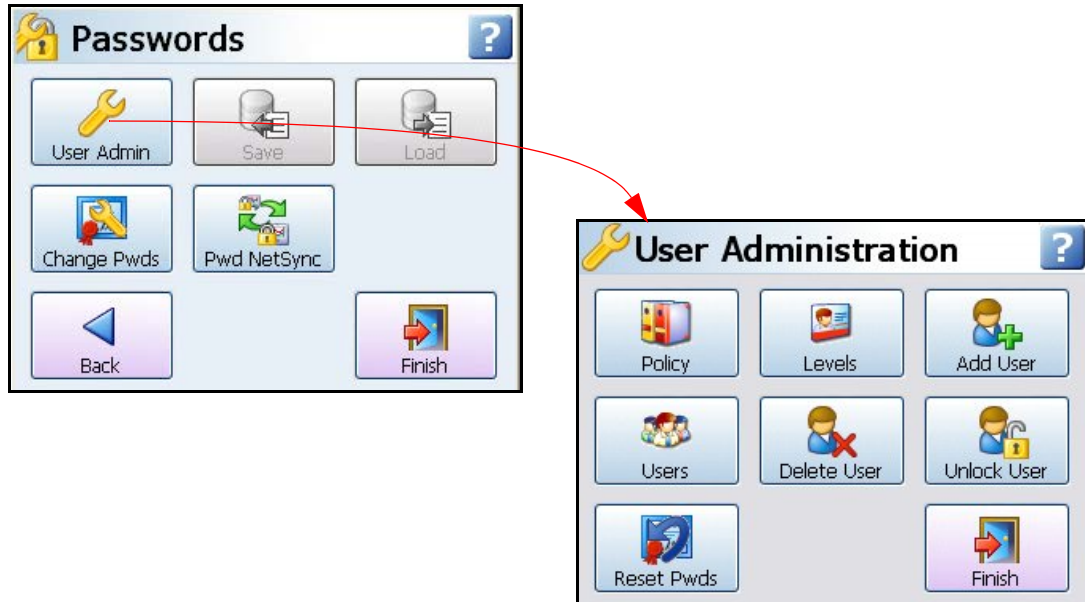

First Time Login

The "First Time Login" only relates to ESS (Extended Security System) purchased with the recorder.

Non ESS user

For users without ESS, once you enable the password you can add a user at administrator level and finish/apply/etc. Then go into the menu system and enter the login and it will give you a message that your password has expired and would you like to enter another, you click yes.

If the first user is not entered and changed to administrator (defaults to operator) and saved, you will be denied access as an operator because an operator level will not allow you to get back in the passwords.

The first time the system is used a default user name and password is available, the user name is "Admin" and will have no password, this is known as the "first time" user. Access to the first time user is removed once the password system has been configured. The first time user is reinstated if the password system is reset.

For recorders with Extended Security System (ESS), see ["First Time' Password System Setup" on page 220](#).

Main Menu

Administrator

This is the top level access to all menus. Only the Administrator has access to the password setup. The Administrator is responsible for adding users and assigning their levels of access throughout the recorder menu system. More than one Administrator can be set up.

User Administration

(Main Menu > Configure > Passwords > User Admin)

The Administrator can set up the recorder's password policies, permission levels of access in the menu system and can add, delete and unlock users and assign their permission levels. Passwords can be Reset from this screen.

The recorder will display a default setup that can be customised to suit. This is set out in ["Level Permissions" on page 223](#).

NOTICE

When creating passwords, it is recommended to use a mix of capital letters, small letters, numbers and special characters to create a "strong" password

Policy

(Main Menu > Configure > Passwords > User Admin > Policy)

At the top of the Policy menu are four levels to be assigned, these are the permission levels that will allow access to specific areas of the recorder menu system. The names of these levels can be edited here.

- **Pwds Enable** = Tick to enable the password menu
- **Level 0 Name** = Administrator. Highest permission level
- **Level 1 Name** = Engineer. Second highest permission level
- **Level 2 Name** = Supervisor. Third highest permission level
- **Level 3 Name** = Technician. Fourth highest permission level
- **Level 4 Name** = Operator. Fifth highest permission level
- **Unrestrict** - allows the Administrator to de-restrict access to certain areas so menus will be available even without logging in.
- **Menu Timeout Enable** - Tick to activate the timeout facility to be enabled on the menus. (This is always enabled for ESS).
- **Menu Timeout** - Set a specific time period of inactivity in a password protected area before logging out. (20 to 3600 seconds)
- **Web Timeout Enable** - Tick to activate the timeout facility to be enabled on the web page. (This is always enabled for ESS).
- **Web Timeout** - Set a specific time period of inactivity in the web page before logging out. Enter the time in seconds. (20 to 3600 seconds)
- **Old Passwords** - Select how many previously used passwords are locked from use as a new password. (Max.12 previous passwords, 0 for disabled) Cannot be disabled for ESS recorders.

Main Menu

- **Username Max** - Set the maximum amount of characters that can be used for the User name login. (1 to 20 characters, 4 to 20 for ESS recorders)
- **Password Max** - Set the maximum amount of characters that can be used for the Password login. (1 to 20 characters, 6 to 20 for ESS recorders)
- **Username Min** - Set the minimum amount of characters that can be used for the User name login. (1 to 20 character and 0 will disable, 4 to 20 characters and no disable for ESS recorders)
- **Password Min** - Set the minimum amount of characters that can be used for the Password login. (1 to 20 characters, 0 will disable, 6 to 20 characters and no disable for ESS recorders)
- **Min Alpha** - Set the minimum amount of alpha characters to be used in the Password. (0 to 20 characters)
- **Min Symbol** - Set the minimum amount of symbol characters to be used in the Password. (0 to 20 characters)
- **Min Numeric** - Set the minimum amount of numeric characters to be used in the Password. (0 to 20 characters)
- **Pass Retries** - Set how many times the incorrect password can be entered before the user account is locked out. (1 to 10 retries, 0 will disable, 1 to 6 retries and no disable for ESS recorders)
- **Pass Expiry** - Set how many days before the current passwords will expire. (1 to 365 days and 0 will disable. For ESS recorders 1 to 180 days and no disable)
- **Expiry Warning** - Set how many days before the passwords expiry date that a warning notice will appear. (1 to 20 days and 0 will disable, no disable for ESS recorders)

When the configuration is complete select the Finish button to Commit. Select the Back button to return to the previous menu.

Levels

(Main Menu > Configure > Passwords > User Admin > Levels)

The Level permissions are the 4 user levels that have been set up and named in the Policy menu e.g. Engineer, Supervisor, Technician and Operator.

Select each user level e.g. Engineer, and setup the permission areas for that particular level of user. Each Permission Area will give the user access to selected menus in the recorder. The level permission has a set of default settings that are defined in [“Level Permissions” on page 223](#). Permission areas can be customised for each level if required, see [“Users” on page 177](#).

Add User

(Main Menu > Configure > Passwords > User Admin. > Add User)

The Administrator enters each new user name, then selects the new user and assigns their Level of permission. The Administrator can set up a new user but cannot assign a password. A dummy password is set and the new user is prompted to change the password when they first Log on.

The same user name cannot be used. User names must not contain numeric characters.

The Administrator can add more than one user at a time. They will not be added until the configuration has been Committed. When the configuration is complete select the Finish button to Commit.

Main Menu

When a new user is added a default password is set. When a new user first logs on they are prompted to change the password. The new user is responsible for remembering their own password. The Administrator will not be able to access this information. But the Administrator is able to reset the password for any user.

Users

(Main Menu > Configure > Passwords > User Admin > Users)

This will list all the current users that have been entered into the password system and their access details. Select a user to produce the following:

- **User Name** - Displays the user name.
- **Level** - Select a permission level from the drop down list
- **Custom** - Activate this to allow customisation of the permission area access for this user only. The custom settings will reflect the original Level set when the user was first added.
- **Edit** - Allows customisation of the permission areas. The Administrator can re-assign the permission areas for individual users at any level.
- **Login Days** - Select the days on which this user can Login.

Delete User

(Main Menu > Configure > Passwords > User Admin > Delete User)

This will list all the current users that have been entered into the password system. The Administrator can delete users from a drop down list.

Note: Administrator cannot be deleted.

When the configuration is complete select the Finish button to Commit or Discard. Select the Back button to return to the previous menu.

Unlock User

(Main Menu > Configure > Passwords > User Admin > Unlock User)

This will list the current users that have been entered into the password system. The Administrator can unlock a user that has been timed-out (e.g. password expiry) by selecting a user from a drop down list. Select the user and choose Re-enable Current or Reset to Default, that will set it back to the original setting.

Reset Passwords

(Main Menu > Configure > Passwords > User Admin > Reset Password)

This will produce a text box warning that if you reset the passwords all the current settings will be lost and the password system will return to the factory default setting. Select whether to Continue or Stop the reset procedure.

Ensure that passwords entered by customers are mix of capital letters, small letters, numbers and special characters

Change Passwords

(Main Menu > Configure > Passwords > Change Passwords)

The Change Password function can be accessed by all users. Select Change Password and enter your user name and old password, you will then be prompted to enter your new password twice to confirm.

Password Network Synchronisation

(Main Menu > Configure > Passwords > Pwd NetSync)

The Password NetSync is now with secure communication from R211 firmware release onwards.

Passwords can be synchronised over the network, a recorder can be designated as a master of a password group and other recorders can be added to that password group as slaves. The master will ensure all passwords and password policies are synchronised with all recorders in its password group. Limited changes can be made on slave recorders, e.g. the user may change passwords and this will be propagated to all the other devices in the password group.

Password Net Sync Rules

Before starting read through this check list:

1. To enable a recorder to use Password Net Sync the firmware option needs to be activated in the Credit system, see [“Section 7: Firmware Options” on page 253](#).
2. Only recorders with the Password Net Sync option enabled in the Firmware options will be available to the designated Master or Slave and be accessible in the password group.
3. Ensure that the networked recorders to be included in the password groups are on the same IP subrange of A.B.C.<x>, such that A.B.C is fixed and only <x> is variable.
4. Ensure that all recorders to be included in the same password group are configured to be in the same Set with the same Start Port and have Peer Services enabled. This can be checked from the *Menu > Configure > Setup > Edit > Comms > Services > Peers* menu. Unless the network administrator states otherwise, there is no reason to change the default Start Port value of 8955. For more information see [“Peers” on page 119](#)
5. Ensure that passwords are enabled from *Menu > Configure > Passwords > User Admin > Policy* on all of the recorders to be included in a password group.
6. Recorders in the same Master/Slave password group must have the same revision of firmware.
7. Recorders set up with ESS (Extended Security System) and non - ESS recorders cannot be mixed in the same password group.
8. Choose a recorder to be the Master of the password group and go to the “Pwd Net-Sync” dialog on that recorder from the Menu->Configure->Passwords menu. Set the Type field to Master and the use the Associated Slaves field to pick from a list of available recorders in order to make up the password group membership.
9. If a recorder is a part of a password group and the network becomes disconnected then the recorder will notify you of the available options concerning its associated password group. This will occur if you have to update a password or if you have the Alert function set up to provide an Alert message that says the network cable is unplugged of if you do a rescan of the system.
10. To remove a recorder from a password group set the recorder back to a stand alone device and deactivate the Password Net Sync option in the Firmware Credits menu. This will cause the recorder to reset. This recorder will no longer be available for use in a password group. But the password system and policies will still be active using the last group password.
11. If a Master is removed from a password group a new master can be assigned or all the recorders can be returned to Stand alone recorders and the password group is dissolved.

Main Menu

12. As soon as confirmation is made in the Password Net Sync screen (using the tick) then the information will be passed on to all recorders in that password group.
13. When a password is changed or recorders are added or removed from a password group, a password synchronisation occurs automatically.
14. A password group can be set up from the Master recorder without assigning all the slaves required. You may not know the names of the recorders for the password group at that time. When the password group is established each recorder you want to add to the password group can be visited and added as a slave to the password group.
15. A login failure on any recorder in a password group, after 3 tries (or whatever is set up in the Master), will lock that user from all recorders in that password group. Contact your Password "Administrator" to reset the password from the master recorder only.
16. Slave recorders have limited access to the Password Net Sync system; a user password can be changed and sent out to update all the other recorders. Slaves can also leave a group or promote themselves to Master. All the password (Admin) configuration must be executed through the Master recorder.
17. Maximum slaves in any one password group are 31.
18. Maximum size of any peer to peers network is 32 recorders.
19. Stand alone recorders that already contain a password configuration will have their password configuration overwritten when they become part of a password group.
20. A new Master can be elected from any Slave recorder in the password group by going to the Type field in the "Pwd NetSync" dialog that is available from the Menu->Configure->Passwords menu and selecting Master. Any existing Master will automatically be relegated to a Slave, and if the current password group Master was down at the time then it will be relegated to be a Slave the next time it comes online at start up.
21. From R211 release onwards, recorder supports secure communication channel for Password Network Synchronisation. See ["Password Network Synchronisation"](#) more details.


Notes

1. Password NetSync is heavily dependent on a reliable network. If the system seems to be suffering from apparently poor network connectivity then try splitting the password group up into multiple password groups, with each group on a separate Set. Please see the Manual for more details on Sets.
2. Running Password NetSync without the Master of the password group powered-up and connected to the network is an error condition. Please rectify this situation as soon as possible as Password NetSync cannot be expected to function properly without a password group Master being present.
3. Due to secure communication between master and slaves, master may have some delay while logging in as it has to synchronize username and password with slaves.

NOTICE

The Password NetSync function in the **GR-Series** recorders uses a Peer to Peer communications protocol to synchronize passwords between the various recorders within the Network Synchronization Group. While these systems have been rigorously tested with various network topologies, **Honeywell** cannot guarantee that it will work with every combination of network switches, hubs and other Ethernet network communications equipment and settings. Users of the Password NetSync function who experience issues with the recorders not being found or losing contact between various Password Slaves and the Password Master will need to troubleshoot their own network to insure proper operation of the Password NetSync function.

Figure 4.13 Example of Peer Network consisting of 2 Password Groups

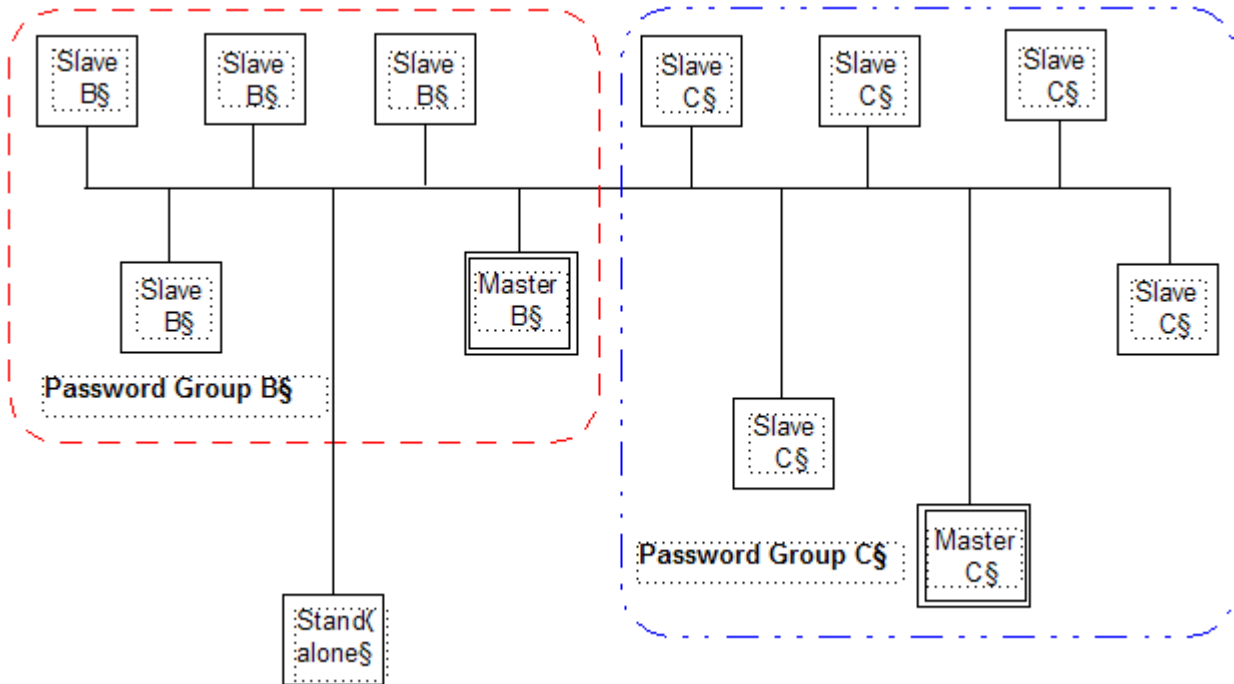

Password Net Sync Configuration

- **Type** - To set up the Master recorder for the password group first select Master to make this recorder a slave device and select Slave.
- **Password Group** - For a Master recorder enter the password group name using the on-screen keypad or keyboard. For a Slave recorder select a password group from the list to join this recorder to an existing group.
- **Associated Slaves** - For Master recorders only. Touch the screen to select from the available recorders shown in red. Recorders that are enabled for password net sync, and that already belong to this password group, will be displayed in green. Recorders not available because they are a part of another group or do not have the firmware option enabled will not be displayed.

Select the back button and if all is correct confirm using the tick button. This will have immediate effect. The update could take up to 2 minutes.

Main Menu

Figure 4.14 Password Network Synchronisation setup

If Master is selected a keypad will be displayed to enter the new password group name.

If Slave is selected a list of existing password groups will be displayed

Turbine 1 XS-100023 0001	Turbine 2 XS-199991 0005	Turbine 3 XS-100061 0666	Turbine 4 XS-100015 0354
Turbine 5 XS-100018 0008	Turbine 6 XS-100062 0023	Turbine 7 XS-123456 0069	Turbine 8 XS-100009 0101
Turbine 9 paul-goodwin-hw 0078	Turbine 10 XS-100005 0270	Turbine 11 XS-100255 0711	Turbine 12 UK225W-JLP 0540
Turbine 13 XS-123412 0617	Turbine 14 UK225W 0931	Turbine 15 XS-100075 0855	

Back Prev Next

This screen is available for a Master recorder so associated slaves can be added to its password group. Only recorders with Pwd NetSync enabled will be displayed here.

Recorders in red do not belong to any password group and are available to be added to a group.


Touch the screen to select from the available recorders shown in red. Recorders that are enabled for password net sync, and that already belong to this password group, will be displayed in green.

Main Menu

Pwd Net Sync Messages

Certain selections may cause the recorder to display specific messages when an entry or action has been executed. Here are some examples of some messages that may appear during Pwd Net Sync setup.


Examples of messages that may appear during Password NetSync set up

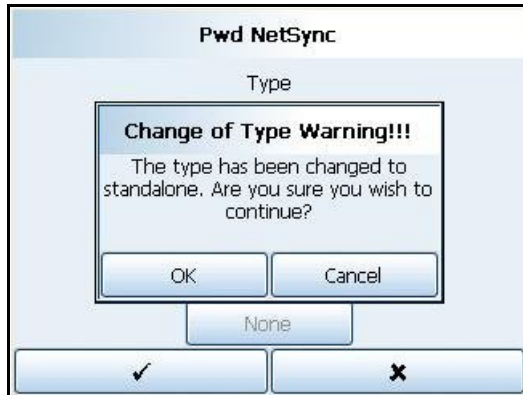

This warns you that you are changing the recorder Type in the Group; Slave, Master or Stand Alone



This may occur if someone is accessing the same group of recorders.

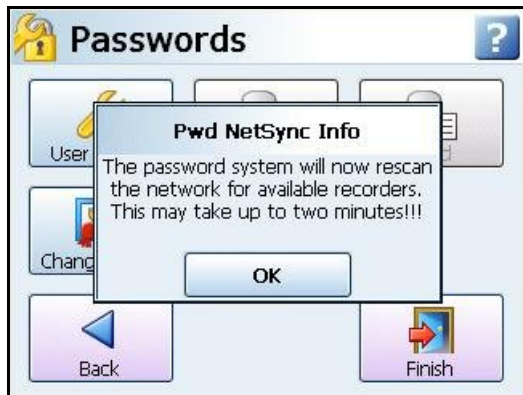

This message will appear when the recorder is scanning the network



All recorders in this group have had their passwords synchronised successfully

Secure PNS (Password Network Synchronization)

Secure communication requires Device certificate to be installed in the recorders which forms the Password group. [See "Load Certificate"](#) section for the procedure to install the certificate.

However, when Custom CA is being used or configured in "Security Options" (See "Security Options") the corresponding recorders in that Password group should have the same Custom CA i.e., Issuer should be same.

Notes:

1. Do not mix the recorders with different certificates in same password group.
2. SPNS is not compatible with X-Series recorders as they don't have device certificates, same is the case with GR-Series recorders with no certificates or unless upgraded to release R211 onwards.
3. Please check certificate validity [See "Example: System Version Status"](#).

When complete go to **Finish > Commit** to implement the new set up.

Settings

(Main Menu > Configure > Settings >)

Set Time

Set up the Time and Date for the recorder's real-time clock. Check that the correct Time Zone is set before setting the clock. [See "Localisation" on page 146](#)

Date

Select each button to set the day, month and year. This will automatically update and be displayed on the Menu bar at the top of the process screen.

Time (HH:MM:SS)

Select each button to set the hours, minutes and seconds. The hours selection provides a list and the minutes and seconds require a numeric entry. This will automatically update and be displayed on the Menu bar at the top of the process screen. The recorder uses a 24 hour clock.

Tick to confirm the setup changes and return to the Settings menu. Select the cross to ignore any changes and return to the Settings menu.

From the Settings menu select the Finish button to commit the changes or select the Back button to return to the previous menu.

Set Volume

Set the volume here for the sound effects. Use the slider to increase and decrease the volume. Press the arrow button to the right of the slider to test the volume.


Update Sounds

The user can pick from a list of 20 different sounds these can be configured to play a single time or repeat continuously. To upgrade sounds the user must have a compatible sound file format of .wav; the .wav file needs to be renamed to the internal format which is as follows.

S<n> - <name>.wav

Where <n> is number 1 to 20 and <name> is a short name to describe the sound, this file name will be shown in the pick lists. **Eg. S1-Alert.wav.** So a user could replace the default sound 1 which is “S1-Two Tone Slow.wav” with “S1-User Sound.wav” and this is what they will then see in their list.

To update the sounds a prompt will be displayed and the system will request the correctly named files be available on external media in the recorder, once confirmed the system will scan the media for correctly named .wav files and will replace the internal files with the new ones. NB the .wav files can be up to 100KB in size.

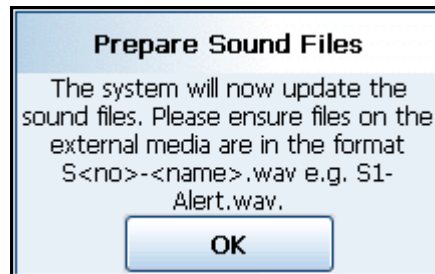

AMS2750

(Main Menu > Configure > Settings > AMS2750)

Disable Thermocouple Adjustment Factor

One method of checking the recorder calibration is to connect a temperature calibrator (TC simulator) and inject known values. These can be read on a standard DPM summary screen, and checked against requirements. So for example if 800 degrees is injected, customers would expect to see 800 degrees on all the inputs (+/- allowable tolerance).

If the TC Cal. Adjustment factors have already been entered, those TC offsets will be being applied, and that changes the displayed temperature. Whilst not technically incorrect, it has lead to user confusion so a temporary means of switching the TC cal adjustment factors “off” has been added.

To access this “switch” navigate to the Configure menu and select the Settings button. Once selected an AMS2750 button is shown, and selecting this will let the user switch “on” or “off” the TC calibration adjustment. This button is only be displayed if the AMS2750 Survey mode is enabled.

In order to ensure that the values are not omitted from an actual survey run, the instrument automatically “switches on” these TC Cal. Adjustment values if they have been mistakenly left off.

In addition a User Message will entered into the message list when this switch is turned “Off” or “On”, which will enable users and auditors to demonstrate a traceable line of action if required.

Main Menu

Alarms Menu

(Main Menu > Alarms >)

Acknowledge and Configure Alarms by categories.



Acknowledge Alarm

(Main Menu > Alarms > Acknowledge Alarm)

User acknowledgment of alarms can be performed at this menu, only Latched alarms can be acknowledged. Normal alarms cannot be acknowledged.

When a Latched alarm is set up in the Pen, Alarms menu and a latched relay is configured, it will maintain its active state until the alarm has been acknowledged.

A latched alarm will continue to flash, if an alarm marker is displayed, until it is acknowledged and it is out of alarm state. See [“Alarm Markers” on page 248](#) for flash colour identification.

Ack Alarm

- **All** - Select this button to acknowledge all active latched alarms.
- **By Group** - Select this button to acknowledge latched alarms in a group of pens. Pen groups can be set up in the Pens menu
- **By Pen** - Select this option to acknowledge latched alarms for individual pens.

Configure

(Main Menu > Alarms > Configure)

This is a short-cut to change alarm levels, this will display all available pens with alarms set up. To change the configuration, select the desired pen, this will display the alarm details. Select the Edit button to change the alarm level. If the Edit button is greyed-out go to the Pens > Alarms menu and select the relevant alarm number, then activate Allow Change.

View

(Main Menu > Alarms > View)

This will display all available Pens with alarms set up. To view the configuration, select the desired pen, this will display the alarm details.

Main Menu

Screen Menu

(Main Menu > Screen)

The Screen Menu contains an Edit button to configure screen settings for standard screens or Pen/Channel Mapping for custom screens. The Replay screen is used to view previous data and has a List button to change the screen currently being displayed. There is also a Clean Screen facility, and should you require to re-Calibrate your touch screen, there is a Calibrate function and a Touch Test feature.



Edit, Screen Properties

(Main Menu > Screen > Edit)

For **Standard Screens** the menus are the same as [“Edit Layout” on page 167](#)

Edit Toolbar

For **Custom Screens** (Not available on the **eZtrend GR**).

Select the Edit button whilst displaying a Custom Screen (Layout from Screen Designer) will take you to your current process screen and displays the Edit toolbar at the top of the screen.



In Edit mode you can select items on the screen and assign channel/pen information to them and move and resize certain items on the screen.


Expert/Non Expert button

All process screen are made up from items called Widgets and Objects. A widget is a container for one or many objects. Objects display data in graphical forms such as Bar, Scale, DPM, Text. The Expert button toggles to Non-Expert mode, displayed with a red cross. Expert mode allows objects to be selected and Non-Expert allows widgets to be selected.


To select a widget the Expert button must be disabled; displaying a red cross. A widget has green resize handles that appear when it is selected. To select an object the Expert button must be active, with no red cross showing. Objects have blue resize handles when selected. When a widget or object is selected it can be moved and resized.

Main Menu

Figure 4.15 Expert and Non-Expert selection

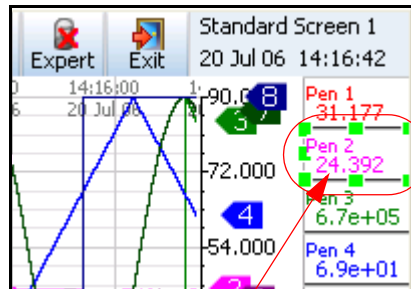

Non Expert mode selects the Widget with green resize handles (the whole DPM)

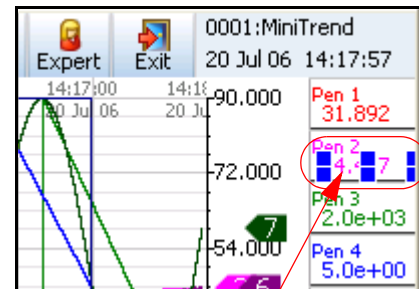

Expert mode selects the Object with blue resize handles (part of the DPM)

Map Button

Map button

The Map button, in the Screen Menu bar, enables the user to associated channels to pens so the pen being displayed on the object or widget will display the actual signal on that channel.

Channel Mapping Widgets

Channel configuration can be done per widget or per object. Configure the widget if all the objects on the widget are to be mapped to the same channel. Select the widget and go to the "Map" in the Screen menu toolbar. Widgets have green grab handles around the edge.

Pen and or channel information will appear for each object within the widget. Each object in the widget can be assigned to the same or different Pen.

For example a DPM menu will display the pen currently being used and a set of channel information associated to the text, digital and alarm marker objects within the DPM widget. Select any of the objects in the channel menu to produce the setup screen.

Channel Mapping Setup screen

In the Channel Mapping Setup screen select where the data is from:

- **Data from: Pen;** set what the object is going to be showing: Current Value, Minimum value, Maximum value, Average pen reading or Total pen reading.
- **Data from: Alarm for Pen;** set the alarm number
- **Data from: Input Channel;** set the channel number and what the object is going to be showing: Analogue, Digital, Hi Pulse or Low Pulse

Select the pen number required. On a widget you can select the **Parent**, this will assign all the objects in the selected widget to the same pen. Select objects individually on the screen to assign different pens to each object within the widget.

- **Number:** of the Pen, Alarm for Pen or Input Channel

Main Menu

“Showing” is what is displayed on the screen. The selections will change depending on what is selected in Data From.

- **Showing:** For Pen - Current Value, Minimum, Maximum, Average or Total value.
- **Showing:** For Alarm for Pen - List of available Alarms
- **Showing:** For Input Channel - Analogue, Digital, Hi Pulse or Low Pulse

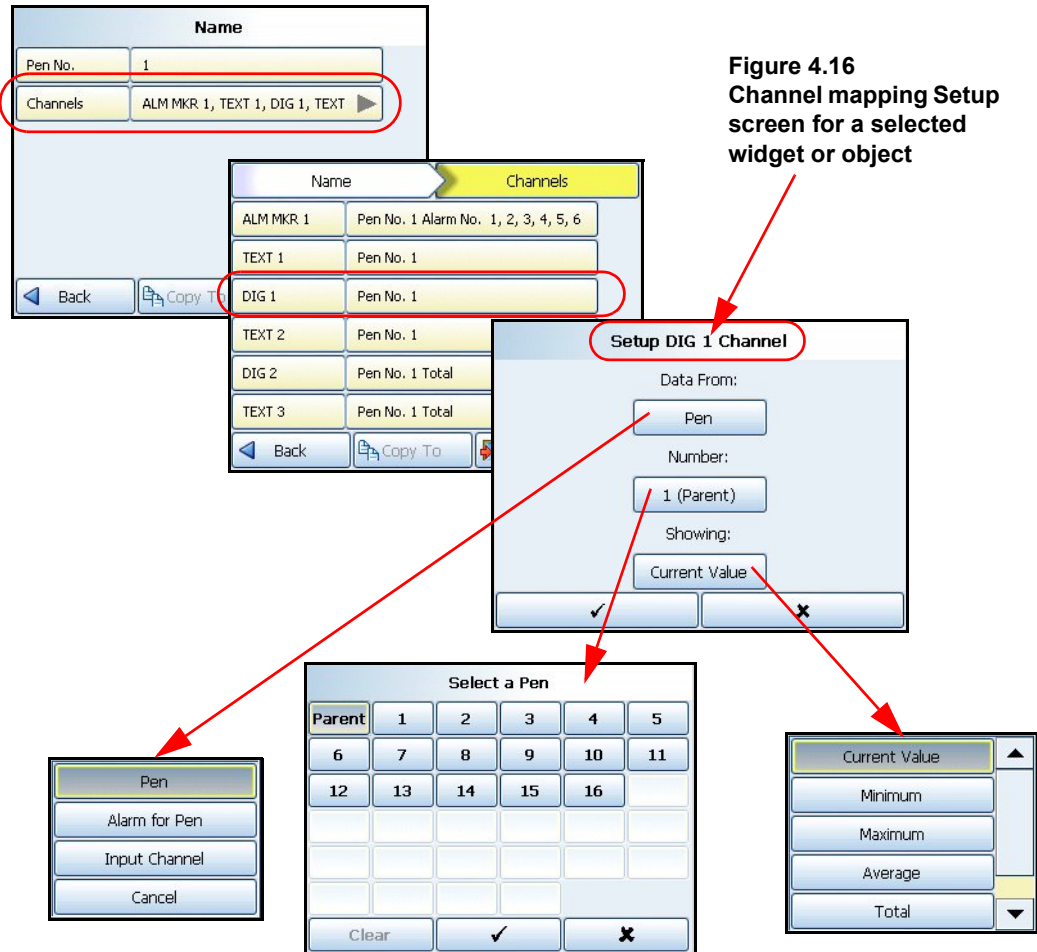


Figure 4.16
Channel mapping Setup
screen for a selected
widget or object

Channel Mapping Objects

To select an object activate the Expert button on the Screen menu bar. Objects have blue grab handles around the edge.

Select “Map” from the Screen bar to display the Setup information as described in [“Channel Mapping Setup screen” on page 187](#).

If the object is an Alarm Marker the data will always be from “Alarm for Pen”. Select the Pen number and the alarm number to be shown. Pen Pointers just need to be mapped to a Pen.

Parent Pens

This does not apply to charts as charts normally have more than one pen displayed. The parent channel is the initial channel to be configured on a widget. All objects added to a widget (except charts and pen pointers) automatically default to using the parent channel. The parent itself allows the user to quickly make all of their objects update to use the pen number indicated by the parent.

Replay

(Main Menu > Screen > Replay)

The Replay button takes you to the process screen in replay mode. The Replay screen consists of a chart and DPMs. The chart is vertical or horizontal depending on the orientation of the screen you have come from. The replay screen has DPMs that display max/min readings for each pen, these values are taken from where the cursor is positioned on the screen.

If any Hot Buttons have been configured to “Enter Replay Screen”, then when the equivalent Hot Button is selected (eg.HB1), in a Process screen, the Replay screen will be started. This does not apply to Non-Process screens. The Hot buttons will appear in the top right of the screen but will not activate on a non-process screen.

The replay screen has many features and functions so go to [“Replay” on page 240](#).

Screen List

(Main Menu > Screen > Screen List)

The Screen button produces a list of all available screens. Select to make this the current screen active on the recorder.

To add a new screen, go to Add Screen in: *Main Menu > Configure > Layout > “Edit Layout” on page 167*

Clean Screen

(Main Menu > Screen > Clean Screen)

The Clean Screen function disables the touch screen for 30 seconds so that the screen can be cleaned. A dialog box will appear informing you “You have 30 seconds to clean the screen. Press escape if you wish to close this dialog early”. The escape key option would only be available if a USB keyboard was plugged in. The box will also display a time bar to show the 30 seconds of time lapsing. [See “Cleaning Instructions” on page 311](#).

Calibrate

(Main Menu > Screen > Calibrate)

Your touch screen on the recorder is calibrated before leaving the factory. If when you use the recorder the screen does not match where you are touching it then calibration will be required. Select the Calibrate button and follow the on-screen instructions to calibrate the touch screen.

Touch Test

(Main Menu > Screen > Touch Test)

Use the Touch test feature to see if your touch screen is calibrated correctly. Select this button and touch the screen using the stylus. If the centre of the cursor follows the stylus around the screen then the touch screen is calibrated correctly. If the centre of the cursor is not where the stylus is touching the screen then go to the Calibrate button and recalibrate the screen.

Batch Setup/Batch Groups

(Main Menu > Batch)

Batch is a firmware option which can be activated from [“Credits” on page 140](#).

The Batch function allows the user to segment portions of data for further analysis. Batch mode has changed to allow for concurrent batches, where each batch is associated with a group, so all pens within Group 1 will belong to the batch that is controlled by Group 1.

Setting up a batch requires information to identify where the batch starts and stops. Batch data can also be paused, for viewing, and resumed. A batch can be aborted at any time, if so this will not register as a batch; a batch is only complete when it has been stopped.

Screens can now be set to display groups, in this mode only messages associated with that group (i.e. pens within that group, or batch messages for that group) will be shown on the chart.

If the groups in Batch Control are greyed out you need to go to the Pens menu and assign individual pens to a group. See [“Pens Menu” on page 85](#).

Up to 6 batches can be run concurrently. To start a batch enter information in all the required screens that have previously set up in the [“Batch Menu” on page 148](#). There are two options: The **Single Screen Batch** allows you to view and enter all the batch details on a single screen. If this is not selected the **Batch Wizard** will enable separate screens to enter the same information.

Select a Group #: (With Single Screen Batch enabled this information can be entered on one screen, if not the Batch Wizard will provide separate screens, see [Figure 4.17 on page 191](#) and [Figure 4.18 on page 191](#))

- **Batch Name** - Name to Identify the batch (up to 19 characters)
- **User ID** - Identification of user starting the batch. If Passwords are active on the recorder then the User ID page will be skipped for user entry and will be automatically entered. (up to 19 characters)
- **Lot.No** - Starts at 1 and increments by 1 and is user configurable
- **Desc** - Enter a description of what the batch is (up to 17 characters)
- **Comment** - Add any further comments

Lot.No, Desc and Comment are the default field names. The Description and Comment field names can be changed in [“General Batch Properties” on page 148](#). The Lot number is unique for each batch on a recorder and can be modified by the User. The Lot number can be entered by the user and starts at 1 and increments by 1 or can be selected from a predefined list. This is irrespective of whether the user is using Batch Wizard or Single Screen Batch to enter the batch details

If Allow Direct Access has been setup in the [“Batch Menu” on page 148](#) then a Barcode Reader can be used to make entries for all the items listed in this menu. See [“Barcodes for Batch” on page 193](#).

Note: For batch mode state and count in Maths scripts, see [“Maths Variable and Function Tables” on page 348](#). For batch mode state and count in embedded variables, see [“Embedded examples” on page 129](#).

Main Menu

Figure 4.17 Batch Setup screens using Batch Wizard

The figure shows two sequential screens of the Batch Wizard. The first screen, titled 'Enter Batch Name:', has a progress bar at the top with 'Name' selected. It contains a text input field with 'Batch 017' and buttons for 'Back', 'Next', 'Finish', and a help icon. The second screen shows a summary of the batch details: 'Name : Batch 017', 'User ID : 017', 'Lot No : Lot 1', 'Desc. : Start Batch 17', and an 'Enter Additional Comments (optional):' field. The progress bar at the top shows 'Comment' as the current step. It also has 'Back', 'Next', 'Finish', and help buttons.

Figure 4.18 Batch Setup screens using Single Screen Batch

The figure shows a single-screen batch setup form. At the top, there is a progress bar with five steps: 'Name', 'User ID', 'Lot No.', 'Desc.', and 'Comment'. The 'Name' step is currently selected. Below the progress bar, there are five input fields, each with a dropdown arrow on the right. The values entered are: 'batch 017' for Name, '017' for User ID, '3' for Lot No., 'start batch 017' for Desc., and 'test' for Comment. At the bottom of the form, there are three buttons: 'Back', 'Finish', and a help icon.

Press the Finish button if all the Batch details are correct and you wish to start the batch immediately. Use the Back button to return to the Batch setup and not start the batch.

Main Menu



Batch Mark on Chart

A Batch marker will be placed on all process screens that have a chart displayed.


The next time you press the Batch button the screen will have changed to give you the Batch Controls. The batch control buttons enable the user to Stop, Pause (Resume), Abort or add a Comment to the current batch that has been started.

A Batch is complete when it has been stopped. When a batch is stopped //E appears as a mark on chart on the screen. If the batch is aborted it is not a complete batch and will be marked on the chart with an //A to show it has been aborted.

If the recorder is not logging, starting a batch will automatically start the logging. However stopping the batch will not stop the logging.

If a batch is Paused //P will appear as a mark on chart and the Pause button on the Batch Control menu is replaced with a Resume button. When Resume is selected the screen will be marked with //R.

Figure 4.19 Batch Control screen and Messages screen

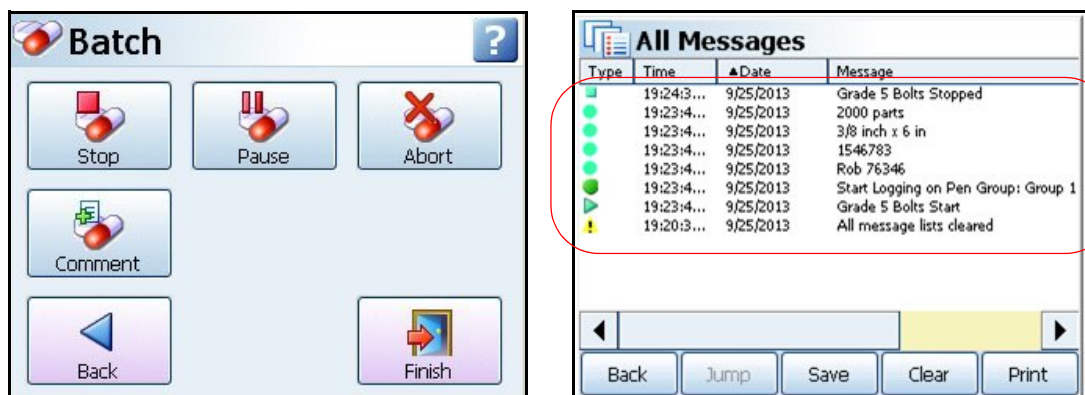

Main Menu

When the batch is stopped the Batch Control screen reverts back to the Batch Setup screen so the user can start a new batch. *[“Batch Setup screens using Batch Wizard” on page 191.](#)*

As well as a Mark on Chart for every command applied to the batch you can check the Messages screen for details of the batch activity.

Batch Commands

- //S = Start Batch
- //E = End or Stop Batch, this will complete the batch run
- //P = Pause the batch in progress
- //R = Resume batch. Only available when a batch has been paused
- //A = Abort batch. If the batch is aborted it is incomplete and the batch will be cancelled
- //I = User ID. Displays the user entered ID or User ID entered automatically by the Password function.
- //D = Description. User entered description of the batch in progress
- //L = Lot No. User entered Lot number for the batch in progress
- //C = Comment. Extra comment field of additional information for the batch in progress

Barcodes for Batch

Batch markers can be created using independent barcode software. The barcodes can then be read using a barcode wand or reader. Any type of Batch marker can be encoded into a barcode using the same control characters used to build up a batch marker.



This example shows a barcode encoded to start a batch:

//S = Start Batch

216 = Batch Name

//I = User ID is Fred

- A barcode with up to 25 characters (including spaces) can be read into the recorder using a USB ASCII barcode reader.

Main Menu

Recording Menu

(Main Menu > Recording)

This will display the current recording status of the recorder and allow recording control.

Recording Methodology

The recorder uses a new and powerful method for recording. Data is acquired, at pen specific rates, processed and stored in the large on-board Flash memory. This memory operates in a cycle mode such that the oldest data is over-written by the newest.

When data is exported from the recorder this does not delete that data from the recorder but retains it for further or future downloads. With this method the user can export multiple copies of the same encoded data, giving extreme security.



Storage Media Format

New SD cards and USB storage keys are pre-formatted for use in the recorder and PC. If you have a used SD card or USB key we recommend you erase it. Formatting of SD cards and USB keys can be done through your PC. The formatting types accepted by the recorder are FAT, FAT16, TFAT and FAT32. SD card is available as a credit option for the **eZtrend GR**.

Start / Stop Recording

The Recording screen will allow the user to manually Start and Stop recording. Select either the start or stop buttons to activate the function for All pens, a Group of pens (if a group is defined) or By Pen to identify an individual pen(s).

- **Recording:** Displays the current pen recording status and the number of pens currently recording.
- **Export Required In:** "XXd:XXh:XXm:XXs". This is the amount of days, hours, minutes and seconds left until the internal memory buffer starts to be over-written. Exporting does not remove the data from the recorder but when the internal memory buffer is full the latest data will start to over-write the oldest data. Available as a Maths expression, giving the hours until recycling starts, see ["Maths Variable and Function Tables" on page 348](#).
- **Schedule:** Displays the frequency of a scheduled export (only if a scheduled export has been set up, see ["Edit Recording" on page 158](#)).

Main Menu

- **Media Full In:** Displays how long before the external media, selected for the scheduled export, is full.
- **FTP Export required:** "XXd:XXh:XXm:XXs"- This is the amount of days, hours, minutes and seconds of safe recording time available. An FTP export must be completed before the FTP buffer is full and the latest data will start to over-write the oldest data. Available as a Maths expression, giving the hours until recycling starts, see "[Maths Variable and Function Tables](#)" on page 348.
- **Pre-Trigger Status** - This will show if the pre-trigger system is active along with its current state. The dialog automatically refreshes periodically.

Export Now

Export Now will transfer data from the internal memory to the external media such as SD cards, USB key or Network Share (NAS). Exporting does not remove the data from the recorder but when the internal memory buffer is full the latest data will start to over-write the oldest data.

The Network Share option (NAS) can be used for loading and saving of layout (.lay) and/or setup files (.set), saving (exporting) reports, any messages (Diagnostic, system etc), loading sound files from this network share to recorder. This can also be used to print to file and this file can be saved to this network shared folder.

NAS feature needs active network connectivity all the time to effective operation. Any issues with network can lead to missing-data.


Select the Export Now button to go to a sub-menu of available external storage devices.

Buttons become active when a device is fitted. Once fitted the size of the device memory and the amount of available space is displayed.

Select the desired device to export to and this will display two options New and All. The All function will export all the data in the recorder's memory to the external device port. The New function will just export any new data since the last export was made to this port. If the scheduled export is enabled for a particular drive, then only the New option is selectable, not the All option.

If an Export Now is requested within 5 seconds of a Scheduled export being activated, the manual export will not occur.

Main Menu

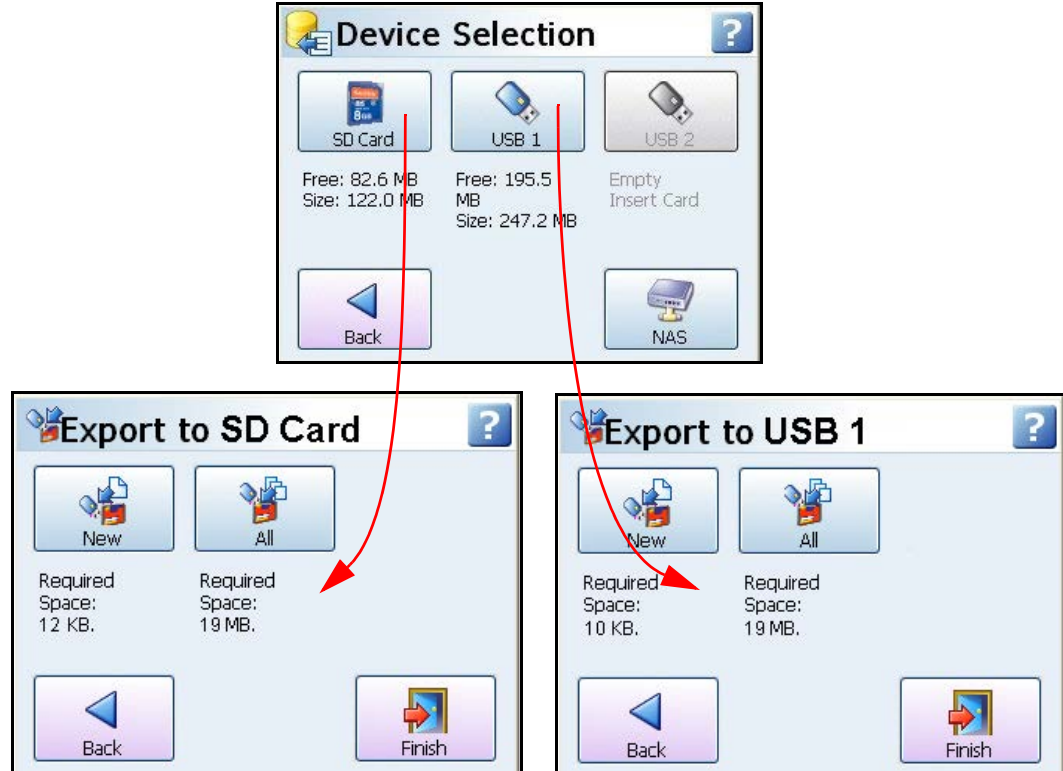

USB 2 screen is the same as USB 1

Device Selection

If the Device Selection buttons are greyed-out you will need to insert a SD card or USB key into the port or select Network Share folder (NAS). After a few seconds the button becomes active. SD card is available as a credit option for the **eZtrend GR**.

USB1 is the first USB device to be fitted and USB2 is the second one fitted, front or rear of the recorder. If the recorder is powered off and on again the USB keys will have to be refitted in order to know which is 1 and which is 2.

Export “busy” light

When data is about to be exported to a device the transfer busy light starts flashing. The flashing LED is a warning that the recorder is about to export to media. DO NOT remove the media whilst the LED is flashing. After a few seconds the flashing LED goes to “Full On” LED. Whilst the LED is fully on data is being written to the media. DO NOT remove the media whilst the LED is on. When the transfer is complete, the LED goes off and the media may now be removed.

Main Menu

Messages Menu

(Main Menu > Messages)

The messages screen will display message from many different areas. Specific types of messages have been put into categories or All messages can be viewed. The number of new messages to view are displayed on each button as a number in brackets after the label.



Message Types

- **All** - Select this to view a list of All types of messages. The messages screen will hold the latest 200 messages.
- **Alarms** - This is a list of active alarms that have occurred. The screen will display the Type of alarm, the Time and Date that the activity occurred and Message details of the activity.
- **System** - This will list a history of system messages. The screen will display the Type of messages and warnings and errors that have been generated by the unit. The screen will also display the Time and Date that the activity occurred and the Message details.
- **Diagnostics** - Examine a complete list of the recorder's functionality and processes since it was last powered up. The screen will display Type of message, Time and Date that the activity occurred and the Message details.
- **Security** - Audit trail of entries made to secure areas such as Password setup, including, Log on, Log off, what area has been accessed, time/date and the user name.
- **Users** - These are messages that have been entered by the user by entering a Mark on Chart. The screen will display the Type of message, Time and Date that the activity occurred and the Message details.

Printing Screens

All the Messages screens have a Print button, to execute this, the printer must first be configured in ["Network Admin" on page 98](#) and in the ["Printer Menu" on page 151](#). For details on suitable printer types see ["Print Support \(USB 2.0 or Network\)" on page 45](#).

The Printer function is a firmware option that is selectable from the Factory menu > ["Credits" on page 140](#).


Main Menu

Saving Screens

All Message screens can be saved as portable .rtf files onto removable media. These can be transferred to another location and kept for records or sent via email for troubleshooting and maintenance issues.

Message List

All messages will conform to the following format: Type, Time, Date and Format.

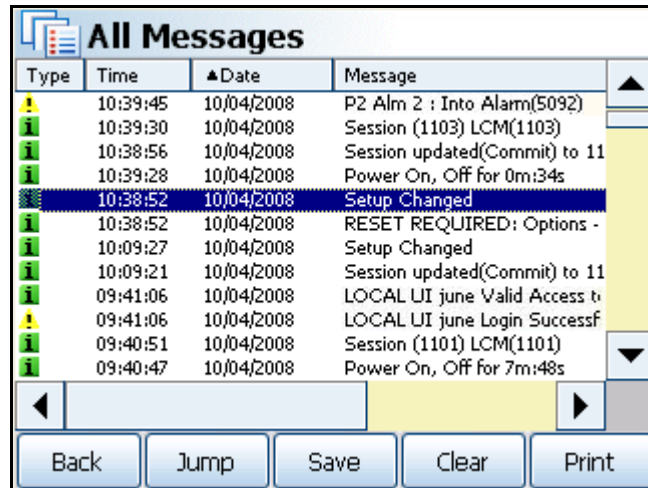

Type	Time	▲Date	Message
!	10:39:45	10/04/2008	P2 Alm 2 : Into Alarm(5092)
i	10:39:30	10/04/2008	Session (1103) LCM(1103)
i	10:38:56	10/04/2008	Session updated(Commit) to 11
i	10:39:28	10/04/2008	Power On, Off for 0m:34s
i	10:38:52	10/04/2008	Setup Changed
i	10:38:52	10/04/2008	RESET REQUIRED: Options -
i	10:09:27	10/04/2008	Setup Changed
i	10:09:21	10/04/2008	Session updated(Commit) to 11
i	09:41:06	10/04/2008	LOCAL UI June Valid Access to
!	09:41:06	10/04/2008	LOCAL UI June Login Successf
i	09:40:51	10/04/2008	Session (1101) LCM(1101)
i	09:40:47	10/04/2008	Power On, Off for 7m:48s

Back Jump Save Clear Print

The messages screen will hold the latest 200 messages.

Message button bar

The message button bar runs along the bottom of all messages screens. The buttons are:



















- **Back** - Takes you back to the main Messages screen.
- **Jump** - Select an item in any of the message lists and press the Jump button. This will take you to the exact time of the occurrence on the replay screen.
[See "Replay" on page 240.](#) If the message requested is older than the oldest chart time/data available a message box will appear and jump you to the oldest chart time and date available.
- **Save** - Save the message screen to removable media
- **Clear** - This will delete all the messages for the particular message screen you are in.
- **Print** - Select this and choose to print All the Messages in the list or the Current page that will fill an A4 or Letter size page.

Refer to Application Note 43-TV-07-32 on your DVD or website for a list of possible error messages.

Main Menu

Message Format

Table 4.10 : Message Types


Icon	Type	Description
	Alarm	Red Bell = in Alarm and not acknowledged
	Alarm	Green Bell = out of alarm
	Alarm	Green Bell / Black outline = out of alarm and acknowledged
	Alarm	Green/Yellow bell = out Alarm not acknowledged
	Alarm	Red/Green bell = in Alarm and acknowledged
	System/Diagnostics	Information, General (e.g. System check)
	System/Diagnostics	Warning! (e.g. media error, FTP failure, Timeouts)
	System/Diagnostics	Error (e.g. Password failure, power failure, no media)
	Security	Security audit trail
	Security	Log In - open padlock
	Security	Log Out - closed padlock
	Security	Access Failure - No entry sign
	Security	Thermocouple Failure
	User	Mark on Chart and Batch
	User	Start - Logging or Totals
	User	Stop - Logging or Totals
	User	Pause - Logging or Totals
	User	Reset - Logging or Totals

Main Menu

Process Menu

(Main Menu > Process)

If Max/Min, Totals and Counters can be controlled from this screen.

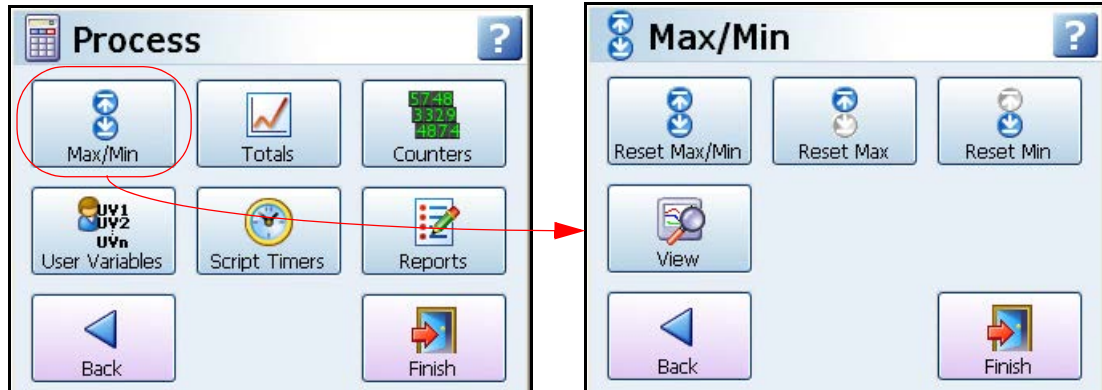

Controls for any process in use:

- **Max/Min** - Reset Max/Min, Maximum or Minimum values by categories;
- **Totals** - Start, Stop, Reset or View Totals by categories
- **Counters** - View and Reset counters by type (Firmware option)
- **User Variables** - Modify and View User variables that have been set up in Maths and Scripting. [See “User Variables” on page 202.](#)
- **Script Timers** - Script timers provide 20 independent timers to be used as desired. [See “Script Timers” on page 202.](#)
- **Reports** - Reports can be generated manually or on a periodical basis using event system. [See “Reports \(Process\)” on page 202.](#)

Note on Groups

Groups of pens need to be set up to use this feature, see [“Pens Menu” on page 85](#)

Max/Min

(Main Menu > Process > Max/Min)

Reset Max/Min, Reset Max or Reset Min values by categories; All, By Groups of pens or by individual pens. Use the **View** button to just display the Max/Min values

- **All** - Select this to reset all values.
- **By Groups** - If Groups of pens have been set up this can be used to reset the max/min values for particular groups of pens. To set up Groups see [“Pens Menu” on page 85](#)
- **By Pen** - Select this to reset max/min values for individual pens.

Totals

(Main Menu > Process > Totals)

Select a button to **Start, Stop, Reset** and **View** Totals. These can be controlled by the following categories:


- **All** - Select this to start, stop or reset all Totals.

Main Menu

- **By Group** - If Groups of pens have been set up this can be used to start, stop or reset particular groups of pens. To set up Groups see [“Pens Menu” on page 85](#)
- **By Pen** - Select this to start, stop or reset individual pens.
- **View** - Use the View button to just display the Totals values for each totalising pen.

Counters (Process)

(Main Menu > Process > Counters)

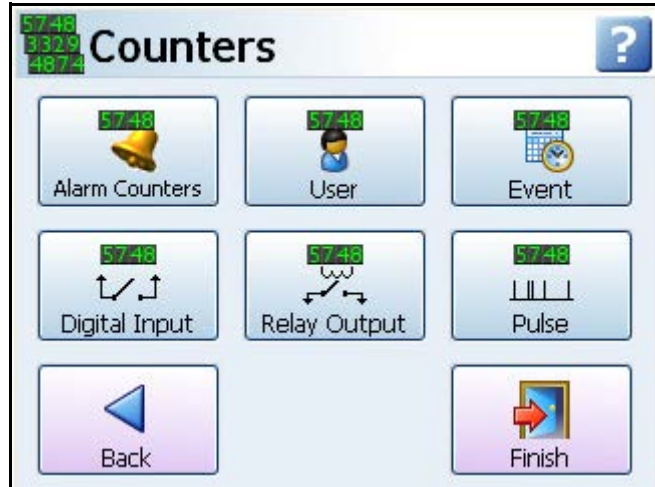

Select the Counters button to **View** and **Reset** counters. Counters have been split into the following types:

- **Alarm Counters** – Reset will give you the option of resetting All alarms, by pen Groups or by individual Pens. View will display all Pens with active alarms. Alarms will be counted providing they are enabled. The count will increase when the pen goes into an alarm state and increase again when the pen goes out of an alarm state.
- **User Counters** – Reset All will do exactly that; reset all of the User Counters. Reset Single will allow you to select which User Counters you wish to reset. View will display all the User Counters that have been set up.
- **Event Counters** - Reset All will reset all of the Event Counters. Reset Single will allow you to select which Event Counters you wish to reset. View will display all the Event Counters that have been set up.
- **Digital Input Counters** - Reset All will reset all of the Digital Input Counters. Reset Single will allow you to select which Digital Input Counters you wish to reset. View will display all the Digital Input Counters that have been set up.
- **Relay Output Counters** - Reset All will reset all of the Relay Output Counters. Reset Single will allow you to select which Relay Output Counters you wish to reset. View will display all the Relay Output Counters that have been set up.
- **Pulse Counters** - Reset All will reset all of the Pulse Counters. Reset Single will allow you to select which Pulse Counters you wish to reset. View will display all the Pulse Counters that have been set up.

Main Menu

User Variables

(Main Menu > Process > User Variables)

User variables provide the user the ability to set values for up to 32 variables to be used within the maths and script.

- **Modify** - allows the user to set and edit the variables.
- **View** - the user can view the variables

The User variable function allows a system to be setup where values can be altered to effect calculations without having to change the configuration. The variables can be used within the Maths and script using UV1 to UV32 and can also be set within the maths using the function UVSET[x,y] where x = the user variable number 1 to 32 and y is the value. The User variables are also non-volatile. See [“Appendix B: Maths Expressions” on page 347](#).

Script Timers

(Main Menu > Process > Script Timers)

Script timers provide 20 independent timers to be used as desired. Previously control and access of script timers was limited to maths functions for use in script but this has now been extended allowing the timers to be controlled using the event system.

Select a Timer that can be stopped, started and reset.

Access to timers via the script is still available in [“Maths Variable and Function Tables” on page 348](#).

Reports (Process)

(Main Menu > Process > Reports)

Reports can be generated manually or on a periodical basis using event system to show daily/weeks/monthly totals, max mins, averages etc., the reports can be printed, e-mailed as attachments or exported to external media. The reports will be in RTF format for use in MS Word or other compatible word processors.

Before a report can be run the report details must be entered in [“Reports Menu” on page 163](#).

To trigger a report using the event system see [“Event Effects” on page 128](#).



- **Run** - This will list the reports that are available. Before a report can be run the report details must be entered in [“Reports Menu” on page 163](#). Once a report is selected from the list then report is immediately created.

Main Menu

- **View Archive** - This will produce an archive list of all reports that have been run. Select a report on the screen and press the display button. From this screen you have the option to Print or Export the report. The archive will only hold the last 10 reports, not more. The printer settings must be configured in "[Printer Menu](#)" on page 151. To export the report to a USB key, SD card or Network Share folder (NAS), ensure the media is fitted to the recorder and there is enough memory available.

Pen	Value
Temp	21.835
Pen 3	5.0571
Pen 5	18.333

System Max/Mins Information	
Pen	Max
Temp	24.886 deg C

Back Export Print

- **Reset All** - This action will reset all hourly, daily, weekly and monthly max/mins, totals and averages. System max/mins and totals shall remain unaffected. A warning dialog will appear to ask if you are sure you wish to continue.

Figure 4.1 Email Report example

Recorder Name: QIC 03
Recorder Serial Number: 100076
Recorder ID: 10
Report name: Report 1
Report generated on: Tue Jan 29 2008 09:41:26

Pen Overview

Pen	Value
TCT	8.3737 deg C
TCJ	19.189 deg C
Pen 7	Invalid

Hourly Max/Mins between 22h:00m:00s and 22h:59m:59s 24/01/2008

Pen	Max	Min
TCT	3.66 deg C @ 22h:07m:55s	2.56 deg C @ 22h:26m:42s
TCJ	17.99 deg C @ 22h:04m:04s	17.11 deg C @ 22h:34m:55s

Hourly Averages between 22h:00m:00s and 22h:59m:59s 24/01/2008

Pen	Average
TCT	3.10 deg C
TCJ	17.61 deg C

Reviewed By:..... Date:..... Comment:.....
Checked By:..... Date:..... Comment:.....

Page 1


Main Menu

Status Menu

(Main Menu > Status)

Use the Status menus to easily check on the current configuration of the recorder. A number of status information screens are available to the user, these will provide information for reporting and diagnostic purposes. All Status screens can be saved to removable media or printed.

For AMS2750 mode a new TC Usage button is displayed middle right on the menu screen. Please refer to [“TUS Sensor Usage Tracking \(AMS2750\)” on page 418](#).

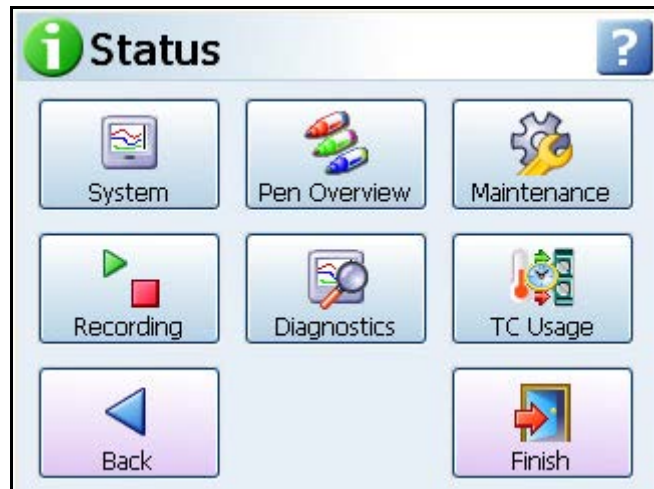

The following Status screens are available

- **System** - Contains general information about the recorder setup such as Device information, software and firmware versions and the recorder's IP address. Plus a list of Firmware options and I/O cards in the recorder, [See “System” on page 205](#).
- **Pen Overview** - Each pen is displayed with full configuration details, including: Pen, Value, Name, Maths, Scale, In Alarm, Pen Rate, Alarm, Total, and Group. [See “Pen Overview” on page 207](#).
- **Maintenance** - The recorder keeps track of important “life actions” for improved diagnostics and preventative maintenance notification. Health Watch/Maintenance is available as a firmware option. [See “Maintenance” on page 208](#).
- **Recording** - Shows the current logging status of all pens within the system: Pen, Value, Recording, Log Rate, Alarm Rate and Group. [See “Recording” on page 209](#).
- **Diagnostics** - Complete diagnostics is shown for each of the following categories: Hardware (including Analogue In, Analogue Out, Digital IO and Pulse Inputs), Events, Comms and Media. This is an option and requires firmware credits to be activated. [See “Diagnostics” on page 210](#).
- **TC Usage** - For AMS2750 TUS and Process modes only. Please refer to [“TUS Sensor Usage Tracking \(AMS2750\)” on page 418](#)

Saving Screens

All Status screens can be saved as portable .rtf files onto removable media. These can be transferred to another location and kept for records or sent via email for troubleshooting and maintenance issues.

Main Menu

Printing Screens

All the Status screens have a Print button, to execute this, the printer must first be configured in [“Network Admin” on page 98](#) and in the [“Printer Menu” on page 151](#). For details on suitable printer types see [“Print Support \(USB 2.0 or Network\)” on page 45](#).

The Print function is a firmware option that is selectable from the Factory menu > [“Credits” on page 140](#).

System

(Main Menu > Status > System)

The System status menu is divided into three more sub sections: General, Options and IO Cards. Each one will display the current status of the recorder for each category.

General

(Main Menu > Status > System > General)

Displays the version status for the different types of firmware, hardware and current recorder information.

Table 4.11 : Example: System Version Status

Options	Version
ID	0001
Name	Minitrend GR
Serial No.	*****
Processor	***GHz
Firmware	211.1
Build Number	25 Beta / Production
Firmware Date	10:42:37 Nov 26 2019
Bridge Firmware	**
Platform	***
Boot Loader	***
Firmware Hash	4ba06*****
Mac address	00-d0-6e-**-**-**
IP Address	160.221.***.***
Certificate Type	Default, Issuer: HoneywellTV2
Certificate Status	Valid
Email Root Certificate	Installed, Name:DigiCert SHA2 High Assura
TLS Version	TLS 1.2
Front USB	Host Mode
Internal Mem Id -	This number is made up from the size of the memory card and what type of format it is. Eg 256T16 = 256MB size formatted to TFAT16
*Database Size	**.*Mb
SD Card	*.*MB/***.*MB
USB 1	***.*MB/****.*MB
USB 2	Empty
Password Node Type	Standalone

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media. *See [“Database Size Management” on page 272](#).

Main Menu

Options

(Main Menu > Status > System > Options)

Displays a list of firmware options available and which ones are enabled.

For more information see [See “Section 7: Firmware Options” on page 253.](#)

Table 4.12 :

Options	Credits	Enabled
Full Math	4	✓ or ✕
Scripting (+ Full Maths) (Note 2)	6	✓ or ✕
Events	6	✓ or ✕
Fast Scan (Note 2)	5	✓ or ✕
Totals	4	✓ or ✕
Custom Screens (Note 2)	4	✓ or ✕
Reports	3	✓ or ✕
AMS2750 Process (Note 3)	5	✓ or ✕
Maintenance	2	✓ or ✕
Printing	2	✓ or ✕
AMS2750 TUS (Note 3)	10	✓ or ✕
Batch	5	✓ or ✕
Counters	3	✓ or ✕
Modbus Master	10	✓ or ✕
Remote View	3	✓ or ✕
Email	3	✓ or ✕
Pwd Net Sync	5	✓ or ✕
Secure Comms	3	✓ or ✕
Extra Pens	2 (4 pens)	Total Pens
Hardware Lock	2	✓ or ✕
Ext. SD	5	✓ or ✕
Password CFR (Note 1)	NA	✓ or ✕
Total Credits	no. used/no. available	NA

(Note 1) Password CFR - (ESS - Extended Security System). This will only appear in the list if this feature is enabled in the recorder. It cannot be enabled by the firmware credit system - contact **Honeywell** for details.

(Note 2) not available for the **eZtrend GR**.

(Note 3) AMS2750 Process and AMS2750 TUS credits cannot be enabled at the same time

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Main Menu

IO Cards

(Main Menu > Status > System > IO Cards)

This will display the Slot position of each card in the recorder. The Card Type is identified as Analogue I/P, Alarm/Digital I/O, Analogue O/P or Pulse Input. The number of Channels on each card e.g. Digital I/O 1-16. The Firmware Version of the card is displayed and the Board Revision.

Table 4.13 : Example of IO Card Status for a **Minitrend GR**

Slot	Card Type	Channels	FW Version	Board Revision
A	Analogue I/P	1-8	A*-00*	0
B	Pulse	9-12	A*-00*	1
G	Digital I/O	1-16	A*-00*	0

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Pen Overview

(Main Menu > Status > Pen Overview)

Each pen is displayed with full configuration details.

- **Pen** - Displays the pen number and ticked if it is enabled
- **Value** - Displays the current reading for this pen
- **Name** - Pen name or number
- **Maths** - Displays any Maths calculation applied to this pen or the Analogue Input channel for this pen. Summarised to M for any Maths expressions.
- **Scale** - Displays the High and Low limits of the scale range for this pen
- **In Alarm** - Displays the current status of the alarm, tick = active and a cross = inactive.
- **Pen Rate** - This displays the fastest of all dependencies
- **Alarm** - Displays how many alarms are enabled on this pen
- **Total** - This will be ticked if a totaliser has been enabled on this pen
- **Group** - Displays the group number if this pen has been allocated to a group.

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.


Main Menu

Maintenance

(Main Menu > Status > Maintenance)

The recorder keeps track of important “life actions” for improved diagnostics and preventative maintenance notification.

The Maintenance button will become active when Maintenance is selected as a firmware option. To enable this go to “[Options](#)” on page 206.

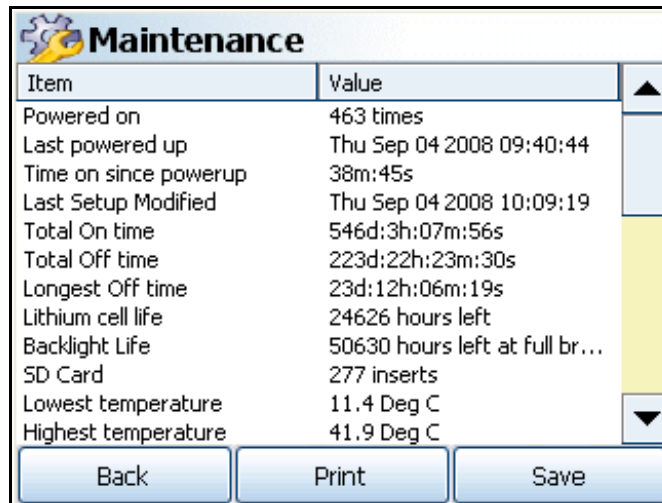

Item	Value
Powered on	463 times
Last powered up	Thu Sep 04 2008 09:40:44
Time on since powerup	38m:45s
Last Setup Modified	Thu Sep 04 2008 10:09:19
Total On time	546d:3h:07m:56s
Total Off time	223d:22h:23m:30s
Longest Off time	23d:12h:06m:19s
Lithium cell life	24626 hours left
Backlight Life	50630 hours left at full br...
SD Card	277 inserts
Lowest temperature	11.4 Deg C
Highest temperature	41.9 Deg C

Back Print Save

Once enabled this screen will keep the following information:

- **Powered on** - How many times the recorder has had the power turned on
- **Last Power up** - The last time the recorder had been turned on
- **Time On since power up** - The amount of time since the recorder was last turned on
- **Last Setup Modified** - displays the last Day, Month and Time the setup was last modified.
- **Total On time** - How much time the recorder has had the power turned on
- **Total Off time** - How much time the recorder has had the power turned off
- **Longest Off time** - How long was the longest time period the recorder was powered off
- **Lithium cell life** - Approximately how much battery time is left
- **Backlight Life** - Approximately how many hours of Back light time left
- **SD Card** - How many times the SD card has been inserted. SD card is available as a credit option for the **eZtrend GR**
- **Lowest temperature** - Displays the lowest ambient temperature detected so far
- **Highest temperature** - Displays the highest ambient temperature detected so far
- **AI last factory cal *** - When the last factory calibration was made to this Analogue Input card. Eg. in card slot A
- **AI last user cal **:*** - When the last user calibration was made to this Analogue Input card. Eg in slot position A, input 1. All channels will be listed per channel.

Main Menu

Item	Value
AI last user cal A:7	Fri Mar 07 2007 13:50:25
AI last user cal A:8	Fri Mar 07 2007 13:50:25
Relay 1 cycle(s)	0 cycle(s)
Relay 2 cycle(s)	0 cycle(s)
Relay 3 cycle(s)	0 cycle(s)
Relay 4 cycle(s)	0 cycle(s)
Relay 5 cycle(s)	0 cycle(s)
Relay 6 cycle(s)	0 cycle(s)
Relay 7 cycle(s)	0 cycle(s)
Relay 8 cycle(s)	0 cycle(s)
Fixed	0 cycle(s)

Back Print Save

- **Relay * cycle(s)** - Displays the amount of relay cycles per relay listed.
- **Fixed** - reports common relay output cycles

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Recording

(Main Menu > Status > Recording)

Pen	Value	Recording	Log Rate	Alarm Rate	Pre-Trig	Group
1 ✓	14.46 %	Fuzzy	10Hz ✓*	2Hz ✗	✓	No Group
2 ✓	25.36 %	Continuous Sample	10Hz ✓*	2Hz ✗	✓	No Group
3 ✓	49.92 %	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group
4 ✓	Overrange	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group
5 ✓	Overrange	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group
6 ✓	Overrange	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group
7 ✓	49.92 %	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group
8 ✓	49.92 %	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group
9 ✓	3.48 %	Continuous Sample	10Hz ✓*	2Hz ✗	✓	No Group
10 ✓	70.96 %	Continuous Sample	10Hz ✓*	2Hz ✗	✗	No Group

Back Print Save

Shows the current logging status of all pens within the system:

- **Pen** - Displays the Pen number and will display a tick when recording and a cross when recording has stopped.
- **Value** - Displays the current pen value
- **Recording** - Displays either Continuous or Fuzzy logging

Main Menu

- **Log Rate** - Displays the Log rate set, in Hertz. A tick denotes if it is enabled and a star will indicate the current log rate
- **Alarm Rate** - Displays the alarm rate, in Hertz, if this has been set up to change when the pen goes into an active alarm state. A tick denotes if it is enabled and a star will indicate the current log rate
- **Pre-Trigger** - Each Pen will display it's pre-trigger enabled status from within the Pen logging status display.
- **Group** - Displays the name of the group that this pen has been assigned to.


Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Diagnostics

(Main Menu > Status > Diagnostics)

The Diagnostics button will become active when Maintenance is selected as a firmware option. To enable this go to [“Options” on page 206](#).

- **Hardware** - [“Hardware Status” on page 211](#).
- **Events** - [“Events Status” on page 213](#).
- **Comms** - [See “Comms Status” on page 214](#).
- **Media** - [See “Media Status” on page 216](#).
- **RDL (Recorder Diagnostic Logs)** - [“RDL Status” on page 216](#)

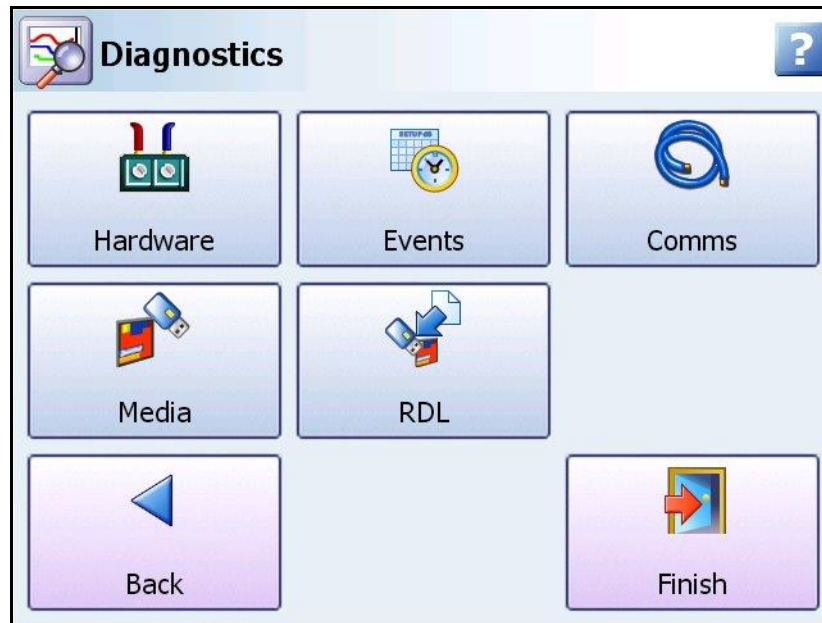

Main Menu

Hardware Status

(Main Menu > Status > Diagnostics > Hardware)

Complete diagnostics are shown for each of the following categories:

- **Analogue In Status** - See [“Analogue In Status” on page 211.](#)
- **Analogue Out Status**- See [“Analogue Out Status” on page 212.](#)
- **Alarm/Digital IO Status** - See [“Alarm/Digital IO Status” on page 212.](#)
- **Pulse Input Status** - See [“Pulse Inputs Status” on page 213.](#)

Analogue In Status

(Main Menu > Status > Diagnostics > Hardware > Analogue In)

Analogue Input Status:								
Channel	Input	Range	Cal	Sample Rate	Sqrt	Sensor comp	Pen	CJC
A:1 (1) ✓	-0.71 mV	Type J ($\pm 50\text{mV}$)	Factory	2Hz (500ms)	✗	None	1	28...
A:2 (2) ✓	0.01 mV	Type T ($\pm 25\text{mV}$)	Factory	2Hz (500ms)	✗	Dual	2	28...
A:3 (3) ✓	-0.02 V	$\pm 12\text{V}$	Factory	2Hz (500ms)	✗	Dual	3	-
A:4 (4) ✓	-0.02 V	$\pm 12\text{V}$	Factory	2Hz (500ms)	✗	None	4	-
A:5 (5) ✓	-0.02 V	$\pm 12\text{V}$	Factory	2Hz (500ms)	✗	None	5	-
A:6 (6) ✓	-0.02 V	$\pm 12\text{V}$	Factory	2Hz (500ms)	✗	None	6	-
A:7 (7) ✓	-0.02 V	$\pm 12\text{V}$	Factory	2Hz (500ms)	✗	None	7	-
A:8 (8) ✓	-0.02 V	$\pm 12\text{V}$	Factory	2Hz (500ms)	✗	None	8	-

- **Channel** - Displays the Slot position e.g. A, B, or C, D, E, F, the Analogue Input number and the system channel position. This will show a tick if this channel is enabled.
- **Input** - Displays the current Analogue Input reading for this channel*. See [“Thermocouple Active Burnout Status” on page 212.](#)
- **Range** - Displays the current Range Type set for this channel, e.g. $\pm 12\text{V}$
- **Calibration** - Displays the type of calibration for this channel either Factory or User Cal
- **Sample Rate** - Displays the current Sample rate for this channel.
- **SQRT** - If ticked the square root extract is enabled on this channel to linearise a non-linear input.
- **Sensor Comp** - This will display if any type of sensor compensation applied to this channel.
- **Pen** - Displays which Pen scale is being used to display this analogue input.
- **CJC** - Only for Thermocouple inputs. Displays the final adjusted value of a Cold Junction Calibration on this channel in degrees C.

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

*Displayed in the Input column may also be the Thermocouple Active burnout status

Main Menu

Table 4.14 : Thermocouple Active Burnout Status

Label	Descriptions
Disabled	Active burnout disabled
Normal	Active burnout enabled, input OK
Degraded	Thermocouple degraded (difference measurement: 10 Ω to 99 Ω increase**)
Failing	Thermocouple Failing (difference measurement: 100 Ω to 200 Ω increase**)
Failing	Thermocouple Failing (absolute measurement: over 230 Ω increase**)
Almost Failed	Thermocouple Almost Failed (difference measurement: over 200 Ω , not failed)
Almost Failed	Thermocouple Almost Failed (absolute measurement: 330 Ω to 2k Ω)
Open Circuit	Thermocouple Failed, No data on passive channel, Thermocouple Failed, but no error on passive thermocouple channel Thermocouple Failed, also failed status on passive channel
Short Circuit	Possible thermocouple wiring short circuit detected (significant reduction in Ω)

**any increase is measured from the level when the recorder is first powered up.

Analogue Out Status

(Main Menu > Status > Diagnostics > Hardware > Analogue Out))

Not available for the **eZtrend GR**.

- **Channel** - Displays the Slot position, e.g. B, E or F, the Analogue Output number and the system channel position. This will show a tick if this channel is enabled.
- **TX Pen** - Displays which pen is transmitting the signal
- **Range** - Displays the Output range set. A tick here will indicate this is over-range.
- **Output** - Displays the current Analogue Output reading for this channel.

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Alarm/Digital IO Status

(Main Menu > Status > Diagnostics > Digital IO)

- **Channel** - Displays the Slot position, e.g. G, H or I, the Digital IO number and the system channel position. This will show a tick if this channel is enabled. Fixed refers to the common relay output on the power board (24V relay)
- **Input/Output/Pulse** - Displays what activity is on this channel, Input, Output or Pulse Input.
- **Alarm** - Displays the Pen number and the Alarm number that activates the digital output when the alarm is active. The Alarm has to be set to Relay out.
- **Status** - Displays the current state of the digital input on this channel or pulsed if Pulse Out is selected. The relay is displayed as open or closed.
- **Counters** - Displays the counter number when active.
- **Duration** - Displays the Output Pulse duration set.

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Main Menu

Pulse Inputs Status

(Main Menu > Status > Diagnostics > Hardware > Pulse Inputs)


Not available for the **eZtrend GR**.

- **Channel** - Displays the Slot position, e.g. A, B, C, D, E or F, the Pulse Input number and the system channel position. This will show a tick if this channel is enabled.-
- **Frequency/Count** - Displays the input mode, fixed as Frequency (in Hertz)
- **Input** - Displays the current Pulse Input reading for this channel (in Hertz)

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Events Status

(Main Menu > Status > Diagnostics > Events)

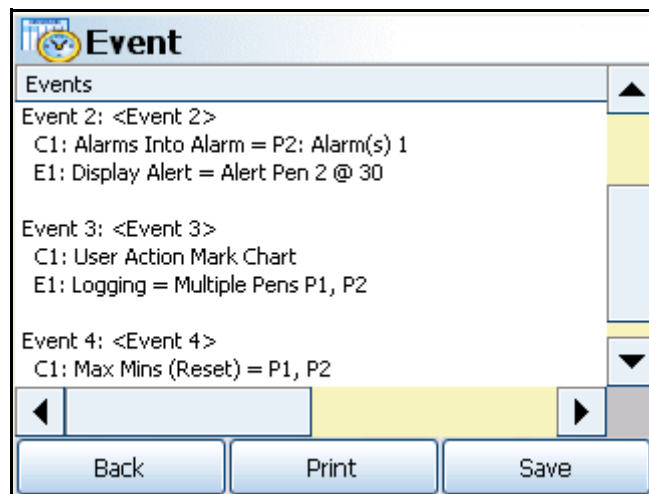

This status screen displays all the currently enabled Events as they occur.

Each event displays the event number <Event 1> followed by the event information:

Table 4.15 :

Cause	Effect
C1: = Cause 1	E1: = Effect 1
C2: = Cause 2	E2: = Effect 2
C3: = Cause 3	E3: = Effect 3
C4: = Cause 4	E4: = Effect 4

If an Event has not been enabled no event will be listed in the status screen

If part of an event is not enabled one * will appear next to the incomplete cause or effect.

If a Cause is enabled but not an Effect or an Effect is enabled but not a Cause two ** will appear next to the incomplete part of the event.

When a scheduled event is displayed it will show the next time a scheduled cause is due.

NOTICE

Remember that Cause 1, 2, 3 **OR** Cause 4 will trigger Effect 1, 2, 3 **AND** Effect 4. Cause and Effect numbers are not linked e.g. Cause 1 and Effect 1 are **not**

Comms Status

(Main Menu > Status > Diagnostics > Comms)

- **General** - See “General Status” on page 214.
- **Modbus** - See “Modbus Status” on page 214.
- **SMTP** - See “SMTP Status” on page 215.
- **FTP** - See “FTP Status” on page 215.
- **Peers** - See “Peers Status” on page 215.

This screen contains a description of the type of comms currently being used and its status.

General Status

(Main Menu > Status > Diagnostics > Comms > General)

The screenshot shows a web interface titled "General Status" with a magnifying glass icon and a help button. It contains a table with two columns: "Item" and "Setting".

Item	Setting
ID	0001
Name	Minitrend GR
Serial No.	999176
Processor	1GHz
Firmware	211.4
Build Number	05 Beta
Firmware Date	13:09:04 Jul 2 2020
Bridge Firmware	10
Platform	3.7.0
Boot Loader	0.6.0
Firmware Hash	97c6a892e63eddbd26718724f7ce45498d1...
Mac Address	00-d0-6e-11-01-76
IP Address	192.168.10.176
Certificate Type	Default, Issuer: HoneywellTV2
Certificate Status	Valid
Email Root Certificate	Installed, Name: DigiCert SHA2 High Assura...
TLS Version	TLS 1.2
Front USB	Device Mode

At the bottom of the screen are three buttons: "Back", "Print", and "Save".

- Description and Status of comms on the recorder. Displays Ethernet or RS485 in an Active or inactive state and the recorder's IP address

Modbus Status

(Main Menu > Status > Diagnostics > Comms > Modbus)

Main Menu

ModBus Status.	
Description	Status
Transport	Ethernet
Address	Dynamic:160.221.36.31:...
Device ID	1
Protocol	ModBus-X
Good Messages	0
Bad Messages	0
Internal Errors	0

Description and Status of Modbus Transport - Ethernet

- Transport - Ethernet or RS485
- Address - the IP address of your recorder and if it is fixed or Dynamic
- Device ID - Recorder ID number
- Protocol - Modbus or Modbus-X
- Good Messages - Number of messages being transferred successfully
- Bad Messages - Number of corrupt or rejected messages e.g. a checksum failure
- Internal Errors - Number of Hardware errors

SMTP Status

(Main Menu > Status > Diagnostics > Comms > SMTP)

(Simple Mail Transfer Protocol) - Displays the Type, Time, Date and Message details for Email transfers

FTP Status

(Main Menu > Status > Diagnostics > Comms > FTP)

(File Transfer Protocol) - Displays the Type, Time, Date and Message details for FTP transfers

Peers Status

(Main Menu > Status > Diagnostics > Comms > Peers)

Displays all recorders available on the network. The screen will display the recorder name, what version of Firmware is installed, ID number and Network Name and IP address.

It also displays the recorder's network sync status to show if the recorder is part of a password group. It will display either Master, Slave or a Stand Alone recorder (not belonging to a net sync group).

The last column displays which Password Net Sync group each recorder belongs to. Stand Alone recorders will be blank.

The Peers Diagnostic Status screen only gets updated when a rescan is done, if you remove a peer from the network it still shows in the Comms Diagnostic Peers Status screen until another rescan. A rescan will be done when a recorder come online (startup) or a change is made to password netsync.

If you experience any security issues using peers, see ["Internet Security Settings" on page 287](#).

Main Menu

Messages - The Messages list displays the Peer to Peer status. Thus includes the Type of message (usually a system password message), Time, Date and the Message information. This screen can be cleared or printed.

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

Media Status

(Main Menu > Status > Diagnostics > Media)

- **Pen** - Pen number
- **Rate** - Pen speed
- **Store Size** - How much memory is allocated to this pen
- **Store Time** - How much storage time is available
- **Remaining** - How much memory is left before data is over-written.

Store Size, Store Time and Remaining are dependant of the pen logging speed, how many pens are logging and will be affected by Storage bias allocation of chart and logged data.

Go **Back** to return to the previous screen or select **Print** to print the screen or **Save** screen to removable media.

RDL Status

Main Menu > Status > Diagnostics > RDL)

RDL = Recorder Diagnostic Logs. This feature transfers diagnostic logs from the internal SD card of the recorder to the external media such as SD card or USB key.

Finish

When the Finish button is pressed at the end of a new set up or a change to a setup the following options are available.

Commit

This will save the new setup or changes to an existing setup, over-writing the existing one, and implement them into the recorder

Field validation is performed when a change has been made, if a problem is identified, an error message is shown and the field in question clearly marked.

Discard

This will ignore the new setup, or the changes that have been made to the existing setup, and not implement them into the recorder

Main Menu

Commit Later

This gives the user the option for a configuration to be partially completed but to be committed at a later date. This will retain the new set up or the changes to the existing setup until they are required. A partially completed setup will not be maintained over a power failure.

If Commit Later has been executed, a warning message will display for Edit Setup, Edit Layout and User Admin (Passwords) screens. This is to alert the user that the changes have been made to the configuration and not committed in the recorder. The user can Discard the changes or continue to do changes and then Commit them.



Section 5: Security

See “Hardware Configuration Lock” on page 235.

Password Security

Log On/Off

If ESS (Extended Security System) Password security is active on your recorder a password is required to enter the menu system and process screens. Limited access is available without logging on, see [Table 5.1 on page 223](#).

When Log On is required the Log On button will appear in the top right of the Main Menu screen. The Log On button can be set to switch to auto Log Off at a specified period of time. To Log On select the Log On button at the top right of the Main Menu screen.



Log On - User is presented with a user name and password box. First time user login is “Admin”. No password is required. Access for the first time user is removed once the password system has been configured.



Log Off - Once the user has logged on, the option in the Main Menu will turn to Log Off, once selected the user is logged off and returned to the current process screen.

User Log in/Log Out Method

Users can log in and out of the system or web page easily using the touch screen or an attached keyboard.

Users and Groups

Number of Users

The system will support up to 50 users.

Multiple Log On's

Users are allowed to log on to the system more than once, allowing the same user to log on from different areas, e.g. via the user interface and via web browser at the same time.

User Name

Each user must have a user name, this is a maximum of 20 characters in length and cannot be duplicated. Numeric characters and symbols can be used in the user name, but no spaces.

User Group

Each user can be allocated to a group, these are defined as follows.

Administrator

Administrator has access to everything, and it is possible to have more than one user at the administrator level. The Administrator will have unlimited access to the system and provide the ability to setup other users.

With the exception of Administrator who has access to everything, the other 4 groups permission areas can be configured, users can then be allocated to a level and they will inherit those permissions.

Permissions

Permissions may also be customised for an individual user, their permissions can be changed to become a customised user. However for global access restrictions, the user must be allocated a security level of Engineer, Supervisor, Technician or Operator, even though the individual permissions will differ.

First Time' Password System Setup

The first time the system is used a default user name and password is available, the user name is "Admin" and will have no password, this is known as the "first time" user. Access to the first time user is removed once the password system has been configured. The first time user is reinstated if the password system is reset.

ESS - Extended Security System (CFR21 Part 11)

The password system allows for user names to be typed in. All logging in and out activity is automatically stored in the audit trail.


If your recorder is fitted with the ESS password system follow these instructions

First Time Password System Setup – Add System Administrator

**Your recorder is configured with ESS – Extended Security System.
This is a password system that cannot be switched off**

Follow these steps on first time power up.

Administrator User name

1. Switch the recorder On
2. From the process screen press the Menu button in the top left of the screen and select the Log In icon in the top right as shown here. 
3. A box will appear and prompt you to enter a User name, enter Admin. This is the first time user login. Access to the first time login is removed once the password system has been configured. The first time user is reinstated if the password system is reset. No password is required for first time login. No password is required for first time login.
4. From the Main menu press the following buttons:

Configure > Passwords > User Admin > Add User


Select "Blank User" and type in your new administrator user name

- Default User name minimum length is 4 characters. (Allows the use of alpha, symbol and numeric characters, no spaces)
 - Default User name maximum length is 20 characters
5. In the Add User menu your new user name will be displayed, select this (default Operator) and change the User Level to "Administrator". Select Finish and Commit.

6. A box will appear when you have successfully added a user, press OK
7. The recorder will return to the process screen.

You have now added an Administrator User Level to the password system. You must now give the new user a password

Administrator Password

1. From the process screen press the Menu button in the top left of the screen and select the Log In icon in the top right as shown here. 
2. A box will appear and you will be prompted for your Administrator user name, which you have just created in items 1 to 7 listed above.
3. The Password dialog box will appear. The recorder enters a default password when a user is added so select "Yes" to change it.
 - Default Password minimum length is 6 characters (requires a minimum of 5 alpha characters. Allows the use of symbols and numeric characters, no spaces)
 - Default Password maximum length is 20 characters
4. Enter your new password, then repeat to confirm.
5. The password dialog will appear confirming the change has been successful.
6. You have now completed creating an Administrator.

You can now enter the password system to check and reset the default Policies, eg. Password Expiry Time. (*Main Menu > Configure > Passwords > User Admin > Policy*)

Refer to the Password section in the User manual for more information.

User Name Description

User names are case dependent however duplicate user names will not be allowed even if case does not match. The user name and password cannot be the same.

Minimum Access Level

If an end user has password enabled and starts a batch, the Operator and Technician levels can log in, enter the setup area, make changes to the setup but when they try to finish and commit, it will come back with a message that says they do not have a high enough access level to perform that function. Once the batch is stopped, the operator and technician level can login to the setup area and make changes. When the batch is running, all users with access levels higher than operator and technician can enter setup, make changes, finish and commit. There will be a message that comes up and says that to perform this function, the batch needs to be stopped and do you want to do that? Answer yes and stop the batch and save the setup changes.

Calendar Function

Day of week restriction is required for all levels apart from Administrator, this will consist of any combinations of 7 days. An everyday selection is available.

Password Policy

See “Policy” on page 175.

Duplicate Passwords

Duplicate passwords are allowed for different users, otherwise this would alert a user that the same password is available on another user login. The User name and password cannot be the same. **Note:** Ensure that passwords entered are a mix of capital letters, small letters, numbers and special characters.

Retry Lockout

A password retry lockout option is available, if the user enters the incorrect password for a preset number of times in a row, the account must be de-activated and only an Administrator can re-activate the account. The account can be reactivated in 2 ways

Retry & Preserve Password

Reset retries (unlock) and preserve password, allowing user to have another try

Retry & Reset Password

Reset retries (unlock) and reset password which must be changed on first login.

User Interface requirements

No Activity Timeout

A “no activity” timeout programmable from 20 to 3600 seconds, which will automatically log out a user after a defined period of inactivity at the menu system or web page.

Level Names

The level names, such as Operator, Technician, Supervisor, Engineer are for internal reference and are displayed as defaults, it is possible for the user to change the group names to suit their personnel structure. This is stored in the policy set up for the Password configuration.

Audit Trail

A full audit trail is available and is stored as a message log.

Trail Rules

The audit trail cannot be turned off and will always be generated for the password system.

Audit Trail Entries

Audit trail is generated for the following actions

- User log On/Off and source (Recorder, Web)
- Failed password attempts
- Areas where access was attempted but denied
- Password expiry
- Inactivity timeouts/auto logouts
- Temporary User entry

Level Permissions

Table 5.1 : Default Level Permissions

Default user levels of access to areas within the recorder menu system							
Permission Area		Admin	Engineer	Super- visor	Technician	Operator	No Login required
Perm Area 1	Messages	✓	✓	✓	✓	✓	✓
Perm Area 2	Screen	✓	✓	✓	✓	✓	✓
Perm Area 3	Status	✓	✓	✓	✓	✓	✓
Perm Area 4	View Totals	✓	✓	✓	✓	✓	✓
Perm Area 5	View Alarms	✓	✓	✓	✓	✓	✓
Perm Area 6	View Max/Min	✓	✓	✓	✓	✓	✓
Perm Area 7	View Counters	✓	✓	✓	✓	✓	✓
Perm Area 8	Acknowledge Alarms	✓	✓	✓	✓	✓	
Perm Area 9	Configure Alarms	✓	✓	✓	✓	✓	
Perm Area 10	Batch Control	✓	✓	✓	✓	✓	
Perm Area 11	Recording	✓	✓	✓	✓	✓	
Perm Area 12	Change Password	✓	✓	✓	✓	✓	
Perm Area 13	Main Configure Menu	✓	✓	✓	✓	✓	
Perm Area 14	Configure Counters	✓	✓	✓	✓		
Perm Area 15	Configure Totals	✓	✓	✓	✓		
Perm Area 16	Configure Max/Min	✓	✓	✓	✓		
Perm Area 17	Load/Save Setups	✓	✓	✓	✓		
Perm Area 18	Main Setup Menu	✓	✓	✓	✓		
Perm Area 19	Edit Setup & Edit Recording	✓	✓	✓			
Perm Area 20	General Setup Menu	✓	✓	✓			
Perm Area 21	Printer Setup	✓	✓	✓			
Perm Area 22	Batch Setup	✓	✓	✓			

Table 5.1 : Default Level Permissions

Default user levels of access to areas within the recorder menu system							
Permission Area		Admin	Engineer	Super- visor	Technician	Operator	No Login required
Perm Area 23	Configure Settings	✓	✓	✓			
Perm Area 24	Configure Layout	✓	✓	✓			
Perm Area 25	Screen Setup	✓	✓	✓			
Perm Area 26	Pens	✓	✓	✓			
Perm Area 27	Events/Coun- ters	✓	✓	✓			
Perm Area 28	General (All) Incl. Hardware Lock	✓	✓				
Perm Area 29	Comms	✓	✓				
Perm Area 30	Comms - Modbus	✓	✓				
Perm Area 31	Comms - Web/FTP	✓	✓				
Perm Area 32	Comms - SNTP	✓	✓				
Perm Area 33	Comms - TCP/IP	✓	✓				
Perm Area 34	Comms - Email	✓	✓				
Perm Area 35	Field IO I/O+AMS2750	✓	✓				
Perm Area 36	Passwords	✓					
Perm Area 37	View Status via Web Page	✓	✓				
Perm Area 39	Full Control via Web Page	✓	✓				
Perm Area 40	Calibrate Screen	✓	✓				
Perm Area 41	User Variables	✓	✓	✓	✓	✓	
Perm Area 42	Clear Popup Alert	✓	✓	✓	✓		
Perm Area 43	Context Menu	✓	✓	✓	✓		

Table 5.1 : Default Level Permissions

Default user levels of access to areas within the recorder menu system							
Permission Area		Admin	Engineer	Super- visor	Technician	Operator	No Login required
Perm Area 44	Clear Messages	✓	✓				
Perm Area 45	Reports, Run and View	✓	✓	✓	✓	✓	
Perm Area 46	Reports, Modify and Reset All	✓	✓				
Perm Area 47	Script Timers	✓	✓	✓	✓	✓	

Default Password Access

Default password access is set up within the recorder and can be changed by the Administrator or the Administrator can assign another user to change the access permissions.

Default permissions

- **Administrator Access** is for the Administrator level only
- **Engineer Access** is for Engineers and above (Administrator level)
- **Supervisor Access** is for Supervisors and above (incl. Engineer and Administrator levels)
- **Technician Access** is for Technicians and above (incl. Supervisor, Engineer and Administrator levels)
- **Operator Access** is for Operators and above (incl. Technicians, Supervisors, Engineers and Administrator levels)
- **No Login** gives access only to unrestricted areas.

Access levels can change for each menu, for example Operator or above access is required to get to the Configure menu. Once in the Configure menu the operator level can only access the Passwords button, Setup is Technician or above access and Layout and Settings are Supervisor or above access.

Figure 5.1 Default password access from the Main menu.

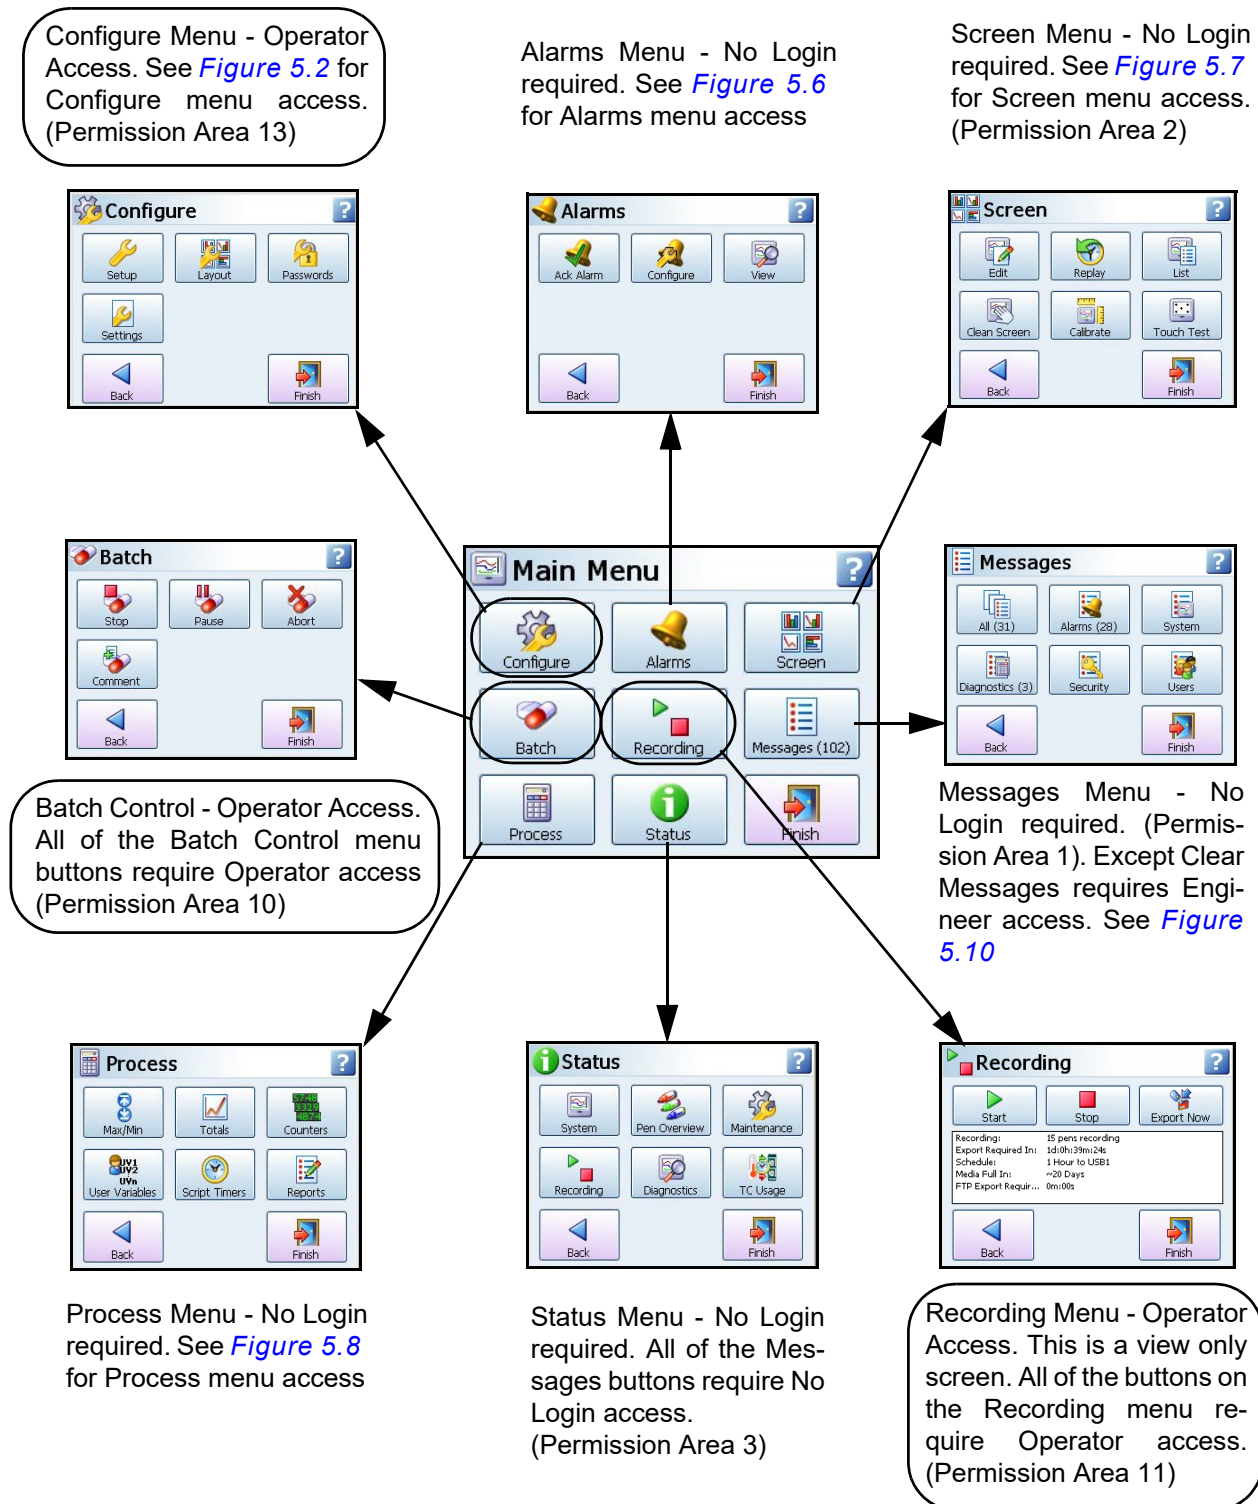


Figure 5.2 Default password access from the Configure menu

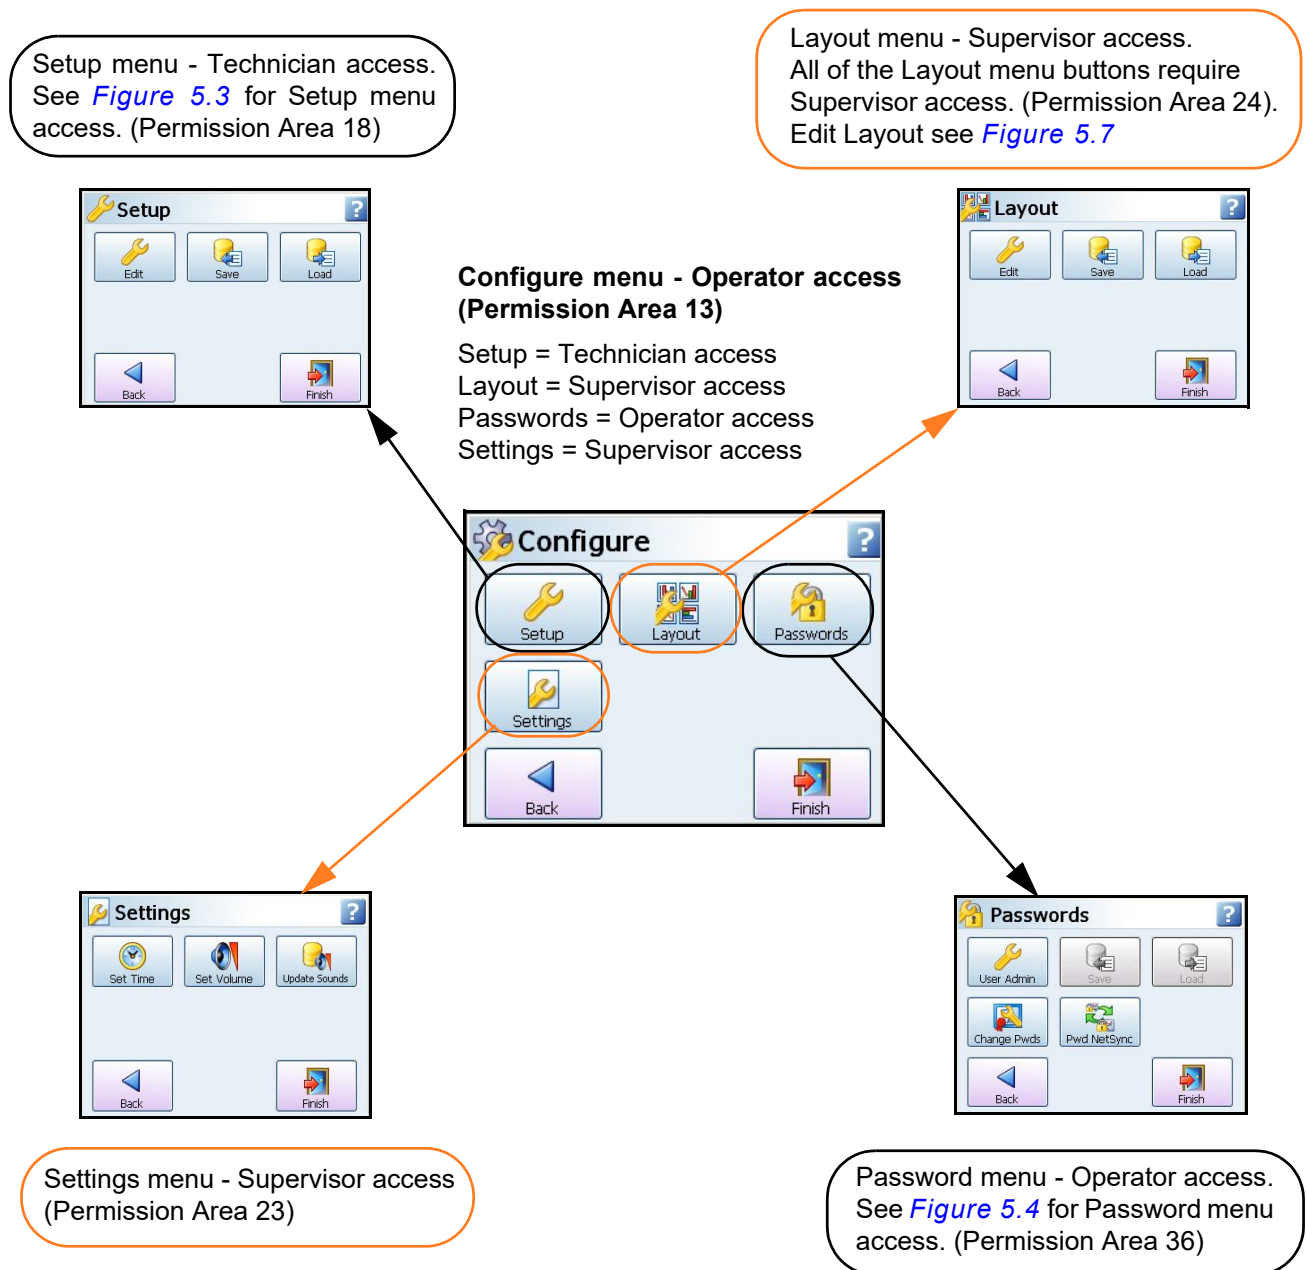


Figure 5.3 Default Password access from the Setup Menu

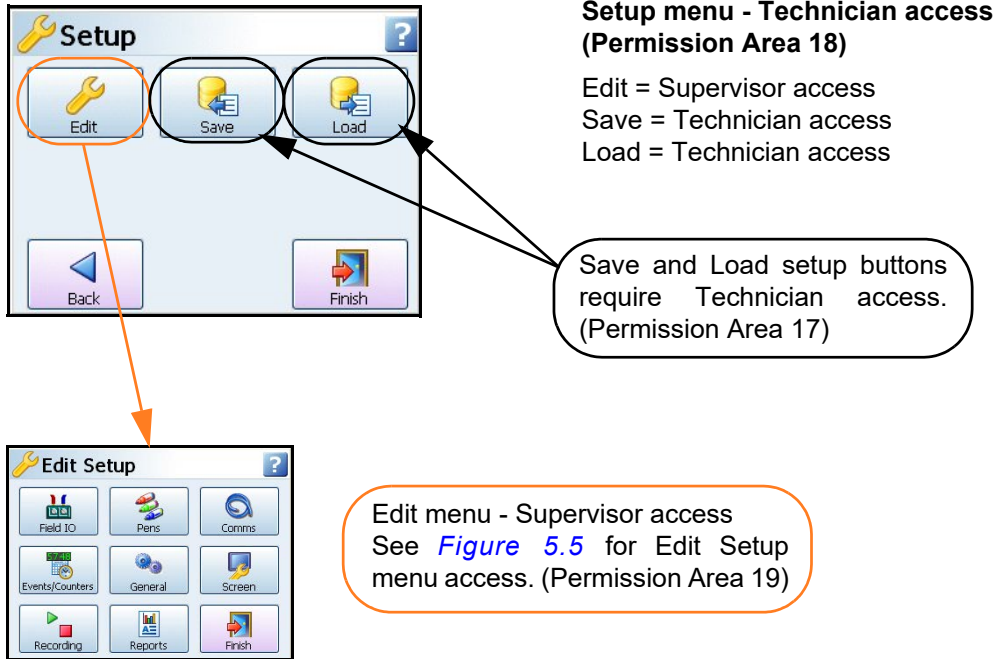


Figure 5.4 Default password access from the Password Menu

Password Menu - Operator access (Permission Area 36)

User Admin - Administrator
 Change Password - Operator access

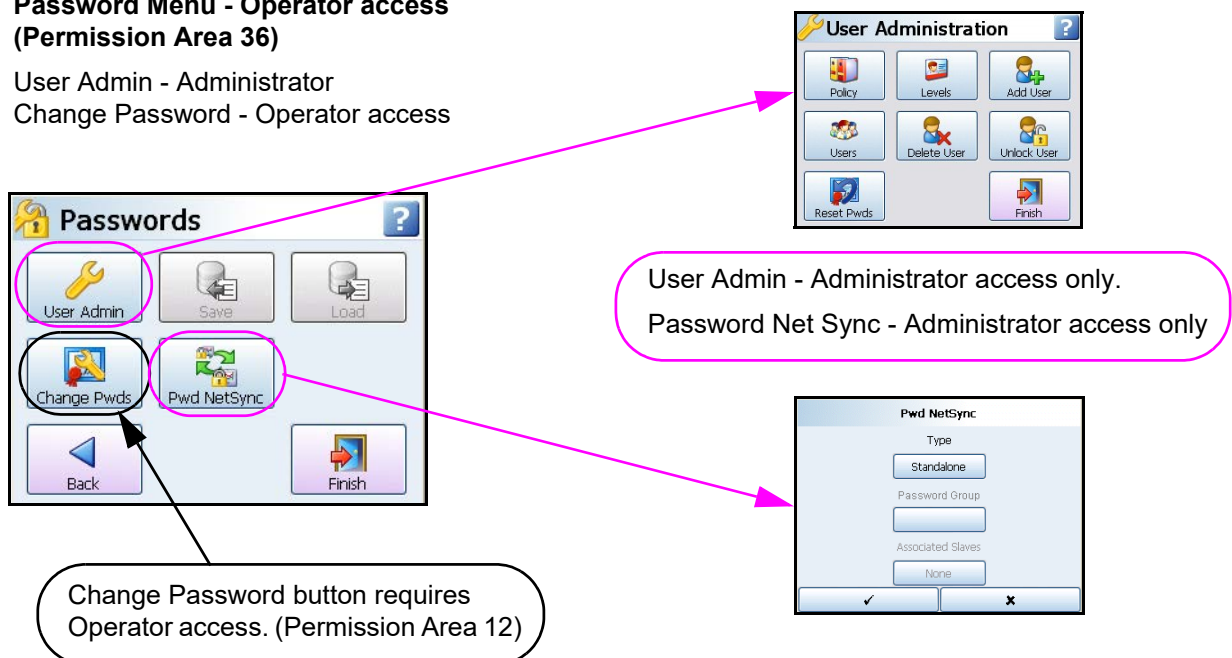


Figure 5.5 Default password access from the Edit Menu

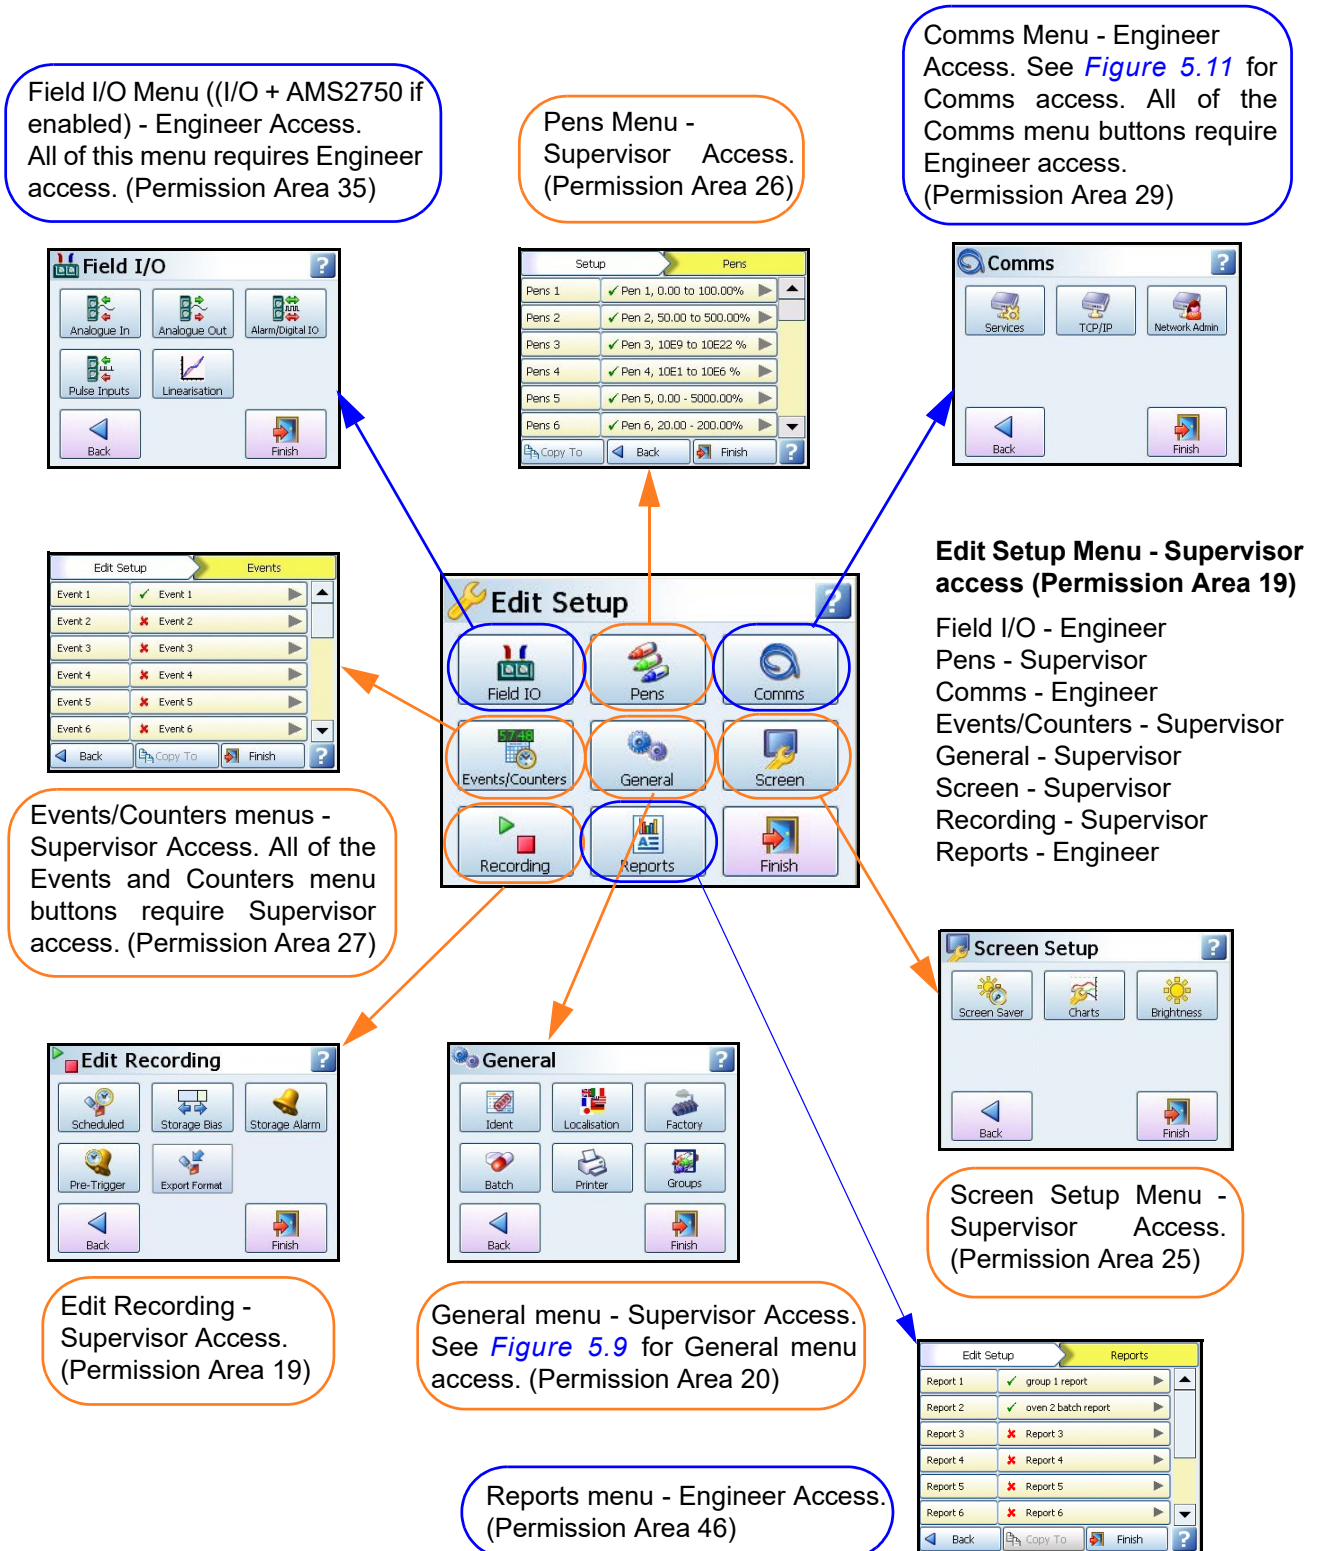


Figure 5.6 Default password access from the Alarms Menu

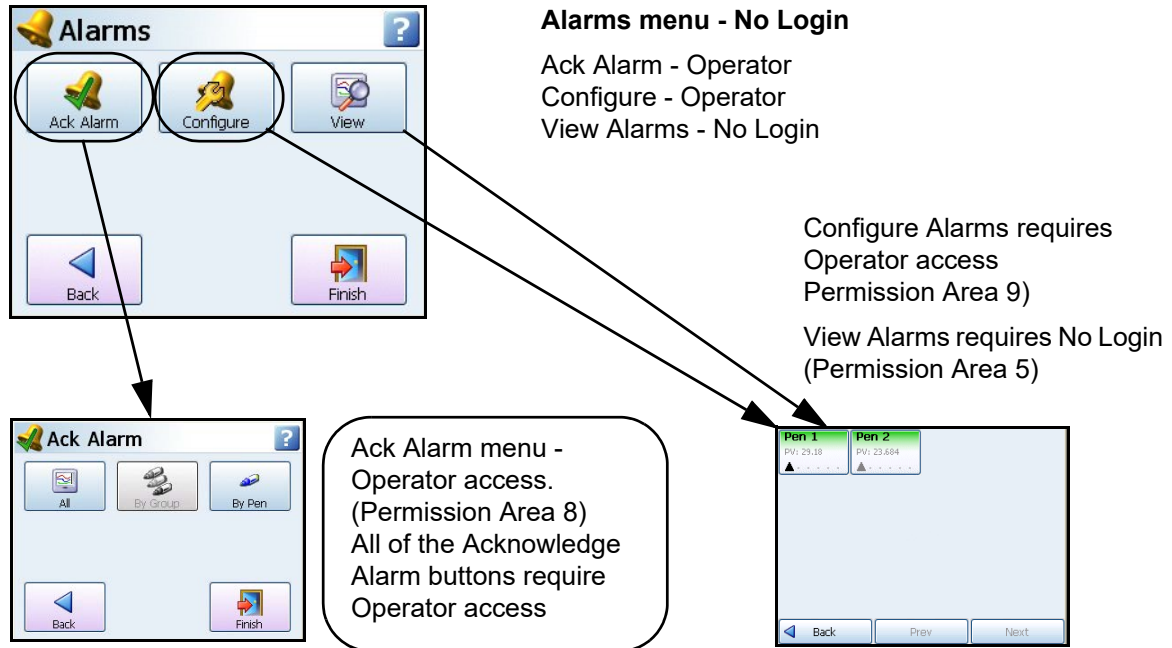


Figure 5.7 Default password access from the Screen Menu and Edit layout menu

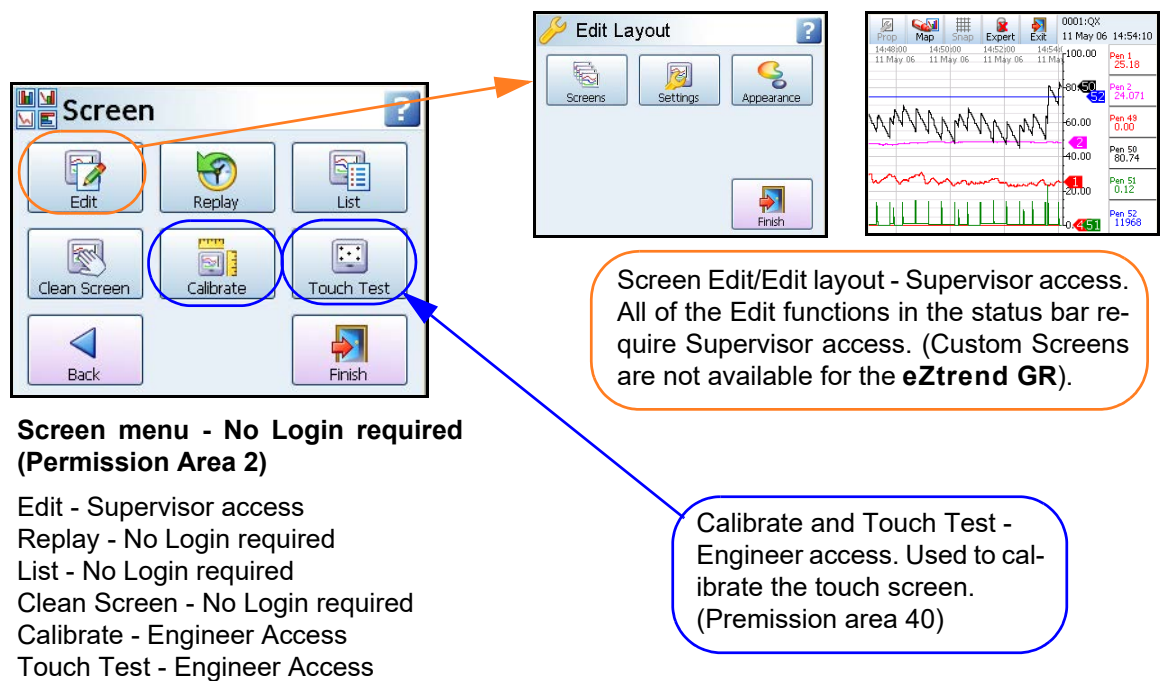


Figure 5.8 Default password access from the Process Menu

Process Menu - No Login required

Max/Min - No Login
 Totals - No Login
 Counters - No Login
 User Variables - Operator
 Script Timers - Operator
 Reports - Operator

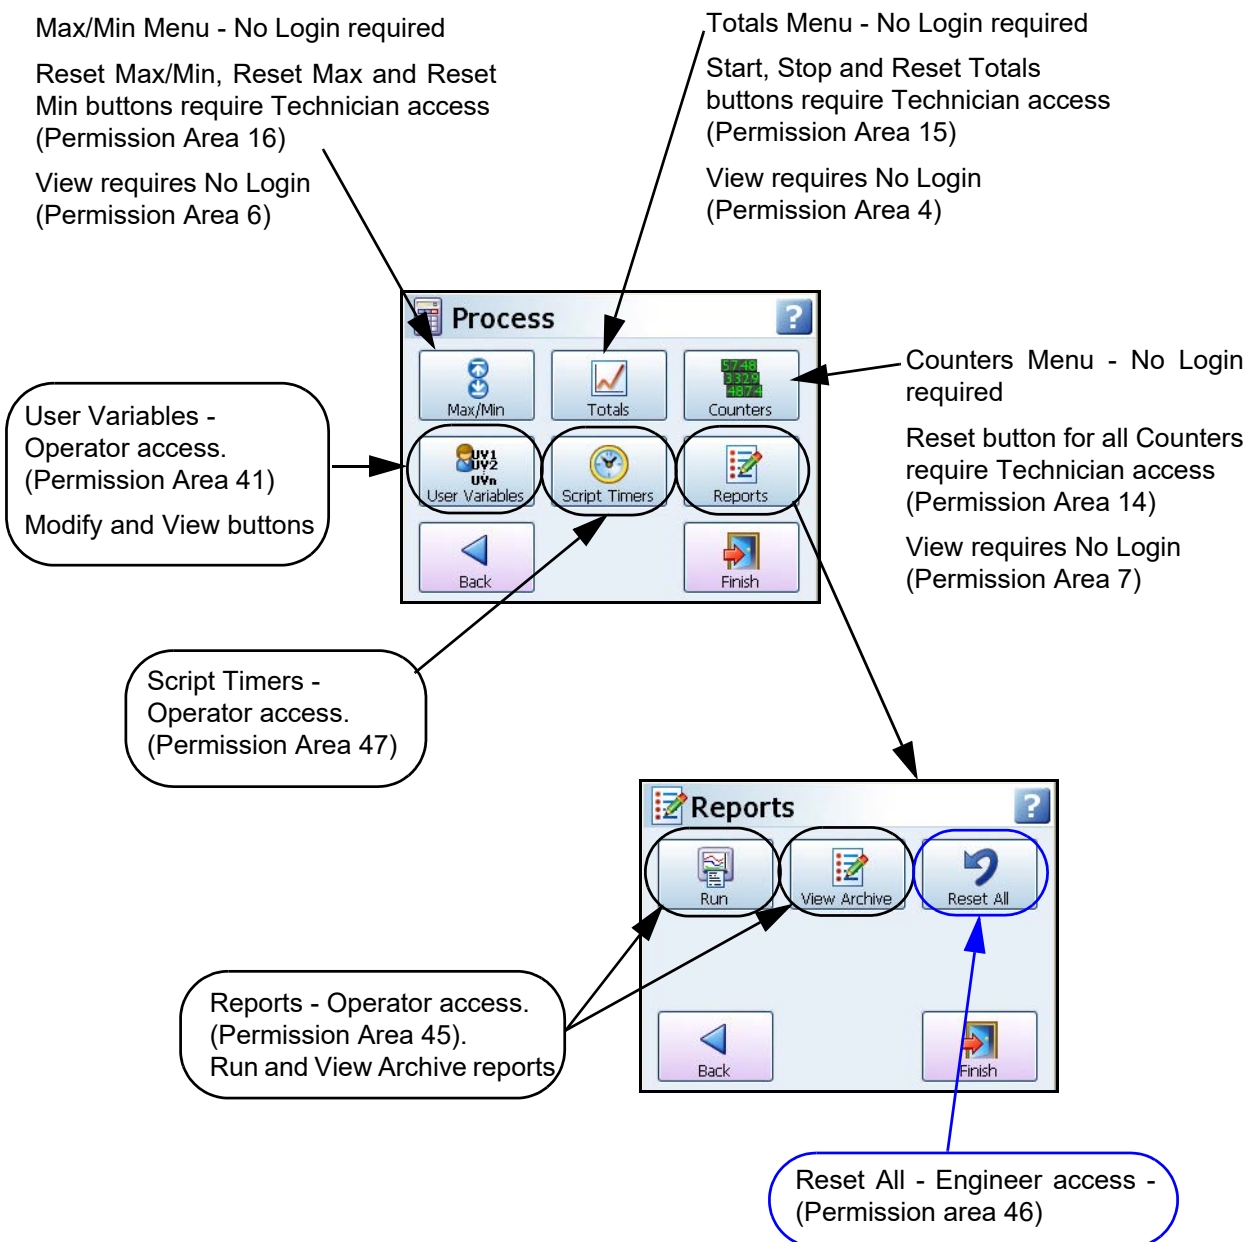


Figure 5.9 Default password access from the General Menu



**General Menu - Supervisor access
(Permission Area 20)**

Ident, Error Alert and Factory require Engineer access. (Permission Area 28)

Batch requires Supervisor access (Permission Area 22)

Printer requires Supervisor access (Permission Area 21)

Groups require Supervisor access (Permission Area 26)

Factory menu requires Engineer access. All of the factory menu buttons require Engineer access. (Permission Area 28)


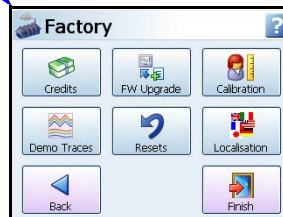


Figure 5.10 Default password access from the Messages Menu

Messages Menu - No Login Required

Except to clear the messages from each area requires Engineer access

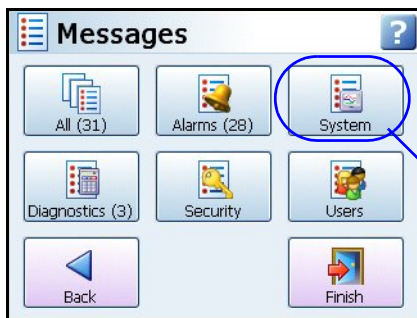

All messages screen have a button to clear (remove) the existing messages stored in the recorder for that particular area of messages. (Permission area 44)


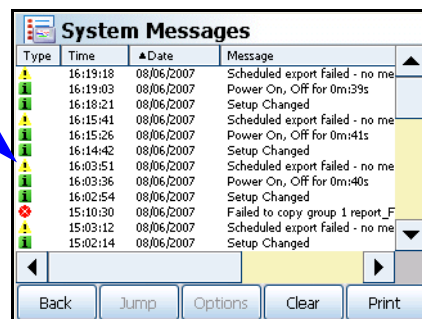


Figure 5.11 Default password access from the Comms Menu

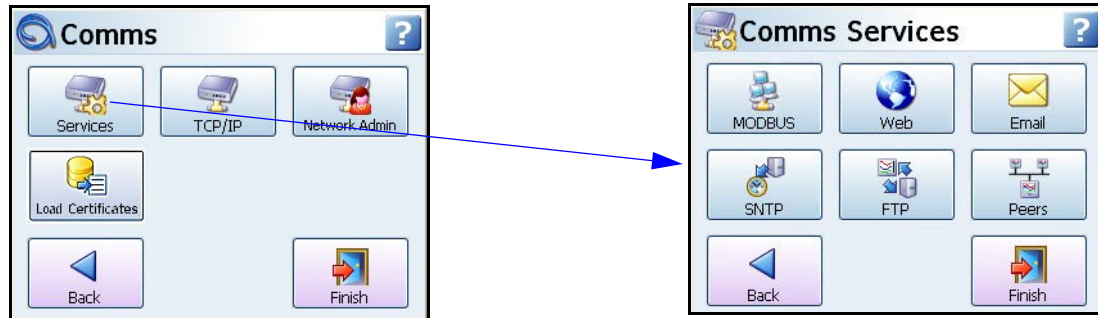


**Comms Menu - Engineer access
(Permission Area 29)**

Services - Permission Area 29
 TCP/IP - Permission Area 33
 Network Admin - Permission Area 29
 Load Certificates - Permission Area 29

**Comms Services - Engineer access
(Permission Area 29)**

Modbus - Permission Area 30
 Web - Permission Area 31
 Email - Permission Area 34
 SNTP - Permission Area 32
 FTP - Permission Area 31
 Peers - Permission Area 29

Figure 5.12 Default password access from the Web page

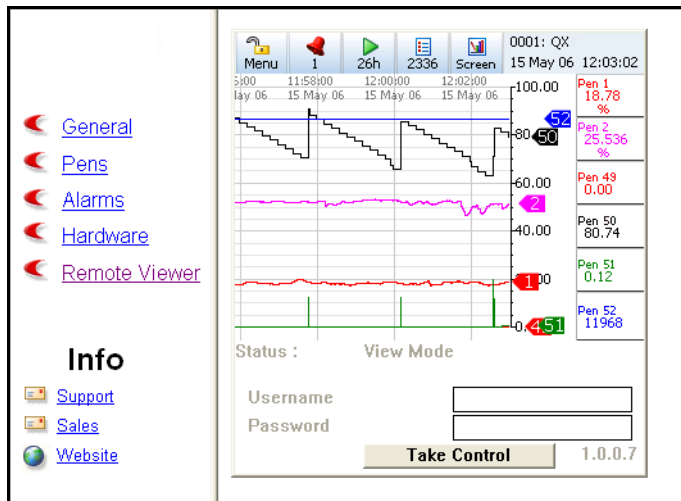

Web page - Engineer access

View Status - Permission Area 37
 Full Control - Permission Area 39

Figure 5.13 Default password access to clear a pop up Alert


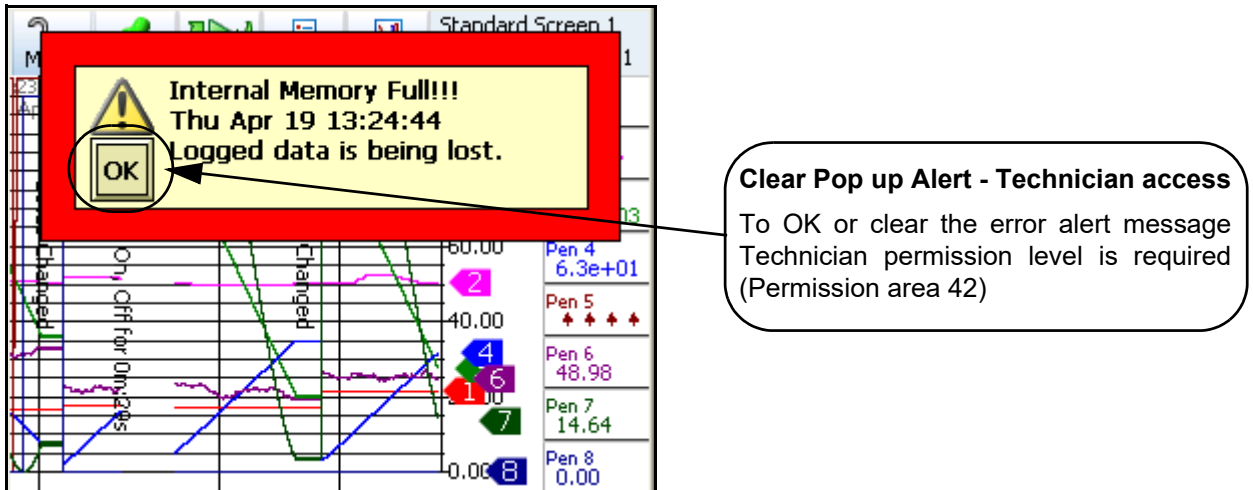


Figure 5.14 Default password access to use the Context menu

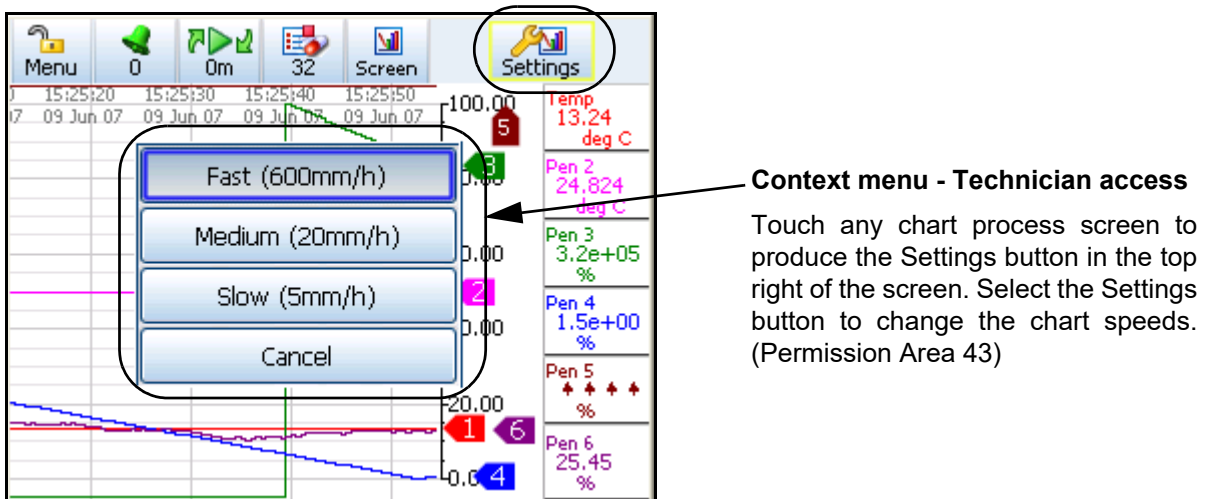

Hardware Configuration Lock


The Hardware Configuration Lock feature is located on the Processor board and works in conjunction with the Credit function to prevent any configuration changes once the configuration switch has been set to the "unlocked" position. See [“Options” on page 206](#). With the credit function active, the switch must be set to the "unlock" position to make configuration changes.

By default the configuration will not be locked. Only in case of regulatory requirements the factory can lock by adding the cap (JP2) on this connector. It can be locked simply by a small plastic cap placed on the JP2 link which will short the jumper in the hardware, which in turn is sensed by Firmware and it will lock the recorder configuration.



The lock can be easily accessed just by removing the back panel and simply adding (to lock) or removing (to unlock) this cap (link) from the board. [Figure 5.15 on page 235](#) shows the Processor board, with the Hardware Lock in a red box. This is simple two pin jumper (Connector /Header) designated as “JP2” on board.. This operation should be performed by authorized personal.

The JP2 lock/unlock on the Processor board is the same for the **Minitrend GR**, **Multi-trend GR** and the **DR Graphic** recorders.

Figure 5.15 Hardware Configuration Lock / Processor board

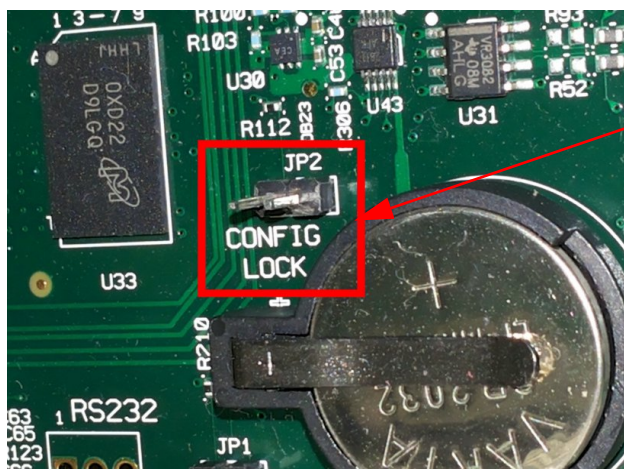

Unlock - JP2 has the plastic cap (link) removed

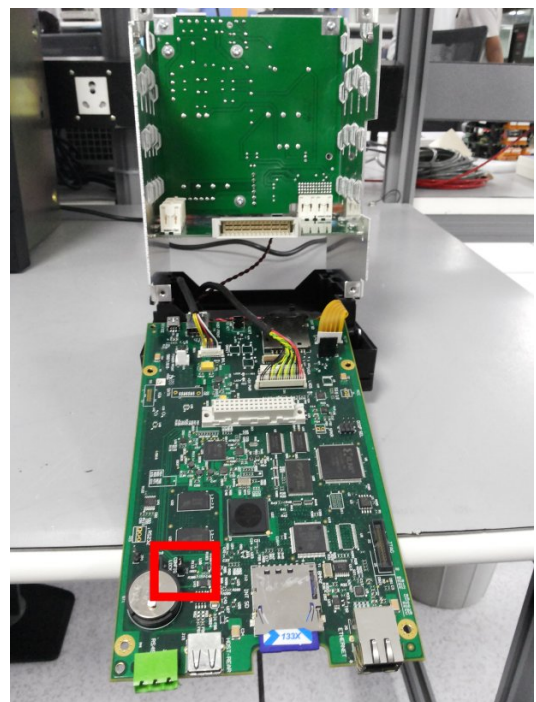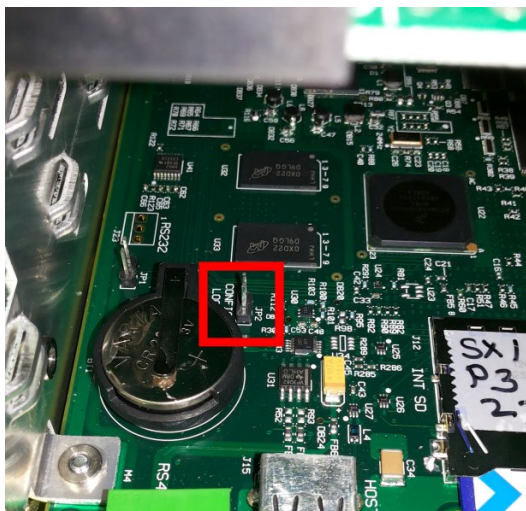


Hardware Lock location on Processor board.
Unlock/removal of link (JP2) should be performed by an authorized person

Section 6: Screen Configuration

Process Screen Overview


Figure 6.1 Minitrend GR Process Screen

Standard Screen example - Chart and DPM

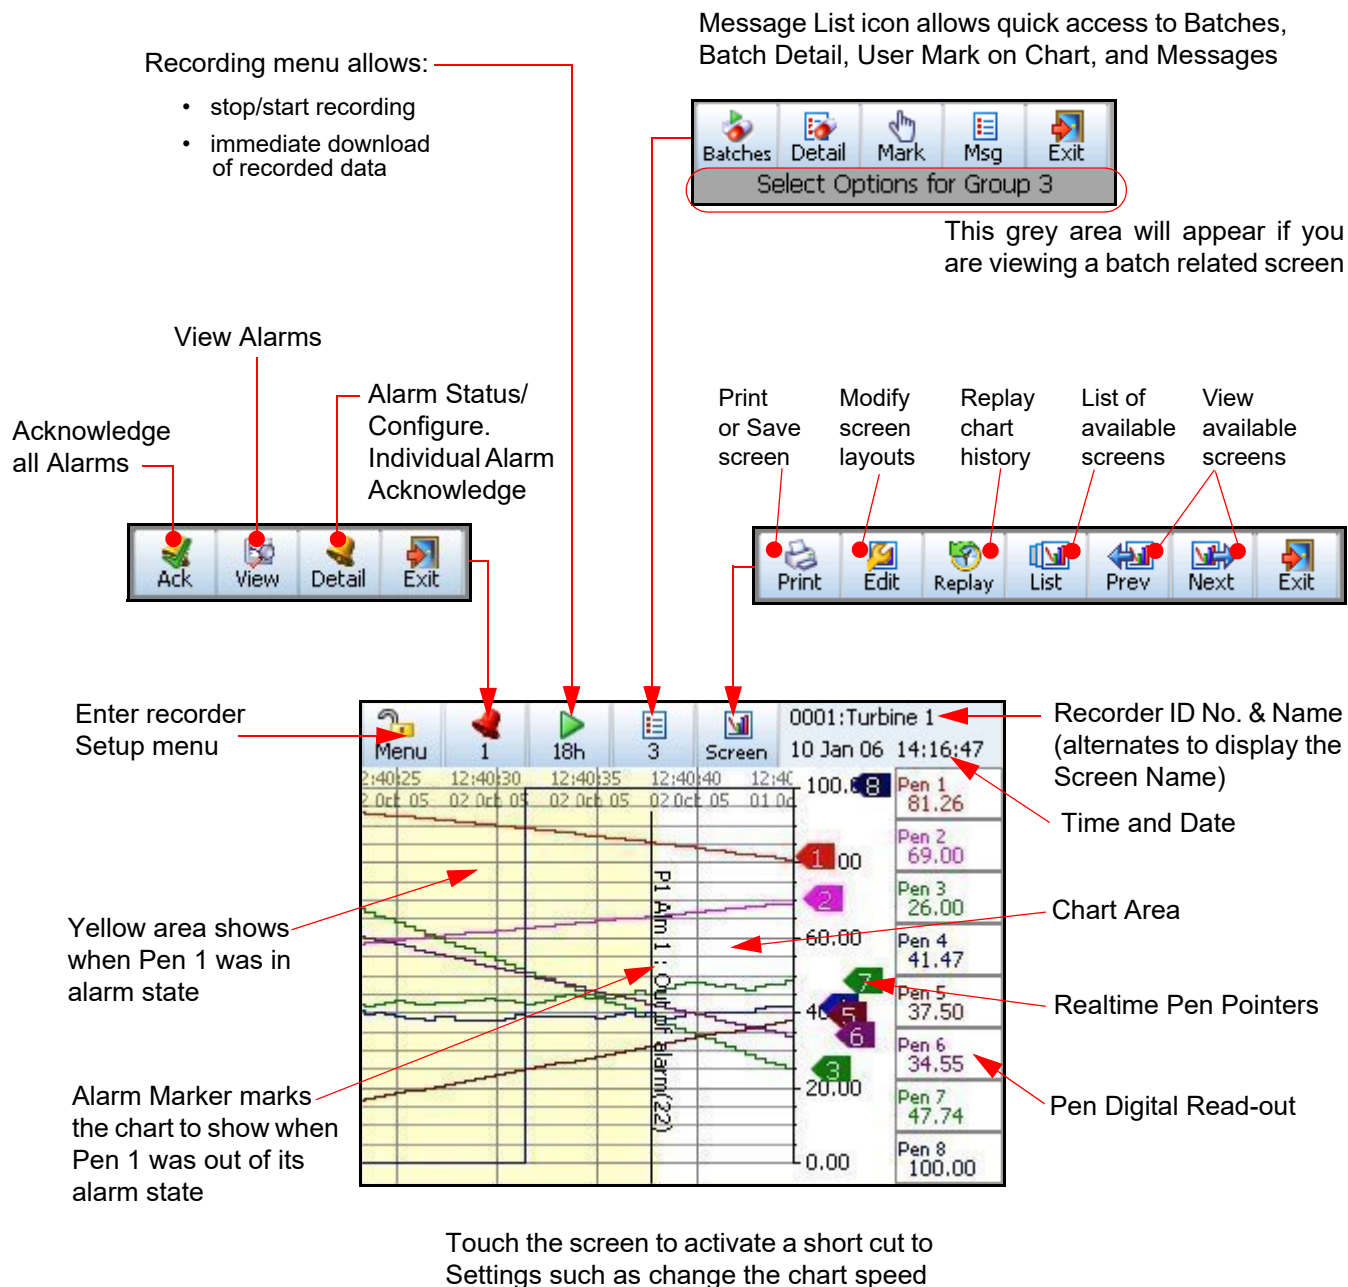

Menu Bar

At the top of each process screen is the Menu bar.

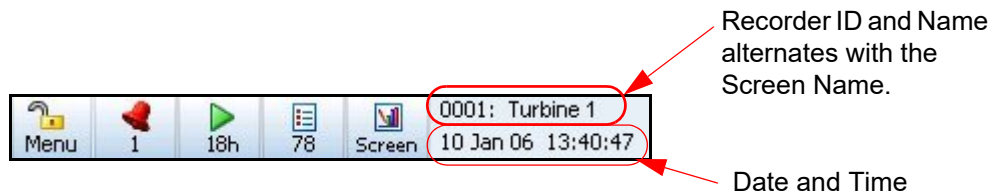

Menu

This gives direct access to the Menu System to set up the recorder. [See “Section 4: Recorder Setup” on page 65](#)

Alarm bell (1)

The second button shows the Alarm status. When the alarm bell is green this means there are no active alarms. If the bell is red then an alarm is active and the number of active alarms will display below.

Press this button to produce the Alarm menu bar. Here there is an Acknowledge button to confirm any latched alarms that require acknowledgment. [See “Alarms Menu” on page 89](#) There is a View button that displays all pens currently with alarms set up. The Detail button will take you straight to the Alarms menu, see [“Alarms Menu” on page 185](#)

Time Left (18h)

This button shows how much time is left before data will fill the internal memory and an export of the memory to an external device is required, before data is overwritten. Select this button to go to the Recording screen to export the data now or set up a timed export using the Scheduled option. [See “Recording Menu” on page 194](#)



If the Time Left button shows two green arrows this means that the memory buffer is full and the oldest data has started to be over-written.

List (78)

This button produces another button bar for quick access to Batch Controls, Batch Detail, Mark on Chart or Message details. The number displayed is the number of new messages that have been registered since the menu was last checked.

Select this to produce another button bar with access to:


- **Batches** - Shortcut to enter details to start a new batch or to control a batch that has already been started. [See “Batch Setup/Batch Groups” on page 190](#)
- **Detail** - Gives detail of the current batch status for all batches running. If you are displaying a screen that has been set up specifically to show a batch then the details will be just for that batch.
- **Mark on Chart** - Select the Mark button to enter a Mark on Chart. Embedded process values can be entered which will display pen information on the marker. [See “Embedded Process Values” on page 128.](#)

- **Message Detail** - Press this button for quick access to the Messages screen, where each message is put into a category or All Messages can be viewed. [See “Messages Menu” on page 197](#)
- **Exit** - To return to the process screen

Screen

The Screen button produces the Screen menu bar.

Figure 6.2 Screen Menu bar

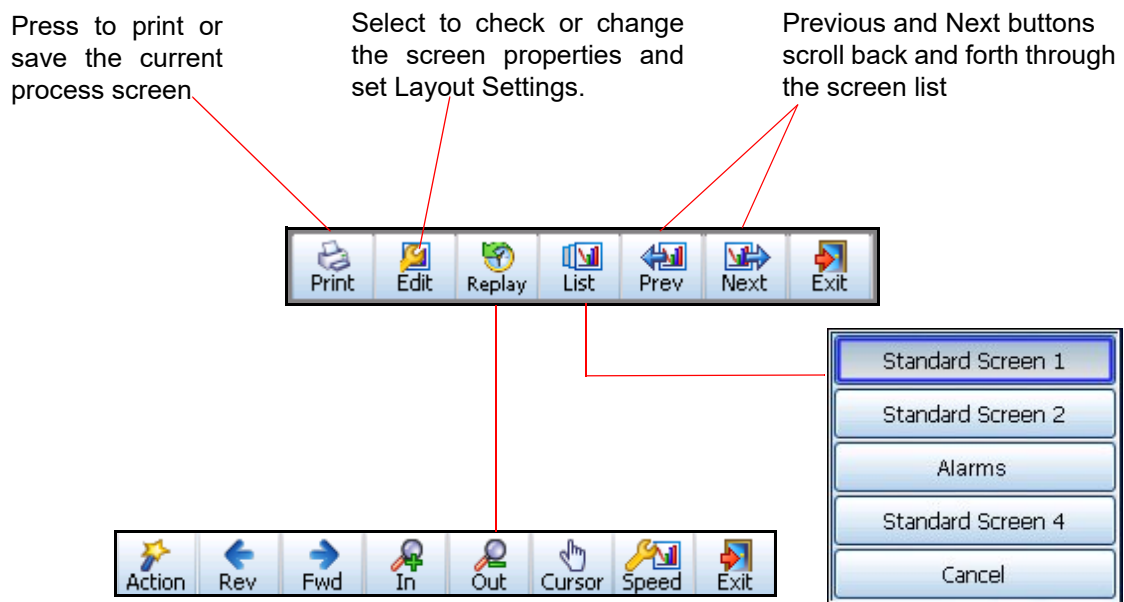

Screen Menu Bar

- **Print** - Instantly prints the screen you are displaying. To set up your printer, see [“Printer Menu” on page 151](#). Every pixel is sent to the printer!. Save a screen shot of the current displayed screen to external removable media.
- **Edit** - From a standard process screen this gives quick access to Screens, Settings and Appearance. View all available Screens and modify certain screen properties including Screen name, Template Type, Orientation and Pens being displayed. [See “Edit Layout” on page 167](#) for details. Use Settings to set up screens for cycling. Cycling screens will display specific screens for an allocated amount of time before switching to the next. When the **DR Graphic** recorder has a circular chart selected the Edit button is replaced with History or Realtime buttons depending on the type of data being shown. The Edit button is still available in circular mode from the Main menu>Configure>Layout
For Custom Screens this will enable the Edit tool bar, go to the [“Edit Toolbar” on page 186](#). This is for Pen/Channel mapping and Expert mode for moving and resizing items on the screen.
- **Replay** - Gives quick access to the Replay Screen and the Replay toolbar. [See “Replay” on page 240](#)
- **List** - List of all available screens, select to change the current screen.


- **Prev** - Displays the previous enabled screen in current selection
- **Next** - Displays the next enabled screen in current selection
- **Exit** - Exit this menu, return to the current process screen

Replay

The Replay button takes you to the process screen in replay mode. The replay screen consists of a chart and DPMs. For standard screens the replay chart is vertical or horizontal depending on the orientation of the screen you have come from. The replay screen has DPMs that display max/min readings for each pen, these values are taken from where the cursor is positioned on the screen. Use the print button on the replay bar to print the replay screen.

DR Graphic and Multitrend History Mode in Circular Chart Mode

The top status control has been modified for Circular Chart screen to include the ability to go back and view the previous chart. This item is available by selecting the top status bar screen button. The 'Edit' button is overridden in the event that the current screen is showing a circular chart. The Edit facility is still available from the Main Menu -> Configure -> Layout. The status bar toggles the button depending on whether real-time or historical data is being shown:

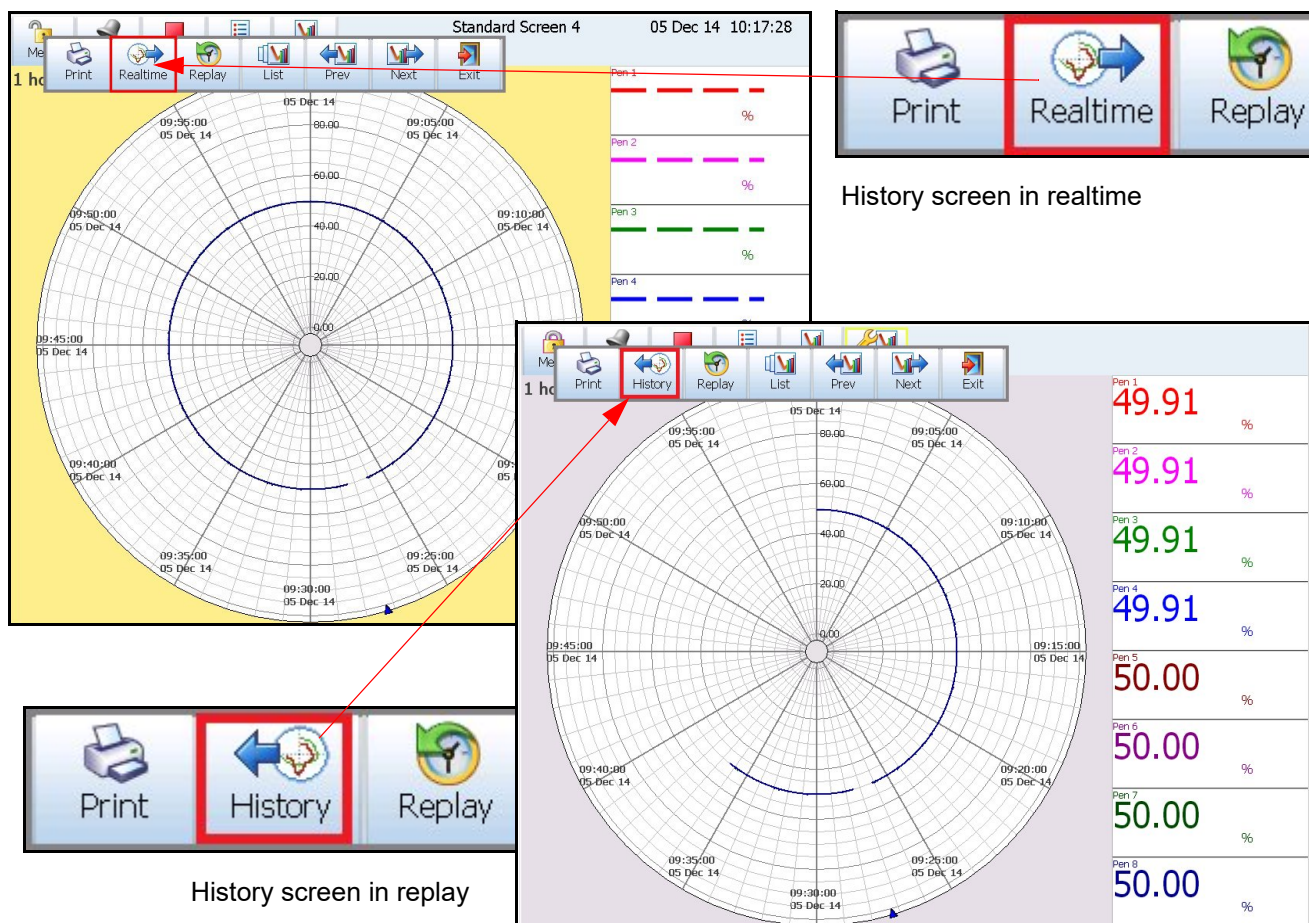


Cursor

On the right hand side of the replay screen DPMs can display max/min readings for each pen, these values are taken from where the cursor is positioned on the screen.

Note: You can do replay on Bar, Charts and Digital Panel Meter process screens and this will jump into a trend replay screen with the DPM's showing the Min-Max values.

When using Custom Screens you can only replay 8 pens on the **Minitrend GR and DR Graphic** and 18 pens on the **Multitrend GR** recorder even though you can have more pens than this on the custom screen. (Custom Screens are not available on the **eZtrend GR**).

Figure 6.3 Replay screens

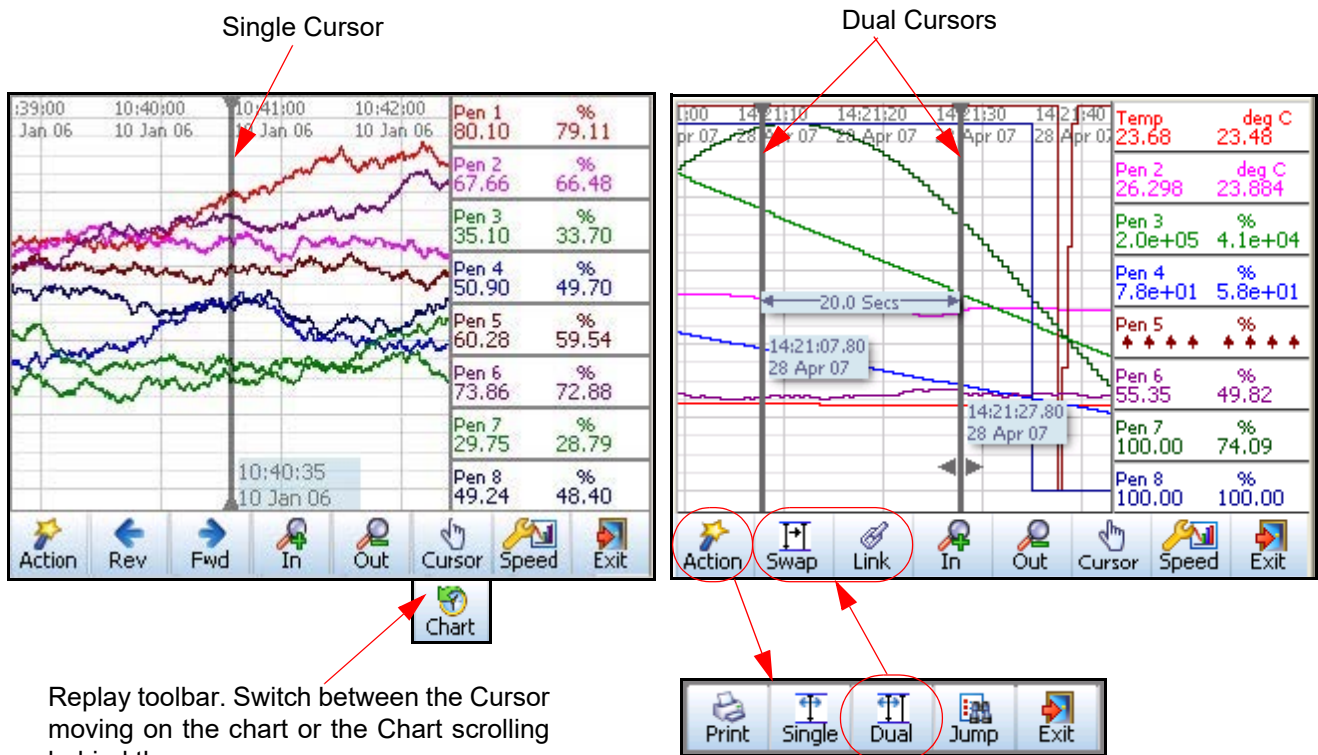

Replay Toolbar

The Replay toolbar will appear at the bottom of the screen

 
- **Action** - See [“Action Toolbar” on page 242](#).
- **Rev** – This is used to scroll back through previous data. Touch once to scroll back in increments or hold the Rev button down to continue backwards viewing of data.
- **Fwd** – This is to scroll forwards on the chart. Touch once to scroll back in increments or hold the Rev button down to continue backwards viewing of data.
- **In** – Zoom In on the chart being displayed. Place the chart cursor at the point you wish to zoom in to. Zooming In will magnify the chart to show greater detail around the cursor position.
- **Out** – Zoom Out on the chart being displayed. Place the cursor at the point you wish to zoom out from. Zooming Out will decrease the chart to show a larger time span around the cursor position.
- **Cursor/Chart** – In Cursor mode the cursor bar can be moved along the chart showing the max/min pen readings as they change and are displayed on the DPMs. This can be done by touching the line cursor on the screen and dragging it to either side. In Chart mode the chart can be moved along behind the cursor bar. The DPMs will update reflecting the max and min readings at the position of the cursor bar. This can be done by touching the chart on the screen and dragging it to either side or by using a mouse. See [Figure 6.3 on page 241](#).
- **Speed** - set a Fast, Medium or Slow chart speed in replay mode. Select the Speed button and three chart speeds will appear for the replay screen; Fast (10x), Medium (3x) and Slow speed (0), which is normal speed
- **Exit** - to return to the previous process screen.

Action Toolbar

The Action toolbar can be set to timeout (disappear) after a specified time. To set the time see Menu bar TO, [“Settings” on page 170](#).

- **Print** - This will print the current replay screen. For network printers ensure all printer/server information has been entered in [“Network Admin” on page 98](#).
- **Single** - This is for a single cursor to be displayed on the replay screen.

- **Dual** - This is a mode that displays an additional cursor showing the time difference between the two. When selected the toolbar icons will change to Swap and Link. The two cursors appear on top of each other and can be moved by dragging one of the cursors using the stylus on the touch screen. The cursor with the two grey arrows is the movable one, to change this use the Swap button. Each cursor can be positioned independently and linked so they can be moved together; use the Link button. Each cursor will also show its current time/date and the digital readings on the right hand side show the max and min between the cursors as opposed to under a single cursor. See [Figure 6.3 on page 241](#).

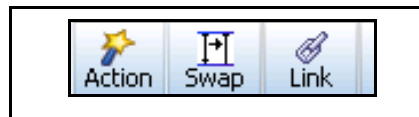

- **Jump** - This is a Message jump mode that allows the user to jump to the next or previous message on the chart, the display will centre on the message in question. Select Jump and the toolbar buttons will change to Prev(ious) and Next. Use these to jump to the previous or next message on the screen. See [Figure 6.3 on page 241](#).



- **Exit** - to return to the Replay screen

Messages List links to Replay Screen

To locate the time of an occurrence on a chart you can select an item in any of the message lists and press the Jump button. This will take you to the exact time of the occurrence on the replay screen.

If the message requested is older than the oldest chart time/data available a message box will appear and jump you to the oldest chart time and date available.

Hide Pens

When in replay mode all pens are initially displayed to allow for better analysis. Pens in replay can be quickly turned off leaving just the pens you want to analyse, by pressing the digital panel for a pen the trace will be removed off the chart and the digital panel will go dark grey (but still showing the pen name). Press the digital panel of a removed pen to reinstate. At least one pen must remain on the replay screen and any pens removed will be reinstated after exiting replay.



In the Replay screen the traces for pens 5 and 8 have been hidden to allow for viewing. Touch the DPM on the screen to toggle the pen trace On and Off

About Replay


The replay screen facility enables the user to:

- Show greater coverage of elapsed time (display more history)
- Zoom in and out further
- Display data on a chart and DPM screen
- Display Max Min readings on DPMs
- Display pens on a chart replay screen that are currently displayed on a DPM screen
- Add any enabled pen on to a process screen. All enabled pens have history, even if not displayed on a process screen. These can be added onto a process screen at any time to view and replay data.

- There is a Replay Screen time-out feature so if the recorder is in replay mode and there has not been any user activity for a defined amount of time then the replay screen will return to the process screen. See [“Settings” on page 170](#).

Replay and Hot Buttons

If any Hot Buttons have been configured to “Enter Replay Screen”, then when the equivalent Hot Button is selected (eg.HB1), in a Process screen, the Replay screen will be started. This does not apply to Non-Process screens. The Hot buttons will appear in the top right of the screen but will not activate on a non-process screen.

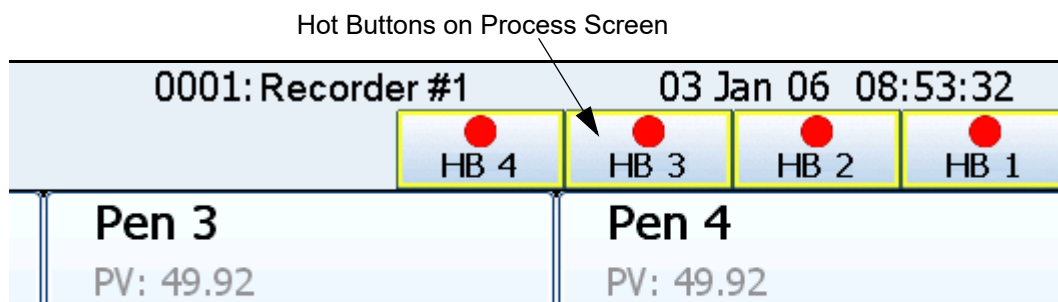

Zooming

When the recorder switches to the replay screen it will represent the chart speed that is on your current process screen, (the one you’ve just left). This will affect how far you can zoom in and out. For example if you are using the Medium chart speed (what ever it may be set to) the screen can zoom in 5 more times to see detail over a shorter time span and can zoom out a further 4 times to view more data over a longer period of time.

The amount of data displayed on the replay screen is dependant on what chart speed is selected and how many pens are enabled in the recorder.

Chart/Logged data Slider

An adjustable slider shows how much memory is allocated to Chart data and how much memory is allocated to Logged data. The user can adjust the slider which will display how long it will take to fill the memory, at the current chart speed, before the data will start to be recycled. See [“Storage Bias” on page 159](#)

How Replay works

There are three separate “queues” of data, represented by the three different chart speeds. As you zoom in and out it switches between these different “queues”.

These “queues” are not all the same length, so for example:

- The fast speed at 600mm/hr means to cover 24 hours takes approx. 30Mbytes for 8 pens.
- The medium speed at 20mm/hr means that to cover 24 hours takes 1Mbyte (1/30 of fast).
- The Slow speed at 1mm/hr means that to cover 24 hours takes 50Kbyte (1/20 of Medium).

The result of this is that the slow speed will tend to give you much more elapsed time history, but at a lower time resolution, here is a representation of what this could look like.

Data				
2 week	4 weeks	6 weeks	8 weeks	12 weeks
	Fast speed	Medium speed	!	Slow speed


The lines represent absolute time coverage. So if you go right back to the earliest time on the slowest chart (shown by '!' in this example), you cannot zoom in any more as the medium speed coverage does not go back that far.

Zooming Capabilities

The example in [Figure 6.4 on page 246](#), shows 10 different replay screens covering the full zoom in/zoom out capabilities. When the screen is switched to replay the chart speed is set to Fast (600mm/hr) and the replay screen displays a 4 hour chart. The replay chart can be zoomed out two more times to 10 hours, then to 12 hours. It can be zoomed in from 4 hours to 2hrs, 1hr, 1hr (with bigger divisions), 20 mins, 10 mins, 5 mins, 2 mins and 1 min. The Medium chart speed (20mm/hr and the Slow chart speed (5mm/hr) are also shown in the example.

Figure 6.4 Zooming on a Replay screen

12 hour/div
replay chart

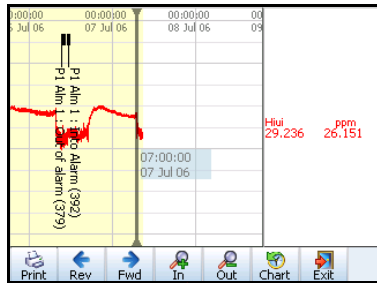

10 hour/div
replay chart



4 hour/div
replay chart

Fast chart
speed
(600mm/hr)



2 hour/div
replay chart




1 hour/div
replay chart


Medium
chart speed
(20mm/hr)



1 hour/div
replay chart
(bigger
divisions)

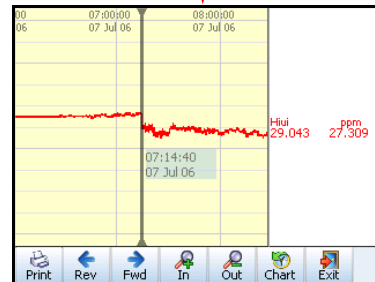

10 mins/div
replay chart

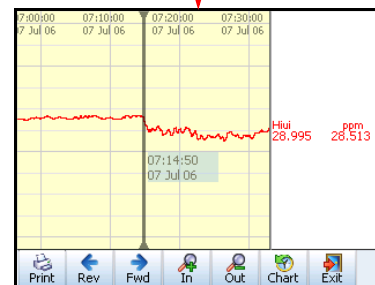

5 mins/div
replay chart



2 mins/div
replay chart

Slow chart
speed
(5mm/hr)



1 min/div
replay chart




Zoom
In
Zoom
Out

Chart Speeds

This is the speed at which the chart travels across the screen (not replay mode). There are three categories; Slow, Medium and Fast (default) chart speeds that can be set up in [“Charts” on page 154](#).

To change the chart speed gently tap the touch screen on a chart to activate the Settings button in the top right of the screen. Press the Settings button to produce a drop down list of the 3 chart speed categories. Select the desired speed and this will immediately change the chart speed on all screens that have charts. The Settings button will auto hide in 4 seconds, touch the chart again to activate.

To change the chart speed from Slow, Medium or Fast, return to a process screen with a chart and touch the chart. This will produce the Settings button in the top right of the screen, select this to display the current chart speeds setting for Fast, Medium and Slow. The current selection will be highlighted. To change the actual chart speed setting for Fast, Medium and Slow, see [“Charts” on page 154](#).

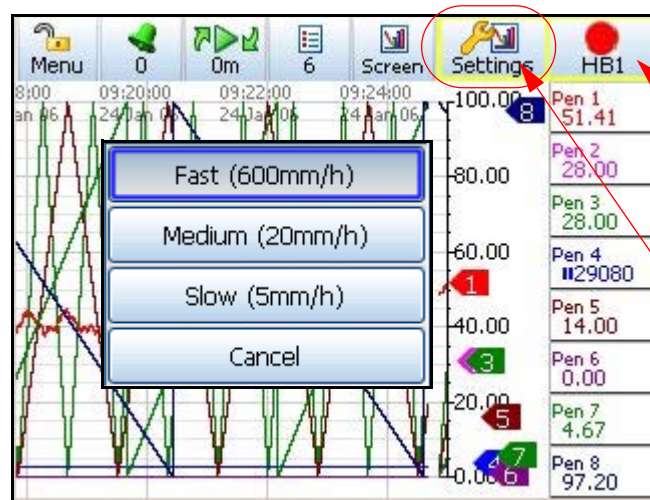

Press the Hot Button to trigger an event

Touch the screen to produce the Settings button.

Select Settings to produce the chart speeds menu

QuickView

Changing chart speeds can be used as quick view of the data at different resolutions. It is recommended not to change speed configuration frequently while using quick view of the data.

Hot Button

This function is disabled by default. To enable the Hot Button go to [“Settings” on page 170](#). The hot button has a customizable caption (name) up to max 7 characters.

The Hot Button function, when active as an Event cause, enables the user to select the Hot Button on the active screen and the corresponding event (that the user needs to set) will be triggered. The **Multitrend GR** and **DR Graphic** supports 4 hot buttons, **Minitrend GR** supports 2 hot buttons, **eZtrend GR** supports 1 hot button. If enabled, hot buttons will always be visible on the top status bar at right corner below recorder name and date time labels.

To set up a Hot Button as an Event cause go User Action sub menu in [“Event Causes” on page 124](#). After setting up the event cause user can set up event effect. See [“Event Effects” on page 128](#).

Screen Activity

Alarm Markers



Alarm markers appear when an alarm is setup in the Pen Alarms menu. Hi and Low alarm markers appear as a triangle on a DPM or Bar, pointing up for a Hi alarm and down for a Low alarm. [See “Alarms Menu” on page 89](#)

Deviation Alarm Markers



These are diamond shape markers. Deviation is how far this pen can deviate from the Ref Pen before triggering an alarm.

[See “Alarms Menu” on page 89](#) to set up the alarm Type, Deviation Level and the Ref Pen.

Rate of Change Alarm Markers



There are two types of rate of Change Alarms; Rate Up and Rate Down. They will appear on a DPM or Bar when a Rate Up or Rate Down type alarm has been set up in the [“Alarms Menu” on page 89](#) and has been triggered. The Rate Up Alarm Marker will slope up to the right and the Rate Down Alarm Marker will slope down to the right.

Alarm Marker Flash Colours

For Hi, Low and Deviation alarms.

Table 6.1 :

	Alarm Markers Flash Colour	
	Magenta flash	In alarm not acknowledged
	Yellow flash	In alarm acknowledged, latched alarm
	Cyan (blue) flash	Out of alarm (latched) not acknowledged
	Grey	Out of Alarm

Pen Pointers

Pen Pointers appear on a scale next to a chart when no bars are present. They move to display the real-time value. Each pen pointer is numbered according to its associated pen and will flash yellow when that pen goes into an alarm state. Pen pointers will change direction and point up or down when a pen signal goes off scale.

Mark on Chart

There are two different types of Mark on Chart, automated or user. An automated Mark on Chart can be set up for:

- An Alarm going in and out of an alarm state,
- Start, Stop or Reset Totals
- Batch control such as Start, Stop, Pause, Resume and Abort batch.
- Generated by an effect of an Event

A user Mark on Chart is activated by first selecting a process screen that is displaying a chart. Go to the Messages List button on the Main Menu bar and select Mark. A text box will appear, enter the message you wish to be displayed as a mark on chart on the screen using the on-screen keyboard or a USB keyboard.

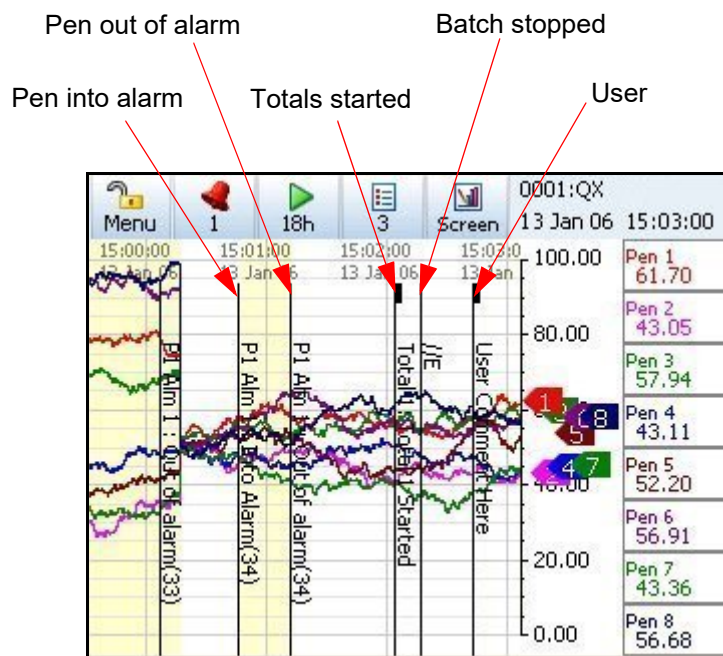


Figure 6.5 Mark on Chart
















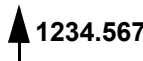

Screen Markers

Table 6.2, "Screen Markers," on page 250 shows different types of markers that may appear on the screen during normal data activity and where they would appear.

The markers change depending on if the signal goes High or Low, outside the Pen Scale, or outside the Input Range.

Note: It is recommended to display DPMs on a chart to identify over-range and under-range activity.

Table 6.2 : Screen Markers

	DPM	Bar	Pointer (horizontal chart)	Chart		
Upscale Burnout					Valid Data	
Outside Range High				Trace at Max		
Input Range Top	<hr style="border-top: 1px dashed black;"/>					
Pen Scale Top				Trace at Max		
Pen Scale Bottom	<hr style="border-top: 1px dashed black;"/>					
Displays as normal	1234.567	Bar		Trace 		
Pen Scale Bottom	<hr style="border-top: 1px dashed black;"/>					
Input Range Bottom				Trace at Min		
Outside Range Low				Trace at Min		
Down scale Burnout						
Invalid Reading	*****	*****		Trace at Min		

Screen Designer Screens

(not available on the **eZtrend GR**).

Screen Designer screens, known as Layouts (file type .lay) can be created in the Screen Designer software on your PC and then loaded onto the recorder. This can be done via SD card, USB or Network Share folder (NAS) transfer. Templates created in Screen Designer can also be loaded into the recorder, added to a recorder screen or screens and displayed. Refer to the Screen Designer manual for further details.

For layouts to be loaded into the recorder Custom Screens must be enabled as a Firmware option. See [“Section 7: Firmware Options” on page 253](#).

It is recommended to save Screen Designer layouts directly from the software onto a SD card, USB key or to a Network Share folder (NAS). This will contain all the files required for loading the layout into the recorder. If the Screen Designer layout is saved to another location before being transferred onto removable media, ensure that both the .bcf and .lay files are copied over. A warning message will appear if the .bcf file is missing.

Loading a Template into a Recorder

One or more Templates can be loaded into a recorder, added to a recorder screen or screens and displayed. To save a template in Screen Designer onto removable media refer to the Screen Designer manual.

Fit the removable media into the recorder and go to *Main Menu > Configure > Layout* and select Load. The Device selection menu will appear to select the correct media. Enter a new file name if required and press the Load button.

Go to *Main Menu > Configure > Layout > Edit* and select Add Screen. Go to the Template Type option and your template will be listed here. Select either **GR Series** or **X Series** recorders and then the recorder type: **Minitrend/QX/GR, Multitrend/SX/GR/DR Graphic**. Select your template and it will be added to a screen, re-name the screen as required.

To display the new Layout go to the Screen button in the Main menu bar at the top of any process screen and select the next button to scroll through the screens.

Loading a Layout into a Recorder

One or more Layouts can be loaded into a Recorder and displayed. To save a Layout in Screen Designer (Screen Designer/Custom screens are not applicable to eZtrend) onto removable media refer to the Screen Designer manual.

Fit the removable media into the recorder and go to *Main Menu > Configure > Layout* and select Load. The Device selection menu will appear to select the correct media. Select the desired layout and press the Load button.

Go to *Main Menu > Configure > Layout > Edit* and the new layout will be loaded into the list of Screens. If the Custom Screens option is disabled in the credit system the screens will not display.

To display the new Layout go to the Screen button in the Main menu bar at the top of any process screen and select the next button to scroll through the screens.

Note: When importing **X-Series** layout files to use on **GR Series**, certain changes must be made to the layout file, by the user, as per the new resolution and vice-a-versa for **GR Series** layout files being used on **X Series** recorder. [Table 6.3 on page 252](#). Changes are required for Custom Screens for the GR Series for this Screen Designer should be used.



Table 6.3 :

X-Series Screen Resolution		GR Series Screen Resolution	
eZtrend QXe	320 x 240	eZtrend GR	320 x 240
Minitrend QX	320 x 240	Minitrend GR	640 x 480
Multitrend SX	800 x 600	Multitrend GR	1024 x 768

Note: Non Process Screens are not supported in Screen Designer.

Bitmaps

Bitmaps can be inserted into a layout in Screen Designer and then loaded into the recorder just like any other layout (.lay).

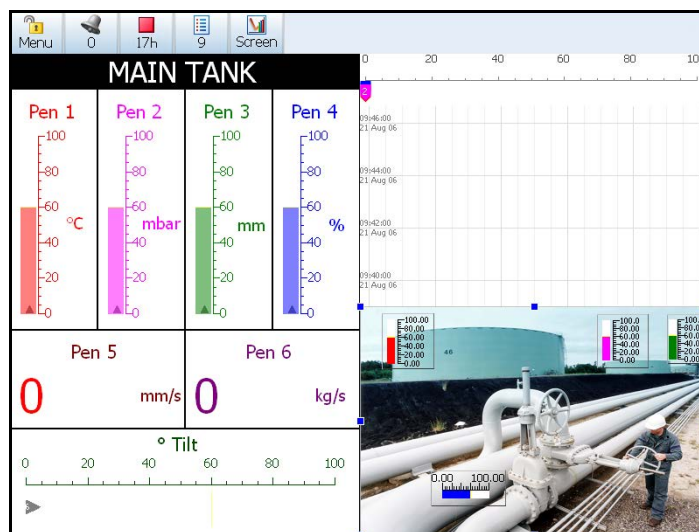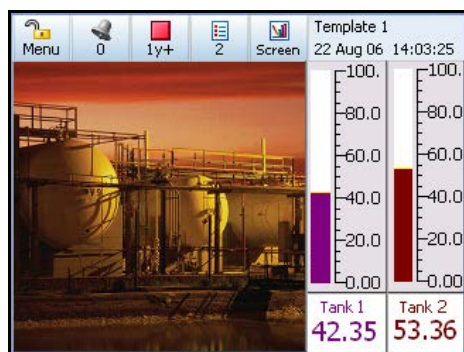

Section 7: Firmware Options

Firmware Credit System

The credits system is a flexible way of changing the recorder features without having to upgrade the firmware. Simply purchase a number of credits to cover your current and possibly future requirements and the recorder is delivered with the credits loaded. The credit value in each recorder is displayed in the Factory menu.

Select the Options button and by activating and de-activating the options in the credit list, the recorder will change its functionality. Go from: *Main Menu > Configure > Setup > Edit > General > Factory > Credits*.

Table 7.1 : Firmware Options

Firmware option	Credit value	Description
Full Maths* (Note 1)	4	Full Maths - this can handle math expressions that can consist of expressions up to 100-characters in length.
Full Maths with Scripting* (Notes 1&4)	6	A powerful multi-line scripting ability available to solve complex state based applications. Eg. building an application for: "If .. X happens, then Y will happen, else .. Z will occur.
Events (Note 3)	6	Events are certain conditions or operations that can be set up and logged according to the time and date of an occurrence. Subsequently events can be reviewed or displayed on a graph. The Event Causes currently include: Alarms - Into/Out of and Alarm Ack, Totals - Start/Stop/Reset/Reset and Start, Digital Input - ON/OFF/State Change, T/C Burnout, Scheduled - Once/Interval/Specific Days/Month End, User Counters, Max/Mins - Reset, System - Power ON/Setup Change/Internal Memory Low/Export Memory Low/FTP Memory Low, User Action - Mark Chart, Batch - Start/Stop/Pause, TUS - Start/Stop/Soak Started/Stability Achieved/ Soak Complete, AMS2750 Timer - TC Timers/Process Timers, TC Health Monitor. The Event Effects currently include: Mark Chart, Logging - Start/Stop, Totaliser - Start/Stop/Reset/Reset & Start, Digital Output - ON/OFF, Alarm Acknowledge - Single pen/Pen group/All pens, Emails, Screen Change, Print Screen, Counters - Reset/Increment, Max/Min (Reset), Chart Control-Pause/Stop/Resume/Clear/Prefill, Clear All Messages, Delayed Event, Script Timers - Start/Stop/Reset/Reset & Start, Play Sound - Start/Stop, Display Alert, Reports, Batch - Start/Stop/Pause, Update Tabular readings.
Fast Scanning mode (Note 4)	5	For fast processes, the scan rate and recording of the data can be set for up to 50 times per second (20ms) for up to 8 inputs for the Minitrend GR & DR Graphic and 8 inputs for the Multi-trend GR .
Totalisers/ Sterilisation calculation (Note 1)	4	Each pen can be associated with a totaliser. Using extra pens, the totalised values can be displayed and recorded; multiple totals can be calculated out of the same variable (weekly, monthly, etc.). The totaliser function can handle Fo and Po sterilisation calculation.
Custom Screens (Note 2)	4	Import custom built screens that have been created in Screen Designer.
Reports	3	Generate reports manually or using the event system to show daily/weekly/monthly Totals, Max/ Mins, Averages, Current Value. Messages, Message Lists - Alarm, System, Diagnostic, Security & User, Counters, Digital Inputs, and Digital Outputs. Reports can be printed, e-mailed as an attachment or exported to external media in RTF format.
AMS2750 Process	5	AMS2750 Process activates the Process Mode screen and the AMS2750 process configuration menus for furnaces and sensors in accordance with AMS2750 specification, including Thermo-couple tracking.
Health Watch/ Maintenance	2	The recorder keeps track of important "life actions" for improved diagnostics and preventative maintenance notification. Including Power cycles, Last powered up, Total On time, Total Off time, Longest off time, Battery life left, Backlight life left at 100% brightness, SD Card insertions, Hi/Lo CJC value (Hi & Lo temps), Analogue In last factory/user cal, Relay operations.
Print Support	2	Enables the printer option to print text from various screens using a standard PCL3 or PCL 3 GUI or PCL5 (Printer Command Language) printer, connected to the USB 2.0 port or to the network

Firmware Credit System

Table 7.1 : Firmware Options

Firmware option	Credit value	Description
AMS2750 TUS	10	AMS2750 TUS activates the TUS screen and the AMS2750 TUS configuration menus for furnaces and sensors in accordance with AMS2750 specification, including Thermocouple tracking. All of the survey information can be exported to a Report Generating tool. Multitrend GR and DR Graphic only
Batch/Groups	5	The Batch function allows the user to segment portions of data for further analysis. The Batch function manages sections of data. Concurrent batches are now associated with a group of pens. The pens with in each group will belong to the batch that is controlled by that group. Batches can be controlled through the event system and batch markers are setup by the user and are used to identify and analyse batches of data. Supports up to 6 concurrent batches.
Counters	3	User Counters can be set up and used as a part of the Events system to count an occurrence. Other counters are available depending on hardware availability. Eg. Alarm, Event, Digital Input, Relay Output and Pulse counters.
Modbus Master	10	Modbus master enables the recorder to communicate with up to 32 Slave devices on both Ethernet and RS485. The recorder itself can also act as a slave device while also being a master. RS485 is not available for eZtrend GR .
Remote Viewer	3	Extends the user interface of the recorder onto the desktop PC. Providing full remote control of the recorder launched from a web browser.
Email	3	Setup email accounts to send the following: When an Alarm is triggered or an Email can be sent as a part of an Event occurring, such as: Alarms - In/Out/Ack , Totaliser – Start, Stop or Reset, Digital Inputs – On, Off or State change, TC Burnout – on a specific Analogue Input channel, Scheduled Events – Once, Interval, Specific days, Month End.
Pwd Net Sync	5	Password Network Synchronisation. Password can be synchronised over the network, a recorder can be designated as a master of a password group and other recorders can be added to that group as slaves, the master will ensure all passwords are synchronised with all recorders in its group.
Extra Pens (4 pens)	2	4 extra pens to store and display totalised values, results of calculations, etc. Maximum is up to 16 extra pens for the Minitrend GR , 12 extra pens for the eZtrend GR recorders, and 48 extra pens for the Multitrend GR and DR Graphic recorder.
Hardware Lock	2	Uses the password permission areas to lock access to the hardware configuration functionality leaving some areas view only.
Ext. SD	5	This feature is available only on the eZtrend GR . Access to external SD card for setup load/save or data export would be credit based. If the external SD credits are enabled than only user will be able to access external SD for tasks like setup load or save, data or report export.
OPC UA	8	OPC UA server that provides Data Access functionality to OPC UA clients.

Notes for [Table 7.1 on page 253](#)

* Basic maths is standard in all recorders. Basic Maths math comprises of: Add, Subtract, Multiply and Divide

(1) Additional pens (“Extra Pens”) can be used to display and store the results of calculations, totalisers, variables imported via communications, or to store values.

(2) Custom Screens must be built using Screen Designer (.lay). Screens from V5 Screen Designer versions cannot be imported (.lyt). (not available for the eZtrend **GR**)

(3) Event markers are required to automatically reset the totalisers, for example on a periodic basis or on an external condition. (Not necessary if the totalisers are reset manually)

(4) Not available for the eZtrend **GR**

Credits can be applied to the Firmware functions until the total number of credits purchased has been used up. [See “Applying your Firmware credits” on page 255.](#)

Additional credits can be purchased later if new features are to be activated and not enough credits are available to support these additional functions

Firmware Options

Applying your Firmware credits

To activate the Firmware options follow this file path.

Main Menu > Configure > Setup > Edit > General > Factory > Credits

The Credit menu contains the Serial No. of the recorder, how many credits are available, displays the Options Code and lists what firmware Options are currently active.

- **Serial No.** - read only and cannot be edited.
- **Credits** - read only and cannot be edited. It displays the number of Credits available to activate additional firmware functionality including the total credit value.
- **Options Code** - the Options code is a unique coded number for this recorder that contains information that enables certain functionality including credit value.
- **Options - Select the Options button**
 - This displays how many credits are currently in use.
 - Select Options to produce a list of Firmware options available with their credit values. The number of credits required is shown in brackets.
 - Toggle each option On or Off to enable the feature within the recorder.
 - More credits are available from your supplier.

Edit Setup	General	Factory	Credits	Options
Serial No.	100089			
Credits	30			
Options Code	100089890302109			
Options	28 Credits in Use ▶			
◀ Back Copy To Finish ?				

Edit Setup	General	Factory	Credits	Options
Maths (4/6)	Full Maths			▲
Events (6)	✓			
Fast Scan (5)	✓			
Totals (4)	✗			
Custom Scrn (4)	✗			
Maintenance (2)	✓			▼
◀ Back Copy To Finish ?				

Section 8: Communication

Comms Configuration

Once the recorder has been set up for Comms the **TrendServer** software and Communications Server requires configuring to allow the recorder to connect with your PC. To set up Comms in the recorder go to [“Comms Services Menu” on page 108](#). For Comms wiring details in the recorder see [“Communications Connections” on page 44](#).

Follow these stages for successful communications.

- Read about the different Comms interfaces used by the recorders. See [“Standard Communication Interfaces” on page 257](#).
- Set up your PC / Network connections. See [“Hardware Installation” on page 259](#).
- Configure the **TrendServer** software. See [“Comms and Trend Manager Suite” on page 263](#).
- Comms Server software set up. See [“Communications Server” on page 269](#).

Standard Communication Interfaces

Before we start here is some information about the comms interfaces that are used in the setup of the **TrendServer** software and Communications Server. **Minitrend GR**, **Multitrend GR**, **eZtrend GR** and **DR Graphic**

Rear Ethernet Communication port (inside the case for DR Graphic).

The rear of the device is fitted with an Ethernet 100 port, which supports:

- Modbus TCP/IP. See [“Modbus” on page 258](#).
- Web browser. See [“Web Browser” on page 286](#).

Rear RS485 port

For the **Minitrend GR** and the **Multitrend GR** and **DR Graphic** recorders RS485: 2 wire (half duplex) to support Modbus RTU is standard. See [“RS485 Minitrend GR, Multitrend GR and DR Graphic recorders.” on page 44](#). Not available for the **eZtrend GR**

Front and Rear USB Communication Ports (inside the case for DR Graphic)

USB communication ports can be found one at the front and one at the rear of the recorder. The **eZtrend GR** only has one USB (2.0) port at the front fitted as standard. 2 USB ports for the **DR Graphic** are extended inside the case to a dual panel mount receptor near power supply. USB peripherals/wires can be connected on the panel mount connector for the **DR Graphic** inside the case.

The USB Host ports will provide an interface for:

- Save and Load Data.
- Save and Load Setups.
- External keyboard & mouse
- Barcode reader
- Mass storage device (USB key) or Hard drives (250 GB)

USB Barcode Reader

USB ports allow the use of a USB barcode reader.

Protocols

Protocols are an agreed-upon format for transmitting data between two devices. The protocol determines the following:

- the type of error checking to be used
- data compression method, if any
- how the sending device will indicate that it has finished sending a message
- how the receiving device will indicate that it has received a message

The following Protocols available are:

Modbus

Modbus primarily sends data, no setup information is transferred via Ethernet or RS485 ports. The device ID and Serial number is held in the setup and this information is required to locate the correct device in **TrendServer**.

Modbus only requires the correct Slave ID to connect, see [“Modbus” on page 109](#). If the device is detected using the Slave ID the Recorder ID and Serial Number will be transferred, if the device is not detected an extra device will appear in the database containing the Realtime data.

Depending on the type of network being used, it maybe advisable not to use Modbus comms and FTP in the same time to the same PC. This may cause the FTP transfer to time-out.

Only data can be sent via Modbus. No recorder setups or events are sent for realtime and logged data.

However, a Modbus interface, such as Modscan 32, can be set up as Modbus master and used to transmit Totals, Digital Input, Digital Output, a Comms Variable (CV) or Messages to the recorder.

Modbus X


Modbus X protocol differs from standard Modbus by the reversed byte order of the floating point number. The Comms Server provides an integrated facility for testing a device to help decide which modbus protocol variant to use. See [“Edit a Device” on page 276](#). Modbus Mapping and Function Codes, see [“Appendix J: Function Codes and Memory Maps” on page 381](#)

OPC UA

Only data can be sent via OPC UA. No recorder setups or events are available.

Hardware Installation

Device and PC Ethernet connections

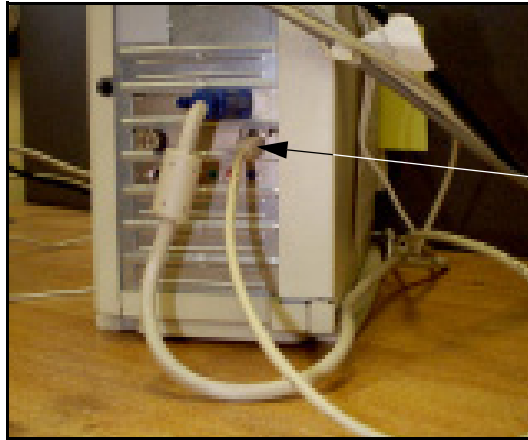


Connect an Ethernet cable from the Ethernet port on the back of the device to the Ethernet hub.

Connect another Ethernet cable from the Ethernet port on the PC to the Ethernet hub.

Hubs or Switches

Hubs and Switches come in all different shapes and sizes. Both are used as a common connection point for devices in a network. They are commonly used to connect segments of a LAN. A hub contains multiple ports and when a packet (Of data) arrives at one port, it is copied to the other ports so that all segments of the LAN can see all packets. Switches work in a similar way but send the data directly from one port to another. On a busy network this can be quicker and can have less data collision incidents.

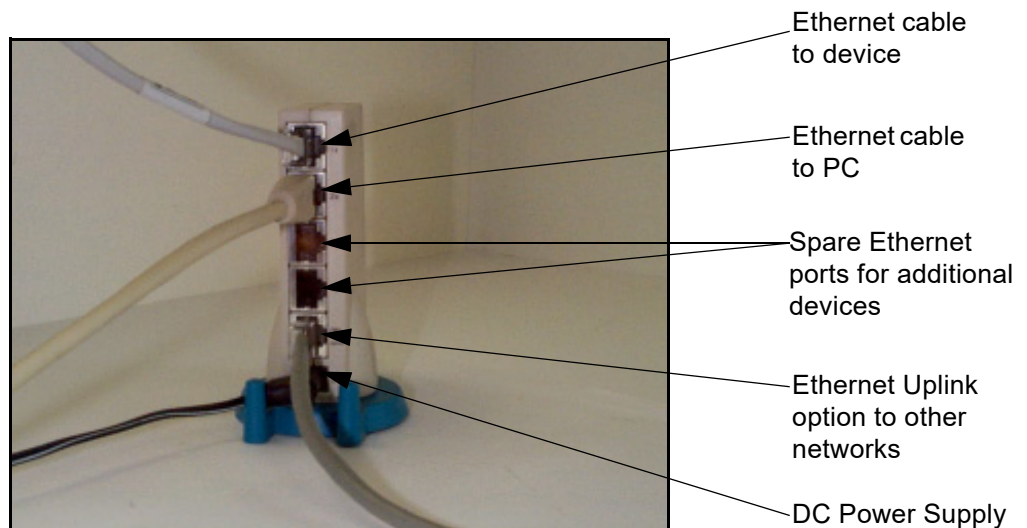

Getting connected - IP Address

Stand alone system

This is for connecting a local device direct to a PC using an Ethernet crossover cable. By using a crossover cable, the PC is able to receive data transmitted from the device.


Contact your IT systems administrator for setting up this link.

The TCP/IP properties are displayed showing the PC's IP address and the Subnet mask. Make a note of the IP Address and the Subnet mask. If there is no IP address or Subnet mask displayed, contact your IT systems administrator.

When this information is entered, the next stage is to configure the device.

[See "TCP/IP" on page 95.](#)


Figure 8.1 Stand Alone system

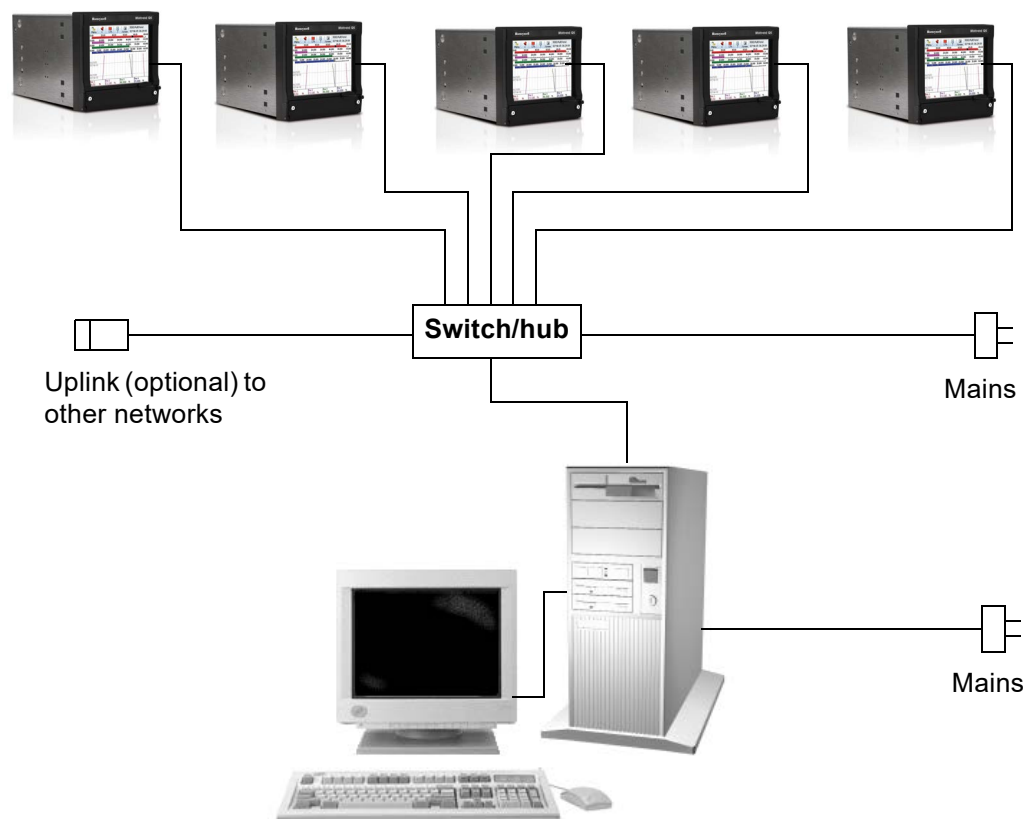

Local Area Network setup

This is a group of computers and/or associated devices e.g **Honeywell** devices, that share a common communications line and typically share the resources of a single processor or server within a local geographical area (e.g. within an office).

Figure 8.2 LAN Setup

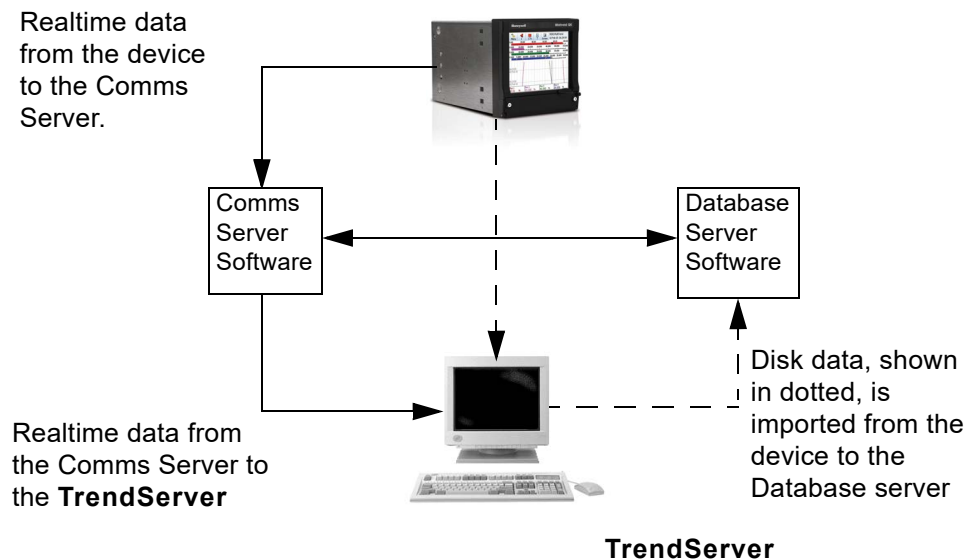

Links to Remote Networks

Communications is not just limited to local networks. Devices and databases on remote networks can be accessed using the **TrendServer** software via remote comms servers and remote database servers. Remote servers means it is not directly connected to your PC. [Figure 8.3, "Data Logging and Transfer," on page 262](#) shows an example of two local systems having access to each others remote servers.

TrendServer 1 can access Comms Server 2 and Database Server 2 and all the devices within the databases on those servers. Similarly **TrendServer** 2 can access the devices and databases held on Database 1, and Comms Server 1.

Data Logging and Transfer

Using the **TrendServer** software, the device's details are added on to a database in **TrendServer**. Once the device has been configured and enabled, data can be retrieved. Data is logged to the internal memory. This data can be exported to **TrendServer** via:

- SD Card/USB (removable media) = transfer setup and data
- Network Share folder (NAS)
- Modbus (RS485/Ethernet) = transfer data only
- FTP (Ethernet) = transfer Setup and data
- Secure Comms = transfer Setup and data


Hardware Installation

Exporting does not remove the data from the device but when the internal memory buffer is full the latest data will start to over-write the oldest data.

Data can be imported from devices and logged to a **Database**, known as '**Stored** and **Historic** data'. Databases are managed by a **Database Server**. The data can be retrieved, graphed, exported to spread sheets, e-mailed or transferred from devices to other databases located on **Remote Database Servers**. Using the **Comms Server** actual current data can be sent from a device straight to the server using Ethernet or RS485 links. This actual current data can then be logged to a database and viewed on a graph in real time, this is known as '**Realtime**' data. Different types of data, realtime, logged and historic data can be displayed next to each other on a split graph screen. The comms server is used to configure logging and manage databases and reflect each devices status. [See "Communications Server" on page 269.](#)

SD card is available as a credit option for the **eZtrend GR** recorder.

Figure 8.3 Data Logging and Transfer

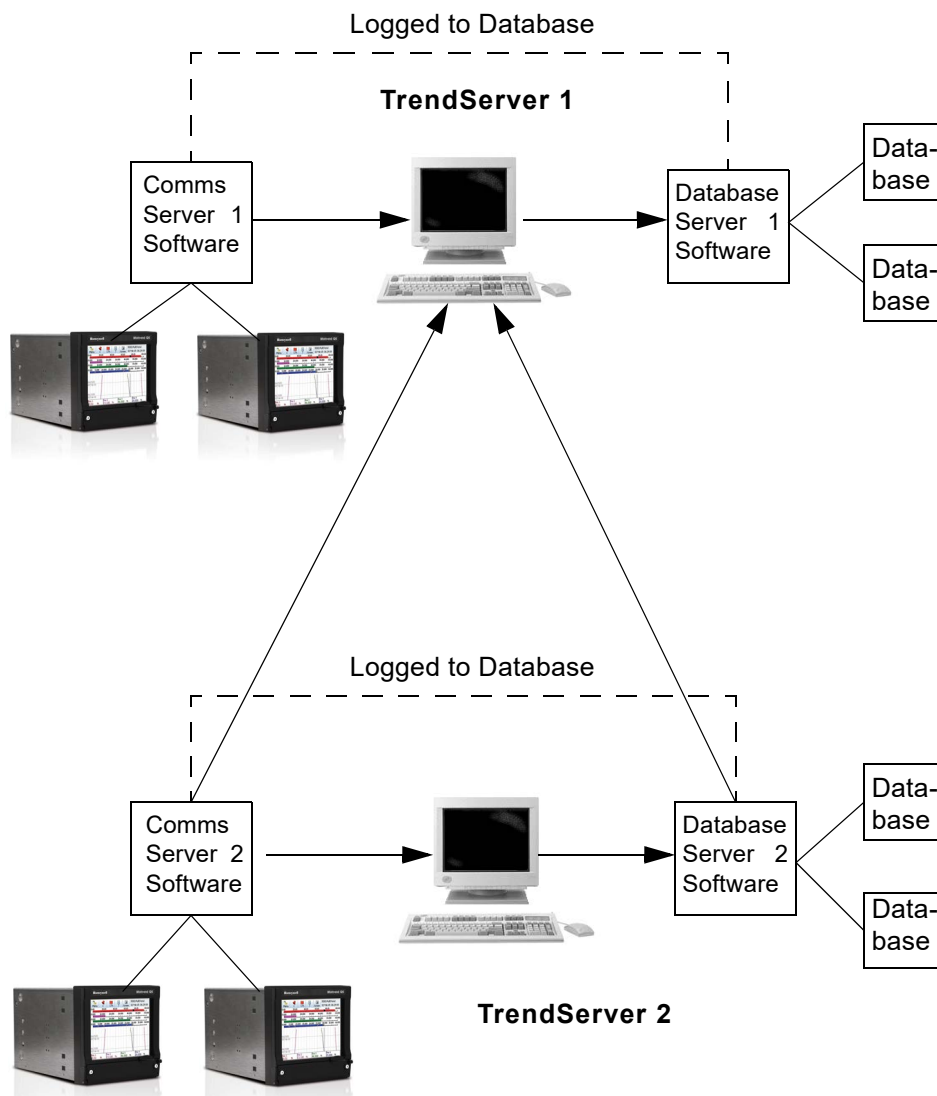

Comms and Trend Manager Suite

TrendServer software is required to set up and run communications to and from the devices and the PC software

TrendServer offers the ability to download and import data using **FTP** (File Transfer Protocol) via the **Ethernet Interface**. To use it you must have a device with communications fitted as standard or as an option on the **eZtrend** recorder with Ethernet as your active port and the FTP enabled.

TrendServer is part of the **TrendManager Suite** complete with its own **Communications Server** function. **TrendServer** is a fully network aware package which allows data viewing, archiving and communication over Ethernet and RS485 (RS485 is not available for the eZtrend GR recorder). Ethernet can provide communications limited only by PC resources, and RS485 can provide comms for up to 31 devices. Included as standard is the ability to e-mail, graph, print and export data. Device data can be entered into any PC on the LAN (Local Area Networks) and automatically viewed and graphed at any other PC on the LAN.

One of the unique features of the **TrendServer** software is the Realtime facility in conjunction with the Communications Server. Realtime data can be retrieved from the device to a PC via an Ethernet and/or RS485 connection. This data can be viewed, graphed and logged into the system. Data from the device can be logged to a database and held on a database server. Remote servers can be added to the comms server to allow access to remote devices on remote databases not on a local network.

Keep power saving options of the PC disabled, if enable it will turn off display and put computer to sleep which will stop real time data logging.

[See "Database Size Management" on page 272.](#)

System Requirements

Following minimum specification:-

- 1GHz Pentium IV processor or higher
- DVD drive
- Monitor recommended screen resolution 1024x768 minimum requirement, high colour.
- Windows Server 2012, Windows Server 2016, Windows Server 2019, Windows 10, and Windows 11.
- 4GB Mbyte or more of RAM (min 4GB Mbyte recommended)
- 16 bit colour graphics, 24 bit recommended (Screen Designer only)
- 50 Mbyte hard disk free disk space (2 Gbyte for **TrendServer**)
- TCP IP installed (for **TrendServer**)
- SD card reader or USB port

TCP/IP = Transmission Control Protocol/Internet Protocol is the main transport protocol used on the Internet for connectivity and transmission of data across heterogeneous systems.

With all **Honeywell** software, performance improves with more RAM, faster CPUs, and faster and larger hard disk drives.

NB. It is recommended that at least 100 Mbyte of free hard disk space is available for archiving data. Please note the more logging and data being stored, the more free space on the hard disk is required. This is not required with **TrendViewer**.

Software Installation

The Comms server is only available with the **TrendServer** software. The comms server will auto install with the **TrendServer** software.

Ensure the same communications information is entered into the hardware and the software in order for the communications link to work.e.g. Device name and ID., IP address of the device etc.

Install **TrendServer** from the **TrendManager Pro Suite** folder and the comms server and database servers install automatically.

Before installing the software on to your PC, it is recommended to close down all other applications, including any programs that automatically load during the start up procedure.

It is not recommended to load multiple installations on the same PC.

Load the DVD into the drive and wait for the autorun sequence to start. If autorun does not commence, follow these instructions:

- go to 'My Computer'
- select DVD drive
- select Launch.exe

Follow the instructions on the screen

During installation you will be asked to select or confirm the following:

- Which language variant (where applicable)
- Destination folder for the software:

A destination folder and file path will be designated, but this can be changed if required by using the browse button. Select which version of the application software to install. This will be dependant on which version has been purchased. **TrendViewer**, **TrendManager Pro**, or **TrendServer Pro**. Select to install

Enter the code and organisation as supplied with each particular version of software. The code can be found inside the DVD case. No code or organisation is required with **TrendViewer**.

NB: This is an alpha/numeric code and must be entered exactly in upper case. Codes from other **Honeywell** software will not work, each code is unique to the software supplied.

The **TrendManager Suite** may find it necessary to automatically upgrade certain applications within your PC to complete installation.

The setup will require a re-start (re-start your computer) to complete installation

Upgrades

There are three software packages available: **TrendViewer**, **TrendManager Pro Suite** and **TrendServer**. If your software upgrade is for the same package the software will automatically over-write the previous version. Local database information will not be affected and all devices data and setups are retained. Any other remote database servers will have to be added manually.

If you have purchased a different package to what is already installed, the new software will detect this and only make available the same package. To install a different package, first un-install the previous version. There is no need to save databases or data, these will not be lost when un-installing the previous version. Devices and data held on a local database are retained for use with the new package as long as it is installed into the same directory.

Start Up

The **TrendManager Suite** has been installed on the hard drive of your computer in 'program files' unless during set up you have changed the destination folder.

To re-start the software, click on 'Start', go to Programs and select **TrendManager Suite**, then select either **TrendServer Pro**, **TrendManager Pro** or **TrendViewer** according to which version of software has been installed. A shortcut for your desktop is automatically created.



Start up **TrendServer Pro** by double clicking the desktop shortcut, or from the programs menu. It is advisable to ensure that each recorder has a unique Recorder ID number, this will make identifying individual recorders in **TrendServer Pro** much easier. This is set in the recorder Ident menu, see recorder user manual.

The first thing to do is to get the recorders setup into **TrendServer Pro**. This may be achieved by saving the setup at the recorder to SD card or USB key, then putting it into the PC and using the "Import" button. This method has to be used for a recorder on an RS-485 network and can be used for a recorder on Ethernet. Alternately the setup can be saved to the recorder by importing the setup that has been placed in a Network Share folder (NAS).

TrendManager Suite for the **GR Series** has options for adding **X Seires** recorders, including Import of Setups and Pen Data from Directory Location. If Import is from the Network, either FTP or Secure Comms (credit option) at that time it will not display the options. Also the mode of communication, i.e. Secure Comms or FTP will be decided at runtime based on availability of Credits for Secure Comms.

Secure Communications


The Secure Comms protocol uses WSD and can be used to transfer data to and from a recorder.

For information on Secure Comms, WSD and Secure FTP see "[Secure Communications for File Transfer](#)" on page 107.

Secure FTP


The **Trend Server** software, will have root authority certificate of server in trusted root certificates. Whenever **Trend Server** software connects to WSD service, SSL handshake will take place and on successful handshaking secure communication channel will be established and data flowing between these two end points will be encrypted. Only WSD clients with valid certificates can connect to WSD service. Data transfer between the recorder and **Trend Server** software will be in secure mode.

Figure 8.4 Import recorders

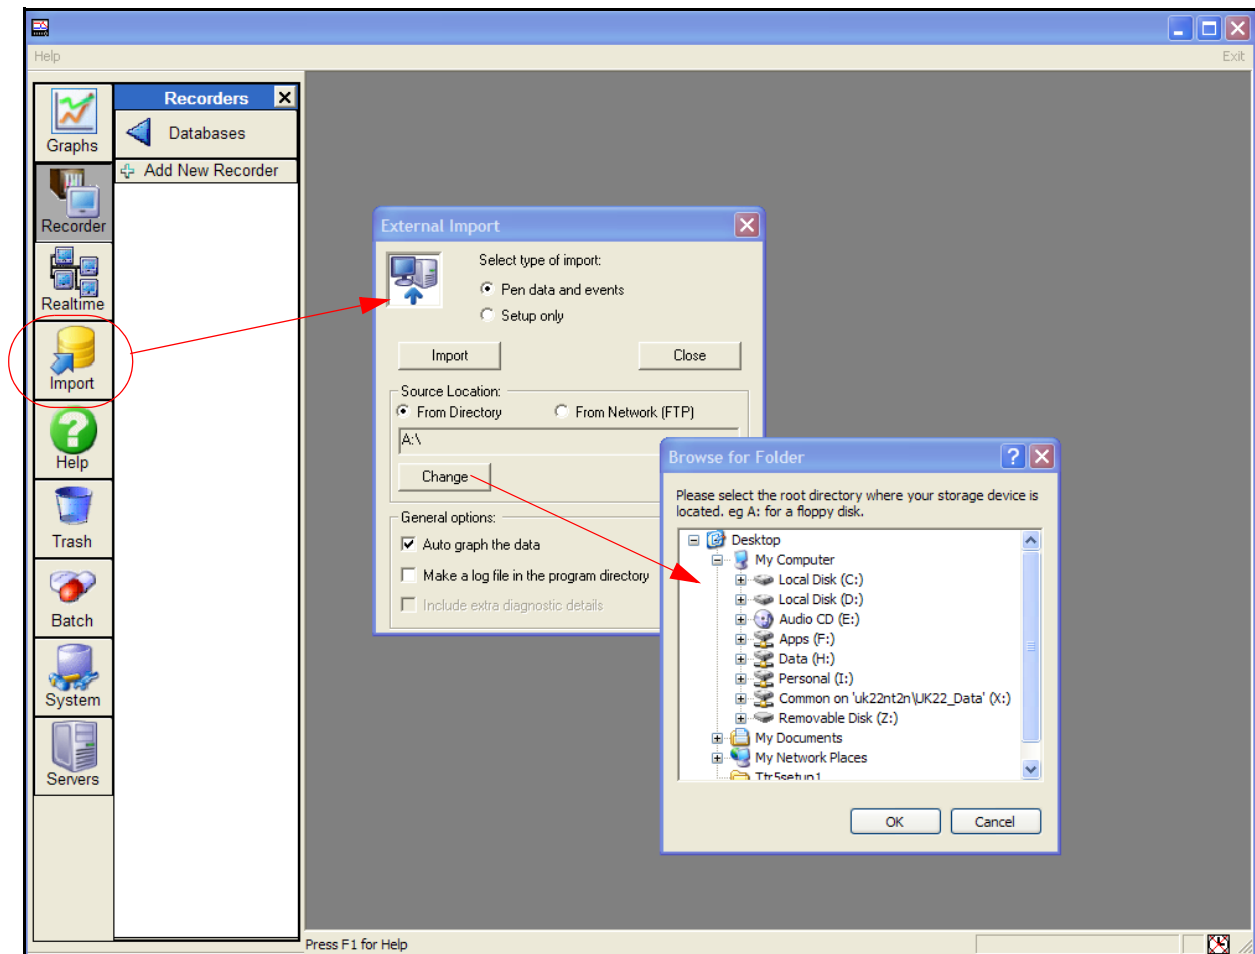

When the External Import box appears select “Setup only”, use the “Change” button to browse for the device. Select the “import” button to import the setup to **TrendServer Pro**.

Comms and Trend Manager Suite

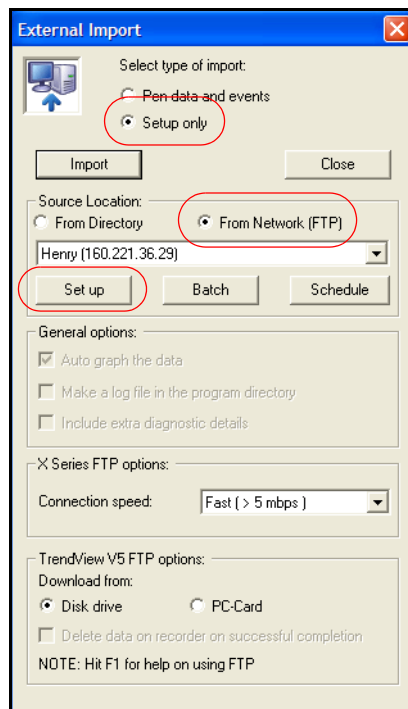

Or for Ethernet connections the setup can be downloaded from the recorder via FTP. Select “Setup only” as shown, but change “From Directory” to “From Network (FTP)”.



When “From network” is selected the dialog box will change.

Hit the “Set up” button. The dialog box extends to allow you set up your recorder to allow FTP transfers.

Recorder information imported by FTP will not update in the Modbus Profile tool. To ensure the recorder details are updated in the Modbus Profile tool setup must be imported manually using removable media.

See for more details [“Modbus profile tool, data update” on page 276](#).

Press the “Add” button to add a new recorder to the list.

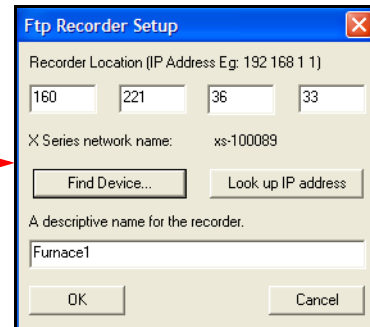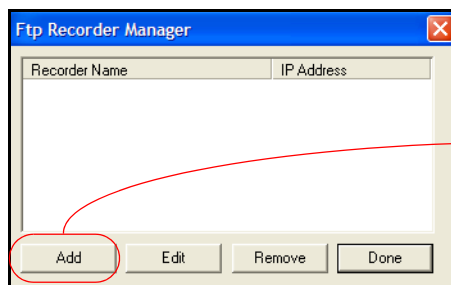

Enter the IP address from the recorder that you noted earlier. If you don’t know it select the “**Look up IP Address**” button. The other method is to select the “**Find Device**” button. This will search for all **GR** recorders on the network using their Network ID, eg **xs-nnnnnn** (where “nnnnnn” is the recorder’s serial number).

Give a name for the recorder. This should be something recognisable, all recorders should be given different names. Press OK.

On pressing “**OK**”, then “**Done**” you will return to the External Import dialog box as above.

Check that “**Setup only**” and “**from Network (FTP)**” are still selected. Then drop down the list and select the recorder you have just added. The recorder name and IP address are in the list.


Finally select “**Import**”, **TrendServer Pro** will download the setup from the recorder and this will be displayed in a setup window. Press **OK** and this recorder setup will be added to the recorder list.

Note: The recorder will be added to the list under the Recorder Name as set in the recorder itself. (This is the name that appears in the top right corner of the recorder screen when in normal logging mode) NOT the name you gave the recorder when setting up the FTP.

Comms and Trend Manager Suite

If you select the “**Recorder**” button on **TrendServer Pro** this will show a list of all recorders currently logged with a setup. The recorder just added will be the last one on the list.

This name will be used to set up the Modbus Profile in Comms Server for the recorder.

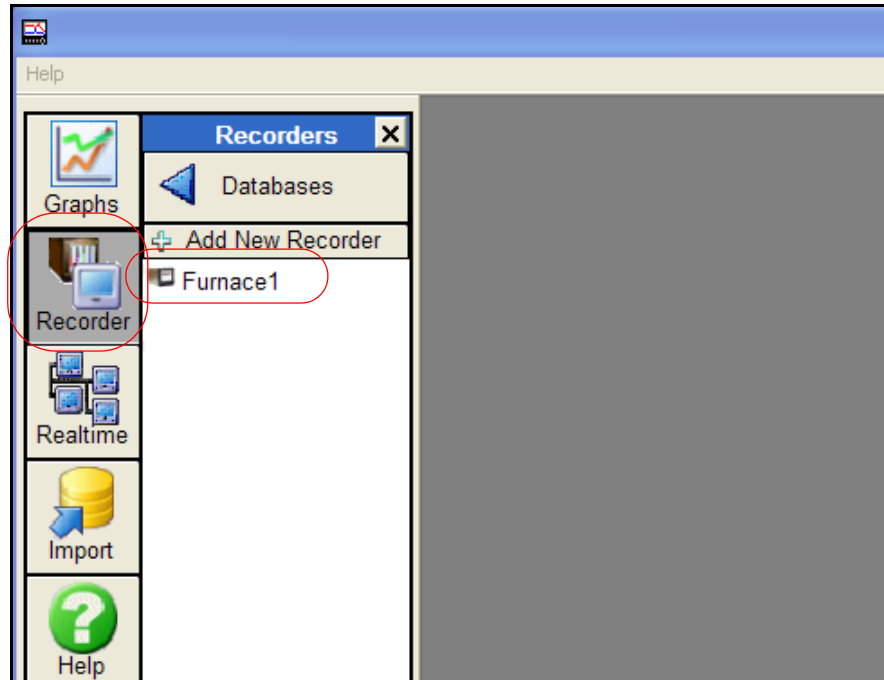

Importing Data via FTP

Select type of import as Data, this is the same as for Importing from a directory except that when importing data via FTP you will have a choice of New data or all data. The All function will import all the data in the recorder's memory to the external device port. The New function will just import any new data since the last import was made.

Communications Server

Comms Server Overview

The **Comms Server** and the **Database server** will run as a Service and can run independently of the **TrendServer** interface. Refer to the **TrendManager Pro Suite Software** Manual, Installation instructions. The Comms server will enable the user to:

- Monitor the status of communications with a device on any serial port, up to 8 ports and an Ethernet connection.
- Set up local and remote databases
- Set up local and remote servers
- Modbus protocols supported on Ethernet and Serial ports
- Enable and disable ports
- Add, edit and remove devices
- Log to database or client local connections.

Comms Server Start up



To start the CommServer

Go to Start -> All Programs -> Trendview Recorders -> **TrendServer Pro**

Launch Communications Server application, and this will bring the tray-icon.


The comms server manages the communications status of devices on a serial port (RS485) or through an Ethernet connection. Only Modbus protocol is available for **GR** devices, see [“Modbus” on page 258](#).

Comms Server
Administration
and Toolbar

Database Servers

Communications
Ports

Figure 8.5
Comms Server
Overview

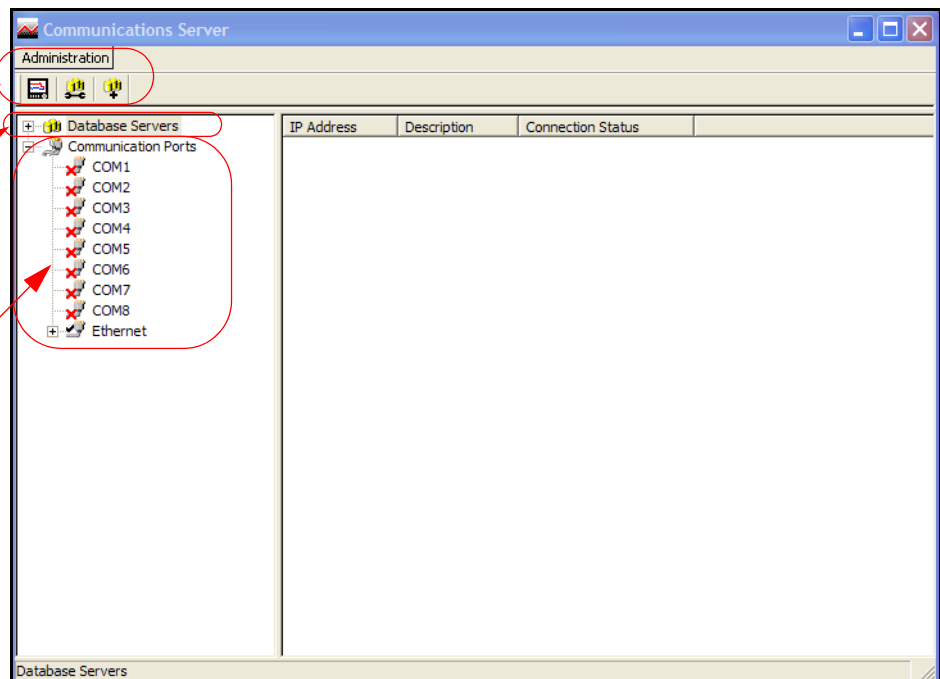

Communications Server

The Comms Status shows all the activity of devices, Communications ports, Databases and Database Servers. The window to the left displays the areas controlled by the comms server, the database servers and the communications ports. The display area(s) to the right will display details of any item selected in the left window. Depending on what has been selected the right window will split in two to give logging information. Items listed in the left window that have a + sign against them contain other items, click on the + sign to reveal the list of items contained within. The + sign will change to a - sign when all the items are displayed. To close the list, click on the - sign.

Comms Server Toolbar

Administration

The **Administration** button appears in the top left of the comms server, it contains:

- **Shutdown Server** - From here the comms server can be shut down this will disconnect the comms server, it will also shutdown the database servers at the same time.
- **Preferences** - The **General Settings** tab has an option to minimise the Server when it is opened. The **Diagnostics** option that will produce an additional tab to the bottom window, this will display properties and values of a selected device. **Send Recorder Events** is an option that needs to be enabled to allow event data to be exported when the export data function is performed and this will also allow event chart controls to be enabled. The **Clear Setup Cache** button will remove all setup files. **Network Settings** is for PC's with more than one network card fitted to access devices on other networks. The network cards are displayed here for selection. If the 'Use NIC Default IP Address Selection' is ticked then the first network card that was added to the list will always be selected.
- **Preferences** - The **Timing Setups** tab displays the current timings for the current communications setup. These entries should be configured correctly and not require any changes by the user.
- **Contents** - Enables the Help files.
- **About Communications Server** - Gives the version of the software.



Add a new Device to a communications port.

Use this icon button as one way of adding a device to Communications port. Other ways of adding a device are to right click on the desired port in the left window ie. Ethernet, and select the **Add Device** option. Or select a comms port in the left window, right click in a clear space in the top window and select Add Device. [See "Add a Device" on page 273.](#)



Configure Database Logging

Use this icon button to configure a device for logging channels to a database. Other ways to configure logging are to right click on a comms port or a device in the left window, or a device in the top window displaying the device for that port.



Connect to a new Database Server

Use this icon button to connect to a database server, either a **Local**, or **Remote Server** that has been added to the database servers list. Connection can be made by selecting 'Database Servers' in the left window and then right clicking in a clear space in the top window displaying the database servers list.

Comms ports

The **Communication Ports** is a list of ports available, **COM1** to **COM8** and **Ethernet**. As devices are added they are displayed under the port name. Click on Communication Ports to display a list of all the ports in the main window, tick the required port to enable. Click on a port and the main window splits into two windows, top and bottom.

The top window displays details of the devices using that port including device **ID No.**, device **Name**, **Mode** and **Status** show if the device is connected, how many **Channels** the device has enabled, an **Active** button to activate the device and the device's **IP Address**. As devices get added to each port they will display in the list for that particular port.

The default is N-8-1 which means no parity, 8 data bits and 1 stop bit. This is currently the only byte option supported by Comms Server.

Database Servers

The **Database Server** will list databases and display the devices within each database as they are added. Click on any of the database servers or the database within and details of that item are displayed in the main window. The main window will split to give additional information for databases showing comms port and device details.

Devices are added to the comms server through the Communications port, the device can then be configured for logging. The devices appear in the database and these databases are held within database servers. [Figure 8.5, "Comms Server Overview," on page 269](#), shows the comms status screen, in the left window from the top is displayed Database Server, Local and remote database and devices held on the Local database. All Logging configuration for comms logging and logging to a database is set up from the Comms Server.

Connected databases are displayed with a green icon. If the database is in red it is not connected, check the **IP Address** and **Device ID** are correct and a protocol has been selected on the device. Un-tick and then tick the active box on the comms server to restart the database connection.

This section looks at the Comms Server's main elements displayed in the Status Screen: Database Servers, Local and Remote Servers, Databases, Communication Ports, Database logging and Client connections

Remote database servers can be added to the list to enable access to devices held in other databases on a remote database server in another location. To connect to a remote database server the IP address must be known of the PC where the databases server is held

Items with a '+' sign signifies there are items listed within. Click on the '+' sign to activate/expand.

- Listed under the Database Servers are a list of Servers.
- Listed under each Server are the Databases.
- Listed under each Database are the devices



This is the Database Server icon.



This is the Database icon

The bottom window has three actions, **Client connections**, **Database logging** and **Diagnostics**. When a device is selected from the top window details of the device's activity is displayed here. A device logging to a database will display details in the Database logging tab.

Realtime data will display in the Client connections tab. The Diagnostics tab can be activated by going to Administration, Preferences and ticking the Show Diagnostics box, this will display properties and values of a selected device.

Database Size Management

Although there is no fixed maximum size for a **Honeywell Trendview** recorder database, we recommend that they be limited to some practical limit, rather than just letting it increase in size unchecked. Large databases will impact the performance of your PC, the larger the database, the slower the performance of your PC will be; eventually the PC would stop as the hard drive is filled up. Another concern should be the protection of your database and archiving of the data in the event of a hard drive failure. Larger databases increase the time and effort required to back up the data and increase the risk of unintended data loss if there is a PC failure and the data is not backed up.

The PC's performance is dependant on the size of the database and the PC characteristics (e.g. Performance, Memory, Hard-drive space) along with how many recorders are connected to it. An initial recommendation would be that if your process involves archiving to removable media (DVD for example) then the Database should be kept to 4GB to ensure that it fits onto a DVD for long term storage. This would provide good PC performance, make archiving of the data easier and limit the risk of data loss between archives. As with any recommendation, you need to evaluate this relative to your needs; this is your data and it is important that a suitable process is put in place to ensure that it remains protected and secure while achieving adequate process performance.

Comms Server Setup

The comms server software can be run independently to the main application software by creating a shortcut to the Startup folder. If over-writing a previous version of **GR** comms server, only the local server will retain the database information and load all the devices and settings from the databases. Any other remote database servers will have to be added manually.

Comms Server - new user

Using the comms server from scratch requires:

1. Add a new device to a Communications port. Devices will appear under the Communications Port, when selected, in the left window and will appear in the initial database on the local comms server. [See "Add a Device" on page 273.](#)
2. Click on 'Communication Ports' in the left window to display a list of the ports in the main window. Tick the port that the device has been added to. [See "Comms ports" on page 271.](#)
3. For a realtime connection, check device connection status by clicking on the device under its comms port in the left window to display the device status in the top main window. Green LED's will show a realtime connection is made. If grey LED's are showing and the device displays 'Unconnected' and if Red LED's display then there is a problem with connection. Keep power saving options of the PC disabled, if enable it will turn off display and put computer to sleep which will stop real time data logging
4. The data from this device can now be logged to a database by using the Configure logging screen and setting up channels for logging with the log rate and type and setting up a destination database. [See "Logging Configuration" on page 278.](#)
5. When the realtime data is being run, eg. graphed to the application server software, this will enable the bottom window that will display details of the data.

Add a Database

To add a database to a server, right click on the server eg. Local Server, select Add Database and complete the dialog box details for the name and description of the device.

Add a Database Server

1. Use the database icon with a + sign in the top left of the comms server window.
2. Right click on Database Servers in the top left window

Connect to a Database Server

1. Select 'Database Servers' in the left window and then right click on the server to be connected in the servers list in the main window.
2. Connect to database server dialog box will appear, enter an IP address and a description to identify the database server.

Delete a Database Server

1. Right click on the database server to be removed and select the delete option.
2. A dialog box will appear with the IP address of the database server to be deleted. If this is correct, click on OK.

All database servers can be removed except for the Local Server.

Add a Device

There are three ways to add a device, they all deliver the same dialog box:

1. Use the device icon in the top left of the comms server window.
2. Right click on a selected Comms port in the left window, COM1 to COM8 or Ethernet and select Add Device from the resulting menu.
3. Select a Comms port and right click in a blank space in the top window and select Add Device from the resulting menu.

Add a Device via Ethernet.

Double click the ethernet icon in the left column. This will activate ethernet, the red cross will change to a tick.

Now the recorder must be added. To do this click the "add new device" button, The first in the row of three. This will bring up the Device Details box.

All these methods will produce the Add Device Details box. Areas of the box become greyed out as the selections are made.

Communications Server

- **Protocol** - The protocol should be matched to that set on the recorder. It will be Modbus-X by default so leave it at that unless you changed it on the recorder. For active Modbus devices, the recorder name and protocol variant can be changed (Modbus vs Modbus X). For an inactive Modbus device the device profile can also be changed.
- **Modbus Profile** - The Profile name box is used to tell **TrendServer Pro** how to access the data on the recorder. This profile is automatically generated from the recorder setup that was downloaded to **TrendServer Pro** previously.
The system creates Modbus profiles from an imported setup or logged data and creates a profile including information for pen, scale, units etc.
A set of profiles are available for **Honeywell** modbus devices. The profile Name is made up from the Recorder name, Type and ID number. Once the setup or data has been imported it will display in this window the next time that it is opened, no need to restart Comms Server.
For **GR** recorders drop down the list and select the recorder from the list. It will be in the list under the same name as the setup previously saved.
If any equipment, other than **GR** recorders is to use **TrendServer Pro** to log and graph data then a profile has to be generated.
The Modbus Profile Tool is available to aid in setting up Device Profiles for other devices, see [“Modbus profile tool, data update” on page 276](#). For more detailed information on the Modbus Profile tool refer to the **TrendManager Pro Suite** software manual.
- NOTE:** The Recorder ID number is NOT the same as the Slave ID Number
- **Communications Port** - Choose between Ethernet or RS485 for COM ports 1 to 8. This may already be entered depending on how you have chosen to add the device. A Comms option card and expansion card are required for the **eZtrend GR** recorder.
- **IP Address** - Go to *Main Menu > Status > System > General*. In this list is the recorder IP Address. The comms server uses IP Addresses to locate devices on local and remote servers. **GR** recorders can also be located using their network ID.
- **Network ID** - **GR** recorders will automatically register a unique Network ID using the serial number. The format is “**xs-xxxxxx**”, where xxxxxx is the serial number of the recorder.

Communications Server

This allows you to browse the recorder if you are using DHCP (Dynamic Host Configuration Protocol).

- **Slave ID** - This is a unique Modbus ID/Address used by the recorder to identify Modbus messages. Applications that talk to the recorder with Modbus will need to know this number to return messages to the device. Comms Server must the same number must match.
- **Recorder Name** - This is the name displayed in the top right any process screen on the recorder or found in *Main Menu > Configure > Setup > Edit Setup > General > Ident > Name*. The entered name will be used within comms server to reference the recorder.
- **Serial Number** - This is a read only box displaying the serial number for devices already on the network. This will display as Not Available when adding a new device.
- **Status** - This will automatically enable the designated port and the device will become active. This can be activated later from the main Comms Server screen.
- **Socket** - This number should not need to be changed, only by advanced users for network-ing.

When every thing has been entered use the “Test” button to make sure that everything is set up correctly. The **Test Profile** button enables the “Add Device” settings to be validated. It can be used to determine whether the recorder is configured for Modbus or Modbus X.

Because we are using Modbus-X, the Modbus-X column gives correct readings; the Modbus column returns wrong readings. (Vice-versa if using Modbus)

If the column shows the correct reading the recorder must be communicating correctly.

Press “Done”.

Test modbus device communications

The goal of this test is to help determine which Modbus protocol variant (Modbus or Modbus-X) the device being added has been configured to use.

The slave address and COM port/IP address from the setup dialog are used to get data from the first input register in the modbus device profile selected for the device.

The data is retrieved using both Modbus and Modbus-X. By programming a set value on the first channel of the device, it is possible to confirm the specific protocol that the device is using.

Modbus slave address

1

IP Address

160.221.36.31

Modbus profile:

Recorder ID:1

Channel Name	Reg. Addr.	Modbus Reading	Modbus-X Reading
Pen 1	6337	64.628510	25.532473
Pen 2	6339	0.000028	24.152302
Pen 3	6341	-6.706206E+016	4.714286
Pen 4	6343	0.000000	37.500000
Pen 5	6345	0.000000	25.000010
Pen 6	6347	-1.203979E+011	45.204956
Pen 7	6349	-5.910645E+022	86.447815
Pen 8	6351	0.000000	0.000000

Retry

Done


Communications Server

Find Device button

This can be used to find **GR** recorders on the network. It uses the recorder's unique Network ID to identify them and populate this list. Select your device from the list and press the Use Selection button to insert the recorder details into the Add Device box.

When you get back to the Add Device Detail Box, press "OK".

The recorder you have set up will now be added to the device list.

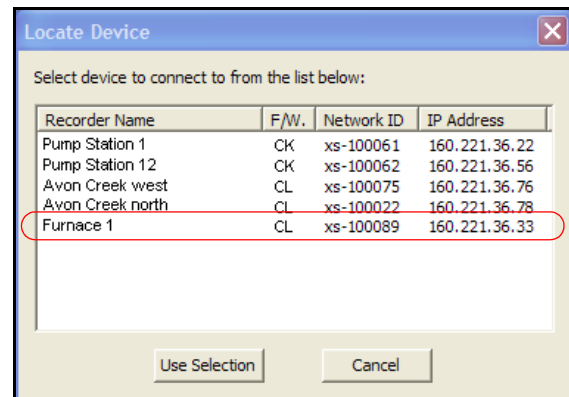

Modbus profile tool, data update

TrendServer Pro software will generate a modbus profile when data is imported from USB key, SD card, from a Network Share folder (NAS) or when it is manually imported via FTP. This applies to FTP of setup and FTP of pen data.

The automatic, or scheduled, FTP import of data from a recorder does not result in an updated modbus profile being generated. Once a modbus profile has been generated it is immediately available to the Comms Server but will not be automatically used by the Comms Server.

Any new connections created in the Comms Server will use the most recent modbus profile that has been generated when importing data on that PC.

For existing device connections, go to the relevant device and press right mouse button for the context menu. Select Edit Device and then press OK on the resulting dialog. The updated modbus profile will now be in use and this should be evident if you graph the data a couple of minutes later (give enough time for some data to be logged to the database using the updated modbus profile).

So in summary, when updating an **GR** recorder configuration, import the setup or pen data that use the new setup into **TrendServer Pro** software. Do this either via USB/SD Card/ Network Share folder (NAS) or a manual FTP operation, then go to Comms Server and bring up the "Edit Device" dialog (as described above) and press OK.

For more detailed information on the Modbus Profile tool refer to the **TrendManager Pro Suite** software manual.

Edit a Device

Select the Comms port containing the device for editing and right click on the device either in the left or top window. The Edit Device Details dialog box will appear showing the configuration for comms with that device. Any fields not greyed-out can be changed. For Ethernet devices the IP address can be changed. Any device can be made active or inactive from here. For active Modbus devices, the recorder name and protocol variant can be changed (modbus vs Modbus X). For an inactive Modbus device the device profile can also be changed.

For information on the **Test** button, see above. Click on the OK button to save the changes.

Delete a Device


Select the Comms port containing the device to be deleted and right click on the device either in the left or top window. Select Delete Device from the resulting menu. The Delete Device Details dialog box will appear showing the details of that particular device. Check this is the correct device for deletion, then click on the OK button and the device is removed, otherwise the operation can be cancelled.

Comms Server Logging

To set up logging you must first decide where to store the data. A database must be set up. The database can either be on the PC running Comms Server, or on another networked device.

There will be a database already set up by default on your PC when **TrendServer Pro** was loaded. This will be called "Initial database".

To set up a database on the PC click the "Database Servers" icon, this will expand to show "local Servers" i.e. databases on that PC. Click "local servers" to expand out to show all databases.

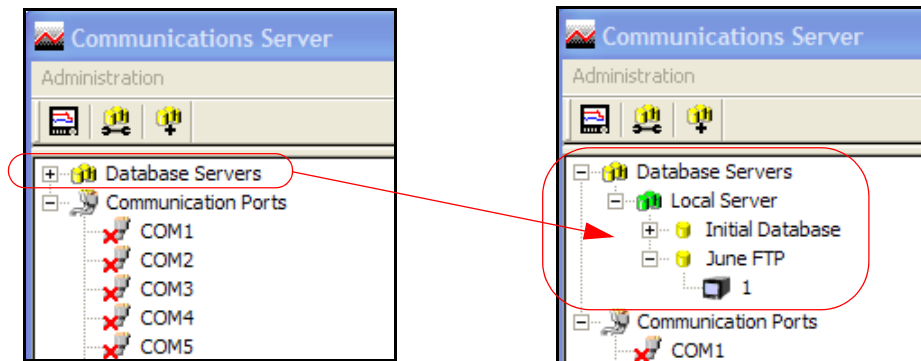

In the example shown there are two available databases. The default database called "Initial Database" and "June FTP".

Databases can be added by right clicking on the "Local Server" icon and then clicking "Add Database". Enter a database name and description, click OK and the new database will appear on the list.

To add a database server you will need the IP address of the device that will be the database server. Click the "new database server" button.



Enter the IP address and a new database server will be added. Add databases to this server as above.

Communications Server

Logging Configuration

This screen configures channels for logging from a device to a database. It can be accessed in several ways.

Figure 8.7 Logging Configuration

Logging Configuration

Port Number: Ethernet Device ID Number: 1

Database Configuration

Connected Database Servers: Local Server Database Currently Logging To: Initial Database

Channels available to be logged

Pen 9
Pen 10
Pen 11
Pen 12
Pen 13
Pen 14
Pen 15

Add Channel Selection
Add All Channels
Clear Channel Selection

Channels logging to the selected database

Source	Rate	Type	(new settings)
Pen 1 Temp	1 sec	Sample	edit
Pen 2	1 sec	Sample	edit
Pen 3	1 sec	Sample	edit
Pen 4	1 sec	Sample	edit
Pen 5	1 sec	Sample	edit

Edit Channel
Delete Channel

Summary of all changes Apply OK Cancel

This example of the logging configuration box was produced by right clicking on a specific recorder. Some of the areas have been auto populated.

1. Use the Configure Database Logging icon at the top left of the screen and select Configure Logging from the resulting menu.
2. Right click on 'Communication Ports' in the left window and select Configure Logging from the resulting menu.
3. Right click on the comms port and select Configure Logging from the resulting menu.
4. Right click on the device and select Configure Logging from the resulting menu.

Any of these will display the Logging Configuration box. If this screen is selected from either a comms port or a device then the comms port information will already be inserted. If the screen is selected from the icon or Communications Port heading then the comms port will need to be assigned. Select the device ID number (if necessary), from the drop down menu.

The next section is Database Configuration, a list of connected database servers and a list of databases that are currently being logged to. In this section is a window showing the channels available to be logged. As channels are selected from this window, three additional buttons become active: 'Add Channel selection', select each channel for logging, 'Add all Channels' for logging and Clear Channel selection.

Communications Server

Add Channels for Logging

As each channel is selected, or all channels depending on the button selected, the Logging Channel Configuration box appears so the Log Rate and Type of logging can be set for each channel individually or all channels.

If “all channels” are added the next box will ask how often you want these channels to be logged (log rate), this can be a sample every second to one sample every 24 hours. This selection will apply to all channels.

If channels are added one at a time using the “Add Channel Selection” button the same log rate box comes up, but a different log rate can be set for each channel.

When all the required channels have been added click OK.

When the channels have been selected they will appear in the bottom window, click on Apply to enable the channels to log. Once the channels are in the ‘Channels logging to selected database’ window they can be selected and the Edit and Delete button become active. The Edit button allows the logging rate or type of logging to be changed.

There is also a Database Events Logging box that can be ticked that allows any events to be logged to the database using Trendbus. (Not available for **GR** recorders).

Summary of Logging Changes - If any changes are made using the Edit button, the Summary of Changes button becomes active, this will show the last changes made to any of the channels for this configuration only.

The Delete button will take the channel out of this window and put it into the window showing available channels for logging, logging will stop for this channel.

The set up is complete and the logging to the database should start immediately.


To check the setup, go back to the Comms Server screen.

Communications Server

Comms Server Status Screen

If you have a graph open Comms Server should be showing that the recorder is operating by displaying flashing green lights in the “Active column”. Click and highlight the recorder. Click the “Database logging” Tab. The screen should now show all the pens logging for that recorder and their log rate.

Figure 8.1 Comms Server Status Screen

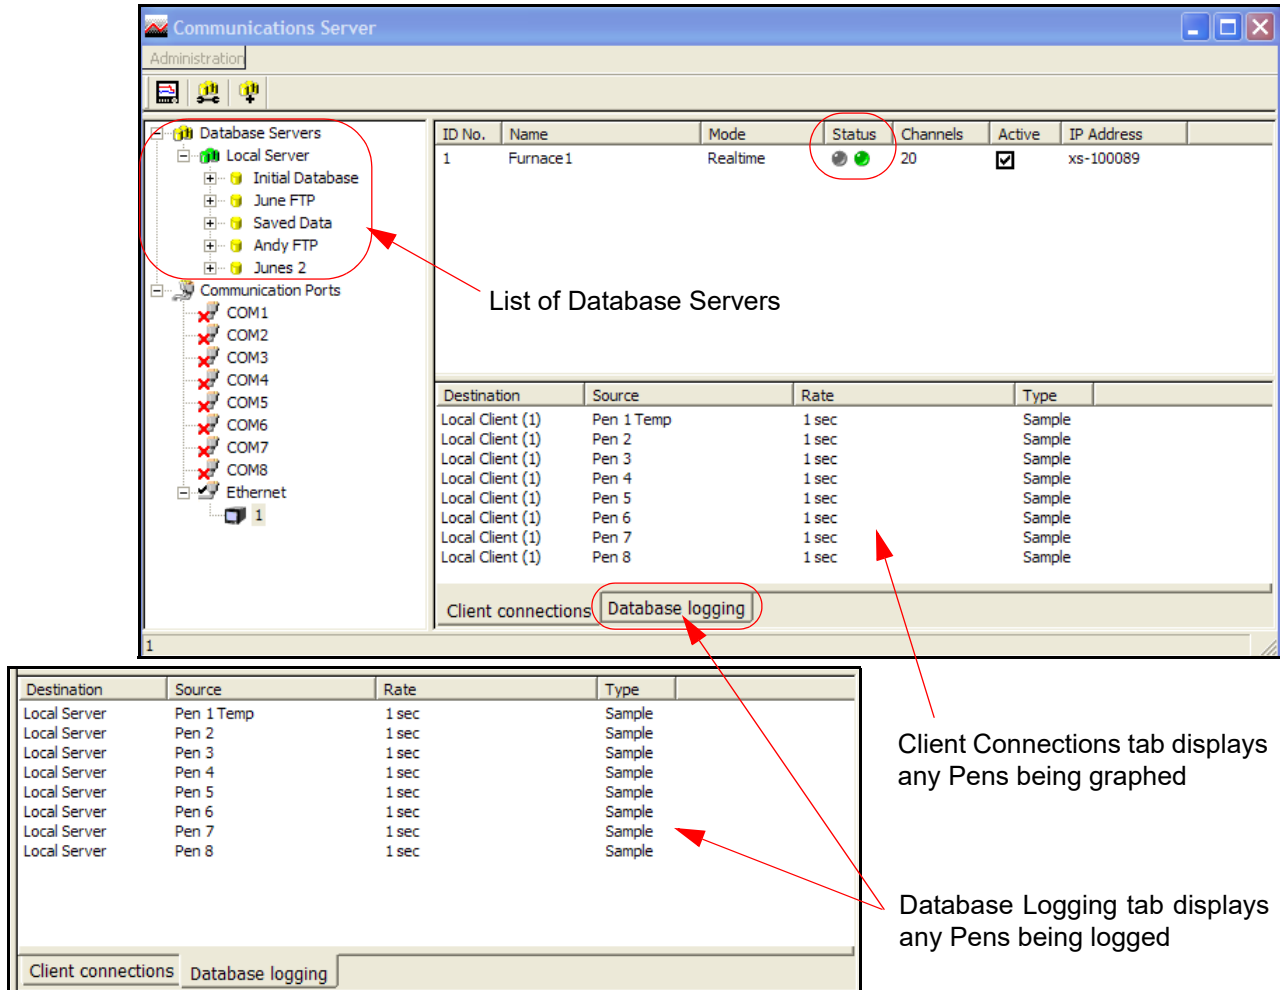

Comms Server can be minimised now, it will continue to run in the background.

Client Connections


Realtime comms data from the device will only display on the comms server communications status screen when realtime data is active on either the server software. Once data is active on a client connection, this window will display details of the device selected in the top window: its Destination or where the information is going to, Source or origin of the data (channel or event), Rate and Type of data sampling being communicated. Database Logging.

This tab will display information on what is currently being logged to a database for the device that is selected in the top window: its Destination or where the information is going to, Source or origin of the data (channel or event), Rate and Type of data sampling being communicated.

A third tab, **Diagnostics**, can be enabled using the Administration button, and selecting Preferences.

Send Recorder Events

Comms Server has a set of chart controls that can control the chart on the recorder from your PC. This can be done in [“Realtime chart controls” on page 281](#) or can be setup as an Effect of an Event.

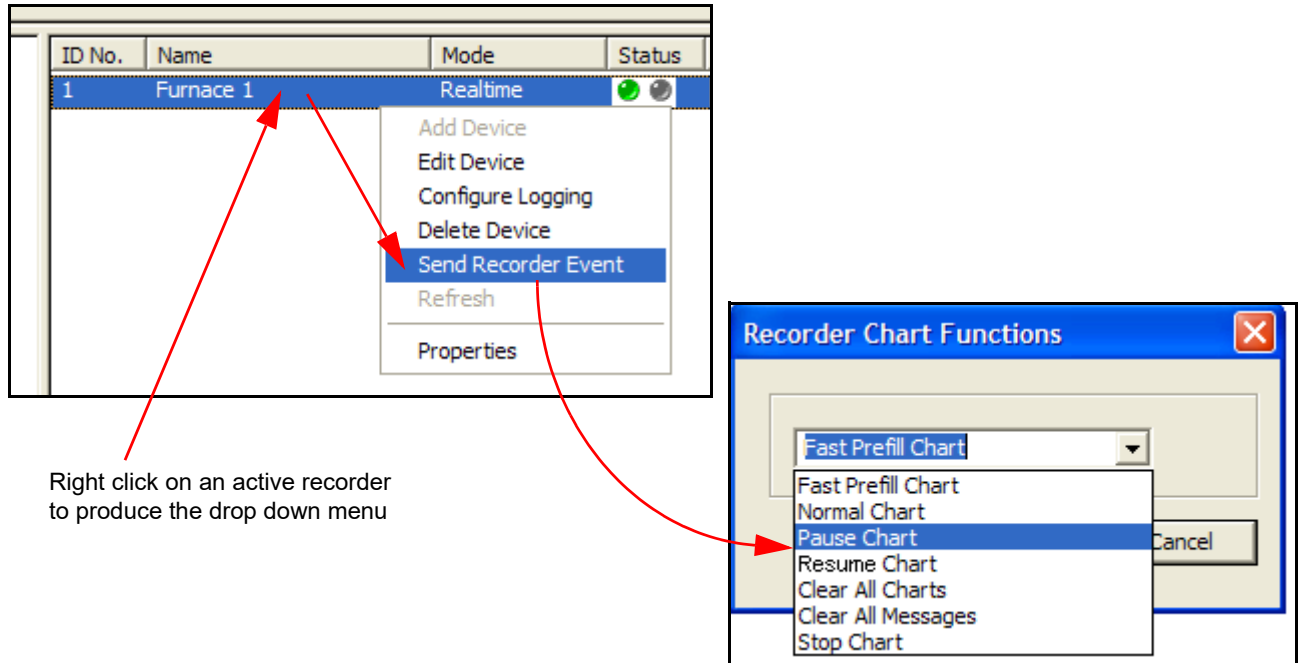

Realtime chart controls

Right click on an active recorder in Comms Server, Ethernet or RS485 from the recorders listed in the left hand window or from recorders in the main window.

- From the list select Send Recorder Events and the Recorder Chart Functions box will appear. If the option is not in the list go to Preferences in [“Administration” on page 270](#).
- Select a chart control function for immediate effect on the recorder. Because **TrendServer Pro** is graphing the data that is being transferred in realtime the recorders running on **TrendServer Pro** will not be affected.


Event chart controls

The same set of chart controls can be activated using the event system in **TrendServer Pro**. Chart controls can be used as an effect of an event happening. In the Events tab in **TrendServer Pro** set up a cause to trigger the effect of a chart control.

- **Pause** - this will pause the chart until it is resumed. Resuming a paused chart will display continuous chart data from when it had been paused. The chart can be stopped if in a paused state.
- **Stop** - this will stop the chart and no chart data will be displayed for the length of time the chart is stopped. If a stopped chart is resumed there will be a gap in the displayed chart data.
- **Resume** - this can be used after the chart has been stopped or paused. The chart data will continue from where it has been paused with no gaps displayed. But if the chart has been stopped the displayed data will display a gap in data until it is resumed.

Communications Server

- **Clear** - this will clear all the data being displayed. Data will not be cleared if the chart has been stopped
- **Prefill** - this will clear the chart and then fill it with the current reading.

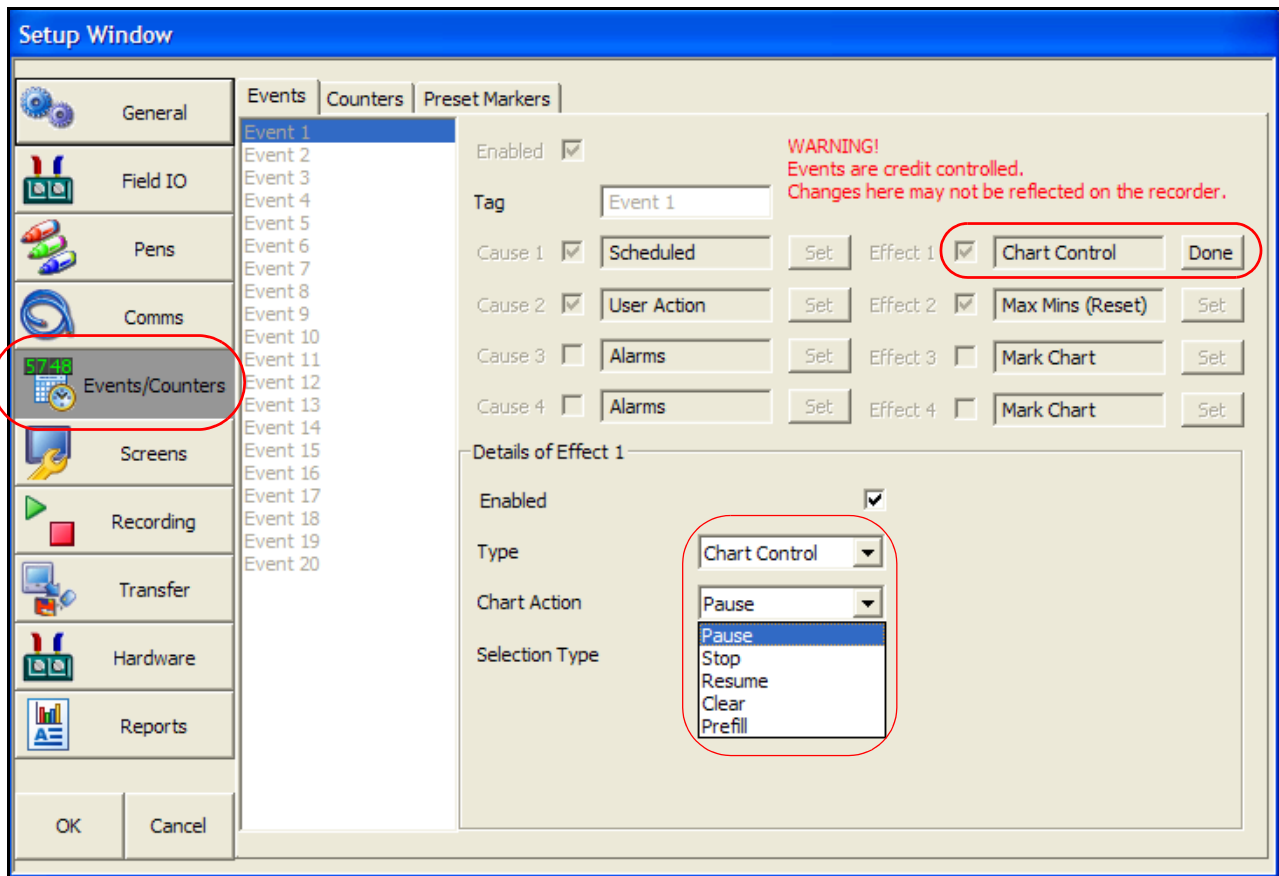


Realtime Graphing

To graph real-time data on **TrendServer Pro**, press the “Real-time” button located on the left hand side. This will list all the recorders currently connected. The recorder set up on Modbus will be in the list. The recorder will be in the list under the name that you gave it when entering the device details.

Either click and drag the recorder name from the list to the graph area, this will add all the recorders pens onto the graph, or click on “pens”, to list the pens available and drag the required ones onto the graph.

As soon as the pens are on the graph they should start to update in real-time. The graph will be split into two as below.

Figure 8.9 Realtime Graphing

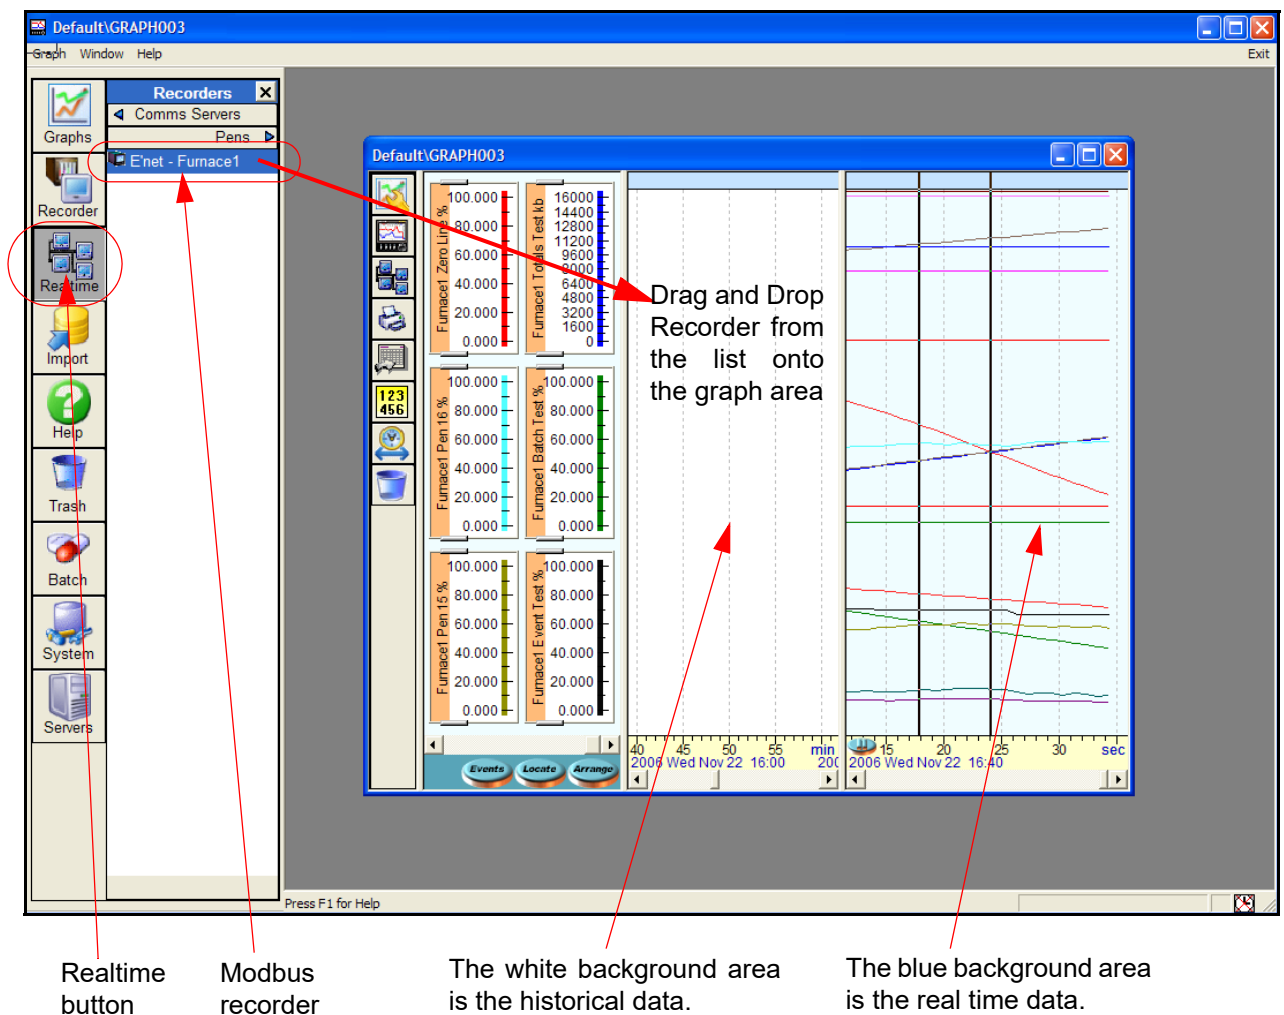

The white area for historical data will display the data that is stored to the database. At this point we have no data being stored to the database, it is simply being acquired and graphed, if the graph is closed any data downloaded via Modbus will be lost.

More information about graphing on **TrendServer Pro** and the options for arranging pens etc. are available in the **TrendManager Pro** software manual for this product. If this documentation is unavailable it can be downloaded at www.honeywellprocess.com.

Comms Server Database

On system start up the Communications Service will start automatically . This service is responsible for launching database related components. See [“Comms Server Start up” on page 269](#).


System Setup

The system can be set up two ways.


1. For customers who are setting up in preparation for the arrival of their devices. Using the **TrendServer** and Comms Server software, create a database for the device(s) and configure each device for logging using the comms server. When the devices are in place and connected check the IP address (for Ethernet devices only) and the device ID is correct.
2. For larger networks - Set up the hardware first noting each devices ID and IP address. Use the comms server software to set up the devices on a database and configure logging for each device. The devices will need to be set up on the **TrendServer** software before the connections can be tested and become active.

Shutdown Server

The Communications Server appears as an icon in the Windows system bar at the bottom right of the screen. Right click on that icon and you will see the pop up below.

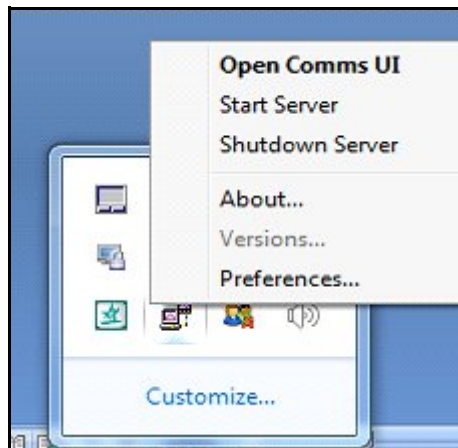


Select Shutdown Server and the following message box would pop up

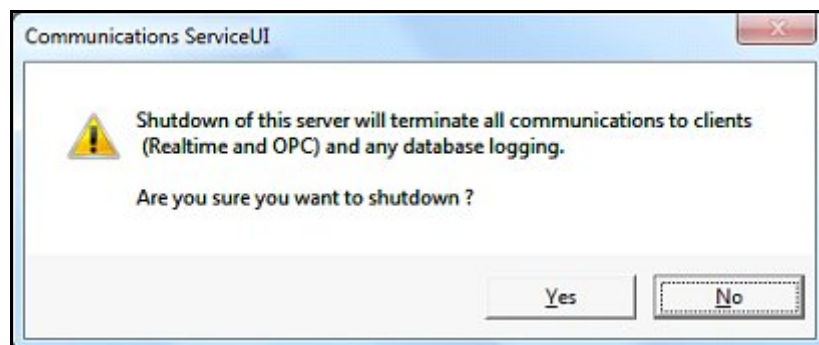


Select “Yes” and the following events will happen

Shutdown Server

If the Communication Service UI is open with Non-Admin privileges, the following message will appear. Select “OK” and the Communication Service UI will be closed but the **TrendServer** software will still be running:

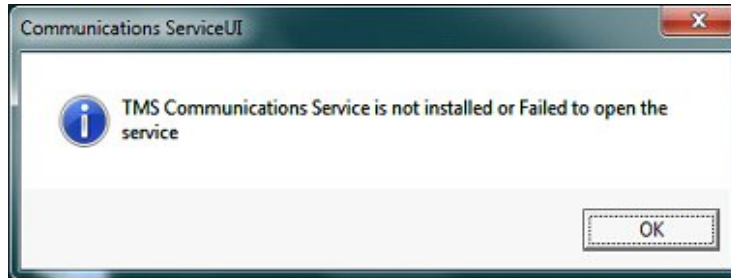

If the Communication Service UI is open with Administrative privileges, the following message will appear. Select “OK” and the Communication Service UI will be closed and **TrendServer** software is also successfully stopped.

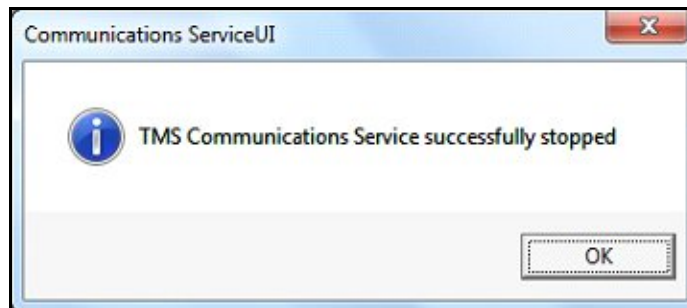

Select “No” and no actions will be taken

Modbus Capabilities

1. The Comms Server is a Modbus master. It has no slave capability.
2. The maximum speed of data transfer over Modbus is 1 (one) reading per second / per channel
3. The maximum speed of data logging of realtime Modbus data is 1 (one) reading per second/ per channel.
4. The maximum number of devices depends on whether the connection is serial or ethernet.
 - On the serial port, there is a physical limit of 31 devices. The Modbus comms can support anywhere between 4 and 10 devices at a rate of 1 reading per second depending on the complexity of the recorder configurations. As the rate is decreased from 1 (one) reading per second, the number of supported devices increases.
 - On the Ethernet connection, the current physical limit is 247 recorders talking Modbus due to a requirement that the Comms Server must have a unique ID for each device in the network. Additional **Honeywell V5** recorders using the Trendbus protocol could be supported on the network as long as their device IDs remain unique. With Modbus connection, anywhere between 24 and 64 devices are supported at a rate of 1 reading per second, again depending on the complexity of the device configurations. As the rate is decreased, the number of devices supported increases.
5. The maximum number of pens supported at once per second for a given device is 32. Up to 64 pens supported at once every 5 seconds. Then all 96 pens at once every 10 seconds for the **Multitrend GR** recorder.

The above specifications should be used as a guideline, because factors such as network speed and reliability could impact performance.

Web Browser

The Web Browse function can be enabled/disabled from the recorder. This allows you to view the recorder information only. The web button can be password protected if passwords are enabled. See [“Web” on page 113](#). This is a firmware option that first needs to be activated in Options, see [“Credits” on page 140](#). The Remote Viewer is a firmware option that can be added to allow access to the recorder from a web page. The Remote viewer option needs to be activated in the Firmware options screen, see [“Credits” on page 140](#).

To access your recorder's web page, type the device's IP address in to a web browser such as Internet Explorer. If Microsoft™ WINS system (Windows Internet Name Service) is available then the device name can be used to search for the device web page. To find your recorder IP address see [“TCP/IP” on page 95](#).

The recorder will automatically register a unique Network ID using the serial number. The format is **xs-nnnnnnn**, where nnnnnnn is the serial number of the recorder. This allows you to browse the recorder if you are using DHCP (Dynamic Host Configuration Protocol).

On recorders with password security enabled further login will be required to access Full Remote Control of the recorder from the web page and to enable a keyboard and mouse. For users with Password functionality enabled Login is required. Enter your User name and Password* in the box to gain access to the recorder web page.

Note: When using remote viewing with password control, a user's password can be viewed at the recorder. Care is required to prevent exposing a user's password during the remote entry of the password.

For Users without Password security just choose a language option to access the web page.

Select **Remote Viewer** to enable a desktop user interface. This will allow you to view and control your recorder in realtime.


***NOTE:** When using the remote control function for the recorder if you need to enter password in the recorder, it is recommended that you use the external keyboard and not the Recorder SIP (Soft Input Panel).

IP Address Troubleshooting

If your recorder's IP address begins 169.***.***.*** this means there is no DHCP Server (Dynamic Host Configuration Protocol) available to create a dynamic IP address. Either, make a DHCP server available or allocate a Static IP address, see [“TCP/IP” on page 95](#).

The recorders IP address can be viewed in the Status menu, see [“General” on page 205](#).

Internet Security Settings

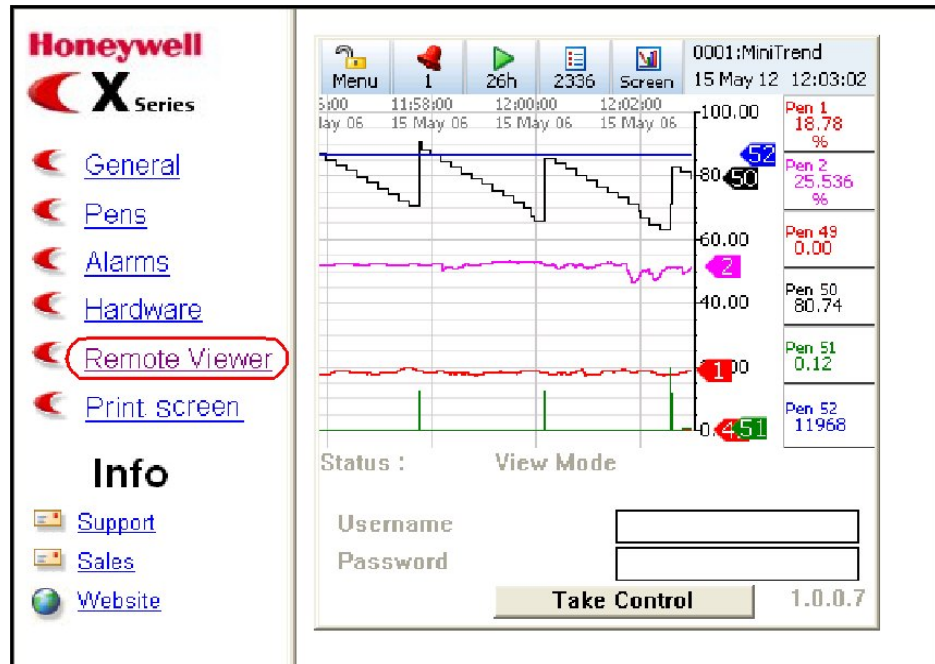

Internet Security Settings

Types of web browser for use with the Remote Viewer include Internet Explorer 5 and above.

Figure 8.10, "Internet Security," on page 288 shows an example from Internet Explorer 10 on Windows 10. The settings shown are for Internet access. If the device is to be accessed in an intranet scenario then the same has to be done for local intranet option.

Firewall settings

If this device is sitting on an enterprise network with a firewall in place then the firewall should be configured to allow all requests on port 80 and port 976 (this is for remote control Active X). There is also one port for FTP control, which should be opened. Access to the firewall settings will differ depending on what firewall is installed.

Active X Control


Depending on your set up and if passwords are active, a dialog box will appear for Internet Explorer Digitally Signed Active X Control; if prompted select Yes.

To browse multiple recorders, IE8 or higher version is required

Internet Security Settings

Access to the firewall settings will differ depending on what firewall is installed.

Figure 8.10 Internet Security

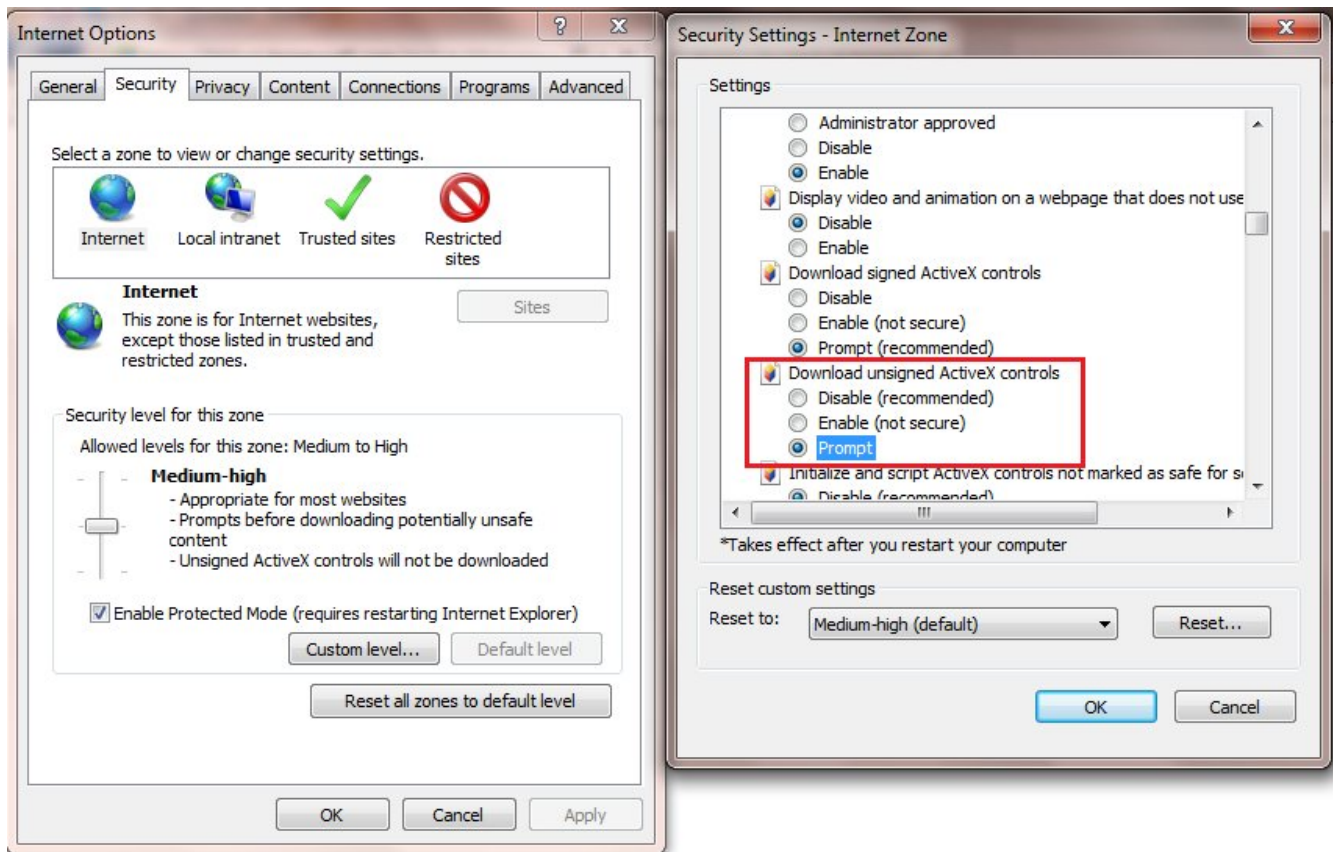

NOTICE

Please ensure any firewall settings on the desktop are permissive of the (Comms Server/ Trend Server) and that ports set up in the configuration (default 8955 TCP and 8956 UDP) are allowed passage through the firewall.

Section 9: PC Software Suite

The TrendManager Pro Software Suite

The **TrendManager Pro Software Suite** complements the capabilities of the **GR Series** recorders by providing the benefits of viewing, configuration, network communications, database management, data analysis and report generation using a personal computer. It ties the process together, providing for real-time or FTP communications with the recorders through a Local Area Network (LAN).

TrendViewer

This is the standard software provided with the recorder that displays and prints data imported from the storage media used by the recorder.

TrendManager Pro

This is an advanced data analysis/archiving software package, providing full configuration of the recorders. **TrendManager Pro** is a stand-alone package that delivers to the user total recorder configuration, allowing the user to archive, graph, print and export data. It also allows files to be exported using comma separated variables (CSV) format, that can be imported into most computer software.

TrendServer Pro

This is a fully network aware software package for real-time viewing and archiving of data with communications to the recorder. It supports all the capabilities of **TrendManager Pro** plus real-time data acquisition, FTP (File Transfer Protocol) and web browser access. **TrendServer Pro** provides secure multi-level, multi-user access to the recorder data by various departments with security. Standard features of **TrendServer Pro** include data archive tools, Email set up and alarming, graphing, print import and export data facilities.

Trend Manager Pro with OPC Server - provides the same functions as the TrendServer Pro but includes the added function of an integrated OPC Server to allow easy interfacing to third party HMI software packages that support an OPC Client. This provides a real-time interface between servers and clients.

Modbus Profile Configuration Tool - this is a tool that comes as part of the **Trend Server** software that allows the user to set up Modbus Device Profiles for use by the Communications Server. It allows the user to set up other Modbus devices other than the **Minitrend GR** and **Multitrend GR** and **DR Graphic** recorders to get real time data into **Trend Server**.

Communications Server

The Communication Server is supplied with **TrendServer Pro**. It manages real-time communications, distributed access to the stored data, time synchronisation over Ethernet networks. The Communication Server provides security for the transmission and storage of process data.

X Series & GR Recorder Screen Designer

Not available for the **eZtrend GR** recorder.

Screen Designer - is a separate software package that enables the user to design unique display layouts for transfer to the recorder's screen. Screen layouts can be created using a combination of indicators such as Trending Charts, Digital Panel Meters and Bargraphs. Flexibility allows each type of indicator to have elements of its appearance changed to create an individual presentation.

The Screen Designer software package is compatible with all **Minitrend GR** and **Multitrend GR** and **DR Graphic** recorders. Layouts can be transferred on to single or multiple recorders of the same type, which contributes to continuity and standardization of process data.

Database Management Tool

Database Management Tool - this software application works with **TrendManager Pro** and **TrendServer Pro** to provide safe administration of data with tools to archive, sort, move, copy and delete the data stored in local and remote databases. The Database Management Tool software is supplied with **TrendServer Pro**.

Report Generation Tool - AMS2750

PC software that uses a TUS data file generated by the **Multitrend GR** and **DR Graphic** recorder to generate a temperature uniformity survey report. It produces a report that documents the uniformity performance of a furnace based on the AMS2750 specification. AMS2750D is the specification that covers pyrometric requirements for thermal processing equipment used for heat treatment.


System Requirements

Minimum System requirements for TrendViewer:	Minimum System requirements for TrendServer Pro TrendManager Pro and Screen Designer:
1 GHz Pentium processor or higher with a mouse, CD-ROM drive	1 GHz Pentium processor or higher with a mouse, CD-ROM drive
Monitor screen resolution 1024 x 768 recommended minimum, high colour	Monitor screen resolution 1024 x 768 recommended minimum, high colour
Microsoft Windows Server 2012, Windows Server 2016, Windows Server 2019, Windows 10, and Windows 11.	Microsoft Windows Server 2012, Windows Server 2016, Windows Server 2019, Windows 10, and Windows 11.
4GB or more of RAM (min 4GB recommended)	4GB or more of SRAM (min 4GB recommended for generating IQOQ reports)
16 bit colour graphics, 24 bit recommended (Screen Designer only)	16 bit colour graphics, 24 bit recommended (Screen Designer only)
50 Mbyte free hard disk space	2 Gbyte Hard-drive free disk space
Flash card reader or USB port for X Series recorders	Flash card reader or USB port for X Series recorders
3.5" floppy disk drive or PCMCIA for V5 recorders	3.5" floppy disk drive or PCMCIA for V5 recorders
	TCP IP installed
	Graphics Card & Direct-X control installed (Screen Designer)

*To browse multiple recorders, IE8 or higher version is required

Section 10: Spares List

Minitrend GR Recorder

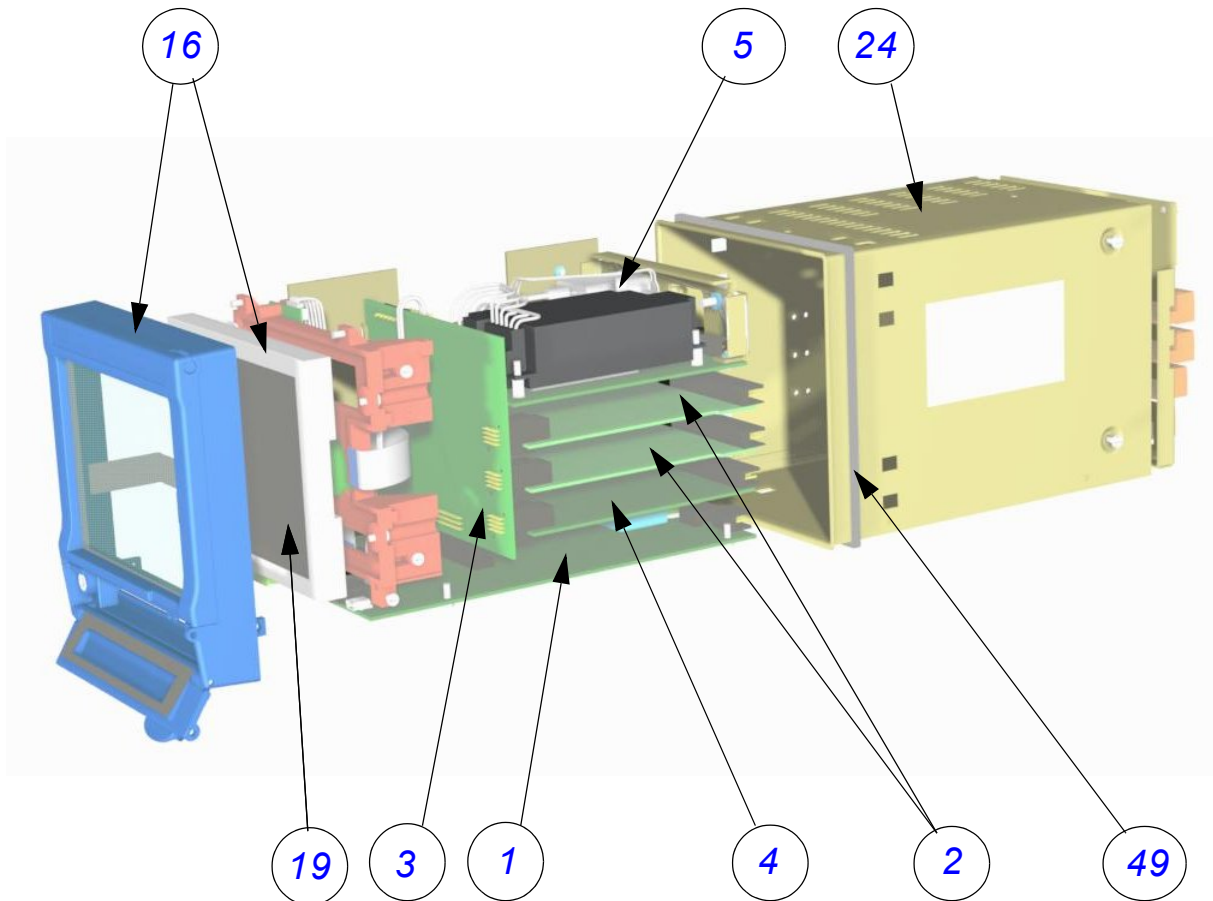

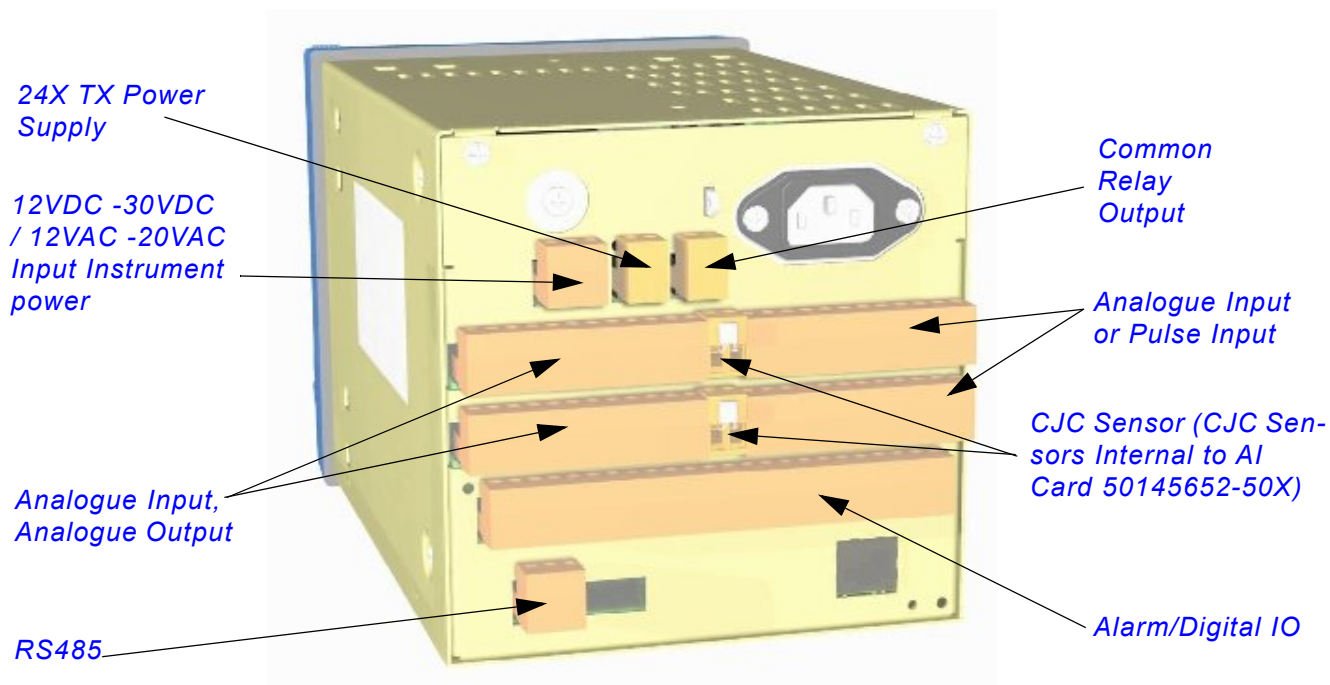
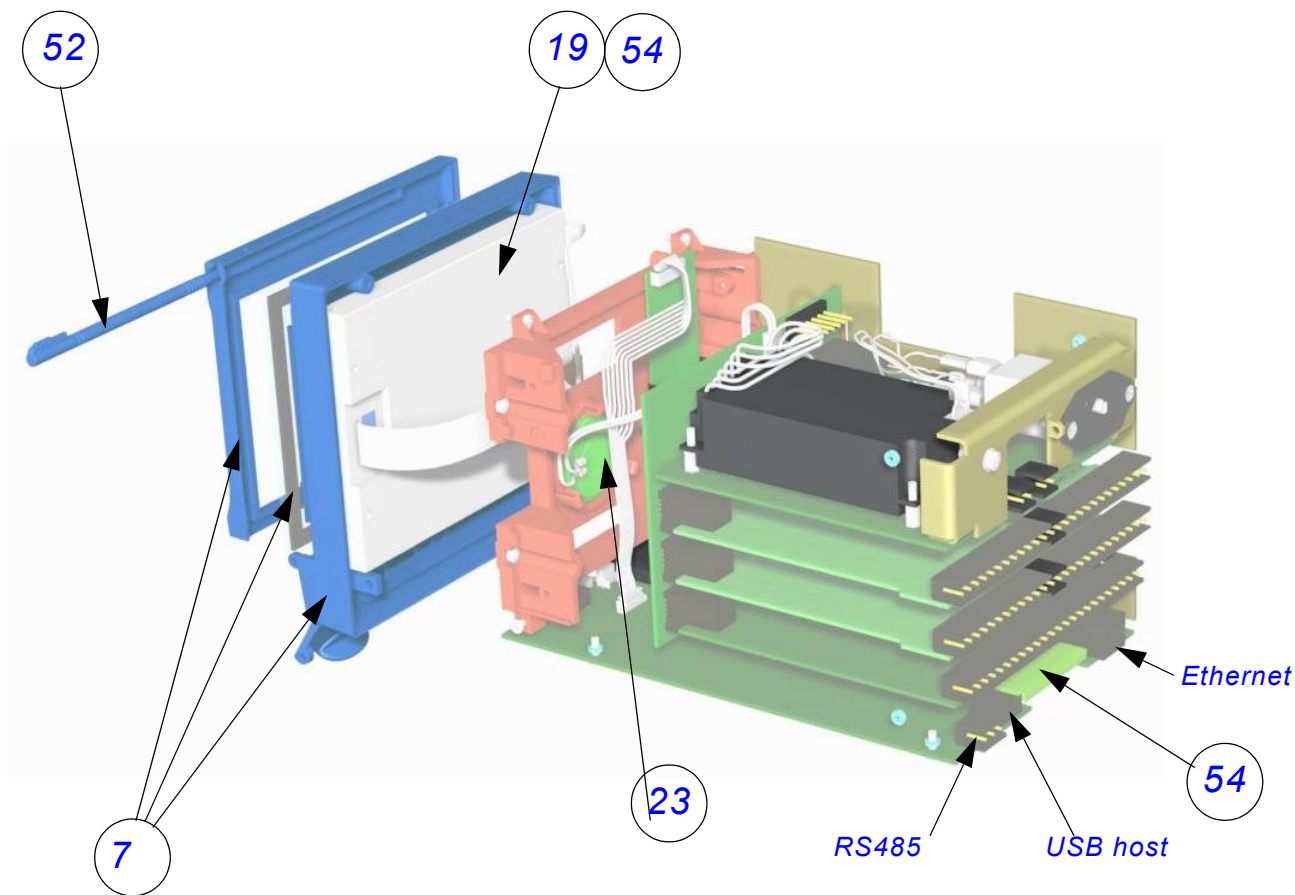



Table 10.1 :

Minitrend GR - Spares			
1	50071918-501 50071918-502 50071918-503	Minitrend GR Processor 1GB SD Card Minitrend GR Processor 2GB SD Card Minitrend GR Processor 4GB SD Card	Note: Customer must supply model number and Serial number of existing unit when placing and order for processor board kits.
2	51453006-501 51453006-502 51453006-503	Minitrend GR Analogue Input 4CH Assy Minitrend GR Analogue Input 6CH Assy Minitrend GR Analogue Input 8CH Assy	
2	51453027-501 51453027-502	Minitrend GR Analogue Output 2CH Assy Minitrend GR Analogue Output 4CH Assy	
2	50001017-502	Minitrend GR Pulse Input 4CH Assy	
3	51453009-501	Minitrend GR Mother Board Assy	
4	51453018-501 51453018-502	Minitrend GR Digital I/O 8CH Assy Minitrend GR Digital I/O 16CH Assy	
4	51453021-501 51453021-502	Minitrend GR Relay Alarm 4CH Assy Minitrend GR Relay Alarm 8CH Assy	
5	51453015-501 51453015-502 51453015-504	Minitrend GR Power Supply AC Mains Minitrend GR Power Supply AC/TX Minitrend GR Power Supply 12VDC -30VDC / 12VAC -20VAC	
7	50082335-504 50083235-503	Minitrend GR Grey 5.7 Display Touch Minitrend GR QX RAL7032 5.7 Display Touch Screen Assy	
16	50083254-504 50083254-503	Minitrend GR Grey Bezel Touch Screen Assy Minitrend GR QX/QXE RAL7032 BEZEL TOUCH SCREEN ASSY	
19	50081202-501 50084219-501	Minitrend GR 5.7" Display & Cable Minitrend GR 5.7" LVDS Display Cable	
23	50001782-501	Minitrend / Multitrend GR Speaker	
24	51453071-501	Minitrend GR Case and Back Plate Assy	
28	50006787-501	Minitrend GR / Multitrend GR Battery (Kit of 5)	
29	50086626-505	8GB External SD memory card	Not shown
43	51453071-502	Minitrend GR Case, Handle and Terminal Cover	Not shown


Table 10.1 :


Minitrend GR - Spares			
44	50005224-501	Minitrend GR Rear Terminal Cover	Not shown
48	30755050-502	Minitrend GR Mounting Hardware kit (2 Mounting Brackets)	Not shown
49	51453083-501	Minitrend GR Panel Gasket	
52	51453038-501	Stylus Kit (pack of 5)	
53	50013947-501	Connector kit (2 of each connector type)	Not shown
54	50086625-502 50086625-503 50086625-504	1GB GR INTERNAL SD MEM. CARD 2GB GR INTERNAL SD MEM. CARD 4GB GR INTERNAL SD MEM. CARD	Not Shown
	50017290-501	Touch Screen Protector (kit of 5)	Not shown
	46184161-502	Carrying Handle kit	Not shown
	50017181-501	Minitrend GR/Multitrend GR Blanking Plate for I/O Slots (2)	Not shown
	51452129-501	10 Ohm Resistors Pack of 8	Not shown
	50001251-501	Minitrend GR Portable Case	Not shown
	51453051-501	Minitrend , Multitrend GR and eZtrend GR Power cord (250V AC)	Not shown
	50003794-501	QX/SX/QXe CJC ASSY KIT OF 2	Not shown

Minitrend GR Portable Case Dimensions

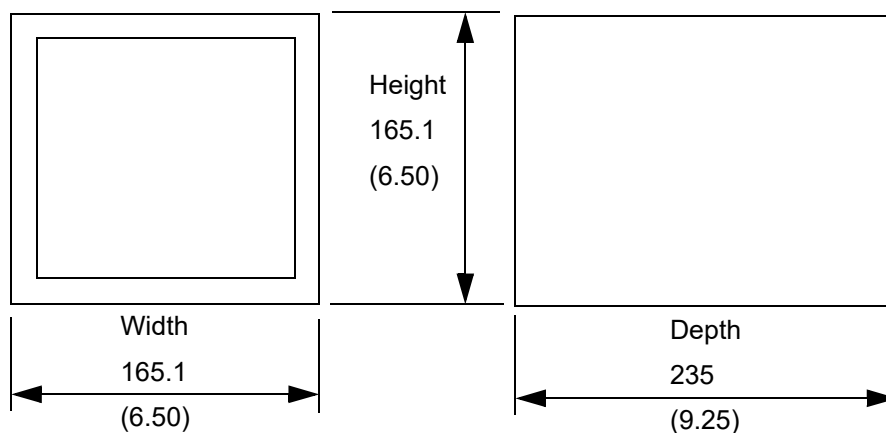

Multitrend GR Recorder

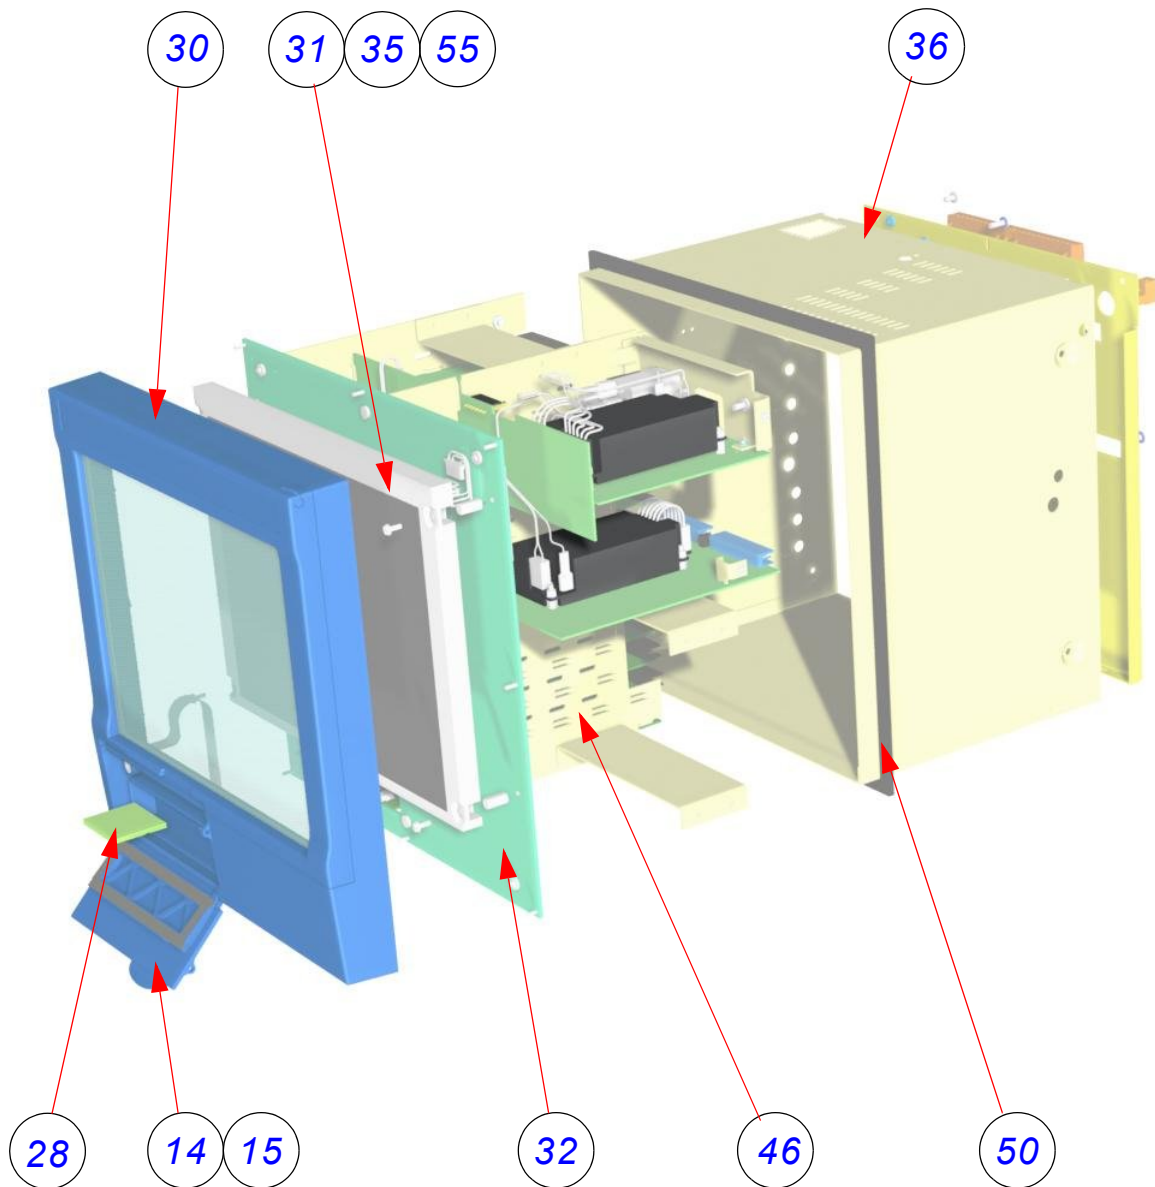

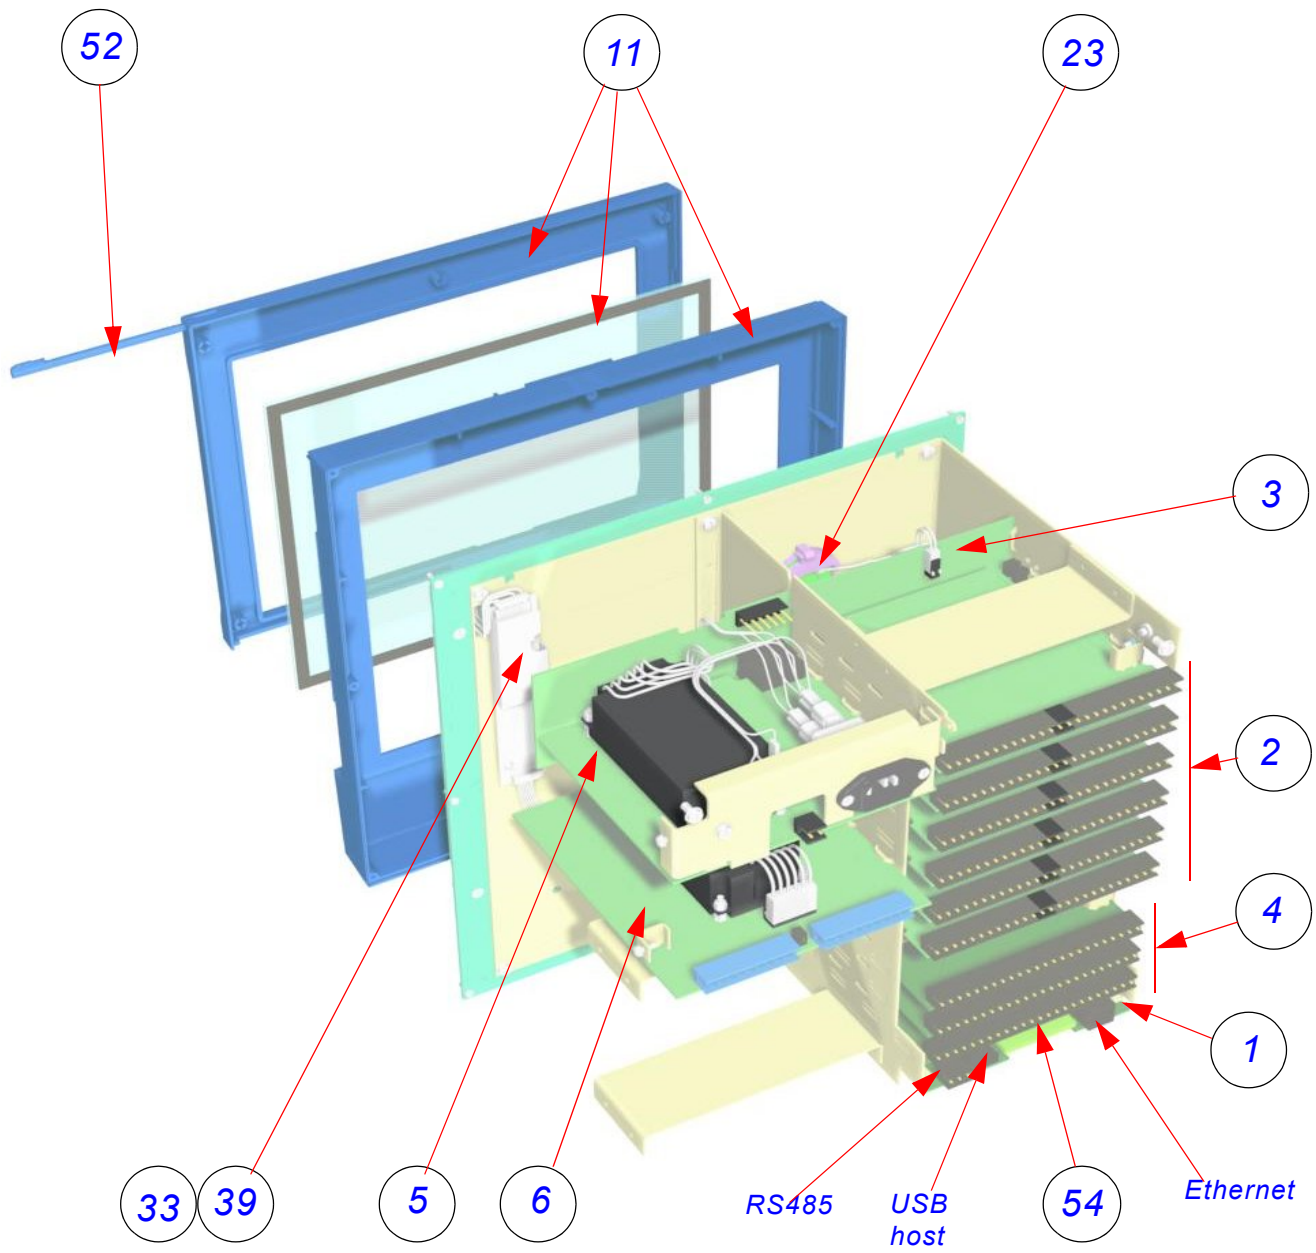

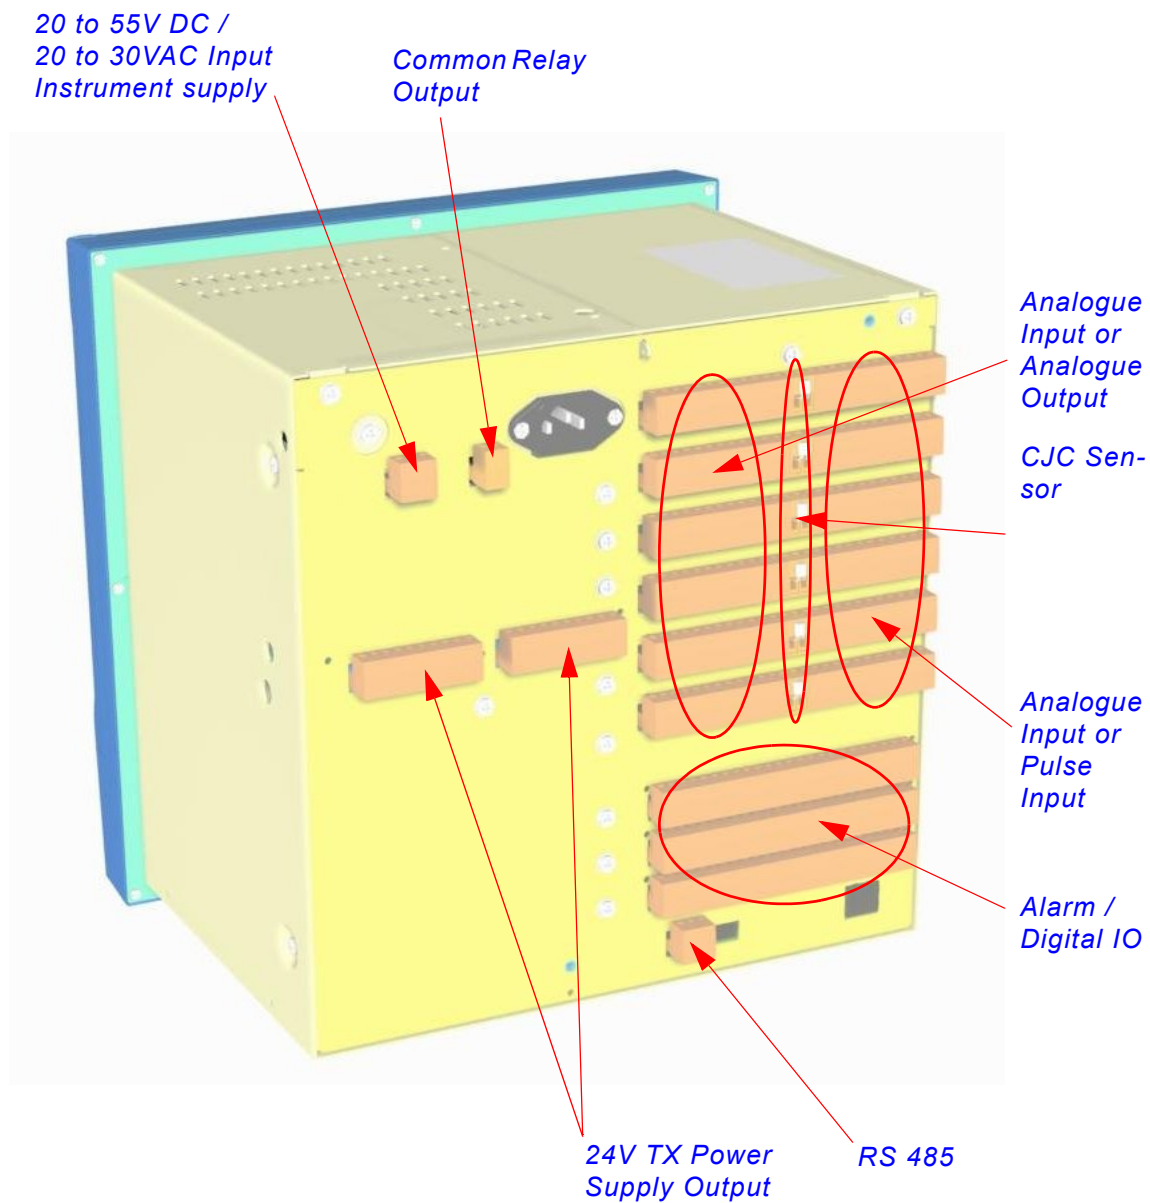



Table 10.2 :

Multitrend GR - Spares			
1	50071918-501 50071918-502 50071918-503	Multitrend GR Processor 1GB SD Card Multitrend GR Processor 2GB SD Card Multitrend GR Processor 4GB SD Card Note: Customer must supply model number and Serial number of existing unit when placing and order for processor board kits.	
2	51453006-501 51453006-502 51453006-503	Multitrend GR Analogue Input 4CH Assy Multitrend GR Analogue Input 6CH Assy Multitrend GR Analogue Input 8CH Assy	
2	51453027-501 51453027-502	Multitrend GR Analogue Output 2CH Assy Multitrend GR Analogue Output 4CH Assy	
2	50001017-502	Multitrend GR Pulse Input 4CH Assy	
3	51453024-501	Multitrend GR Mother Board Assy	
4	51453018-501 51453018-502	Multitrend GR Digital I/O 8CH Assy Multitrend GR Digital I/O 16CH Assy	
4	51453021-501 51453021-502	Multitrend GR Relay Alarm 4CH Assy Multitrend GR Relay Alarm 8CH Assy	
5	50001182-501 50001182-502	Multitrend GR Power Supply AC Mains Multitrend GR Power Supply 20-55VDC/ 20-30VAC	
6	51453030-501	Multitrend GR Transmitter Power Supply board	
11	50084844-504 50084844-503	Multitrend GR Grey Display Assy GR SX RAL7032 MULTITREND DISPLAY ASSY	Includes Bezel, Touch Screen and Display
14	50003590-504	Multitrend GR Std Nema3 Door	
15	50009119-504	Multitrend GR Nema4/IP66 Door	
23	50001782-501	Minitrend GR / Multitrend GR Speaker Assy	
27	50006787-501	Minitrend GR / Multitrend GR Battery (kit of 5)	Not shown
28	50086626-505	8GB External SD memory card	Not shown
30	50084843-504 50084843-503	Multitrend GR Grey Touch Screen Assy GR SX RAL7032 MULTITREND TOUCH SCREEN ASSY	Includes Bezel and Touch Screen
31	50084213-501	Multitrend GR XGA 12.1" Display	
36	51453098-501	Multitrend GR Case and Back Plate	


Table 10.2 :

Multitrend GR - Spares			
39	50084218-501 50084214-501	Multitrend GR Inverter Multitrend GR LVDS Cable kit	
42	50005458-501	Multitrend GR Rear Terminal Cover kit	Not shown
46	51453095-501	Multitrend GR Chassis kit	
50	50000871-501	Multitrend GR Panel Gasket	
51	50004292-501	Multitrend GR Panel Clamp Assy (Qty 2)	Not shown
52	51453038-501	Stylus Kit Black (pack of 5)	
53	50013947-501	Connector kit (2 of each connector type)	Not shown
54	50086625-502 50086625-503 50086625-504	1GB GR INTERNAL SD MEM. CARD 2GB GR INTERNAL SD MEM. CARD 4GB GR INTERNAL SD MEM. CARD	
	50017290-502	Multitrend GR Screen Protector (Kit of 5)	Not shown
	46184161-502	Carrying Handle kit	Not shown
	51452129-501	10 Ohm Resistors Pack of 8	Not shown
	50017181-501	Minitrend GR/Multitrend GR Blanking Plate for I/O Slots (2)	Not shown
	50001249-501	Multitrend GR Portable Case	Not shown
	51453051-501	Minitrend GR, Multitrend GR and eZ-trend Power cord ()	Not shown
	50003794-501	QX/SX/QXe CJC ASSY KIT OF 2	Not shown

Multitrend GR Portable Case Dimensions

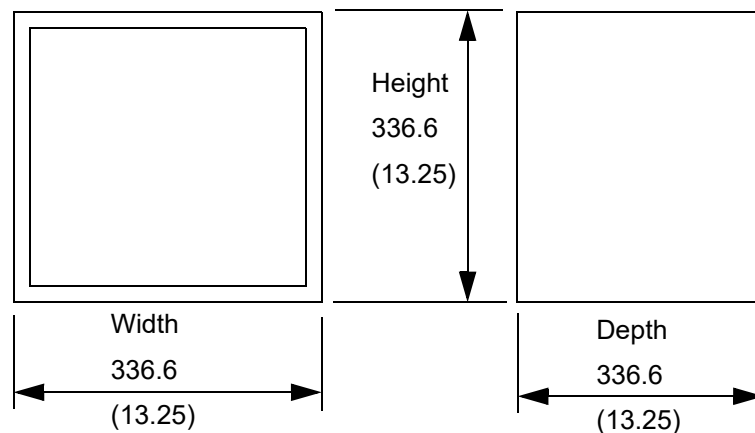

eZtrend GR Recorder

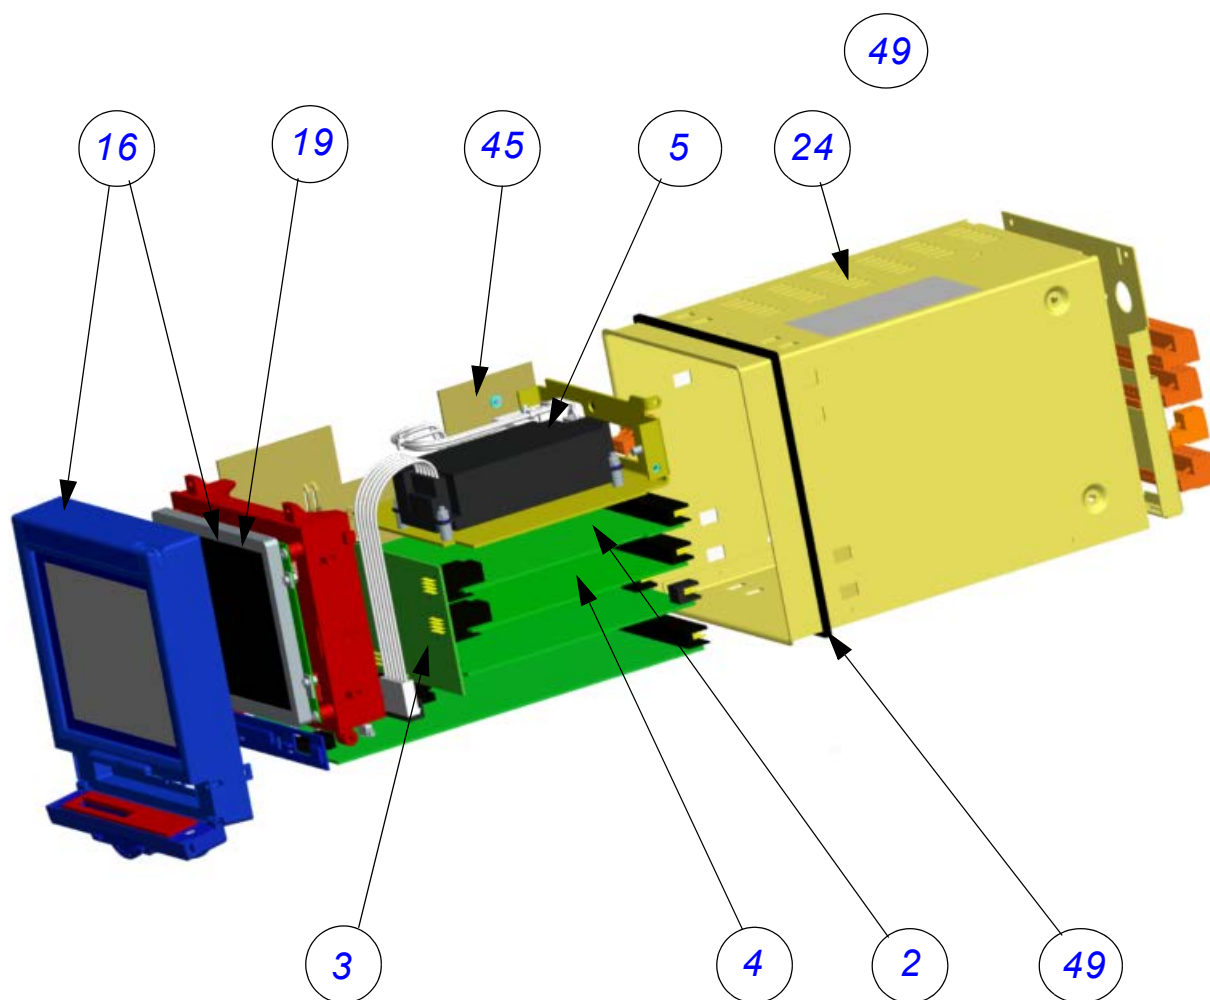

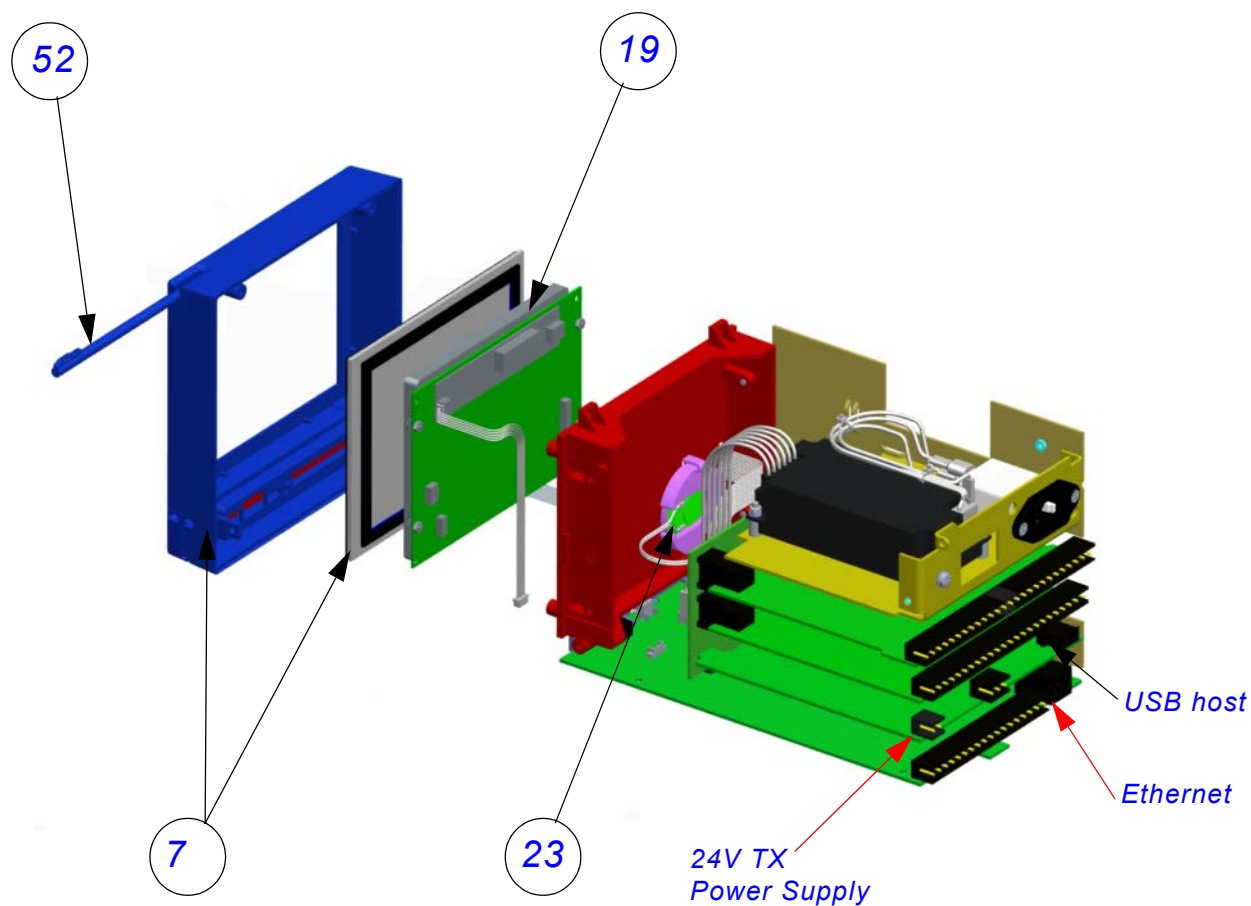


Table 10.3 :


eZtrend GR - Spares			
1	50071921-501 50071921-502 50071921-507 50071921-508	eZtrend GR 3CH Processor 1GB eZtrend GR 3CH Processor 2GB eZtrend GR 6CH Processor 1GB eZtrend GR 6CH Processor 2GB	Credit Option only
2	51453006-502	eZtrend GR Analogue Input 6CH Assy	Requires Expansion card item 3
3	50012927-501	eZtrend GR Expansion Board Assy	Required for items 2, 4 and 6
4	51453018-501	eZtrend GR Digital I/O 8CH Assy	
4	51453021-501 51453021-502	eZtrend GR Relay Alarm 4CH Assy eZtrend GR Relay Alarm 8CH Assy	
5	51453015-505 51453015-504 51453015-502	eZtrend GR Power Supply AC Mains eZtrend GR Power Supply 12V/ 30VDC/12-20VAC eZtrend GR Power Supply AC Mains with TX Power	
7	50083237-504	eZtrend GR 5.7 Grey Display Touch Screen Assy	
16	50083254-503 50083254-504	eZtrend GR RAL7032 BEZEL TOUCH SCREEN ASSY eZtrend GR Grey Bezel	
19	50081204-501 50059722-501	eZtrend GR 5.7" QVGA Display eZtrend GR 5.7 EZ QVGA DISPLAY CABLE	
23	50001782-501	eZtrend GR/Minitrend GR/ and Mul- titrend GR Speaker	
24	50012896-501	eZtrend GR Case and Back Plate Assy	
27	50015474-501	eZtrend GR Back Plate	
28	50006787-501	eZtrend GR/Minitrend GR/Multi- trend GR Battery (Kit of 5)	Not shown
29	50086626-505	8GB External SD memory card	Not shown
43	50012896-502	eZtrend GR Case, Handle and Termi- nal Cover	Not shown
44	50012915-501	eZtrend GR Rear Terminal Cover	Not shown

Table 10.3 :


eZtrend GR - Spares			
45	50020664-501	eZtrend GR Left & Right Hand Chassis kit	
48	30755050-502	eZtrend GR Mounting Hardware kit (2 Mounting Brackets)	Not shown
49	51453083-501	eZtrend GR Panel Gasket	
52	51453038-501	Stylus Kit (pack of 5)	
53	50021404-501	Connector kit (2 of each connector type)	Not shown
54	50086625-502 50086625-503	1GB GR INTERNAL SD MEM. CARD 2GB GR INTERNAL SD MEM. CARD	
	50017290-503	Touch Screen Protector (kit of 5)	Not shown
	46184161-502	Carrying Handle kit	Not shown
	50017181-501	eZtrend GR/Minitrend GR/Multi-trend GR Blanking Plates	Not shown
	51452129-501	10 Ohm Resistors Pack of 8	Not shown
	50001251-501	eZtrend GR Portable Case	Not shown
	51453051-501	Minitrend GR, Multitrend GR and eZtrend GR Power cord (250V AC)	Not shown
	50003794-501	QX/SX/QXe CJC ASSY KIT OF 2	Not shown


Minitrend and eZtrend GR Portable Case




Dimensions

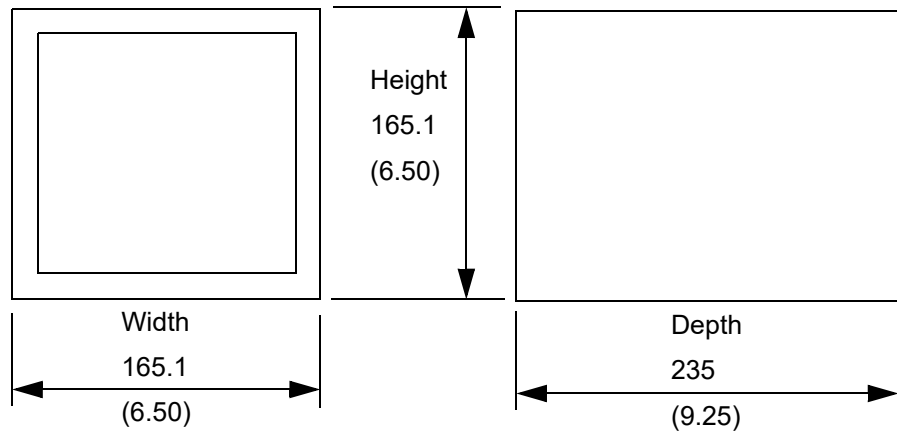

DR Graphic Recorder

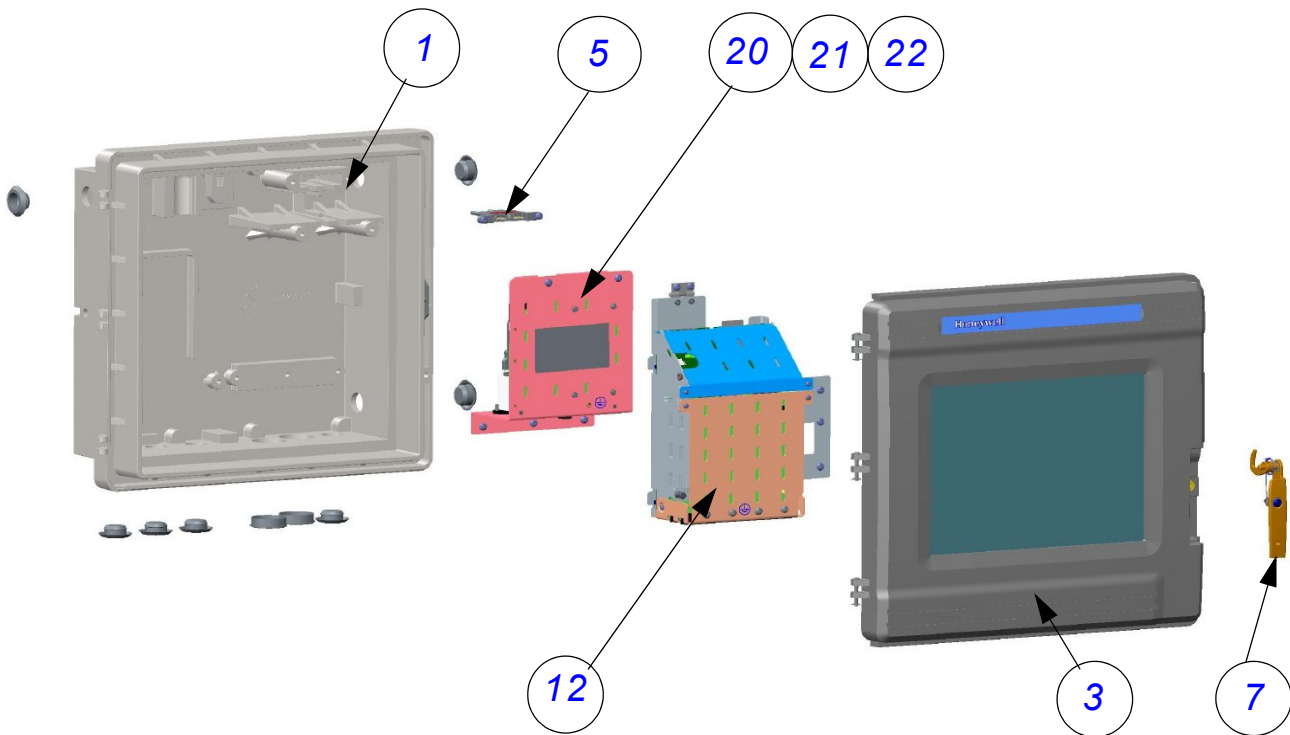

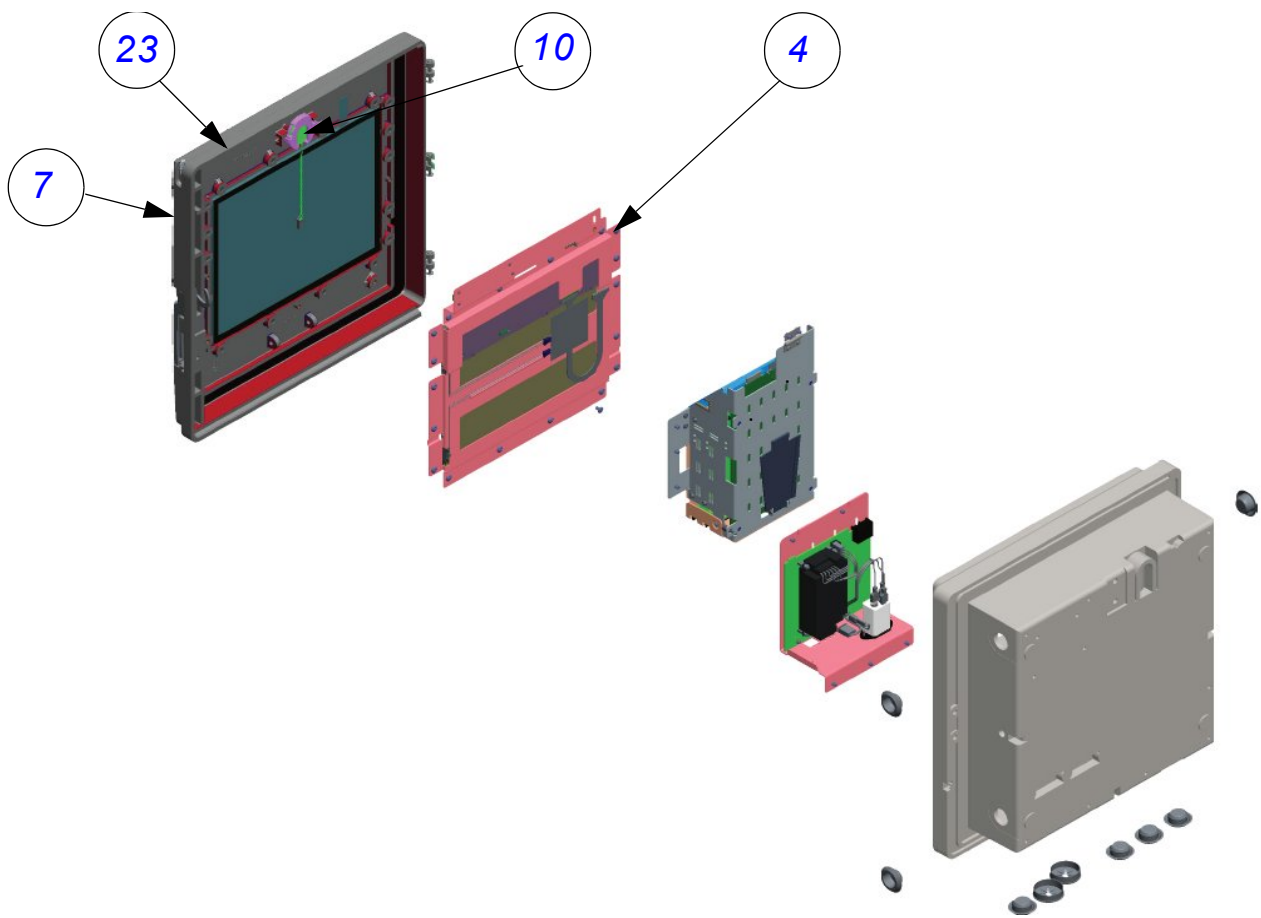

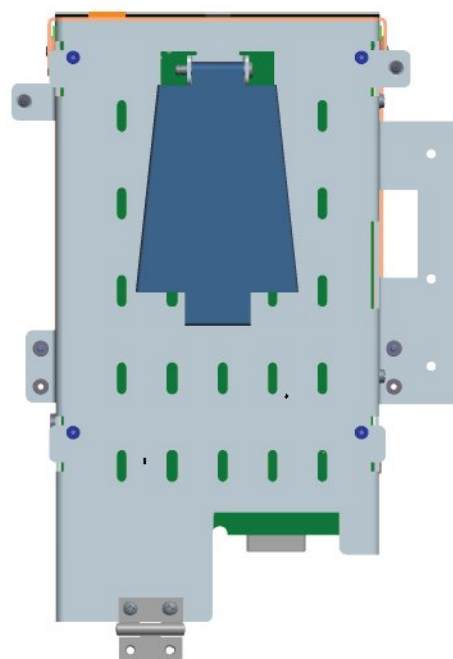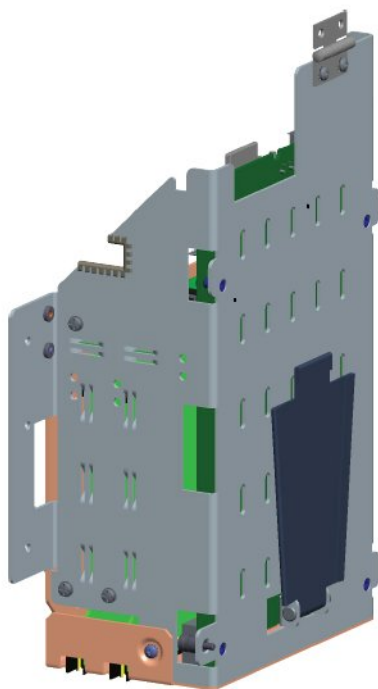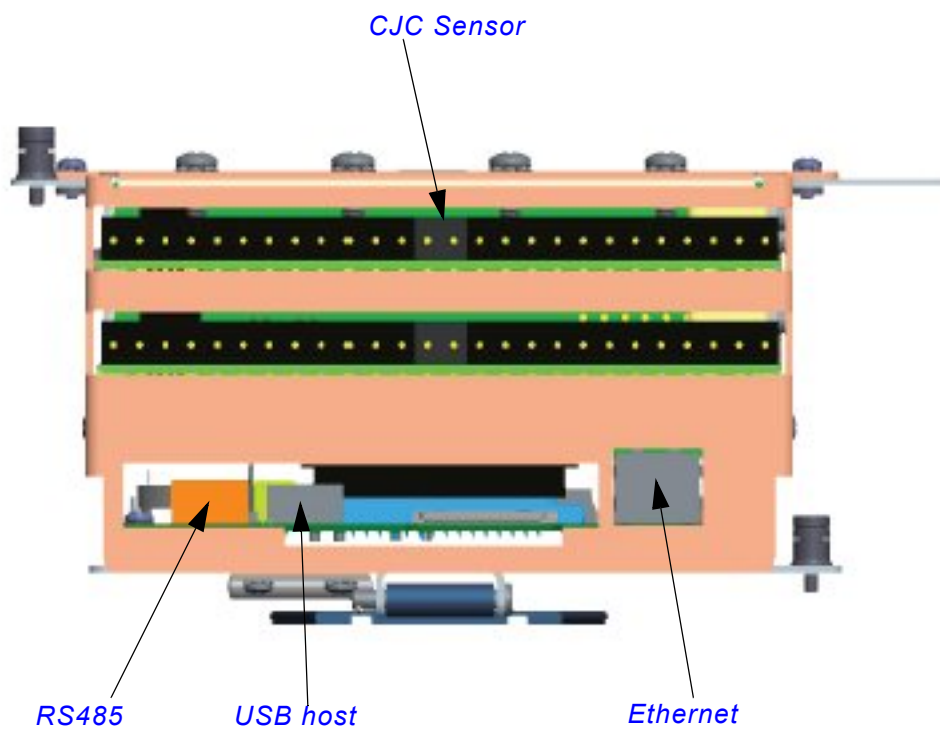

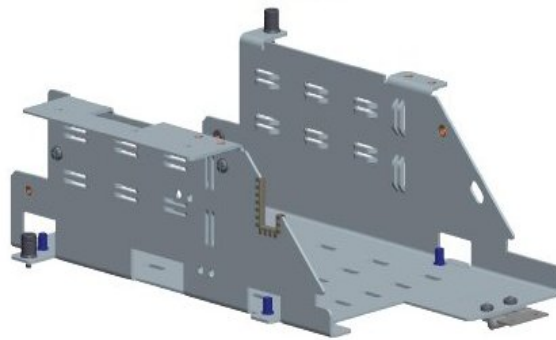
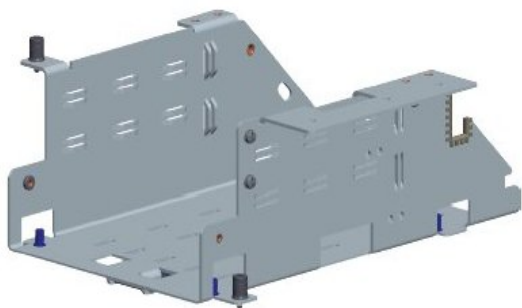
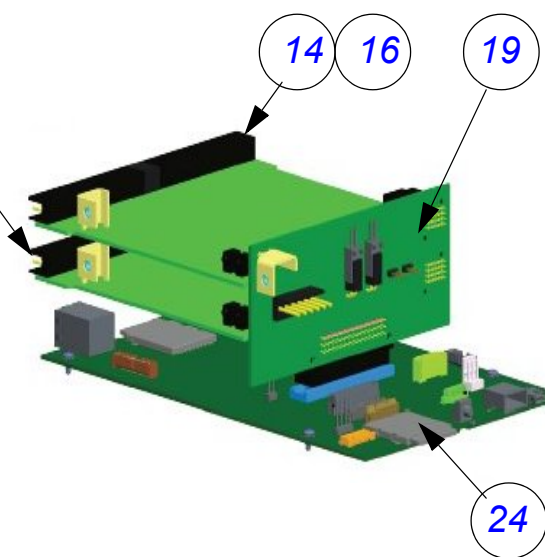
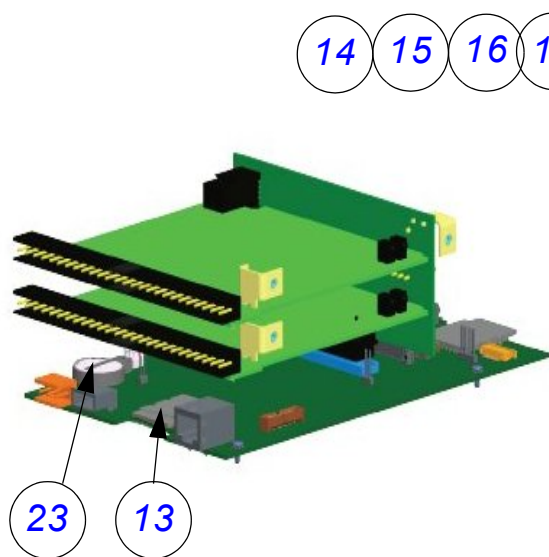
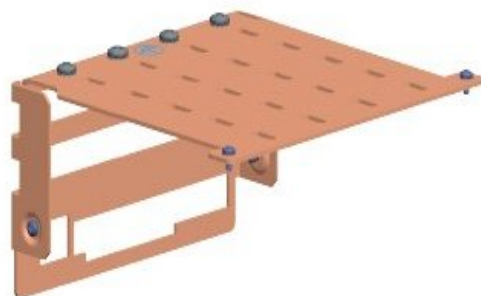


Table 10.4 :

DR Graphic Recorder- Spares			
1	50099056-501	Case & latch Assy	Includes case, latch bracket, screws, split lock washer and latch pin.
2	32300506-501	Door Assembly (without display)	Bezel and Touch Panel Assembly
3	50092996-501	Door Assembly	Bezel 12.1", Touch Panel Assembly, Speaker and Display
4	32300081-501	Display Kit	12.1" Display with Cable assembly and display bracket
5	50098928-501	USB Cable Extender	
6	32304412-501	Misc Hardware	Hinge Pin, Circlip, Conduit Plugs – 2 Nos, Cord Bushing (Not Shown)
7	32304395-501	Door Handle & Latch Kit	Includes latch assembly parts.
8	30755065-501	Mounting Bracket Kit – Standard	
9	30755065-502	Mounting Bracket Kit (NE-MA 4)	
10	32304373-501	Speaker Kit	Speaker and its Retainer
11	32304377-501	Cables Kit	Earth Braid, GPIO, DC LOOM Assy, LVDS Cable, BL Cable, RTP Extension Cable (Not Shown)
12	32304379-501	Chassis kit	Plate Base, Chassis Shallow Case Recorder Cover Front, Chassis Shallow Case Recorder Stand, Chassis Shallow Case Recorder Hinge Pin Circlip Cover Top, Chassis Shallow Case Recorder
13	50071918-501 50071918-502 50071918-503	Processor 1GB SD Card Processor 2GB SD Card Processor 4GB SD Card	Note: Customer must supply model number and Serial number of existing unit when placing an order for processor board kits.
14	51453006-501 51453006-502 51453006-503	Analogue Input 4CH Assy Analogue Input 6CH Assy Analogue Input 8CH Assy	
15	51453027-501 51453027-502	Analogue Output 2CH Assy Analogue Output 4CH Assy	

Table 10.4 :

DR Graphic Recorder- Spares			
16	50001017-502	Pulse Input 4CH Assy	
17	51453018-501 51453018-502	Digital I/O 8CH Assy Digital I/O 16CH Assy	
18	51453021-501 51453021-502	Relay Alarm 4CH Assy Relay Alarm 8CH Assy	
19	50098156-501	Backplane Board Assy	
20	50001182-503	AC Power Supply	
21	50001182-504	AC Power Supply with Transmitter Power Supply	
22	50001182-505	24VDC Power Supply	
23	50006787-501	Battery (kit of 5)	
24	50086626-505	8GB External SD memory card	
25	51453038-501	Stylus Kit Black (pack of 5)	
26	50013947-501	Connector kit (2 of each connector type)	Not shown
27	51452129-501	10 Ohm Resistors Pack of 8	Not shown
28	51453051-501	Power cord (250V AC)	Not shown
29	50020410-507	2GB USB Pen Drive	Not shown
30	50003794-501	QX/SX/QXe CJC ASSY KIT OF 2	Not shown (This is for use with DR Graphic recorder)

Section 11: Instrument Care and Maintenance

Instrument Care and Maintenance

The **GR Series** range of recorders contains no parts serviceable by the user, except for a fuse on the DC power supply, see [“Fuses” on page 24](#).

In the event of a recorder failure contact your nearest Service Department (or an authorised agent) to arrange for the return of the unit for repair.

Cleaning Instructions

The recorder's touch screen can be temporarily disabled for cleaning, see [“Clean Screen” on page 189](#).

Cleaning the unit should be done with a soft lint cloth and warm soapy water or screen cleaner recommended for use on a PC. Solvents and prolonged exposure to detergents can cause damage to the front panel. It is recommended that any cloth used for cleaning is damp but NOT wet, to avoid water collecting in the unit.

For Nema 4X /IP66 rated recorders (option) refer to the Nema 4X standards.

Backlights

1. MTTF (Mean Time To Fail) is defined as the time at which 50% of a batch of backlights remain in excess of half their original brightness i.e. a display has a greater than 50% chance of being half its original brightness when used at 100% after:

- 55,000 hrs for the **Minitrend GR**. Maximum luminosity 400 cd/m², (86,000hr if used at 80%).
- 43,000 hrs for the **Multitrend GR** and **DR Graphic**. Maximum luminosity 400 cd/m², (67,000hr if used at 80%).
- 40,000 hrs for the **eZtrend GR**. Maximum luminosity 450 cd/m², (62,500hr if used at 80%). For this recorder the backlight cannot be changed separately so the display has to be replaced.

Reducing the brightness can significantly improve the life of the backlight.

2. At extended temperatures these times are reduced.
3. The backlight is a consumable item, and will NOT last forever.
4. A maintenance schedule of exchanging backlights should be every 5 years to maintain the optimal screen clarity.

Operating Temperature

Operating temperatures are described in [“Specification Tables” on page 317](#). Prolonged operation at temperatures over 50 °C will accelerate degradation of the display backlight.

If the unit has been moved from a cold environment into a warm one, ensure that the unit has reached a minimum temperature of 12 °C or is left to stand for 1 hour at room temperature before applying power, to ensure no condensation remains in the unit.

Touch Screen

Care should be taken with the touch screen when handling the unit. Sharp and hard objects may pierce the touch screen and damage the display. Only use the stylus provided for screen selection.

Clean the screen using a suitable touch screen cleaner. Abrasive materials will damage the touch screen.

Protective Screen covers are available to provide additional protection against abrasive materials. [See “Section 10: Spares List” on page 291.](#)

Calibration

It is recommended that Recorder calibration is checked at least every year, or in accordance with your industry regulations, to ensure maximum accuracy. [See “Calibration” on page 142.](#)

Section 12: Technical Data & Specifications

Field IO Specification

Analogue Output

(Not available for the **eZtrend GR** recorder)

Each recorder is capable of supporting analogue output function. The AO card is available as a 2 or 4 channel option, and will plug into any of the analogue input slots.

Analogue Outputs are used to support:

- Re-transmission of Analogue Input values
- Re-transmission of Math Results
- Re-transmission of Process values
- Control Outputs

Analogue Output Specifications

- Resolution - 0.002% or better
- Accuracy - +/- 0.1% 0-500ohm load, +/- 0.25% 500ohm - 1Kohm load
- Maximum load resistance - 1Kohm
- Isolation - 300V AC
- Outputting - 0 to 20mA or 4 to 20mA (over range capability to 21mA)
- Update rate - 250mSec per channel

Pulse Input Card

The Pulse Card is available as an option, and will fit in slots normally allocated to AI cards. The frequency output from the card can be used in a Maths block and is represented by HPULn (where 'n' is from 1 to 4, when the card is fitted in the top slot)

- Frequency - 1 Hz to 25kHz, this will update once per second
- Inputs - 4 x isolated inputs.

A separate Pulse input card is not available for the **eZtrend GR** recorder, however the first 4 inputs on the Digital I/O card (option) can be used as pulse inputs.

Analogue Input

User Defined Maximum Input Ranges

For values entered for the Range Type in the [“Analogue In Menu” on page 75](#).

Table 12.1 : Analogue In Ranges

Preset Ranges	Maximum Voltages	Preset Ranges	Maximum Voltages
50V	52V	1000mV	1.1V
25V	26V	500mV	600mV
12V	13V	250mV	300mV
6V	6.5V	100mV	150mV
3V	3.25V	50mV	75mV
1.5V	1.6V	25mV	36mV
0.6V	0.8V	10mV	18mV
0.3V	0.4V	5mV	9mV

Relay Alarm/Digital Input Specification

Minitrend GR, eZtrend GR and DR Graphic recorders have one ‘slot’ for digital inputs and alarm relay outputs. All alarm card channels provide 240V AC isolation channel to channel and channel to recorder. Digital I/O channels will provide isolation to 100V AC test voltage (not for mains connection).

The **Multitrend GR** recorder has three available expansion slots for Digital Input/Relay Alarm output cards.

Inputs are automatically debounced to remove switching oscillations. All Digital Inputs are volt free contacts, and are sampled at 10Hz max.

Relay/Alarm Output Card Options

There are two card options, split into two types:

4 Channel Relay Alarm Card

120/240 VAC 3 Amps rated (resistive load). The relay contacts are form C (NO, NC) and includes suppression.

8 Channel Relay Alarm Card

120/240V AC 3 Amps rated (resistive load). Two channels on the 8 Relay Alarm card, can be used as digital inputs. The relay contacts are form C (NO, NC) and includes suppression. The 8 & 2 Relay Alarm card, this 8-channel card will have 8 mains rated relays, of which 2 of the 8 channels can be configured for use as digital inputs.

Relay Alarm/Digital Input Specification

Latched or Single Pulse

The relay outputs can be set by the user to be either Latched or Single Pulse.

Latched

A latched relay will maintain in its active state until the trigger source has returned to a non alarmed state, or a second Event has been activated to disable the relay.

Single Pulse

The relay will go active for a period of time, specified by the user, then return to a non active state. The time out period remains independent of the length of time the active state remains.

Single Pulse Relay Settings

User can specify Pulse length in seconds from 0.1 (100ms) to 6480 (108 minutes) in 0.1 second increments.

Fail Safe

Each relay channel can be independently selected with the fail safe option. This will invert the state of the relay output. With Failsafe Off normally open (NO) relays have open contacts when the power is off, and open contacts when there is no active alarm. The contacts will close when an associated alarm goes active. With Failsafe On, normally open relays have closed contacts when the recorder is powered on and there are no open active alarms, and the contacts open with an alarm active or when the power is removed. [See “Failsafe Relay Positions” on page 316.](#)

Relay Output Specification

The **Minitrend GR** recorder will provide the ability to have at least 1 relay output for each analogue input (i.e. 16). **Multitrend GR** recorder will also provide at least one relay output for each analogue input (i.e. 48), there are three available slots for Digital inputs/ Relay Outputs. Up to 8 relay outputs are available for the **eZtrend GR** and **DR Graphic** recorder.

Common Alarm Output

The common alarm output include a single alarm relay. This relay is the same rating as those on the 8 & 16 Digital I/O cards. This relay is NC (normally closed) and can be activated by any alarm. This relay will close when power is removed. This relay is identified as “Fixed” in the relay output pick lists.

- Rating - 24Vdc 1A Resistive Load

Digital Input Cards

Three options for digital inputs are available

8 Digital Inputs

8 Digital I/O card, this 8-channel card allows the user to configure each channel to be either relay output or digital input. Relay output rated at 24V DC 1 Amp rated (resistive load).

Relay Alarm/Digital Input Specification

16 Digital Inputs

(Not available for the **eZtrend GR** recorder)

16 Digital I/O card, this 16-channel card allows the user to configure each channel to be either relay output or digital input. Relay output rated at 24V DC 1 Amp rated (resistive load).

Digital Input Functions

The digital inputs can be used for the following actions;

- A Digital contact on an input can be used to enable or disable one or any combination of alarms
- Can be used in Maths expressions
- Can have current status indicated on DPMs, Bars and Charts

Failsafe Relay Positions

Table 12.2 :

eZtrend GR, Minitrend GR, Multitrend GR and DR Graphic Relay Positions (no alarms active)			
Normal Relay Output States		NO	NC
	Power On	Open	Closed
	Power Off	Open	Closed
Failsafe Relay Output States		NO	NC
	Power On	Closed	Open
	Power Off	Open	Closed

AMS2750 Process Mode

Provides on-line monitoring in the process recorder to alert the user to potential AMS2750 non-compliance issues. Monitors and alerts the user concerning - days until next SAT, days until next TUS, days until next control T/C change out and days until the recorder requires calibration. The recorder also provides an overview of T/C usage for all survey T/C's providing a colour coded for early warning screen (5 day expiration).

AMS2750 TUS Mode

The **Multitrend GR** and **DR Graphic** recorder monitors a temperature uniformity survey and generates a data file that can be used to create a TUS report. It tracks a number of parameters during a TUS which includes the ramp time, the time between the first T/C entering soak zone and the last T/C entering soak zone, the point where all t/C's are stable and lie within the SP tolerance limits for the defined furnace class, the stable soak (minimum of 30 min.) for the survey, the maximum temperature value during the soak period and the minimum temperature value during the soak period. The on line TUS tracking screen shows the current status of a survey for up to 6 set points, furnace details, status, Min & Max TC readings, Max differences, Max Overshoot, durations and the Class of furnace the survey met.

Specification Tables

Specification	Design Attributes
Digital indicators and Display	<p>Minitrend GR Recorder <i>Display size and Type:</i> 5.7" diagonal, Digital Colour LCD (TFT) with Touch Screen Industrial grade with brightness adjustment and wide viewing angle <i>Resolution:</i> VGA (640 x 480 pixels). <i>Screen Saver:</i> Set in minutes from 1 to 720, can be set to dim the screen or to switch off. <i>Brightness adjustment:</i> Adjustable between 10 and 100%, default set to 80% brightness. <i>Backlight life time:</i> 50,000 hours to half brightness when used at 100%, (62,500 hours with 80% brightness @ 25 deg). Maximum luminosity 400 cd/m². <i>Touch Screen life:</i> 1,000,000 touches</p> <p>Multitrend GR and DR Graphic Recorder <i>Display size and Type:</i> 12.1" diagonal, Digital Colour LCD (TFT) with Touch Screen Industrial grade with brightness adjustment and wide viewing angle <i>Resolution:</i> XGA (1024 x 768 pixels). <i>Screen Saver:</i> Set in minutes from 1 to 720, can be set to dim the screen or to switch off. <i>Brightness adjustment:</i> Adjustable between 10 and 100%, default set to 80% brightness. <i>Backlight life time:</i> 50,000 hours to half brightness when used at 100%, (62,500 hours with 80% brightness @ 25 deg). Maximum luminosity 400 cd/m². <i>Touch Screen life:</i> 1,000,000 touches</p> <p>eZtrend GR Recorder <i>Display size and Type:</i> 5.7" diagonal, Digital Colour LCD (TFT) with Touch Screen Industrial grade with brightness adjustment and wide viewing angle <i>Resolution:</i> QVGA (320 x 240 pixels). <i>Screen Saver:</i> Set in minutes from 1 to 720, can be set to dim the screen or to switch off. <i>Brightness adjustment:</i> Adjustable between 10 and 100%, default set to 80% brightness. <i>Backlight life time:</i> 50,000 hours to half brightness when used at 100%, (62,500 hours with 80% brightness @ 25 deg). Maximum luminosity 450 cd/m². <i>Touch Screen life:</i> 1,000,000 touches</p>
Display Update Rate	Display values updated every second
Status Display	A status bar, at the top of the recorder's screen, displays the real-time icons of the recorder status, such as Time left and alarm active.
Communications	Ethernet 100 base - T with RJ45 connector supporting Modbus/TCP, FTP, Internet, DHCP or fixed IP address. (RS485 is not available for eZtrend GR)
Mathematics	Basic maths include Add, Subtract, Multiply, Divide, Modulo and power. Full Maths and Scripting (option) support up to 100 character free form math expression for each pen. Like SINE, COS, TAN, Log, Parenthesis (eg. A1 + A2), comm variables, free memory, and access to any data item variable (A1, P1, D1 etc.). (Scripting is not available for the eZtrend GR).
Front and Rear USB Ports	USB host ports front and rear for data and setup transfers through these ports. External devices keyboard or mouse, Barcode reader, or external mass storage device. USB ports are internal for DR Graphic
Standard Screens and Custom Screens	<p>Fully programmable display values in engineering units. Time & date stamp on every division, providing the current time and date.</p> <p>Sets of Standard screens are available to display data on a chart, digital reading, bargraphs or numerous combinations thereof. Screen properties can be modified on the recorder and customised to suit. Custom screens created in the Screen Designer software can be imported into the recorder for specialist applications. Custom Screen firmware option is required.</p> <p>Digital values displayed include alarms on bars, engineering units, pen name, tag, time and date, 20 character description and totalised values. (Custom Screens are not available as an option for the eZtrend GR)</p>

Specification Tables

Specification	Design Attributes
Data Storage	<p><i>Removable Media:</i> We recommend ATP make SD cards and support up to 8.0 Giga bytes. (SD card is available as an option for the eZtrend GR)</p> <p><i>Local Mass Storage Options:</i> USB memory key - no size restriction but must be formatted (FAT, FAT16, TFAT FAT32).</p> <p><i>Internal Data Buffer Minitrend GR, Multitrend GR and DR Graphic Recorder:</i> Non-volatile. 1GB upwards to 4GB</p> <p><i>Internal Data Buffer eZtrend GR Recorder:</i> Non-volatile. 1GB upwards to 2GB</p> <p><i>Setup and screens:</i> Stored internally on non-volatile memory</p> <p><i>Manual Saving:</i> Data saving by inserting SD card or USB memory stick</p> <p><i>Data Saving Period:</i> Related to log rate, number of pens, totals and alarms. Each pen is capable of its own independent storage rate.</p> <p>Minitrend GR and Multitrend GR Recorder: 20ms to 60h,</p> <p>eZtrend GR Recorder: 100mS to 60h.</p> <p><i>Data Format:</i> Honeywell binary encoded format</p> <p><i>Recycling Mode:</i> Internal memory has FIFO (First In First Out) capability where the newest data over-writes the oldest data.</p>
Power Requirements	<p>Minitrend GR Recorder</p> <p><i>Voltage (VRMS):</i> 100VAC to 240VAC (auto select). Frequency: 50/60Hz</p> <p><i>Inrush Current:</i> 75A max. (High Line, Cold Start)</p> <p><i>Power Consumption:</i> <40W.</p> <p><i>24V Optional instrument power:</i> 12VDC-30VDC /12VAC-20VAC. Power Consumption: < 40 watts</p> <p>12VDC -30VDC / 12VAC -20VAC</p> <p>Multitrend GR</p> <p><i>Voltage (VRMS):</i> 100VAC to 240VAC (auto select). Frequency: 50/60Hz</p> <p><i>Inrush Current:</i> 75A max. (High Line, Cold Start)</p> <p><i>Power Consumption:</i> AC: <50VA (max), DC: <60W (max). Typical 30W</p> <p><i>24V Optional instrument power:</i> 20 to 55VDC/20 to 30VAC. Power Consumption: < 40 watts</p> <p>DR Graphic Recorders</p> <p><i>Voltage (VRMS):</i> 100VAC to 240VAC (auto select). Frequency: 50/60Hz</p> <p><i>Inrush Current:</i> 75A max. (High Line, Cold Start)</p> <p><i>Power Consumption:</i> AC: <50VA (max), DC: <40W (max). Typical 25W</p> <p><i>24V Optional instrument power:</i> 20 to 55VDC/20 to 30VAC. Power Consumption: < 40 watts</p> <p>eZtrend GR Recorder</p> <p><i>Voltage (VRMS):</i> 100VAC to 240VAC (auto select). Frequency: 50/60Hz</p> <p><i>Inrush Current:</i> 75A max. (High Line, Cold Start)</p> <p><i>Power Consumption:</i> <40W.</p> <p><i>24V Optional instrument power</i> 12 to 30VDC/12 to 20VAC. Power Consumption: < 40 watts</p>
Common Relay Output (SPNC)	NC common alarm relay: Two contacts, normally open when the recorder is powered (no active alarms). Rating 24V, 1 Amp.
Battery	Battery backed up for clock, replaceable Lithium battery Type CR6032, 3.0V – 10 years life (Recorder powered), 1 year life, typical (Recorder unpowered).
Password Protection	Multiple Administrator control of password setup and management with four levels of password protection for – Engineer, Supervisor, Technician, and Operator. Up to 50 different users are available. Password protection restricts user entry to the recorder set up and specific screens. Engineer – Highest access to all levels, Supervisor, Technician and Operator. Supervisor – 2nd highest level including Technician and Operator access Technician – 3rd level including Operator access Operator – 4th and lowest level of access.
Languages	English UK & US, French, German, Italian, Spanish, Brazilian, Polish, Hungarian, Slovakian, Czech, Turkish, Romanian, Russian, Greek, Portuguese and Bulgarian. Also Asian languages including Chinese (simplified), Japanese and Korean.
Temperature Units	°C, °F, °K
Recorder Identification	Status bar: Alternately displays Recorder ID and Recorder Screen Name. Displays Time and Date.

Specification Tables

Specification	Design Attributes
Clock	Accuracy: $\pm 20\text{ppm}$ (± 1 minute/month) @ 25°C . Summer/Winter manual or automatic time adjustment or via communications. SNTP Client and/or Server included for synchronising over Ethernet. Recorder Time Synchronisation on Digital Input.
Alarm Set Points	6 per pen integral "soft" alarm set points easily set by user to announce selected out of limit conditions; user can select if an alarm triggers a change in the screen background colour. Alarm triggers can be set for Hi, Lo, Deviation (latched or unlatched) for alarm acknowledgement. Alarm Damping – 1 sec to 3600 seconds; Hysteresis - +/- 100% of pen scale Common relay output: 1A 24V, can be activated on any alarm. (Not available for the eZtrend GR)
Data Replay Mode	Data replay facility on chart displays at normal, fast or slow speeds with zoom and cursor.
Display Chart Speeds	Chart rates: 1 mm/hour, 5 mm/hour, 10 mm/hour, 20 mm/hour, 30 mm/hour, 60 mm/hour, 120 mm/hour, 600 mm/hour, 1200 mm/hour, 6000 mm/hour. Combinations of rates can be mixed and chart speeds can be set independently for each chart. Display speeds are independent of logging rate
Messages Screen	The message screen displays system information and records any setup activity that has been changed. It also provides warning and error message updates, lists alarm activity and will display user defined marks on a chart.
CE Conformity (CE Mark)	This product conforms with the protection requirements of the following European Council Directives: LVD: 2014/35/EU, EMC: 2014/30/EU Conformity of this product with any other "CE Mark" Directive(s) shall not be assumed.
Immunity Product Classification	Complies with EN61326-1:2013 Class I: Cord Connected, Panel Mounted Industrial Control Equipment with protective earthing (grounding). (EN 61010-1:2010)
Enclosure Rating	Front panel designed to NEMA 3R / IP55 for Multitrend GR only and NEMA 3/IP55 for Minitrend GR and eZtrend GR (Optional NEMA 4X / IP66) DR Graphic recorder (NEMA 4X), NEMA 3/IP55 std. Optional NEMA type 4X/IP66
Installation Requirements	Category II: Overvoltage (EN 61010-1-2010) Pollution Degree 2 Maximum Altitude 2000m
EMC Standards	Emissions - EN61326-1:2013 Immunity - EN61326-1:2013 Industrial Levels
Safety	Complies with EN61010-1: 2010. Panel Mounted Equipment, Terminals must be enclosed within the panel.

Specification	Analogue Inputs
Number of Inputs	Minitrend GR & DR Graphic recorder can have 4, 6, 8, 12 or 16 input channels. Multitrend GR recorder can have 4, 6, 8, 12, 16, 24, 32, 40 or 48 input channels. eZtrend GR recorder can have 3, 6, 9 or 12 input channels.
Input Types	mV, V, mA with external shunt (provided as standard), Thermocouple, RTD and ohms
Minimum Input Span	Range is fully configurable with span limitation of the operating range selected with 4% under range to 4% over-range capability (50V Range 2%)
Burnout (T/C)	Active (High or Low), Passive, and Health watch/Maintenance (option).
Cold Junction Compensation	Internal compensation with the ability to manually adjust values, External Input for compensation, External CJC value specified
Input Resolution	0.0015% (16 Bit ADC) (New AI: 0.0015% 24bit ADC)
Input Impedance	Current loop resistance: 10 ohms, use $\pm 0.1\%$ external resistor. Volts $> 1\text{M}\Omega$, all other $> 10\text{M}\Omega$

Specification Tables

Specification	Analogue Inputs
Source Impedance	T/C and RTD: 100 ohms per lead maximum (CU10 = 15 ohms, not available for the eZtrend GR) A single point cal on Slot A of the eZtrend GR recorder will improve accuracy for lead resistance above 10 ohms
Square Root Extraction	Available as standard on every input type
Sensor Compensation	Single point, dual point and multi point
Input Sampling Rate	DR Graphic recorders Minitrend GR/eZtrend GR Recorder has 2 available slots and the Multitrend GR Recorder has 6 available slots with up to 8 analog inputs each; the input sampling rate is dependent on actuation type. DR Graphic/Minitrend GR/Multitrend GR : All Inputs: 100mS (10Hz), 200mS (5Hz), 500mS (2Hz) DR Graphic/Minitrend GR/Multitrend GR : Fast Sampling: 20mS (50Hz) - mA, mV, Ohms and Volts only eZtrend GR 200mS (5Hz), 500mS (2Hz) and 100mS (10Hz) (Analogue Input expansion card option)
Scales, Linear & Logarithmic	Normal and Scientific notation Decimal Point automatic or programmable Engineering units, user definable (10 characters) Logarithmic: -38 min, to +38 max, (recommend up to 20 decades on one screen to ensure clarity)
Input Isolation	Functional Isolation : Channel to Channel Dielectric strength 1KVdc & Channel to Chassis 1KVdc. (Resistance thermometers are not isolated on the eZtrend GR)
Noise Rejection (at 50/60Hz) +/-2%	Analogue Input card (std) Common mode: 2Hz = -120dB, 5Hz = -120dB Normal Mode: 2Hz = -80dB, 5Hz = -25dB Analogue Input expansion card (option) Common mode: 2Hz = -120dB, 5Hz = -120dB, 10Hz = -120dB Normal Mode: 2Hz = -85dB, 5Hz = -80dB, 10Hz = -48dB

Specification	Logging
Logging Method	Sample, Average, Min/Max - can be set independently per pen
Logging Types	Continuous, Fuzzy
Logging Rate	DR Graphic/Minitrend GR/Multitrend GR 20 msec. to 60 hours per pen, eZtrend GR 100 msec. to 60 hours per pen,
Fuzzy Logging	A secure data storage technique which delivers data compression ratio of 100:1 or more; self teaching, storing the data at a variable rate to match the process

Specification	Physical Parameters
Enclosure/Bezel	Zinc plated steel case with high impact resistant polycarbonate bezel; scratch resistant lens (Polyethylene Terephthalate). NEMA3 / IP55 for Minitrend GR and eZtrend GR models only and NEMA3R/IP55 for Multitrend GR protection rating standard with NEMA 4X / IP66 (Front face only) protection rating as an option.

Specification Tables

Specification	Physical Parameters
Mounting Panel	<p>Unlimited mounting angle. For the best view of the display the viewing angle should not exceed:</p> <p>Minitrend GR 55° from the left or right, 40° looking down and 50° looking up at the recorder display.</p> <p>Multitrend GR 70° from the left or right, 45° looking down and 55° looking up at the recorder display.</p> <p>eZtrend GR 45° from the left or right, 10° looking down and 30° looking up at the recorder display.</p> <p>Mounting adjustable for panel thickness of 2mm to 20mm. Adapter kits available for covering existing panel cutouts.</p>
Dimensions	<p>Minitrend GR/eZtrend GR Recorder - W: 144mm (5.67"), H: 144mm (5.67"), D: 200mm (7.87"). Additional 80mm (3.15") clearance recommended for a straight type power cable and signal connectors. Cutout 138 x 138mm (5.43 x 5.43")</p> <p>Multitrend GR Recorder - W: 288mm (11.34"), H: 288mm (11.34"), D: 200mm (7.87"). Additional 80mm (3.15") clearance recommended for a straight type power cable and signal connectors. Cutout 281 x 281mm (11.06 x 11.06")</p>
Weight	<p>Minitrend GR Recorder - 2.7 Kg (6lb) max.</p> <p>Multitrend GR Recorder - 10 Kg (22 lb) max.</p> <p>eZtrend GR Recorder - 2.4 Kg (5.3lb) max.</p>
Colour	Bezel: Grey std or Black option
Wiring Connections	IEC Power Plug. Removable terminal strip for input and alarm connections

Specification Tables

Input Range Performance Accuracy Table

Analogue Input standard and expansion cards

Input Actuation (Linear)	Range		Accuracy		##Temp. Stability +/-	Input Impedance	
Millivolts DC	-5 to 5, -10 to 10, -25 to 25, -50 to 50, -100 to 100, -250 to 250, -500 to 500, -1000 to 1000		+/- 0.2% F.S. +/- 0.1% F.S. +/- 0.1% F.S. +/- 0.1% F.S.		0.01%/ °C 0.01%/ °C 0.01%/ °C 0.01%/ °C	>10M ohms >10M ohms >10M ohms >10M ohms	
Volts DC	-0.3 to 0.3, -0.6 to 0.6, -1.5 to 1.5, -3 to 3, -6 to 6, -12 to 12, -25 to 25, -50 to 50		+/- 0.1% F.S. +/- 0.1% F.S. +/- 0.1% F.S.		0.01%/ °C 0.01%/ °C 0.01%/ °C	>1M ohms >1M ohms >1M ohms	
Milliamps **	4 to 20, 0 to 20		+/- 0.2% F.S.		0.01%/ °C		
Ohms, 200	0 to 200		+/- 0.1% F.S.		0.01%/ °C		
Ohms, 500	0 to 500		+/- 0.1% F.S.		0.01%/ °C		
Ohms, 1000	0 to 1000		+/- 0.1% F.S.		0.01%/ °C		
Ohms, 4000	0 to 4000		+/- 0.1% F.S.		0.01%/ °C		
Input Actuation (T/Cs)	Range		Ref. Accuracy		##Temp. Stability +/-	#Field Cal Deg°F	#Field Cal Deg °C
	°F	°C	+/- °F	+/- °C			
B*	500 to 1000 1000 to 3300	260 to 538 538 to 1816	8.1 4.0	4.5 2.2	0.01%/ °C	8.1 2.0	4.5 1.11
E*	-454 to -328 -328 to -94 -94 to 1832	-270 to -200 -200 to -70 -70 to 1000	21.6 3.1 1.3	12 1.7 0.7	0.01%/ °C	21.6 3.1 0.8	12.00 1.7 0.44
J*	-346 to 32 32 to 2192	-210 to 0 0 to 1200	3.1 1.2	1.7 0.7	0.01%/ °C	0.8 0.63	0.44 0.35
K*	-454 to -94 -94 to 2502	-270 to -70 -70 to 1372	36 1.8	20 1	0.01%/ °C	36 0.9	20.00 0.5
R*	-58 to 500 500 to 1202 1202 to 3214	-50 to 260 260 to 650 650 to 1768	6.7 2.7 2.0	3.7 1.5 1.1	0.01%/ °C	6.7 1.0 1.0	3.7 0.56 0.56
S*	-58 to 500 500 to 1832 1832 to 3110 3110 to 3214	-50 to 260 260 to 1000 1000 to 1710 1710 to 1768	5.9 2.7 2.0 2.5	3.3 1.5 1.1 1.4	0.01%/ °C	5.9 1.0 1.0 1.0	3.3 0.56 0.56 0.56
T*	-454 to -346 -346 to 752	-270 to -210 -210 to 400	9.7 1.8	5.4 1	0.01%/ °C	9.7 0.9	5.4 0.5
L*	-328 to 32 32 to 1652	-200 to 0 0 to 900	2.2 1.3	1.2 0.7	0.01%/ °C	1.0 0.7	0.56 0.39
G* (W_W26)	32 to 212 212 to 600 600 to 1526 1526 to 2759 2759 to 4199	0 to 100 100 to 316 316 to 830 830 to 1515 1515 to 2315	45 11.2 5.0 3.1 5.0	25 6.2 2.8 1.7 2.8	0.01%/ °C	45 11.6 5.0 1.6 5.0	25 6.2 2.78 0.89 2.78
C* (W5, W26)	32 to 356 356 to 2228 2228 to 4199	0 to 180 180 to 1220 1220 to 2315	4.5 3.6 6.7	2.5 2 3.7	0.01%/ °C	4.5 1.8 6.66	2.5 1.0 3.7
M* (NiMo-NiCo) (NNM90)	-58 to 698 698 to 2570	-50 to 370 370 to 1410	2.0 1.4	1.1 0.8	0.01%/ °C	1.0 0.72	0.56 0.4
N* (Nicosil Nisil)	-328 to 212 212 to 2372	-200 to 100 100 to 1300	5.8 2.0	3.2 1.1	0.01%/ °C	5.8 1.0	3.2 0.56
Chromel/Copel*	-58 to 1112	-50 to 600	1.1	0.6	0.01%/ °C	0.54	0.3
P* (Platinel)	32 to 2534	0 to 1390	2.5	1.4	0.01%/ °C	1.4	0.78
D*	32 to 356 356 to 3344 3344 to 4515	0 to 180 180 to 1840 1840 to 2490	6.3 4 11.7	3.5 2.2 6.5	0.01%/ °C	6.3 4 11.7	3.5 2.2 6.5

Specification Tables

Input Actuation	Range		Accuracy		##Temp.Stability+/-
PT100 $\alpha = 0.00385$	-328 to 1562	-200 to 850	1.1	0.6	0.01%/ °C
PT200 $\alpha = 0.00385$	-328 to 1562	-200 to 850	1.1	0.6	0.01%/ °C
PT500 $\alpha = 0.00385$	-328 to 1562	-200 to 850	1.1	0.6	0.01%/ °C
PT1000 $\alpha = 0.00385$	-328 to 1562	-200 to 850	1.1	0.6	0.01%/ °C
100 ohm Nickel	-76 to 356	-60 to 180	0.9	0.5	0.01%/ °C
120 ohm Nickel	-112 to 500	-80 to 260	0.5	0.3	0.01%/ °C
Cu10#	-328 to 500	-200 to 260	5.5***	3***	0.01%/ °C
Cu53#	32 to 302	0 to 150	0.5	0.3	0.01%/ °C

Reference Temperature: 22°C

Reference Humidity: 65% RH +/-15%

Reference Sample Rate: 2Hz (500msec)

Long term stability: 0.2%/year

* Does not includes reference junction calibration of ± 1.0 °C using the standard "ice bath" method of calibration. Factory accuracy can be improved by performing a field calibration. Also does not include any error on the sensor.

** Tolerance for these input types includes that of the external shunt resistors (0.1% tolerance)

*** Reference Accuracy can be improved to +/- 0.4°C/0.7°F using the single point compensation calibration.

not available on the eZtrend GR₁ Including all Field Cal values.

Temperature Stability - Interpreted as % of Full Span per deg C change in ambient from Reference condition

Accuracy Specifications under EMC environment for Marine applications

Table 12.3 :

Sr. No.	Input Actuation	Ranges	Accuracy	## Temp.Stability +/-
1	Millivolts	-100 to 100	+/- 0.8 % F.S	0.01% / °C
2	Volts DC	-6 to 6	+/- 0.4 % F.S	0.01% / °C
3	Milliamps	4 to 20, 0 to 20	+/- 0.8 % F.S	0.01% / °C
4	Ohms 200	0 to 200	+/- 3.0 % F.S	0.01% / °C
5	TC (K-Type)	-94 to 2502 °F	8.1 °F	0.01% / °C
		-70 to 1372 °C	4.5 °C	0.01% / °C
6	(RTD (PT100))	-328 to 1562 °F	18 °F	0.01% / °C
		-200 to 850 °C	10 °C	0.01% / °C

Specification Tables

Specification	Options
Pulse Input (optional) (not available on the eZtrend GR)	4 isolated inputs per board, frequency – 1Hz to 25kHz, updated once per sec. Input: Low < 1V, High >4V to <50V or Volt free input: Low = short circuit, High = open circuit.
Alarm Outputs (optional)	<p>Programmable alarm set points (6 per pen) can be configured to activate up to 8 outputs for DR Graphic recorders 16 outputs for the Minitrend QX and 48 outputs for the Multitrend GR. Update rate: 200 ms for all alarms. Number/Type:</p> <ul style="list-style-type: none"> • 4 or 8 relay contacts SPDT, 3A 240VAC, 3A 24VAC/DC, 0.2A 240VDC (non-inductive, internally suppressed) • 8 I/O or 16 I/O - SPNO 1A 24VDC (non-inductive, internally suppressed). 16 I/O not available for the eZtrend GR <p>Activation: Fully programmable internal alarm levels. Assignable to any relay or discrete output.</p>
Analogue Outputs (Re-transmission Outputs) (optional) (not available for the eZtrend GR)	<p>2 or 4 re-transmission outputs available for the DR Graphic/Minitrend GR Recorder and 2, 4, 6 or 8 re-transmission outputs available for the Multitrend GR Recorder; a pen drives each output. Analog inputs, totalised values or any mathematical result can be re-transmitted.</p> <p>Update Rate: 250 msec all channels Accuracy: $\pm 0.1\%$ 0-500Ω load, $\pm 0.25\%$ 500Ω 1KΩ load</p> <p>Type: 0 to 20 / 4 to 20 mA Maximum Load Resistance: 1000 Ohms</p> <p>Resolution: 0.002% Isolation: 300VAC</p>
Digital Input/Output (optional)	<p>8 I/O or 16 I/O: all channels may be selected freely as either digital inputs or outputs. The Digital I/O card also has 4 channels that can be set as pulse inputs (channels 1 to 4). The operating frequency for pulse inputs on the Digital I/O card is 1kHz max. Input: Low < 1V, High >4.5V to <10V DC (9V to 20V p-p AC) or Volt free input: Low = short circuit, High = open circuit. 16 I/O not available for the eZtrend GR</p> <p>4 relay outputs: all four channels are relay outputs only.</p> <p>8 relays/ 2 DI card: two outputs can be configured for use as digital inputs: A digital input is provided by a volt free contact between the normally open (NO) and the common (C) terminals of an output relay. If the 2 Digital inputs are used only 6 relay outputs are available. Closed <500 ohms, Open >300 kohms.</p>
Transmitter Power (optional)	DR Graphic/Minitrend GR / eZtrend GR have 200mA @ 24VDC \pm 3VDC. Multitrend GR has 1 Amp @ 24VDC \pm 3VDC..
Agency Approval (optional)	<p>cCSAus, cULus approvals for Multitrend GR /Minitrend GR / and DR Graphic Recorder. cCSAus Approval for eZtrend GR Recorder.</p> <p>Multitrend GR /Minitrend GR /also have FM class 1 Div 2 approval.</p> <p>CSA (Optional) CSA22.2-No.1010-1-12:2017 Certificate Number L211230.</p> <p>UL (Optional) ANSI/UL61010-1 File # 201698. FM Class 1 Division 2 (optional).</p>
Extended Security System (ESS) (optional)	Provides full support for 21 CFR Part 11. Includes features for entry of unique User ID's and associated passwords, timeout on inactivity (1 to 10 min.), password expiration (1 to 365 days), up to 50 users, password re-entry lock out for incorrect entry of password more than 3 times, no re-use of passwords (programmable 4 to 12 times), traceability by user name
Miscellaneous	Optional customer ID Tagging (3 lines of up to 22 characters each line)

Specification Tables

Specification	Options
Firmware Options	
Math Algorithms (optional)	All analog input channels have a math expression text block. This is a fully user programmable 100 character free form math expression for each pen. Math calculations available on all pens, one per input plus 16 extra pens for the DR Graphic/Minitrend GR , 48 extra pens for the Multitrend GR recorder. and 12 extra pens for the eZtrend GR . Scripting maths includes conditions and multi-line scripting in pen maths expressions. Allow functions, permanent variables, constants and timers. 500 characters maximum. (Scripting is not available on the eZtrend GR)
Events (optional)	Events are certain conditions or operations that can be set up and logged according to the time and date of an occurrence. Subsequently events can be reviewed or displayed on a graph. The Event Causes include: Alarms - Into/Out of and Alarm Ack, Totals - Start/Stop/Reset/Reset and Start, Digital Input - ON/OFF/State Change, T/C Burnout, Scheduled - Once/Interval/Specific Days/Month End, User Counters, Max/Mins - Reset, System - Power ON/Setup Change/Internal Memory Low/Export Memory Low/FTP Memory Low, User Action - Mark Chart, Batch - Start/Stop/Pause, TUS - Start/Stop, AMS2750 - TC Timers/Process Timers, TC Health Monitor - Analogue Inputs. The Event Effects include: Mark Chart, Logging - Start/Stop, Totaliser - Start/Stop/Reset/Reset & Start, Digital Output - ON/OFF, Alarm Acknowledge, Emails, Screen Change, Print Screen, Counters - Reset/Increment, Max/Min (Reset), Chart Control - Pause/Stop/Resume/Clear/Prefil, Clear All Messages, Delayed Event, Script Timers - Start/Stop/Reset/Reset & Start, Play Sound - Start/Stop, Display Alert, Reports, Batch - Start/Stop/Pause, Reports, Update Tabular readings, Enter Replay Screen, Exit Replay Screen, Change Chart Speed. Each event marker can be recorded for analysis using the TrendManagerSoftware Suite.
Fast Scanning mode	For fast processes, the scan rate and recording of the data can be set for up to 50 times per second (20ms) for up to 8 inputs for the DR Graphic/Minitrend GR and 8 inputs for the Multitrend GR .
Totaliser/Sterilisation* (optional)	One totaliser per pen. Totaliser value must be assigned to a pen for display and storage. Multiple totalisations (Maths option) are possible with the use of extra pens (option). Reset may be manual or programmed (Event option). Totalisation values are ten digits plus exponent. Each pen can be totalised according to the Fo or Po sterilisation* function at 250 °F (121.11°C). The Standard Reference Temperature and Thermal Resistance (Z Value) are fully adjustable values of X, Y, W and V. Start temp, Reference temp and Z factor are all user defined, allowing support for many different types of sterilisation applications.
Custom Screens (optional) (not available for the eZtrend GR)	Provides the capability in the recorder to accept custom screen designs from the Screen Designer.
Reports	Generate reports manually or using the event system to show daily/weekly/monthly Totals, Max/Mins, Averages, Current Value. Messages, Message Lists - Alarm, System, Diagnostic, Security & User, Counters, Digital Inputs, and Digital Outputs. Reports can be printed, e-mailed as an attachment or exported to external media in RTF format.
AMS2750 Process	AMS2750 Process activates the Process Mode screen and the AMS2750 process configuration menus for furnaces and sensors in accordance with AMS2750D specification, including Thermocouple tracking.
Health Watch/Maintenance Capability (optional)	The recorder keeps track of important "life actions" for improved diagnostics and preventative maintenance notification. Including Powered On, Last powered On, Time On since power up, Total On time, Total Off time, Longest Off time, Lithium cell life, Backlight life left at 100% brightness, Hi/Lo CJC value (Hi & Lo temps), Analogue In last factory/user cal, Relay operations, last configuration change.
Print Support (optional)	Enables the printer option to print from various Status screens using a basic USB or Network printer with PCL3 or PCL3 GUI or PCL5 supported (Printer Command Language) printer.

Specification Tables

Specification	Options
AMS2750 TUS	AMS2750 TUS activates the TUS screen and the AMS2750 TUS configuration menus for furnaces and sensors in accordance with AMS2750D specification, including Thermocouple tracking. All of the survey information can be exported to a Report Generating tool.
Batch/Groups	The Batch function allows the user to segment portions of data for further analysis. The Batch function manages sections of data. Concurrent batches are now associated with a group of pens. The pens within each group will belong to the batch that is controlled by that group. Maximum 32 pens per group. Batches can be controlled through the event system and batch markers are setup by the user and used to identify and analyse batches of data. Supports up to 6 concurrent batches.
Counters	User Counters can be set up and used as a part of the Events system to count an occurrence. Other counters are available depending on hardware availability. Eg. Alarm, Event, Digital Input, Relay Output and Pulse counters.
Modbus Master	Modbus master enables the recorder to communicate with up to 32 Slave devices on both Ethernet & RS485. The recorder itself can also act as a slave device while also being a master.
Remote Viewer/Remote Control Tool	Extends the user interface of the recorder onto the desktop PC. Providing full remote control of the recorder launched from a web browser.
Email (optional)	Setup email accounts to send the following: When an Alarm is triggered or an Email can be sent as a part of an Event occurring, such as: Alarms - In/Out/Ack, Totaliser – Start, Stop or Reset, Digital Inputs – On, Off or State change, TC Burnout – on a specific Analogue Input channel, Scheduled Events – Once, Interval, Specific days, Month End.
Pwd Net Sync (optional)	Password Network Synchronisation. Password can be synchronised over the network, a recorder can be designated as a master of a password group and other recorders can be added to that group as slaves, the master will ensure all passwords are synchronised with all recorders in its group. up to 32 recorders can be in a Password group, this include the password Master.
Extra Pens (4 pens) (optional)	4 extra pens to store and display totalised values, results of calculations, etc. Maximum is up to 16 extra pens for the DR Graphic/Minitrend GR , 12 extra pens for the eZtrend GR recorders, and 48 extra pens for the Multitrend GR recorder.
Hardware Lock	Uses the password permission areas to lock access to the hardware configuration functionality leaving some areas view only.
OPC UA	Max number of concurrent clients: 3, Min sampling rate: 100ms, Profile: Embedded device server, Protocol: OPC UA TCP, Port: 4840 (default), Language: English, Security Mode/ Encryption: none/none, Type: Data Access Server, Max number of monitored items in session: 300

*Specification table for Sterilisation: The definition of Fo/Po is the sterilisation/pasteurisation time in minutes required to destroy a stated number of organisms with a known z at temperature T. For example, "F18/250" represents the time in minutes required to destroy a stated number of organisms at a temperature of 250°F (121.11°C) with a z = 18 degrees F. F values are used to compare the sterilizing values of different processes, however, F values cannot be compared unless the z values are the same. When temperature is not specified (for example, F = 8.6) it is understood that the temperature is 250°F (121.11°C); the subscript O (as in the term Fo = 7.4) is used to indicate that the z = 18 degrees F and the temperature is 250°F (121.11°C).

Specification Tables

Specification		Environmental and Operating Conditions		
Parameter	Reference	Rated	Extreme	Transport & Storage
Ambient Temperature	67 °F to 77 °F 19 °C to 25 °C	32 °F to 122 °F 0 °C to 50 °C	32 °F to 122 °F 0 °C to 50 °C	14 °F to 140 °F -10 °C to 60 °C
Relative Humidity (%RH)	50 to 65*	10 to 90*	5 to 90*	5 to 95*
Vibration Frequency (Hz) Acceleration (g)	0 0	0 to 70 0.1	0 to 100 0.2	0 to 100 0.5
Mechanical Shock Acceleration (g) Duration (ms)	0 0	1 30	5 30	20 30
Mounting Position from Vertical Tilted Forward Tilted Backward Tilted to Side (+/-)	5° 5° 5°	40° 65° 65°	40° 65° 65°	Any Any Any
Power Requirements Mains Voltage (Vrms) Low Voltage AC (Vrms) DC Voltages Frequency (Hz)	120 to 240 18 +/- 2 24 +/- 2 49.8 to 50.2	100 to 240 12 to 20 Minitrend GR & eZtrend GR 20 to 30 Multitrend GR & DR Graphic 20 to 55 DR Graphic/ Multitrend GR 12 to 30V Minitrend GR/ & eZtrend GR 47 to 63	90 to 264 12 to 20 Minitrend GR & eZtrend GR 20 to 30 Multitrend GR & DR Graphic 20 to 55 DR Graphic/ Multitrend GR 12 to 30V Minitrend GR & eZtrend GR 47 to 63	N/A N/A N/A N/A
Power Consumption	Minitrend GR/eZtrend GR: AC: <40W (max), DC: <40W (max) Typical 20W. Multitrend GR: AC/DC : < 60 W (max) ; Typical : 30W DR Graphic: AC: <50 VA (max), DC: <40W (max) Typical 25W			
Warm Up	30 minutes minimum			

* The maximum rating only applies up to 104°F (40°C). For higher temperatures, the RH spec is de-rated to maintain constant moisture content

Specification Tables

LED Flash Codes

LEDs are fitted on the Analogue Input card, Analogue Output card, Pulse Input card, 4 and 8 Alarm Relay cards and the 8 and 16 Digital IO cards. The LEDs can be seen through six holes on the left side of the **Minitrend GR / eZtrend GR** recorders, and 18 holes on the **Multitrend GR** recorder (looking from the front).

For **DR Graphic** recorders the LEDs are not directly visible. They can be seen on the left side of the IO cards chassis if the unit is ON & IO card chassis is rested on the bottom stand.

Table 12.4 :

Red LED Flash codes:	Sequence:	Type of Fault:
1,1	flash once, pause, flash once, pause etc.	Hardware
2,2	flash twice, pause, flash twice, pause etc.	Communications
3,3	flash three times, pause, flash three times, pause etc.	Memory
4,4	flash four times, pause, flash four times, pause etc.	Other
1,2	flash once, pause, flash twice more quickly, pause, flash once etc. (added as CJC could be unplugged...)	CJC fault
1,3	If another error is also present with CJC error, flash once, pause, flash 3 times	CJC fault +

Red LED flash codes relate to the first fault stored in the error buffer. With no faults, the red LED remains off.

When the red LED is flashing, the green LED stays lit. The green LED flashes for normal operation. The board outputs the flash code for about 30 seconds after it was registered.

Section 13: Network and System Security

Network and Security Planning

This section contains networking and security-related information. It provides information about the recommendations to assist you in planning, setting up, and maintaining a secure environment for your system.

Introduction

This section contains networking and security-related information applicable to the recorder. It provides information about the recommendations to assist you in planning, setting up, and maintaining a secure environment for your system.

Assumptions and prerequisites

This section is primarily intended for engineers, system administrators, and other technical staff who are responsible for planning the configuration and maintenance of the recorder system. Therefore, it is assumed that the user has technical knowledge and familiarity with the following:

- Microsoft Windows operating system
- Networking system and concepts
- Security issues and concepts

NOTICE

As you derive a security program for your system you must be aware that detailed information, if not protected, can fall into the hands of organizations that could cause harm to your system or process operations.

Security Checklist

This section provides a number of checklist to help you analyse the security issues that must be considered for your site.

The checklist cover some of the main threats that may exist on a system network and the steps that can be used to mitigate against them.

Viruses and other malicious software agents

This threat encompasses malicious software agents such as viruses, spy ware (trojans), and worms.

The intrusion of malicious software agents can result in the following:

- Performance degradation
- Loss of system availability
- The capture or deletion of data
- Loss of prestige if the external access becomes public knowledge

Mitigation steps

1. Ensure that your virus protection and Microsoft security hot fixes are up to date on all nodes in your network and the system connected to it.
2. Ensure that there are no e-mail clients on any nodes of your network.
3. Use a firewall for the business network to local network interface.
4. For more security ensure IP "Whitelisting" is configured in the firewall switch.

Unauthorized external access

This threat includes intrusion into the system from the business network, and possibly from an Intranet or the Internet.

Unauthorized external access can result in the following:

- Loss of system availability
- correct execution of controls causing damage to the plant, or theft or contamination of product
- Loss of prestige if the external access becomes public knowledge
- Harm to personal safety or environment

Mitigation steps

1. To restrict access from the business network to local network, use a firewall interface.
2. Set the minimum level of privilege for all accounts, and enforce a strong password policy.

Security Checklist

Unauthorized internal access

This threat encompasses unauthorized access from systems within the network. This threat is the most difficult to counter since attackers may well have legitimate access to part of the system and they simply want to exceed their permitted access.

Unauthorized internal access can result in the following:

- Loss of system availability
- correct execution of controls causing damage to the plant, or theft or contamination of product
- The capture, modification or deletion of data

Mitigation steps

1. Ensure PC security
2. Use physical security for local network systems
3. Do not allow the use of unauthorized removable media
4. Use strong passwords on network equipment
5. Prevent the use of unauthorized laptops on the local network

Accidental system change

This threat encompasses inadvertent changes to executables or configuration files.

Accidental system change can result in the following:

- Loss of system availability
- Loss of data

Mitigation steps

1. Set the minimum level of privilege for all accounts and enforce a strong password policy.
2. Set the software password lock on the recorder when the physical display of the recorder is not being accessed to prevent unauthorized configuration changes.

Protecting the Recorder system components

The measures in this section list the steps you can take towards securing the recorder system.

PC installed with Software Suite

Protection measures

1. Take steps to implement and enforce physical security.
2. Enforce a strong password policy.
3. Ensure that your virus protection and Microsoft security hot fixes are up to date on all systems.
4. Take steps to provide role based access. Refer to the Software Application Manual for more details.

Security Checklist

Network components

Protection measures

1. Take steps to implement and enforce physical security.
2. Set the minimum level of privilege for all accounts and enforce a strong password policy.
3. Refer to the firewall guidelines in the section “Recommended firewall settings”

Recorder:

Protection measures

1. Take steps to implement and enforce physical access to recorders.
2. Take steps to use the Hardware Lock to protect configuration changes by unauthorized users.
3. Take steps to implement user administration. Please refer to the Recorder User Manual for more details.
4. Take steps to implement and restrict physical access to below hardware of system:
 - A. Recorder and IO Slots
 - B. Field wiring
 - C. Removable devices on the recorder like USB sticks, SD cards.

Backup and Restore

This section describes planning considerations for backup and restore policies and the tools that are supported for backing up and restoring your recorder

Formulating a disaster recovery policy

As part of your security strategy, you must define a comprehensive backup and restore policy for disaster recovery purposes.

Consider the following for formulating this policy.

- How frequently are critical data and configurations changing? This dictates the frequency and completeness of backups.
- The safe on-site and off-site storage of full and incremental backups.
- The safe storage of installation media, license keys, and configuration information.
- Who is responsible for backups, and the testing, storing, and restoring of backups?

Backup and restore configurations

Use the Database Management Tool to backup and restore your project configuration and data.

For more information, refer to the Database Tool User Manual.

Physical and Environmental Considerations

The physical security of a process control network is particularly important. If the hardware is rendered inoperable, the entire system (and hence the plant) is rendered inoperable.

Protecting against unauthorized system access

External media drives can enable anyone to bypass Windows security and gain access to your system.

If there is easy access to a computer, and it has a floppy disk or DVD drive or a USB drive, it can be booted from an alternative operating system. This can be used to circumvent file system security, and could be used to install damaging software, or even to reformat the hard disk.

It is therefore of critical importance in relation to the nodes in your local network that you prevent the use of all unauthorized removable devices and media such as CDs, DVDs, floppy disks, and USB memory sticks.

There are several other steps that can be taken to reduce the risk of unauthorized access, including:

- Setting the BIOS to boot only from the C drive.
- Setting a BIOS password (check that this does not prevent automatic start-up).
- Physically securing the computer (for example, in a locked room or cabinet) or fitting locks to the floppy and DVD drives.
- Removing (in extreme cases) the floppy and DVD drives from the computer.
- Disabling USB ports and other ports capable of being used for memory sticks and other portable storage devices.

Control room access

Providing physical security for the control room is essential to reduce the potency of many threats. The area often contains the Engineering Workstation and the recorder system. Limiting those who can enter this area, using smart or magnetic identity cards, biometric readers, etc. is essential.

Network and recorder access

The recorder is an intelligent programmable device, with the ability to be manipulated through the application software running on a laptop, or a similar computer connected directly to it. In order to prevent unauthorized tampering, the recorders and network equipment must be physically protected in locked cabinets, and logically protected with passwords or other authentication techniques. Network cables are also vulnerable to damage or unauthorized connection. For maximum protection, cabling must be duplicated and laid in separate hardened cable runs.

Physical access to critical devices

The malicious operation of the critical recorder modules like, Processor modules, I/O Modules or power supply modules will result in system shutdown, starting the system unexpectedly or impact process control. For maximum security, the recorder system must be placed in a cabinet or locked closet to protect against unauthorized access to the critical modules.

Security Updates

Microsoft Security Updates and Service Packs

Microsoft releases a range of security updates and other operating system and software updates. It is recommended to install Microsoft updates on a regular basis.

Timely information on security updates can be obtained by subscribing to the Microsoft Security Bulletins at <http://www.microsoft.com/technet/security/current.aspx>

Virus Protection

Protection measures

1. Choose supported antivirus software
2. Install antivirus software on Engineering Workstation
3. Configure active scanning
4. Tune the virus scanning for optimal system performance
5. Ensure frequent updates to antivirus signature files
6. e recommended USB drives and SD cards which are pre-scanned for malware before inserting them into the recorder

Network Security

The recorder can be configured as a server system or as a client system. It includes provisions for communication via Ethernet with host systems.

Architecture

The recorder system has a network used for communication with the application software nodes, recorders and third party devices. The following diagram provides an example of a system architecture.

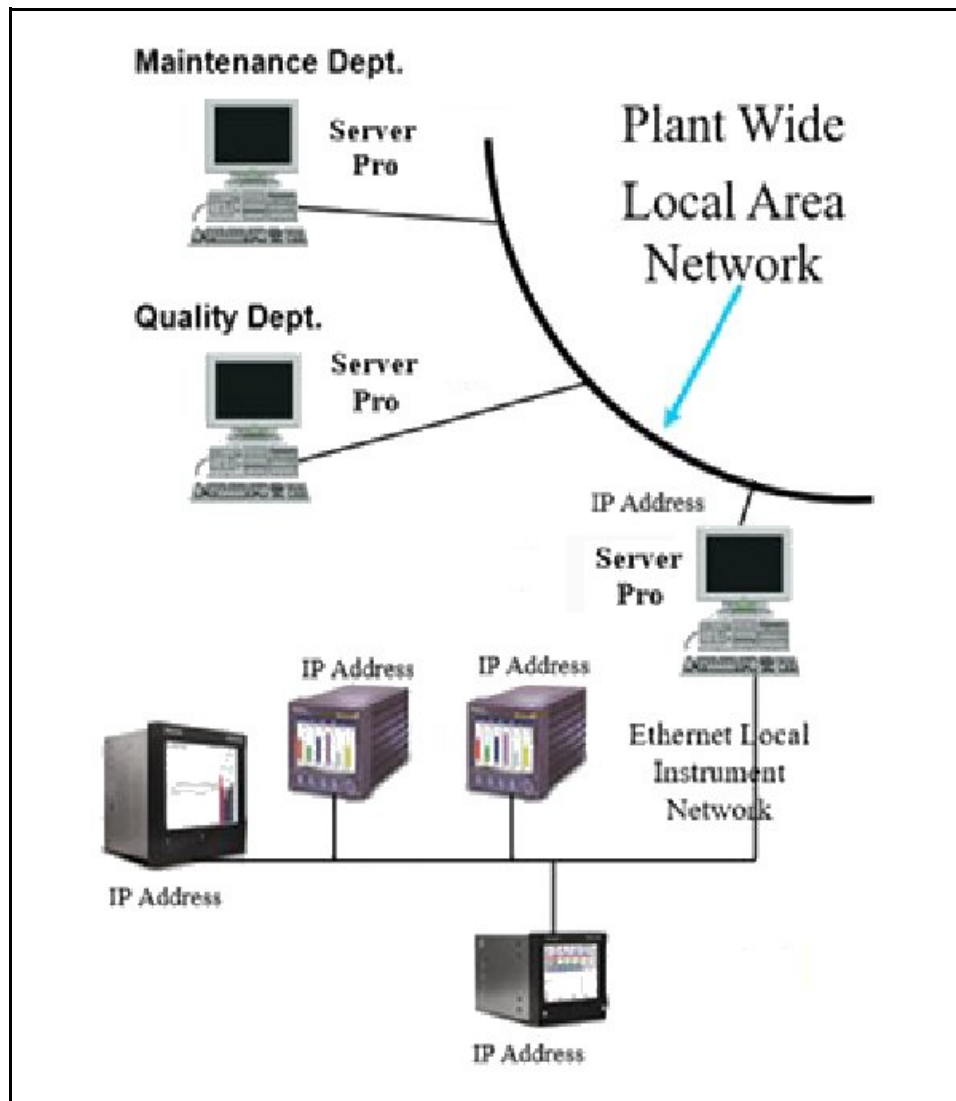


Figure 13.1 : System architecture

NOTICE

- Components of the Ethernet Open Connectivity Network are those which link a recorder to Peers and to other Ethernet 100 Base-T devices that support TCP/IP. The Ethernet Open Connectivity Network in some cases may require the services of an IT networking professional.
- **GR Series** recorders supports only 100 Base-T network speed.
- **X Series** recorders supports 10/100 Base-T network speed.
- Although the Recorder provides protection against Cyber-security/DOS type attacks, additional protection is required for applications using a firewall device configured to prevent uncontrolled messages into the recorder.

Recommended firewall settings:

Close all TCP and UDP communication to Ethernet ports in the recorder except:

- SMTP (Default port 25, User Configurable)
- HTTP TCP (Default port 80, User Configurable)
- SNTP UDP (port 123)
- NetBIOS-ns UDP (port 137)
- Secure HTTP TCP (port 443)
- Modbus TCP (Default port 502, User Configurable)
- Remote Viewer TCP (port 976)
- Remote Display Tool (port 135 for X series, port 2150 for GR Series)
- OPC UA (Default port 4840, User Configurable)
- Trendbus TCP (port 5001)
- UPnP TCP (port 5120)
- WSD TCP (port 5357,5358)
- Peer Communication TCP (Default port 8955 - 8970, User Configurable)
- LLMNR (5355)
- Secure PNS (5361)
- Secure FT (5359)
- Secure Email (POP3 port, SMTP port as configured by the user)
- FTP (port 20, 21)

These are the recommended/default port settings. If the ports are configured differently on the recorder, they should be opened accordingly.

Note: WSD TCP ports are required only for firmware till R200.3. From R211.5 firmware and above, these ports will be disabled.

Network Security

The following table gives the information about the port behaviour when the respective feature is enabled or disabled.

Table 13.1 : Port Usage of GR Recorders

Features	Port Number	Port Behaviour
SMTP, Secure Email	User Configurable (Default: 25)	Port is open only when the feature is enabled
HTTP TCP	User Configurable (Default: 80)	Port is open only when the feature is enabled
SNTP UDP	123	Port is open only when the feature is enabled
NetBIOS-ns UDP	137	Port is open only when the feature is enabled
Secure HTTP TCP	443	Port is open only when the feature is enabled
Modbus TCP	User Configurable (Default: 502)	Port is open only when the feature is enabled
Remote Viewer TCP	976	Always port will be open
Remote Display Tool	2150	Always port will be open
OPC UA	User Configurable (Default: 4840)	Port is open only when the feature is enabled
Trendbus TCP	5001	Always port will be open and available only in V5 Recorders
UPnP TCP	5120	Always port will be open
WSD TCP	5357	Cannot be disabled in older firmware versions. Disabled in FW>=211.5
	5358	Cannot be disabled, only available in FW <211. Disabled in FW>=211.5
LLMNR	5355	Always port will be open
Secure PNS	5361	Port is open only when the feature is enabled
Secure FT	5359	Port is open only when the feature is enabled
P2P	User Configurable (Default: 8955 - 8970)	Port is open only when the feature is enabled
FTP	21	Port is open only when the feature is enabled
Production Interface TCP	2152	Disable in production

Rate Limiting

In general, one host should not be allowed to occupy unlimited bandwidth. For example, “broadcast storms” could be caused by an incorrectly configured topology, or a malfunctioning device. Firewalls can prevent storms seen by the recorder ports. Limit the rate of all traffic (Ingress/egress) to the port at ≤ 3 MB/s.

Network Security

If the network activity reaches 3MBs for our device, it may not continue receiving messages consistently, but if the network bandwidth issue is fixed within 2 minutes the system will recover and there will be no loss of data collected locally by the device.

Denial-Of-Service

Settings should also be enabled in the Firewall device if possible. These settings may include the following scan types Null, XMAS, NMAP-XMAS, SYN/FIN, FIN, NMAP-ID, SYN/RST, SYN, Flood and others.

Firewall device(s) should be introduced above the network at the control network level prior to the supervisory control network level. [Figure 13.2, “: Communication from Remote location,” on page 341](#)

Communication from a Remote Location

It is not recommended to connect a recorder installed in a remote location to the public network. The communication to a recorder installed in a remote location is recommended to be on a private leased line, or secured by setting up a VPN device external to the recorder. The figure below illustrates a scheme of securely connecting to a remote location:

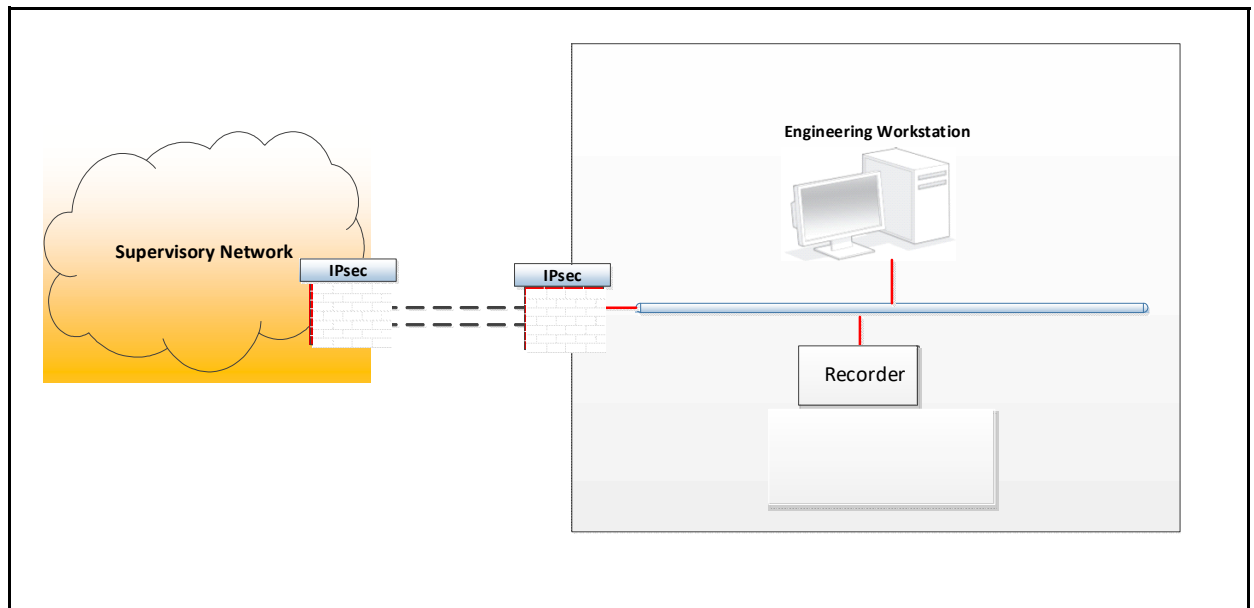


Figure 13.2 : Communication from Remote location

Recorder Security Features

Extended Security System

ESS provides features including entry of unique User ID's and associated passwords, time-out of password entry, password expiration, and traceability of user actions. ESS is compatible with the requirements of 21CFR part 11

Secure File Transfer (Secure FT) Communication

To ensure secure data upload in the recorders, WSD (Web Services on Devices)/Secure FT should be used with recorders. The recorder device will have a server certificate installed on it when shipped from the factory. The application software will have the root authority certificate of the server in its trusted root certificates. Whenever the Server software connects to a WSD/Secure FT service, an SSL handshake will take place and on successful handshaking secure communication channel will be established with data flowing between these two end points being encrypted. Only WSD/Secure FT clients with valid certificates can connect to the WSD/Secure FT service. Data transfer between recorder and application software will then be in secure mode.

Note: WSD is supported till R200.3. From R211 onwards, WSD is replaced with Secure FT communication between recorder and TrendServer Pro application software.

Export Device

Export transfers data from the internal memory to the external media such as SD cards, USB key or Network Share (NAS). It is recommended to use physical media like USB over Network Access Storage(NAS)

User Management System

The recorder has a role based access system which supports up to 50 users. Each user can be allocated to a group. Administrator has access to everything, and it is possible to have more than one user at the administrator level. Apart from Administrator who has access to everything, the other 4 groups permission areas can be configured, users can then be allocated to a level and they will inherit those permissions. It is recommended that the users change their password at a frequency of around 90 days.

Guidelines for Certifications

Recorder supports the following two types of certificates from R211 onwards:

1. Default certificates that comes with the device.
2. Custom certificates, that is obtained by the customer from a Certificate Authority.

It is strongly recommended that the customer should obtain their own certificate from CA and install in the device for enhanced security and to have better control on certificate management and tracking.

Default Certificates: These are device specific certificates generated using a self-signed certification authority and having longer expiry date (valid till 2030). It is recommended to have shorter expiry dates and regular tracking of certificates.

Custom Certificates: Unlike default certificates, the custom certificates to be obtained from a reputed Certification Authority.

For example DigiCert, VeriSign, GoDaddy, Commodo etc.

Note: If the recorder is migrated from old firmware version of GR series to the latest firmware version (R211 or more), then it is recommended to upgrade the certificate as well.

To load the custom certificate in the recorders, refer “Loading a Custom CA Certificate:” on page 100.

Tracking Certificate Status:

Certificate details are displayed in the General Status window (Status > System > General).

Certificate Type: Default or Custom followed by issuer. For example, HoneywellTV2 for the latest default certificate.

Certificate Status: Valid/Invalid/Expired

Valid - When the certificate is valid.

Invalid - When there is no certificate is present in the recorder.

Expired - When the certificate is present but expired.

Email Root Certificate: This is to identify the status of email root certificate installed in the recorder.

If the root certificate is installed, then the status will be shown as “Installed,Name:xxxx”, here the name indicates the root name of the certificate installed by the user. If the user does not install any root certificate, then the status will show as “Default”.

Note: If the user does not install any root certificate, then the recorder will look for default certificates available in the OS.

Notices

Third-party licenses

This product may contain or be derived from materials, including software, of third parties. The third party materials may be subject to licenses, notices, restrictions and obligations imposed by the licensor. The licenses, notices, restrictions and obligations, if any, may be found in the materials accompanying the product, in the documents or files accompanying such third party materials, in a file named `third_party_licenses` on the media containing the product, or at <http://www.honeywell.com/ps/thirdpartylicenses>.

Documentation feedback

You can find the most up-to-date documents on the Honeywell Process Solutions support website at:

<http://www.honeywellprocess.com/support>

For immediate help with a technical problem, contact your local

Honeywell Technical Assistance Centre (TAC): hfs-tac-support@honeywell.com.

How to report a security vulnerability

For the purpose of submission, a security vulnerability is defined as a software defect or weakness that can be exploited to reduce the operational or security capabilities of the software.

Honeywell investigates all reports of security vulnerabilities affecting Honeywell products and services.

To report a potential security vulnerability against any Honeywell product, please follow the instructions at:

<https://honeywell.com/pages/vulnerabilityreporting.aspx>

Submit the requested information to Honeywell using one of the following methods:

- Send an email to security@honeywell.com.

or

- Contact your local Honeywell Technical Assistance Centre (TAC) listed in the “Support” section of this document.

Support

For support, contact your local Honeywell Process Solutions Customer Contact Centre (CCC). To find your local CCC visit the website, [https://](https://www.honeywellprocess.com/en-US/contact-us/customer-support-contacts/Pages/default.aspx)

www.honeywellprocess.com/en-US/contact-us/customer-support-contacts/Pages/default.aspx.

To contact your local Honeywell Technical Assistance Centre (TAC): send an email to: hfs-tac-support@honeywell.com.

Appendix A: Quality and Safety

CE Mark

Honeywell GR Series recorders are compliant with Low Voltage Directive 2014/35/EU and the Electromagnetic Capability Directive 2014/30/EU.

Safety

The product range of instruments is compliant with the requirements of BS EN 61010-1:2010 "Safety Requirements for Electrical Equipment for Measurement, Control and laboratory Use" and UL 61010-1 (3rd Edition) and CSA 22.2 No.61010-1-12:2017. If the equipment is used in a manner not specified, the protection provided by the equipment may be impaired.

The RoHS-II Directive 2011/65/EU:

EN 50581: 2012 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Appendix B: Maths Expressions

Full Maths & Script Processing

The **GR Series** recorders are supplied with Basic Maths functions: Add, Subtract, Divide and Multiply. There are two further options that can be added, Full Maths and an extremely powerful Scripting processing module. Scripting delivers an additional level of enhanced capabilities with multi line script processing. Full and Scripting Maths must be activated in the recorder as a Firmware credit option. (Scripting is not available on the **eZtrend GR**).

When a recorder setup is loaded into the **TrendManager** software the Maths capabilities will be transferred with the setup. If you are creating a new recorder in **TrendManager** software to be transferred to a recorder the Maths capabilities will be available but will only become active if the recorder has the same Maths functions enabled.

This document provides the Maths Variable and Function table and examples of the capabilities from the simple to the complex to assist the user in understanding the concepts and potential of these features.

*** Important Note, Full Maths and Script functions are Options and must be enable using the Credit System. Be sure to enable these options or they will not be available. [See “Firmware Credit System” on page 253.](#)

Notes:

- if, elseif & else are followed by expressions in “curly brackets” {...}
- lines within the curly brackets always end in semicolon e.g. ;
- every execution path must have a return statement. As soon as a return is executed the script finishes; make sure that the return is the last operation to be executed.
- every expression within curly brackets “{...}” does not have to include a “return”
- Small values (fractions) entered into a maths expression will require a zero before the decimal point. Eg. 0.5. Decimal point and not comma must be used always.
- Outputs that are set to Single Pulse should not be used as a part of a maths expression as it can cause spurious values.
- No white spaces
- Syntax is not case sensitive
- 500 character limit for scripting

NOTICE

Full Maths and Scripting functions are Options and must be enabled using the Credit System. Be sure to enable these options in the recorder or they will not be available. [See “Firmware Credit System” on page 253.](#)

Maths Credit Options

Full Maths firmware credit option will allow the functions listed in [Table 15.1 on page 348](#) and [Table 15.2 on page 350](#).

Scripting firmware credit option will allow the Full math functions plus the scripting functions in [Table 15.3 on page 352](#), [Table 15.4 on page 352](#), [Table 15.5 on page 353](#), [Table 15.6 on page 353](#) and [Table 15.7 on page 354](#).

Maths Variable and Function Tables

Table 15.1 : Maths Variable Table

Maths Variables	Syntax	Description
Alarm Level	PnAxL	Gets the Alarm Level, n is Pen number 1 to 96 and x is alarm number 1 to 6
Analogue Input (Eng values)	An	Get the value of Analogue n (1 to 48) in Engineering units
Analogue Raw (Electrical values)	RA _n	Get the value of Raw Analogue n (1 to 48) in Electrical values
Batch Mode	BATMD1 to BATMD6	Per group. Returns 1= batch running, 2 = batch stopped or 3 = batch paused
Blkv	BLKVx	Get the local variable x. This variable is local to this script. There is a maximum of 20 local variables per script.
SD card free storage space*	CFFREE	Returns the percentage of free storage space available on the SD card
CJC	CJC _n	Get the Board CJC value. N = 1 to 6 (Returns value in Degrees F, C or K depending on the localisation setting)
CJC in Degrees C	CJC _n C	Get the Board CJC value. N = 1 to 6 (Always returns value in degrees C)
Comms Variables**	CV _n	Get the Comms variable n = 1 to 96
Digitals	D _n	Get the value of Digital Input or Digital output n (1 to 48)
Digital Input bit pattern	DIO _n	Get the 16 bit pattern from the DIO slots, where n= 1,2 or 3 (Slot G, H & I respectively). Returned as a 16 bit word (0 to 65535). A channel configured as an output is set to 0.
EC1 to EC 20	EC1	Event Counters 1 to 20
File Transfer Protocol recording hours left	FTPHRS	Returns the number of hours of "safe" recording time available
Glbv	GLBVx	Get the global variable x. This is a global variable accessible to all scripts. There is a maximum of 200 global variables.
HPC1 to HPC48	HPC1	High Pulse count using Pulse cards
Internal memory hours left	INTHRS	Returns the amount of hours left until the internal memory starts to recycle (over-write).
IOC1 to IOC48	IOC1	Digital Input/Output counters for Digital in and relay out
LPC1 to LPC48	LPC1	Low Pulse count using Digital IO cards in pulse count mode
Pen	P _n	Get the value of Pen n (1 to 96)
Pen Minimum Value	P _n MINU	Gets the Pen Minimum value n = 1 to 96
Pen Maximum Value	P _n MAXU	Gets the Pen Maximum value n = 1 to 96
Pen report Maximum Value	prmax[x,y,z]	Gets the Pen Maximum value for a report. x = pen number (1 to 96). y = period (1 = hour, 2 = day, 3 = week, 4 = month). z = report set (1 = current, 2 = previous completed)
Pen report Minimum Value	prmin[x,y,z]	Gets the Pen Minimum value for a report. x = pen number (1 to 96). y = period (1 = hour, 2 = day, 3 = week, 4 = month). z = report set (1 = current, 2 = previous completed)

Full Maths & Script Processing


Table 15.1 : Maths Variable Table

Maths Variables	Syntax	Description
Pen report Average Value	prave[x,y,z]	Gets the Pen Average value for a report. x = pen number (1 to 96). y = period (1 = hour, 2 = day, 3 = week, 4 = month). z = report set (1 = current, 2 = previous completed)
Pen report Totaliser Value	prtvt[x,y,z]	Gets the Pen Totaliser value for a report. x = pen number (1 to 96). y = period (1 = hour, 2 = day, 3 = week, 4 = month). z = report set (1 = current, 2 = previous completed)
Power Relay	PWRREL	Returns the status of the fixed power relay
Pstv	PSTVx	Get the persisted Global variable x. Persisted global variables maintain their value through a power cycle. There is a maximum of 50 persisted global variables.
PRC	PRC	Power Relay Counter
Pulse Inputs (AI slots)	HPULn	Get the Pulse frequency from the Pulse card n = 1 to 48 (25kHz max)
Pulse Inputs (DIO Slots)	LPULn	Get the Pulse frequency from the Digital Input card when in Pulse mode n = 1 to 48 (1kHz Max)
RT Compensation	RTCOMPn	Get RT Compensation value for channel n (1 to 48) Units mV
RT Calibration	RTCALn	Get RT Calibration value for channel n (1 to 48). Units mA
Slave Comms Variable***	SCV[1,1,1]	Returns the value for the Modbus Slave Comms
Totaliser	Tn	Get Totaliser value n = 1 to 96
UC1 to UC16	UC1	User counters 1 to 16
USB1 free storage space	USB1FREE	Returns the percentage of free storage space available on the USB storage key fitted initially (front or rear).
USB2 free storage space	USB2FREE	Returns the percentage of free storage space available on the USB storage key fitted after the first USB has been fitted (front or rear).
UV1 to UV32	UV1	This allows a system to be setup where values can be altered to effect calculations without having to change the configuration

*SD Card is available on the **eZtrend GR** as a credit option.

** See [Figure 23.1, "Comms variables," on page 387](#).

*** Slave Comms Variable.

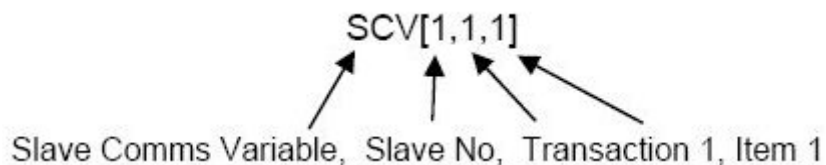

Full Maths & Script Processing

Table 15.2 : Maths Function Table

Maths Functions	Syntax	Description
Add	+	Returns the result of the addition
ACos*	acos[x]	Returns the Arc COS of x
ASin*	asin[x]	Returns the Arc SIN of x
ATan*	atan[x]	Returns the Arc TAN of x
Ceiling	ceil[x]	Round up x to the nearest whole number
Clear Event**	CLRE[x]	Where x is the event number to be cleared (1 to 20).
Cos*	cos[x]	Returns the COSINE of x
CosH*	cosh[x]	Returns the Hyperbolic COSINE of x
Damp	damp[x,y,z]	x = input, y = Pen (pen variable being used) and z = damping limit in engineering units. <i>See “Damping examples:” on page 351.</i>
Divide	/	Returns the result of the division
Eval	eval[x]	Returns 1 if x is non zero, otherwise returns zero
Exponent	exp[x]	Returns the Exponential of x
Floating Point Absolute	fabs[x]	Returns the Floating Point Absolute value of x
Floor	floor[x]	Round down x to the nearest whole number
Get Screen Number	GETS[x]	returns the current screen number, where x is the screen number. this can be used to detect what screen is being displayed
Global Alarm Status	ATOTt[x]	ATOT[0] will return the total number of alarms that are currently enabled in the recorder. ATOT[1] will return the total number of alarms “in Alarm” state in the recorder. E.g P1= ATOT[1]/ATOT[0] * 100 would set P1 to give alarm state percentage for the recorder.
Ln	ln[x]	Returns the Natural Log of x
Log	log[x]	Returns the Base 10 Log of x
Modulus	x%y	Returns the value of x with a modulus of y
Multiply	*	Returns the result of the multiplication
Pen Edit “Maths”	vmemavail	Scale: 0 to 1048576 K
Pen Edit “Maths”	memavail	Scale: 0 to 1048576 K
Power	pow[x,y]	Returns the value of x raised to the power y. Can also be represented by ^
Power	x^y	Returns the value of x raised to the power y.
Reciprocal	recip[x]	Returns the reciprocal of x (i.e. 1/x)
Root	root[x,y]	Returns the y root of x
Round	round[x]	Rounds x to the nearest whole number

Full Maths & Script Processing

Table 15.2 : Maths Function Table

Maths Functions	Syntax	Description
Serial Comms Variable	SCV[x,y,z]	Returns serial variables during Modbus comms. X = Slave number, y = Transaction number, z = Item number
Set/clear a digital output	SETD[x,y]	This feature allows a digital output to be set or cleared from a script, using the function SETD[x,y] where x is the digital output 1 to 49 (where 49 is the power relay) and y is the value 1 to set or 0 to clear. The function will return the value set if successful, if not successful it will return -1.0, this would be caused by trying to set and digital input rather than output.
Set User variable	UVSET[x,y]	Returns the result of x = the user variable and y = the value.
Sin*	sin[x]	Returns the SIN of x
SinH*	sinh[x]	Returns the Hyperbolic SIN of x
Square Root	sqrt[x]	Returns the Square Root of x
Square	sq[x]	Returns the square of x (i.e. x multiply by x)
Subtract	-	Returns the result of the subtraction
Tan*	tan[x]	Returns the TANGENT of x
TanH*	tanh[x]	Returns the Hyperbolic TANGENT of x
Trigger an Event**	TRIGE[x]	This will trigger Event x (1 to 20). TRIGE[x] will return 1 when the event is fired otherwise it will return 0.

*** Functions use radians (2π radians = 360 degrees)**

**** Event triggering from scripts**

This feature allows any enabled event with an enabled effect (does not have to have any causes enabled) to be triggered from within the scripting system using the following function, TRIGE[x] where x is the event 1 to 20. Once an event is triggered using scripting the event is locked and cannot be triggered again from scripts until the lock is cleared using the clear event function CLRE[x] where x is the event number 1 to 20. This prevent successive executions re-triggering the same event. As a further measure to avoid the system being overloaded by events from within the script system, each time an event is triggered from within a script it will apply a 1 second automatic lock preventing the same event from being triggered more then once a second, irrespective of the CLRE[x] being called for that event.

Damping examples:

Example 1: if P1 was measuring degrees C the expression $P1 = \text{damp}[A1, P1, 3]$ will damp the signal with changes up to 3 degrees C, any change over 3 degrees between readings will be damped but by a small amount.

Example 2: $P5 = \text{damp}[A2, P5, A3]$ will damp the A2 input up to a level determined by input A3, note the reference parameter (P5) is always the same as the pen it is being used in, this should always be the case.

Table 15.3 :

Compare & Convert	Syntax	Description
%RHc	rhc[x,y]	Returns % Relative Humidity with y as the dry bulb temperature in degrees C, and x the wet bulb temperature in degrees C
%RHf	rhf[x,y]	Returns % Relative Humidity with y as the dry bulb temperature in degrees F, and x the wet bulb temperature in degrees F
C2f	c2f[x]	Converts a temperature in °C to one in °F
F2c	f2c[x]	Converts a temperature in °F to one in °C
Hi	hi[x,y]	Returns the larger value of x & y
Hi4	hi4[x,y,x1,y1]	Returns the larger value of x, y, x1,y1
Inside	inside[x,y,z]	Returns x if between y & z, otherwise returns 0.
Lo	lo[x,y]	Returns the lower value of x & y
Lo4	lo4[x,y,x1,y1]	Returns the lower value of x, y, x1, y1
Outside	outside[x,y,z]	Returns x if outside of y & z, otherwise returns 0
Over	over[x,y]	Returns x if it's larger than y, otherwise returns 0
Under	under[x,y]	Returns x if it's less than y, otherwise returns 0.

Table 15.4 : Script Timers

Timers	Syntax	Description
Tget	tget[x]	Returns the elapsed time of timer x since start
Tpause	tpause[x]	Pauses the timer x
Treset	treset[x]	Resets the timer x
Trun	trun[x,y]	Starts the timer x in y mode. (Mode 1 = reset to 0 and run, Mode 0 = resume from previous value)

Timers must return a value. All timer commands must have "BLKV1 = the variable" e.g. BLKV1 = tpause[1]. Value returned is the same as tget[1]. Timers count in seconds. Maximum of 20 timers available.

Full Maths & Script Processing

Table 15.5 :

Accessors	Syntax	Description
Ai	Ai[x]	Get the value of Analogue Input number x
Alamct	Almct[x,y]	Get the current alarm count for Pen x, Alarm y (the alarm number as identified in alarm messages)
Alamrt	Almrt[x,y]	Get the current alarm number for Pen x, Alarm y
Alamsl	Almsl[x,y,z]	Get the current alarm level set . Pen = x (1-96), Alarm = y (1-6), New level to set = z. Eg. P3 = almsl[1,1,A3] will set Pen 1 alarm1 and show A3 pen P3.
Alamst	Almst[x,y]	Get the current alarm state for Pen x, Alarm y (1 = active 0 = inactive)
Di	Di[x]	Get the state of Digital input number x
Glbv	Glbv[x]	Get the value of global variable number x
Locv	Locv[x]	Get the value of local variable number x
Pen	Pen[x]	Get the value of Pen number x
Tot	TOT[x]	Get the current value of totaliser x

Table 15.6 :

Boolean Operators	Syntax	Description
AND	&&	Returns a true or false result from testing if two tests are both true. e.g. IF (A1==GLBV1) && (A2!=GLBV2)
Assign	=	Assigns one variable to another. e.g. GLBV1=A1. (GLBV1 becomes the value of A1).
Equal to	==	Returns a true or false result from testing if two variables are equal to each other. e.g. IF (A1==GLBV1)
Greater than	>	Returns a true or false result from testing if one variable is greater than another
Greater than or equal to	>=	Returns a true or false result from testing if one variable is greater or equal to than another
Less than	<	Returns a true or false result from testing if one variable is less than another
Less than and equal to	<=	Returns a true or false result from testing if one variable is less than or equal to another
NOT	!	Returns true if the result is 0, otherwise returns false.

Full Maths & Script Processing

Table 15.6 :

Boolean Operators	Syntax	Description
Not equal to	!=	Returns a true or false result from testing if two variables are not equal to each other. e.g. IF (A1!=GLBV1)
OR		Returns a true or false result from testing if one or other or both tests are true. e.g. IF (A1==GLBV1) (A2!=GLBV2)
XOR	~	Returns a true or false result from testing if one or other (but not both) tests are true. e.g. IF (A1==GLBV1) ~ (A2!=GLBV2)

Functions for Scripts

(Scripting is not available on the **eZtrend GR**).

Scripts evaluate at whatever the Analogue sample rate is set to.

There is 500 character limit for scripting

Table 15.7 :

Functions for Scripts	Syntax	Description
Else	else	Steps into brackets to run. Must always finish with a return. else { return y; }
Elseif	elseif(x)	Carries out a conditional test and if true steps into brackets to run. Must always finish with a return. elseif (x>4) { return y; }
First run	(FISTRUN)	Returns true if the script is being run for the first time, otherwise returns false
If	if(x)	Carries out a conditional test and if true steps into brackets to run. If false, steps to next test without operating the contents of the brackets. Next step will be either <i>elseif</i> or <i>else</i> . Must always finish with a return. If (x>5) { return y; }
Set Changed	(SETUPCHANGED)	Returns true if the setup has been changed, otherwise returns false
Time Changed	(TIMECHANGED)	Returns true if the time has been changed, otherwise returns false

Full Maths & Script Processing

Full Maths


Full Maths functions provides a simple and intuitive method for the user to carry out numerous mathematical functions. Some examples are shown below

Table 15.8 : Full Maths examples

Full Maths examples	
$P4=\text{lo}[A1,A2]$	Pen 4 shows the result of the lowest of either A1 or A2
$P3=(A1+A2)*\text{SQRT}[A3]$	Pen 3 shows the result of Analogue input 1 added to Analogue input 2, all multiplied by the square root of Analogue input 3
$P4=\text{GLBV1}$	P4 shows the Global Variable 1

NOTICE

Please note **"Pn="** is not entered in the Maths Block and is assumed by the Recorder e.g. To enter the equation $P2=A2$, the user would just type A2

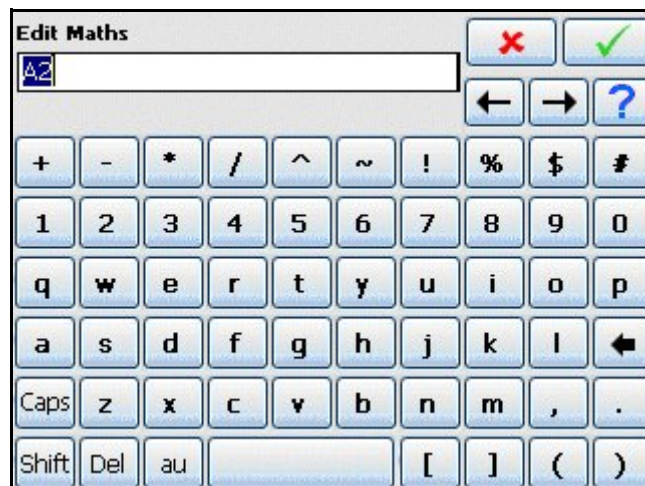

Script Function Application Examples

(Scripting is not available on the **eZtrend GR**).

To enter a script for a Pen, ensure that “Maths Type” in the Pen Menu is set to Scripting.

Example 1

4 flow meters are fed into the recorder to trend, totalise and record daily flow. The application requires that the user must know and record which flow meter is outputting the highest flow at any particular time. This can of course be derived from the four lots of recorded data, but not only is this extra analysis later, but a real time display is required.

The application is easily solved by using the Script Function in the recorder, represented in pseudo code the script is as follows:

If input 1 is bigger than all the others, then make the global variable (1) equal to channel 1, and display and record input 1.

If input 2 is bigger than all the others, then make the global variable (1) equal to channel 2, and display and record input 2.

If input 3 is bigger than all the others, then make the global variable (1) equal to channel 3, and display and record input 3.

If none of the above are correct then Input 4 must be the highest, so make the global variable (1) equal to channel 4, and display and record input 4.

Display the global variable (1) on another pen to show which channel is biggest at any given time.

Pen 5 is chosen to record the highest channel input, and channel 6 is chosen to record which input is the highest.

The greater than “>” is used, the AND “&&” Boolean is also used, and the global variable GLBV1 is used to hold the current highest channel number.

Converting this to an actual script gives the following:

If ((A1>A2)&&(A1>A3)&&(A1>A4))	This tests if flow meter 1 is more than 2, 3 and 4
{	
GLBV1=1;	If yes, then set display indicator to meter 1
return A1;	And return the current flow reading
}	
elseif ((A2>A1)&&(A2>A3)&&(A2>A4))	This tests if flow meter 2 is more than 1, 3 and 4
{	
GLBV1=2;	If yes, then set display indicator to meter 2
return A2;	And return the current flow reading
}	
elseif ((A3>A1)&&(A3>A2)&&(A3>A4))	This tests if flow meter 3 is more than 1, 2 and 4
{	

Full Maths & Script Processing

GLBV1=3;	If yes, then set display indicator to meter 3
return A3;	And return the current flow reading
}	
else	If none of the above are true, then 4 is biggest
{	
GLBV1=4;	So set display indicator to meter 4
return A4;	And return the current flow reading
}	

In this application, the flow meters are connected to inputs 1, 2, 3 and 4 at the rear of the recorder, and these are recorded on Pens 1 to 4

P1=A1

P2=A2

P3=A3

P4=A4

Pen 5 has the script above, which records and displays the highest flow rate of the four.

Pen 6 is set to record and display the input (between 1 and 4) that is the highest rate

P6=GLBV1

NOTICE

Please note “**Pn=**” is not entered in the Maths Block and is assumed by the Recorder e.g. To enter the equation P2=A2, the user would just type A2

Example 2

In the same application as above, the user has noticed that whilst flow meter 2 normally has the highest flow rate, on occasion a surge in flow meter 3 causes problems. The user needs to monitor the two inputs and count the number of times flow meter 3 reading exceeds that of flow meter 2.

The code consists of the two flow meter readings, and a change counter that totals the number of times that flow 3 exceeds that of flow 2.

The pseudo code is written as:

If flow meter 3 has a larger reading than flow meter 2, check to ensure that it was already greater than meter 2, if it was return the latest change count value.

If it was not greater than meter 3 last time, set a flag to indicate a change and increment the change counter by 1, then return the latest change counter.

If flow meter 3 is less than 2, simply return the change count value with no increment.

Pen 7 is used to implement this script and is implemented as follows

if (A3>A2)		Tests if A3 is bigger than A2
{		
	if(BLKV1==1)	If it was then tests if A3 was bigger than A2 last time period
	{	
	return BLKV2;	If it was return with the current change counter
	}	
	else	If not then
	{	
	BLKV1=1;	Set flag to show that A3 has just exceeded A2
	BLKV2=BLKV2+1;	Increment the change counter by 1
	Return BLKV2;	Return the new change counter total
	}	
}		
else		If A3 is not bigger than A2
{		
	BLKV1=0;	Set flag to show A2 is bigger than A3 this time
	Return BLKV2;	Return current change counter
	}	
}		

With script above, BLKV (all Variables) are used to maintain values. It should be noted that BLKV's do not persist over a power removal, and if the application were to require a non-volatile count, then BLKVn should be substituted with PSTVn.

Example 3

The application described in Examples 2 and 3 is to be extended to totalise the amount of time that Input 1 is the highest of 1, 2, 3 & 4.

Again scripting can be used to easily solve this requirement.

The Pseudo code is written as

If input 1 is indicated as the current highest value, then display the timer.

If input 1 is not the highest input value, then stop totalising time and return the current timer value.

We know that in Example 1, the highest value channel number is contained with GLBV1, and as this is a global variable it is also accessible from this script.

if (GLBV1==1)	Tests if the global variable 1 is equal to channel 1
{	
BLKV1=trun[1,0];	If it is then keep the timer running without resetting
return tget[1];	Return the current timer value
}	
else	If not then
{	
BLKV1=tpause[1];	Pause the timer
return tget[1];	Return the current (paused) timer value
}	

Note in this script above there is no way to reset the timer, this could be modified to allow the user to reset this timer from a switch fed into a digital input as follows:

Full Maths & Script Processing

if(D1!=1)	Tests if the DI 1 is not set
{	If it isn't then
if (GLBV1==1)	Tests if the global variable 1 is equal to channel 1
{	
BLKV1=trun[1,0];	If it is then keep the timer running without resetting
return tget[1];	Return the current timer value
}	
else	
{	If not then
BLKV1=tpause[1];	
return tget[1];	Pause the timer
}	Return the current (paused) timer value
}	
else	If it is
{	
BLKV1=tre-	reset the timer 1 to zero
set[1];	
return tget[1];	return the current (zeroed) timer value
}	

Example 4

Commenting in Scripts

This is an example of how commenting can be used in scripts.
you can use the standard C++ commenting, inline comments use \\\

```
for example
if ( A1 > 10 )
{
    return 9;    // If A1 greater then 10 return 9
}
```

or for block (single or multiline commenting the /* to open and */ to close, these are C style comments and work as follows

```
if ( A1 > 10 )
{
    return 9;    /* If A1 greater then 10 return 9 */
}
```

for single line or

```
if( A1 > 10 )
{
    /* if A1 is greater then 10 then return 9
    */
    return 9;
}
```

these are also useful for commenting out code to try different things, for example

```
if( A1 > 10 )
{
    return 9;
}
/*
else
{
    return 20;
}
*/
return A1;
```

Here the else statement is "commented out" so it won't be included but can easily be re-introduced if required.


Maths Error Messages

When the Maths functionality is processing through the scrips you have written it will carry out Syntax and other checks. When it comes across operations, functions, brackets, etc. not expected or permitted it will report an error. However, the fault being reported may be on a previous line caused by the missing or incorrect function. Refer to Application Note 43-TV-07-32 on your DVD or web site for a list of scripting error messages.

Appendix C: Thermocouple Connections

How Thermocouples work

Thermocouples produce a voltage dependant upon the temperature gradient between the hot and cold junctions. The hot junction is the measuring junction of the thermocouple, the cold junction is the point where the thermocouple wires are connected, usually the connection block on the back of the recorder.

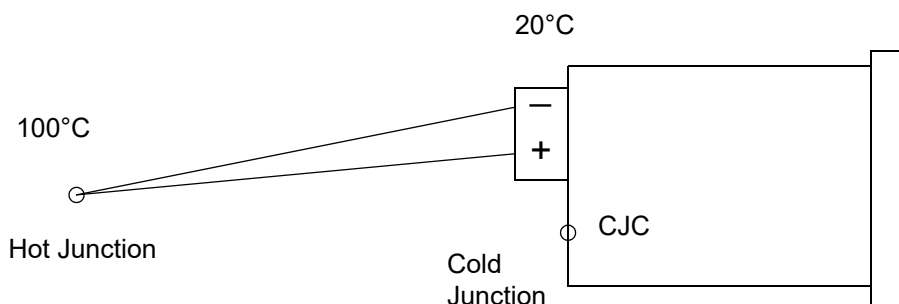

If the hot (measuring) junction is at 100°C and the connection block of the recorder is at 20°C the thermocouple will produce a voltage corresponding to 80°C, the difference between the hot and cold junctions.

For the recorder to correctly report the 100°C it needs to know the temperature at the cold junction. There are 4 options of cold junction compensation (CJC) on the recorder that are detailed below. The simplest and most common is to use the "Internal Automatic" compensation. This uses a CJC sensor built onto the AI board to measure the connector temperature. In this case it will measure 20°C, this will then be added to the 80°C measured by the thermocouple to give a displayed reading of 100°C.


The 4 methods of cold junction compensation are described below.

All diagrams show passive burnout, for active burnout replace the + for *.

Thermocouple CJC Compensation

The different methods for connecting thermocouples according to the type of reference are shown below.

Internal Automatic

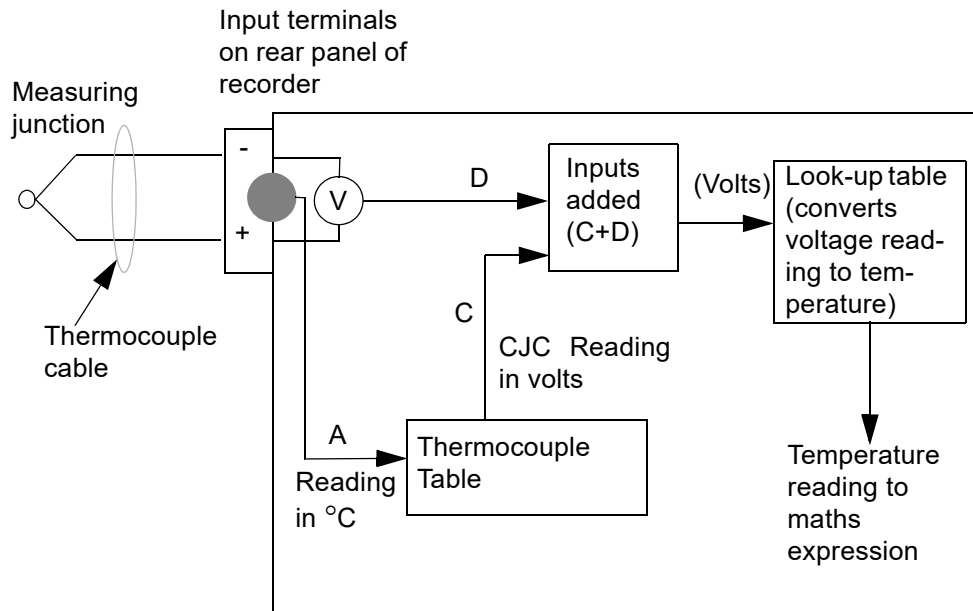


Internal Auto. This is connected to the input terminals of the recorder, and the temperature at this junction is being measured by a temperature sensor on the rear panel of the recorder. The reading from this sensor is read off against a value taken from the thermocouple table, which corresponds to the type of thermocouple being used. The corresponding reading in volts for the temperature measured by the sensor is then used as a reference for the reading from the thermocouple.

Diagram shows passive burnout, for active burnout replace the + for *.

Thermocouple CJC Compensation


Ext 0°C Reference

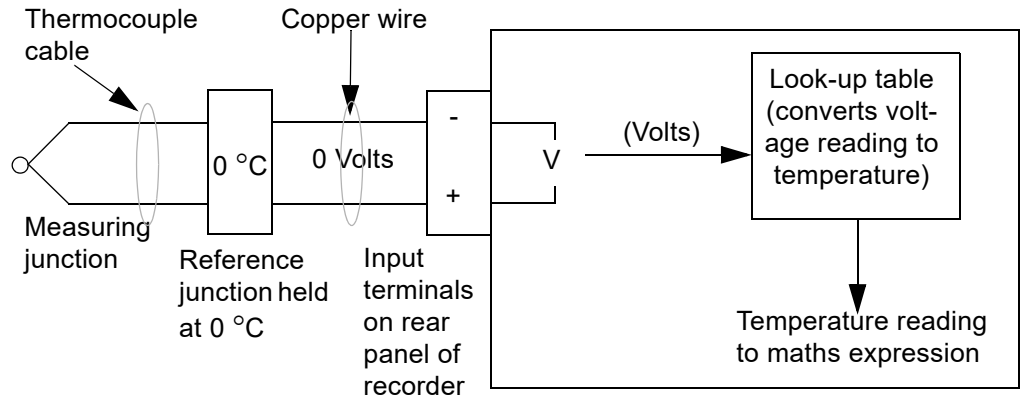

Ext 0°C Reference. By keeping the reference junction at 0 °C then the negative input is acting as a 0 Volt reference so the voltage reading from the thermocouple can be passed directly to the tables where the corresponding temperature reading can be found.

Diagram shows passive burnout, for active burnout replace the + for *.

External with a Specified Temperature

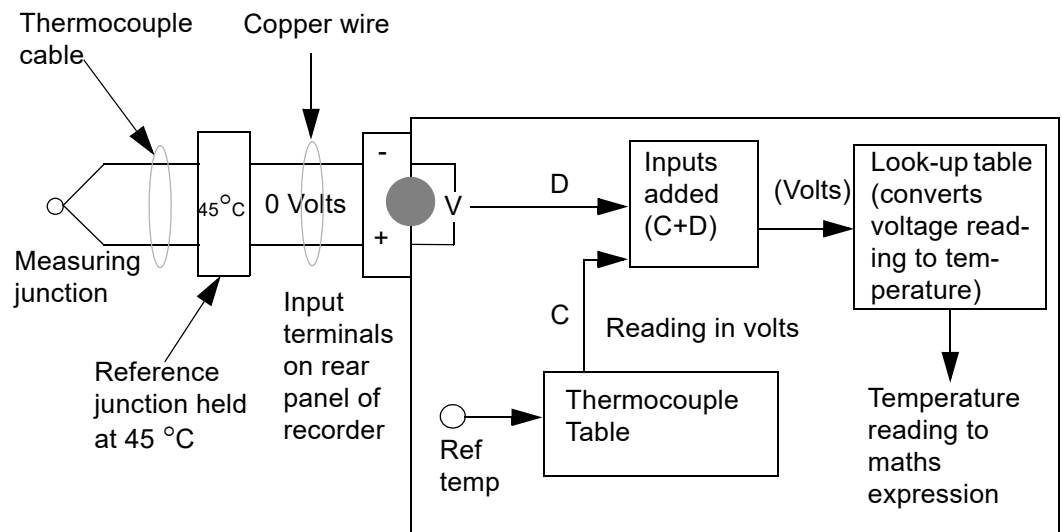


External Reference with a specified temperature. The reference junction is kept at a constant known temperature other than 0°C. This temperature can be specified in the setup menus. This reference temperature is then used in the same way as the reading from the temperature sensor using the **Internal Reference** method.

Diagram shows passive burnout, for active burnout replace the + for *.

Thermocouple CJC Compensation

External Input Reference

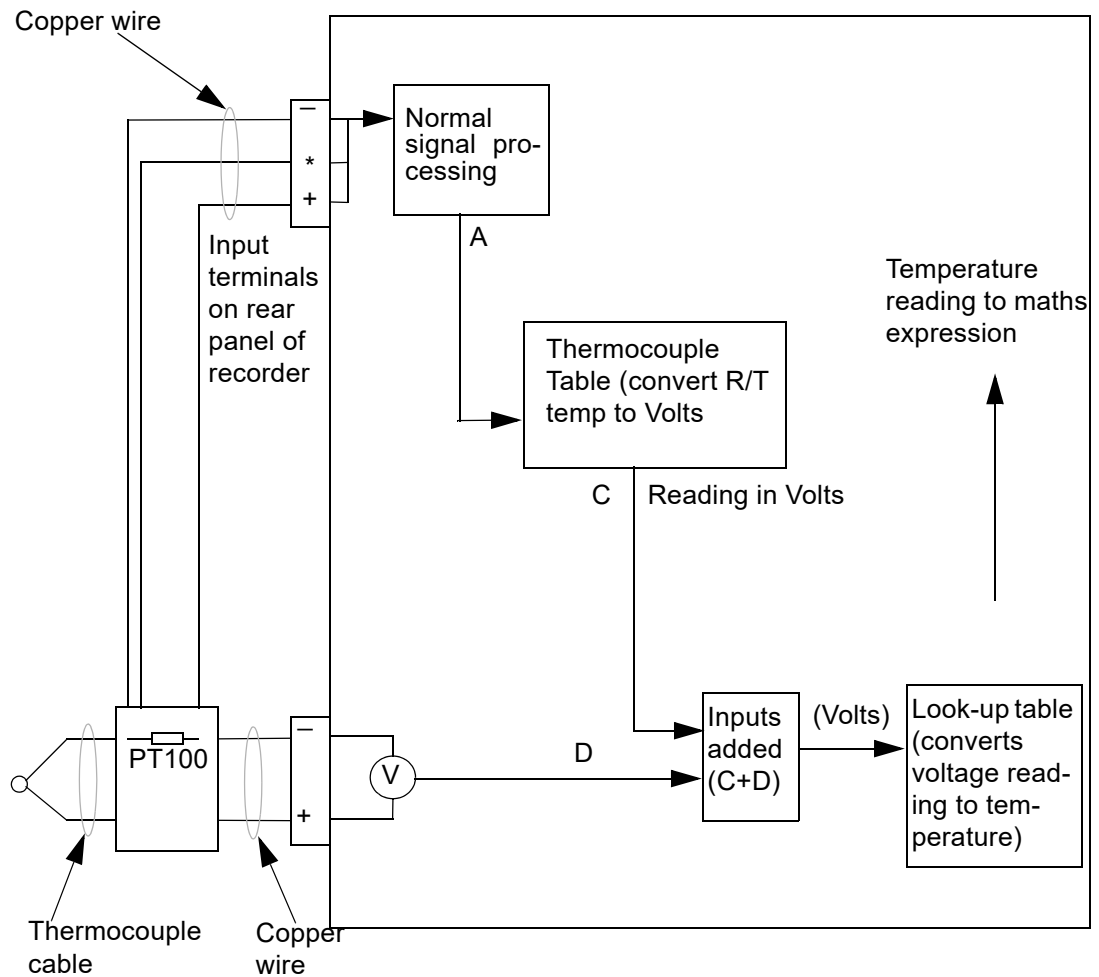


External Input Reference. The reference temperature reading in this method is provided by a separate temperature measuring device connected to another input, usually RT. This input is processed in the normal way and then passed back into the thermocouple signal processing system as a temperature reading.

Appendix D: Alarms

Alarms Menu

(Main Menu > Alarms >)

Acknowledge, Configure and View alarms from this menu.

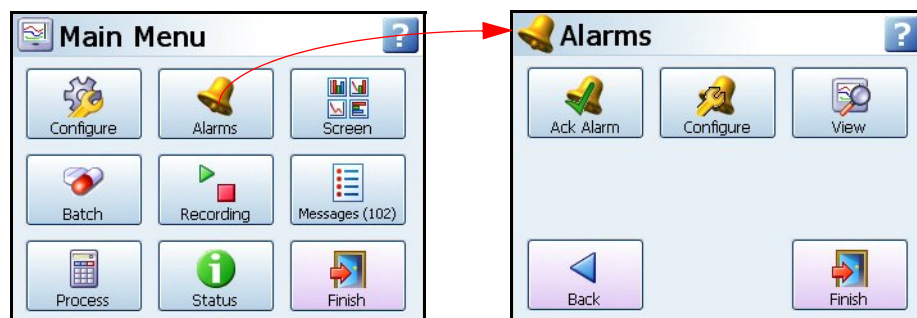

Acknowledging Alarms

User acknowledgment of alarms can be performed at this menu, only latched alarms can be acknowledged.

If a latched alarm is set up in the Pen, Alarms menu then a latched relay will maintain in its active state until the trigger source has returned to a no alarmed state and the alarm has been acknowledged.

A latched alarm will continue to flash, if an alarm marker is displayed, until it is acknowledged and in a non-alarm state. See [“Alarm Markers” on page 248](#) for flash colour identification.

Ack Alarm

- **All** - Select this button to acknowledge all active alarms, latched and normal alarms.
- **By Group** - Select this button to acknowledge any alarms in a group of pens. Pen groups can be set up in the Pens menu
- **By Pen** - Select this option to acknowledge any alarms for individual pens.

Configure

This will display all available Pens with alarms set up.

To change the configuration, select the desired pen, this will display the alarm details.

Select the Edit button to change the alarm level.

If the Edit button is greyed-out go to the [“Alarms Menu” on page 89](#) menu and select the alarm, then activate Allow Change.

View

This will display all available Pens with alarms set up. To view the configuration, select the desired pen, this will display the alarm details.

When complete go to Finish to commit the new set up.

Ethernet

Ethernet is a local area network (LAN) technology that transmits information between computers and other devices, at speeds of 10 or 100 million bits per second (Mbps). Each Ethernet equipped device operates independently of all other devices on the network.

All devices attached to an Ethernet network are connected to a shared signalling system. Ethernet signals are transmitted serially, one bit at a time, over the shared signal channel attached to each device.

It is up to the high-level protocol that is sending data over the network to make sure that the data is correctly received at the destination device.

Devices attached to an Ethernet network can send application data to one another using high-level protocol software, such as TCP/IP protocol suite.

High-level protocols have their own system addresses, such as the 32-bit addresses used in the current version of IP. The high-level IP-based networking software in a device is aware of its own 32-bit IP address and can read the 48-bit Ethernet address of its own network interface, but it doesn't know the Ethernet addresses of the other devices on the network.

To discover the Ethernet addresses of other IP-based devices on the network another high-level protocol is used. For TCP/IP, this is done using a protocol called Address Resolution Protocol (ARP).

Example:

Device X has an IP address of 195.23.37.1 and sends data over the Ethernet channel to another IP-based device, Device Y with IP address 195.23.37.2. Device X sends the packets of information containing an ARP request. The ARP request is asking the device with the IP address of 195.23.37.2 to identify the address of the Ethernet Interface.

Only Device Y with the IP address of 195.23.37.2 will respond, sending a packet with the Ethernet address of device Y back to device X. Now device X and Y have each others Ethernet addresses to which data can be sent.

Email

General operation of the e-mail system

The recorder sends messages for distribution by an e-mail server. The e-mail server is located by its IP address or it's name as set-up in the communications set-up options. Recorder supports both Secure Email Server and Non Secure Email Server communication. When the recorder sends an e-mail message, it locates the e-mail server and uses SMTP (Simple Message Transfer Protocol) to send the message to the e-mail server. SMTP allows the recorder to send messages to an e-mail server without having its own e-mail address; because of this the e-mail server will not be able to send any reply back to the recorder.


When setting-up the e-mail address list, it is important to include the e-mail administrator address. The Administrator e-mail address is the e-mail address to where the e-mail server will respond in the event of any problems with the delivery of e-mail messages. The Administrator will also appear to be the source of any e-mail messages sent by the recorder. Most e-mail systems require a 'Reply To' address as part of an e-mail message, since the recorder does not have its own e-mail address; it uses the e-mail administrator as the 'Reply To' address.

Any e-mail message will consist of a delivery list (recipients), a subject, and an optional message body. The message body may be omitted for very short messages, or where the message is to be sent to a paging system.

The e-mail subject may be either one of the existing event markers, or one of the two e-mail subjects. The e-mail message body may be either one of the existing event markers, or one of the two e-mail message blocks. Event markers are restricted to 80 characters each. The two e-mail message blocks are restricted to just over 1000 characters each. Both the message subject and body may contain embedded marker tags as used in the event markers.

When the recorder sends an e-mail message that includes a message body, the recorder name, recorder number and the time/date will be appended to the end of the message body text. This is to allow easy identification of when the message was sent, and by which recorder.

Any e-mail message is sent as an action within the recorder events system, so anything that can be configured to act as an event cause, may be configured to send an e-mail message. Any e-mail message may be sent to up-to 12 of the recipients. If the e-mail server supports named groups of e-mail addresses, an e-mail message may be sent to a combination of e-mail addresses and e-mail group.

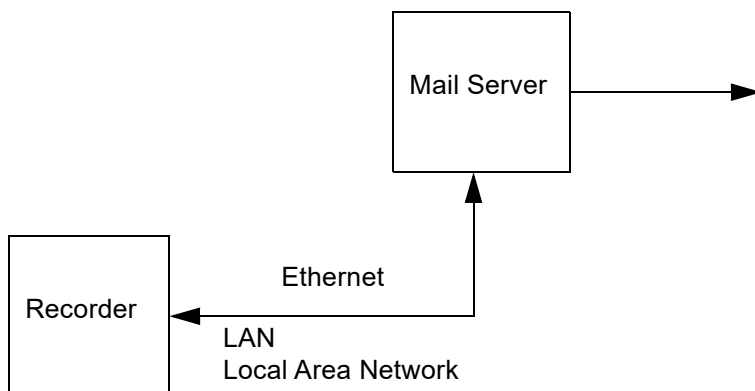

Appendix F: Fuzzy Logging

What is Fuzzy Logging?

Fuzzy Logging is a real time Data Compression technique. *Patent no. US 6,405,155 B2*, developed at **Honeywell** as an alternative to the more standard methods of recording data.

Paperless Recorders are primarily used for exception recording. They spend most of their life trending and recording straight lines. Fuzzy Logging has been developed to improve the efficiency of data storage, and is particularly effective in exception recording examples where normal operation consists of generally static inputs.


Fuzzy Logging looks for straight lines in the data stream, in real time, whether they are horizontal, climbing or descending. A straight line made up of say 10 points can be equally well represented by 2 points, one at either end, the other 8 points are redundant. Fuzzy logging works by creating straight lines in the data and discarding redundant points.

What's it for?

..... To help the user in the trade off between **Scan Rate**, **Disk capacity** and **Recording Time**, after all the 'Pie' is only so big.

Fuzzy Logging has been developed to help maximise all three sections, in effect increasing the size of the 'Pie'.

The result is a technique that delivers a host of real world benefits over the more traditional recording methods.

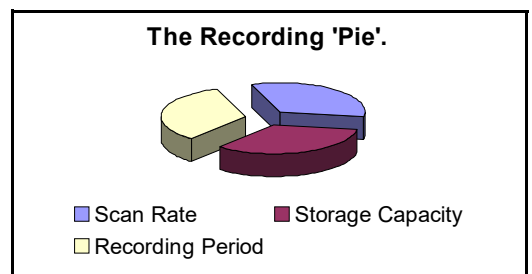

1. Disks take longer to fill – changed less frequently, less site visits.
2. Faster scan rates can be used for any given disk size – giving greater resolution on the process.
3. Recording time can be extended.
4. Less hard disk memory required for archiving on the PC.
5. Quicker graphing of data.
6. Smaller data files for remote collection.

How does it work?

Fuzzy Logging does not log data points that form part of a straight line.

The technique is best illustrated by the diagram below:

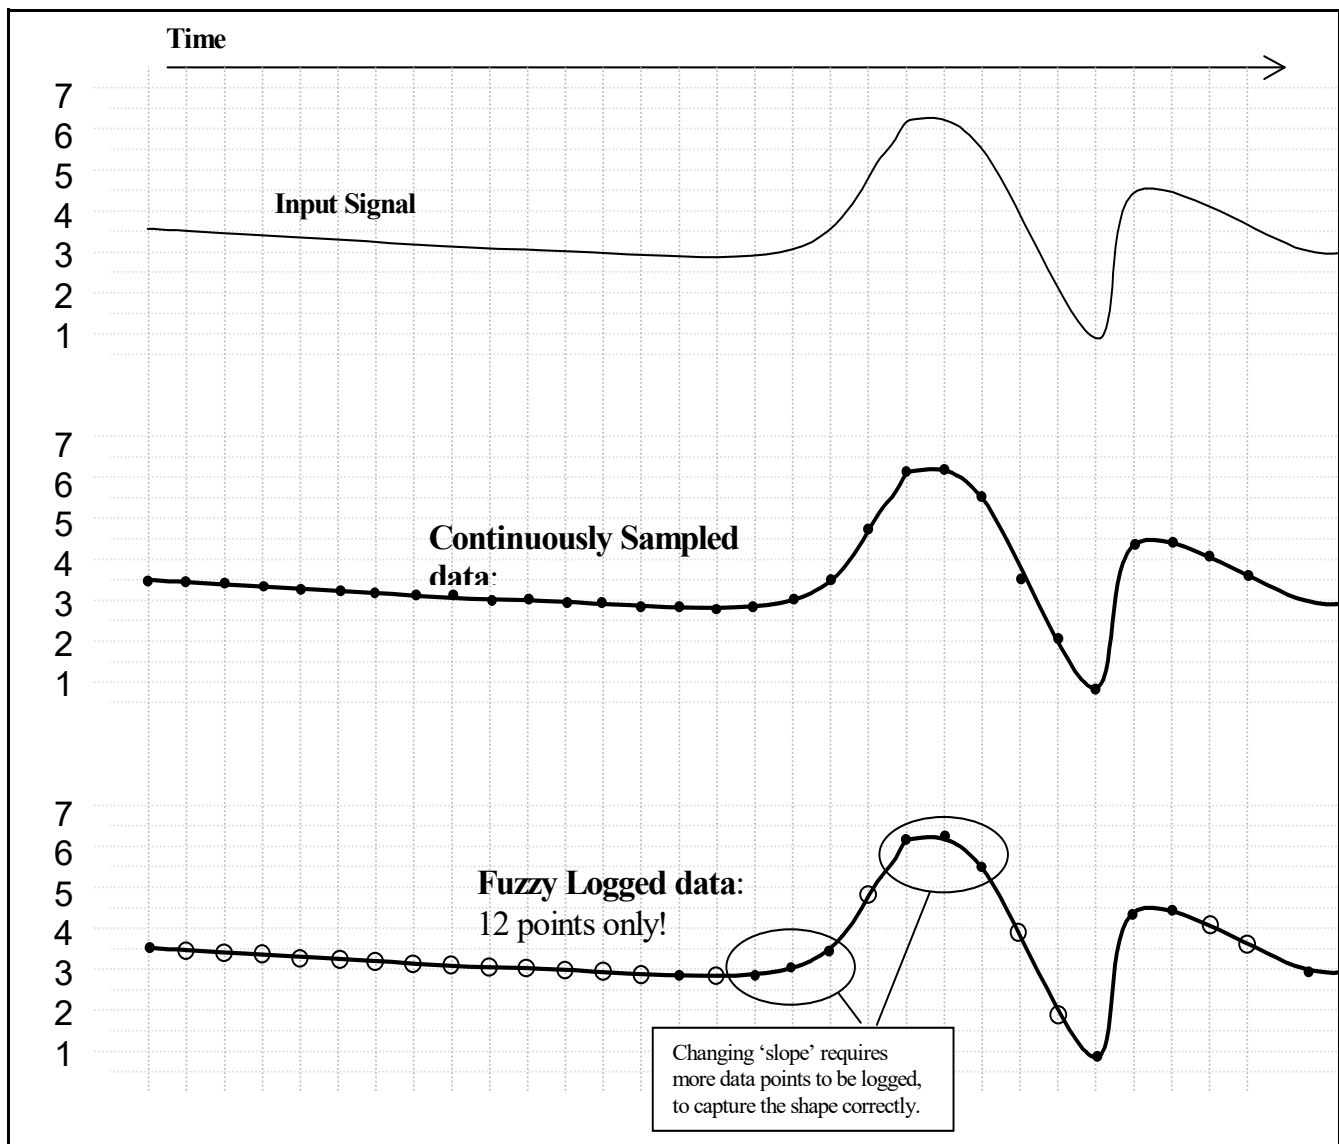


Diagram 1

Points marked: ○ are **NOT** logged, as they lie on an 'imaginary' straight line between points marked:

The graph of the Fuzzy Logged data, looks identical to the graph of the sampled data, but has taken **less than half the points** to build it.

What about 'Spikes' on my trend line? Won't it miss them?

NO, you will not miss any 'Spikes', 'Glitches' or 'Transients' – these are what you need to see!

As Fuzzy Logging is an adaptive technique, it will log as fast as it needs to in order to capture everything.

Although not all points are logged, the base 'Scan Rate' of the input is the same as if you were using a standard logging technique.

What about slowly drifting inputs?

Again – **No Problem**. The algorithm is processed in 'Real Time', i.e. as the reading is taken. As it already knows the previous logged readings it can calculate where the next point should be (assuming it's on a straight line) – if the measured value does not equal the predicted value, the point is logged as it no longer forms part of the straight line.

Fuzzy Logging, looks for straight lines – **at any angle**. Not just on the horizontal.

Do you have any examples?

Example 1.) Flow & Pressure Measurement of Mains Water Pressure

A recorder was installed, to monitor the flow of a mains water supply. At peak demand the mains pressure had been subject to sharp drops in pressure and flow rate, and it was necessary to find the cause of the problem.

The recorder had to have a fast scan rate, in order to capture the 'glitches'.

The recording period would be over many days if not weeks, so storage capacity was at a premium.

A fast scan rate using the standard sampling method would result in a disk life of about a day, which was not acceptable.

As this application consists of long periods of little activity (relatively constant flow rate), and short periods of high activity (rapidly changing flow rate), it is ideally suited to Fuzzy Logging.

During the hours of stable flow where the flow rate remained more or less constant, the Fuzzy Logging technique would give compression ratios up to 100 times. However, as soon as a glitch appeared the fast sampling rate was able to capture and store all the points.

Example 2.) Cold Storage Temperature Measurement

A recorder was required to help track random and rapid temperature changes within the cold storage rooms. Conventional sample recording had shown that temperature variations were present, but was not of high enough resolution to pinpoint the cause.

Again as in example 1), the measured inputs would show long periods of stable constant readings, interspersed with small sharp increases in temperature. In order to track the cause of these variations, it was necessary to maximise the time resolution of the data. This application was ideally suited to the Fuzzy Logging data storage technique, as the periods of inactivity would result in compression rates of over 50 times.

Example 3.) Logged Data Example

The diagram below is a sample of actual logged data in both the Fuzzy Logging method (top) and Sample Logging method (bottom), derived from the same analogue input.

It provides an excellent illustration of how less data points can be used to construct an identical trace.

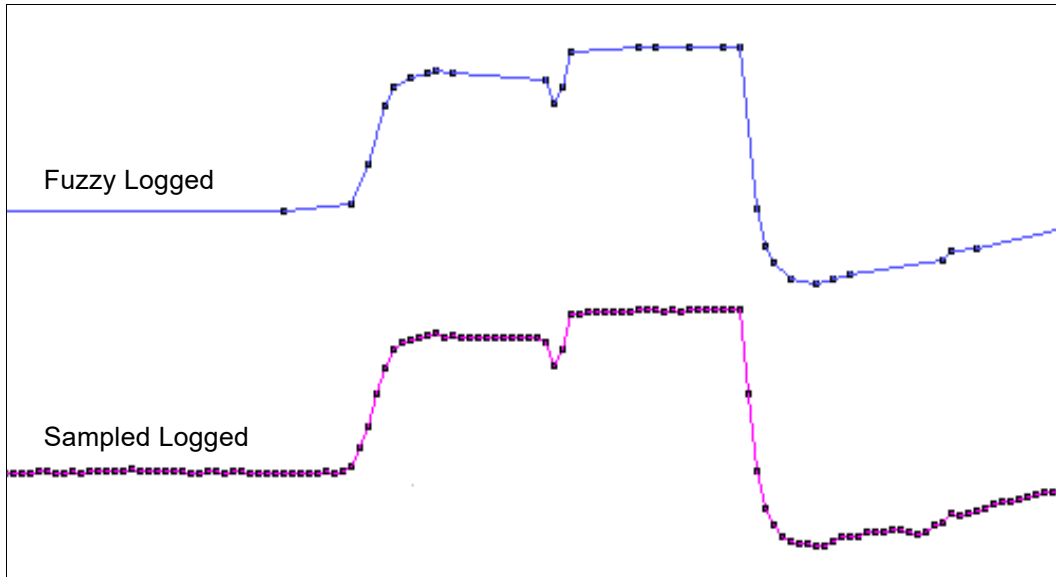


Diagram 2.

Note. This data extract was taken from a 56 hour temperature run, which resulted in approximately 1 Mbyte of sample data, and approximately 40 Kbyte of Fuzzy Logged data.

A compression ratio of 25 times!!

Anything else it can do?

Yes! Fuzzy Logging can be used as a **'One Hit'** recording button.


In applications where the measured process is new or the ideal scan rate is unknown Fuzzy Logging is ideal, as it adapts the log rate to the input signal, and can therefore find the optimum logging rate for you.

Tolerance band widths

Tolerance band width can be set as a percentage of the scale range allowed above and below the input signal.

A second band width can be set, this is where a tighter tolerance can be specified which must be set within the limits of Band 1. Specify, as a percentage of the scale range, the tolerance band allowed above and below the input signal. [See "Logging Menu" on page 87..](#)

Figure 19.1 Fuzzy logging tolerance settings

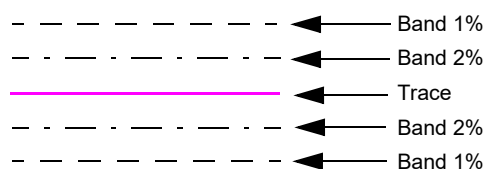

Appendix G: F sub zero Sterilisation

The Significance of F_0

The F_0 value is used in the pharmaceutical and related industries in the sterilisation of items. A brief summary is included here to give the essence of the meaning of the terms used.

When items are subjected to sterilisation by heating, the rate at which micro-organisms are killed is dependent on the temperature.

Traditionally items were sterilised by holding them at 250 °F (= 121.11 °C), and the F_0 value for a sterilisation is simply the equivalent time at this temperature that would produce the same effect. For many "average" micro-organisms each minute at 121.11 °C reduces the number present by a factor of 10, so a 15-minute hold at this temperature would reduce the number by a factor of 10^{15} .

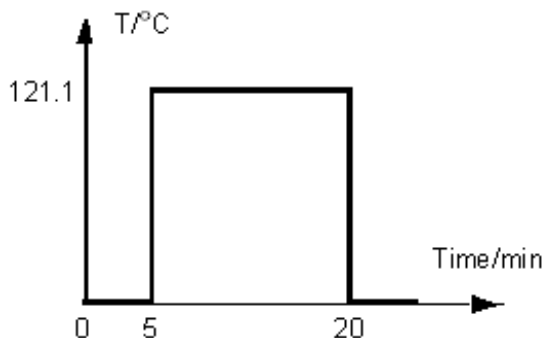


Figure 1

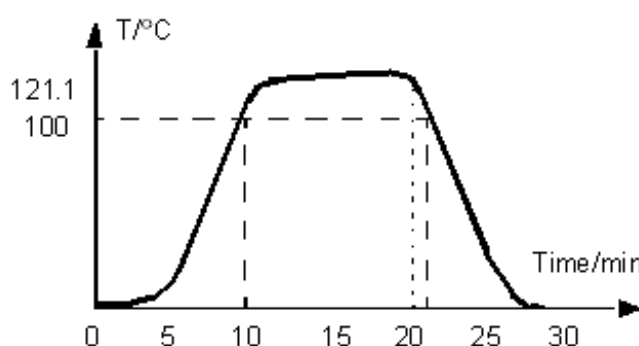


Figure 2

If it were possible to heat a sample from ambient to 121.11 °C in 1 second, hold it there for 15 minutes, and then cool it back to ambient in 1 second, the temperature / time profile would look something like the trace in [Figure 1 on page 375](#) and the F_0 value would be 15, representing 15 minutes at 121.11 °C.

In practice, of course, to reach this temperature the object would have to be subject to an initial heating period up to that temperature, and later a cooling period back down again to ambient temperature, more like the profile shown in [Figure 2 on page 375](#). During all this heating up, holding at temperature, and subsequent cooling, micro-organisms are being killed at different rates, and the F_0 value is calculated by summing the effect at each temperature (provided it is over some defined starting temperature - see below).

This calculation is performed by using the expression, where T is the temperature in °C and Δt is the time spent at that temperature. The z factor that appears in this equation is the temperature coefficient for the destruction of micro-organisms, and is the increase in temperature, in °C, that produces a 10-fold increase in sterilisation rate.

This summation is only performed once the sample temperature has reached some specified starting temperature. For example in [Figure 2 on page 375](#) if this starting temperature has been set to 100 °C (a common value) then the F_0 summation would begin at $t = 8$ minutes when the temperature first reaches this value.

Because of this small, but increasing contribution to F_0 once T reaches $100\text{ }^{\circ}\text{C}$, and the fact that in this trace the temperature exceeds 121.11°C , the F_0 value reaches 15 at time $t = 20$ minutes, at which point the sterilisation is complete, and cooling begins.

For some applications it is allowed to report the F_0 value that is finally achieved as the sample cools back to the start temperature, in this example $100\text{ }^{\circ}\text{C}$, and so the contribution under the curve up to $t = 22$ minutes would be included in the reported F_0 . The final F_0 value might then be 16.1, say, with 15 having been achieved up to $t = 20$ minutes, and the extra 1.1 having accumulated during the cooling back to $100\text{ }^{\circ}\text{C}$ between $t = 20$ minutes and $t = 22$ minutes.

The terms used in setting up the F_0 totaliser, together with their default values, are summarised in this table.

Term	Definition	Default values	Allowed Range
F_0	The equivalent time in minutes at 121.11°C that would produce the same degree of sterilisation. This is the totaliser output value		
z factor	The temperature increase in $^{\circ}\text{C}$ above the reference temperature that will produce a 10-fold increase in the rate of sterilisation	10	5 - 20
Start temperature	The temperature in $^{\circ}\text{C}$ above which the contributions to F_0 can be counted	100	90 - 120
Reference Temperature	The reference temperature for sterilisation, normally 121.11°C , can be altered if required.	121.11°C	
Include cooling phase	If TRUE, contributions to F_0 can be included after the target value has been reached and while the temperature is still above the start temperature. If FALSE, these contributions are not included	FALSE	-
Completion Value	The maximum F_0 totaliser value can be set if "Include cooling phase" is not selected, the totaliser will stop at this value of F_0 .	15	1 - 999

For setting up the F_0 calculation refer to the ["Totaliser Menu" on page 91](#).

Appendix H: Calibration

AI Calibration and CJC Calibration

For AI and CJC Factory and User Calibration see [“Calibration” on page 142](#)

Sensor Compensation

Sensor Compensation may be required to improve accuracy on a sub range. This is an adjustment to the value of the signal input on each channel, based on the Engineering units.

To set this up in the recorder see Sensor Comp in the menu for [“Analogue In Menu” on page 75](#) or for AMS2750 (Process and TUS modes) see [“Sensors Configuration Menu \(Process Mode\)” on page 414](#).

Choose from Single Point, Dual Point and Multi Point Cal.

Single Point

Set the **Comp Type** to **Single Point** to adjust the signal input reading by an offset amount determined by the user. Enter the **Offset** adjustment required and this is added or subtracted for all future readings.

Dual Point

Select **Dual Point** to change two points on the signal input reading. The Dual Point adjustment works in the same way but at two different points on the signal input. It is recommended that the two points should be more than 50%, of the engineering units, away from each other.

Low Eng and **High Eng** are the two points where the adjustment offset is made. The user can enter their own adjustment points on the signal input and enter the **Offset** for both points.

Main Menu > Configure > Setup > Edit > Field IO > Analog In > Sensor Comp

Figure 21.1 Dual Point Compensation

The screenshot shows a menu interface for 'Sensor c...' with a breadcrumb trail: Edit Setup > Field I/O > Analog In > Analog In 3 > Sensor c... The main area contains a table for configuration:

Comp Type	Dual Point
Low Eng	0.0
Low offset	5.0
High Eng	100.0
High offset	-5.0


At the bottom, there are four buttons: Back, Copy To, Finish, and a help icon (?).

Sensor Compensation

- **Compensation Type** - select from None, Single Point or Dual Point compensation.
- **Low Eng** - (only available when Dual point is selected). Set the Low limit for the Engineering units.
- **Low Offset** - enter an offset value that is offset against the Low Eng value.
- **High Eng** - (only available when Dual point is selected). Set the High limit for the Engineering units.
- **High Offset** - enter an offset value that is offset against the High Eng value.

Figure App H.22 Sensor Compensation

Solid line shows without compensation and dotted line shows with compensation

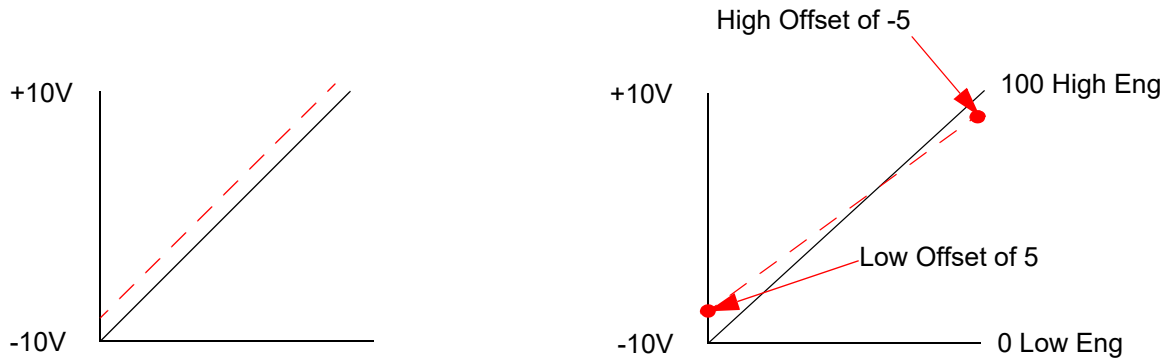

Single Point Sensor Compensation is used to offset the signal input by a user specified amount over the full range.

Dual Point Sensor Compensation is used to offset the signal input by a user specified amount against the Low and High Eng values. The offset amount can vary throughout the signal input range.

Multi Point

The Sensor comp. screen for a multi point cal. will show the user compensation type (Multi Point) and the number of values in the table.

To configure the multi point cal table, select the "value" button and the instrument will display a table entry screen. This table is a minimum of 2 (default) points and a maximum of 9 points.

Additional rows can be added or deleted by using the Add button or select a channel to insert or delete channels above or below the row selected. The input temperature is entered in the left column and the respective offset to be applied, entered in the right column. Once the table is complete, the settings are accepted by clicking the tick button.

All configuration changes are not fully saved until the "Finish" and "Commit" actions have been completed.

Appendix I: Battery Data

Location: Processor Board

Located on the processor board this battery is used mainly for Clock battery back-up.

Type	6032
IEC	CR2032
System	Li/MnO ₂ /org.elyt.
Voltage	3.0 V

Cell Type	Typical Capacity (mAh)	Weight
6032	230 mAh	3 gms

		Approx Percentage (%) of total weight
Active Materials	Manganese dioxide (MnO ₂)	29
	Propylene carbonate (PC)	4.3
	1,2 Dimethoxyethane (DME)	2.1
	Lithium metal (Li)	2
	Carbon (C)	0.9
	Lithium perchlorate (LiClO ₄)	0.3
Passive Materials	Stainless steel	57.6
	Plastic	3.8

Safety Guidelines

- Keep batteries out of the reach of children, especially those batteries fitting within the limits of the truncated cylinder as defined in ISO/DP 8124/2.2.
- In the case of ingestion of a cell or battery the person involved should seek medical assistance promptly.
- It is of extreme importance that batteries are inserted into equipment correctly with regard to polarity (+ and -).
- Do not attempt to revive used batteries by heating, charging or other means.
- Do not dispose of batteries in fire.
- Do not dismantle batteries.
- Do not short circuit batteries.
- Batteries should be disposed of in accordance with local regulations, they must not be disposed of with normal refuse.

Appendix J: Function Codes and Memory Maps

Modbus Memory Map Supplement:

Refer to document Modbus® Serial Communications User manual, 51-52-25-66 Rev.S.

NOTE: Some Modbus masters may require an offset of 1 for example instead of entering 1800 enter 1801. First 10 addresses and end address shown in all tables for reference.

Analogue Input value (48 inputs max.)

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
1800	6145	Analog In 1(Start Address)	A.6
1802	6147	Analog In 2	A.6
1804	6149	Analog In 3	A.6
1806	6151	Analog In 4	A.6
1808	6153	Analog In 5	A.6
180A	6155	Analog In 6	A.6
180C	6157	Analog In 7	A.6
180E	6159	Analog In 8	A.6
1810	6161	Analog In 9	A.6
1812	6163	Analog In 10	A.6
185E	6239	Analog In 48 (end address)	A.6

Relay Output/Digital Input (48 inputs max.)

Allows you to read digital inputs and set relay outputs over Modbus

Address Hex	Address Decimal	Description	
1-9	1-9	Relay Out/Digital In 1-9 (1 = start Address)	
A-F	10-15	Relay Out/Digital In 10-15	
10-19	16-25	Relay Out/Digital In 16-25	
1A-1F	26-31	Relay Out/Digital In 26-31	
20-29	32-41	Relay Out/Digital In 32-41	
2A-2F	42-47	Relay Out/Digital In 42-47	
30	48	Relay Out/Digital In 48 (48 = end address)	

Modbus Memory Map Supplement:

*Communications Inputs (32 comms values max.)**

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
1880	6273	Comms 1 (start address)	A.7
1882	6275	Comms 2	A.7
1884	6277	Comms 3	A.7
1886	6279	Comms 4	A.7
1888	6281	Comms 5	A.7
188A	6283	Comms 6	A.7
188C	6285	Comms 7	A.7
188E	6287	Comms 8	A.7
1890	6289	Comms 9	A.7
1892	6291	Comms 10	A.7
18BE	6335	Comms 32 (end address)	A.7

*Extended Comms Inputs (96 comms values max.)**

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
2440	9281	Extended Comms Input 33 (start address)	A.7.1
2442	9283	Extended Comms Input 34	A.7.1
2444	9285	Extended Comms Input 35	A.7.1
2446	9287	Extended Comms Input 36	A.7.1
2448	9289	Extended Comms Input 37	A.7.1
244A	9291	Extended Comms Input 38	A.7.1
244C	9293	Extended Comms Input 39	A.7.1
244E	9295	Extended Comms Input 40	A.7.1
2450	9299	Extended Comms Input 41	A.7.1
2452	9301	Extended Comms Input 42	A.7.1
24BE	9407	Extended Comms Input 96 (end address)	A.7.1

Modbus Memory Map Supplement:

* Communications Inputs can be set by using Modbus function code 16.

Pen Values (96 pens max.)

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
18C0	6337	Pen 1 (start address)	A.8
18C2	6339	Pen 2	A.8
18C4	6341	Pen 3	A.8
18C6	6343	Pen 4	A.8
18C8	6345	Pen 5	A.8
18CA	6347	Pen 6	A.8
18CC	6349	Pen 7	A.8
18CE	6351	Pen 8	A.8
18D0	6353	Pen 9	A.8
18D2	6355	Pen 10	A.8
197E	6527	Pen 96 (end address)	A.8

Totalisers (64 totalisers max.)

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
1B00	6913	Totalisers 1 (start address)	A.10
1B02	6915	Totalisers 2	A.10
1B04	6917	Totalisers 3	A.10
1B06	6919	Totalisers 4	A.10
1B08	6921	Totalisers 5	A.10
1B0A	6923	Totalisers 6	A.10
1B0C	6925	Totalisers 7	A.10
1B0E	6927	Totalisers 8	A.10
1B10	6929	Totalisers 9	A.10
1B12	6931	Totalisers 10	A.10
1B7E	7039	Totalisers 64 (end address)	A.10

Modbus Memory Map Supplement:

Alarm Value (96 Pens)

Allows you to read and write the value of the alarm level over Modbus. Table below shows Alarm 1 Pen 1 to Alarm 1 Pen 96

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
1C00	7169	Alarm 1 Value Pen 1 (start address)	A.16
1C02	7171	Alarm 1 Value Pen 2	A.16
1C04	7173	Alarm 1 Value Pen 3	A.16
1C06	7175	Alarm 1 Value Pen 4	A.16
1C08	7177	Alarm 1 Value Pen 5	A.16
1C0A	7179	Alarm 1 Value Pen 6	A.16
1C0C	7181	Alarm 1 Value Pen 7	A.16
1C0E	7183	Alarm 1 Value Pen 8	A.16
1C10	7185	Alarm 1 Value Pen 9	A.16
1C12	7187	Alarm 1 Value Pen 10	A.16
1CBE	7359	Alarm 1 Value Pen 96	A.16

The address range continues from Alarm 2 up to Alarm 6, 96 pens for each alarm.

EG. Alarm value 2 Pen 1-96, Alarm value 3 Pen 1-96, up to Alarm value 6 Pen 1-96.

Table below shows Alarm value 1 to 6 start and end addresses for Pens 1 to 96.

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
1C00	7169	Alarm 1 Value Pen 1	A.16
1CBE	7359	Alarm 1 Value Pen 96	A.16
1CC0	7361	Alarm 2 Value Pen 1	A.16
1D7E	7551	Alarm 2 Value Pen 96	A.16
1D80	7553	Alarm 3 Value Pen 1	A.16
1E3E	7743	Alarm 3 Value Pen 96	A.16
1E40	7745	Alarm 4 Value Pen 1	A.16
1EFE	7935	Alarm 4 Value Pen 96	A.16
1F00	7937	Alarm 5 Value Pen 1	A.16
1FBE	8127	Alarm 5 Value Pen 96	A.16
1FC0	8129	Alarm 6 Value Pen 1	A.16
207E	8319	Alarm 6 Value Pen 96 (end address)	A.16

Modbus Memory Map Supplement:

Alarm Status (96 Pens)

Allows you to read the status of all 6 alarms for each pen (up to 16 pens for **GR**).

Address Hex	Address Decimal	Description	See Appendix 51-52-25-66
1980	6529	Alarm Status, Pen 1 (start address)	A.16.1
1981	6530	Alarm Status, Pen 2	A.16.1
1982	6531	Alarm Status, Pen 3	A.16.1
1983	6532	Alarm Status, Pen 4	A.16.1
1984	6533	Alarm Status, Pen 5	A.16.1
1985	6534	Alarm Status, Pen 6	A.16.1
1986	6535	Alarm Status, Pen 7	A.16.1
1987	6536	Alarm Status, Pen 8	A.16.1
1988	6537	Alarm Status, Pen 9	A.16.1
1989	6538	Alarm Status, Pen 10	A.16.1
19DF	6624	Alarm Status, Pen 96 (end address)	A.16.1

Alarm Status, continued

Bit 0 is Alarm 1
Bit 1 is Alarm 2
Bit 2 is Alarm 3
Bit 3 is Alarm 4
Bit 4 is Alarm 5
Bit 5 is Alarm 6

this is decoded as follows...

Bit number	0	1	2	3	4	5
Alarm Number	1	2	3	4	5	6
Decimal	1	2	4	8	16	32

So if you request the alarm status from Pen 1 and it returns the value 41, that number is made from $32 + 8 + 1$, i.e. bits 5, 3 and 0. In other words alarms 6, 4 and 1 are active.

Modbus Memory Map Supplement:

Totalisers

Totaliser values in engineering units, 4 byte IEEE floats using 2 Modbus registers per reading.

Input Text message

This facility allows a text message to be passed to the recorder to be annotated on the chart and added to the message log. The maximum length of the message is 32 bytes of ASCII characters, which need not be null-terminated.

It operates by utilising modbus function code 16 (0x10), Preset Multiple registers, and the unique address 0x0004 in the modbus global register map (Table A-1)

The modbus message format follows that shown in section 3.7 of the document cited. The Start Address will be 00 04, and the Byte Count of the number of bytes in the following text message. As 2 modbus registers are used to pass an address to function 16, the Number of Addresses has to be back calculated from the required Byte Count to give the lowest integer such that $(\text{Number of Addresses}) * 2 \geq \text{Byte Count}$.

For example if Byte Count = 4, then Number of Addresses = 2, but if Byte Count = 5, Number of Addresses = 3.

As an example, to send the 5-character message Start to a slave address 02 the complete message would be:

Slave Address	Function Code	Start Addr. High	Start Addr. Low	No Addr. High	No Addr. Lo	Byte Count	Data					CRC	CRC
02	10	00	04	00	03	05	53	74	61	72	74	CRC	CRC

The response follows the normal response for function code 16 given in section 3.7, and so to the above message the response would be: 02 10 00 04 00 03 CRC CRC

Analogue Input Value

Analogue readings in engineering units. 4byte IEEE floats using 2 Modbus registers per reading.

Communications Input

Values can be sent to the recorder for inclusion in the Maths Block, using command 16 up to 32 IEEE floats can be sent to the recorder. Using CV1 to CV32 in the Maths Block, these values can be displayed on the pens.


i.e. **P1 = CV1** will set Pen 1 to the engineering value set address 1880 with the function code 16. Once again these are 4 byte IEEE floats using 2 Modbus registers per reading.

Modbus Memory Map Supplement:

Pen Values

Pen values in engineering units, 4 byte IEEE floats using 2 Modbus registers per reading.

Figure 23.1 Comms variables

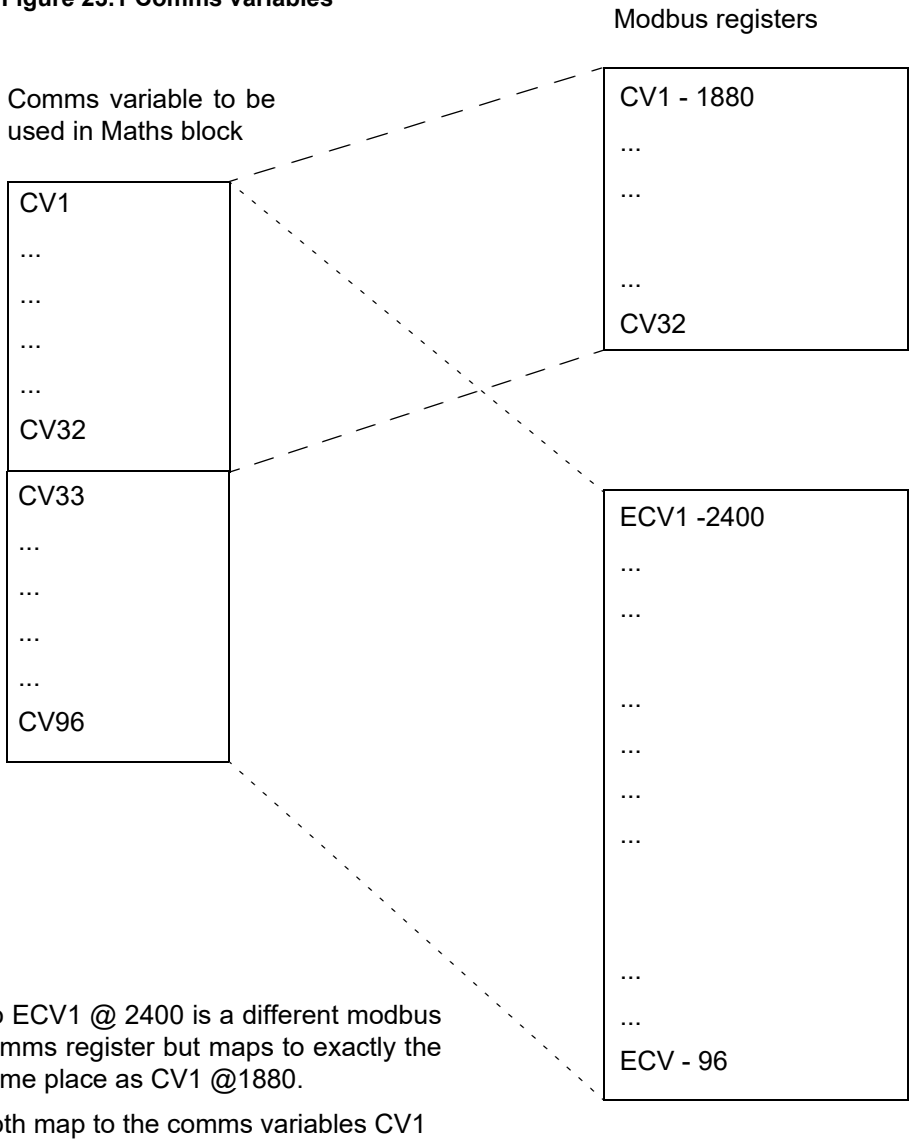

Pen Alarm Value

Modbus Function Codes

These are described in document Modbus® Serial Communications User manual, 51-52-25-66.

Pages 14 to 25, inclusive. For **GR Series** recorders only use codes 01, 02, 03/04, 16 and 17.

Supplemental to Function code 16 with standard address 0004 can be used to send.

Supplemental to Function code 17, Report Device ID:

- Page 23 - Slave ID for **GR Series** recorders is always 05.
- Page 24 - Device description

Item	Size in bytes	Contents
Device Description	16d, 0x10	Recorder type+space+software version The length is extended to exactly 16 bytes by trailing 0x00 characters. Recorder type = is a combination of the OEM series name followed by the OEM device name (truncated to 16 characters) Software version is of the form nn.XX eg.00.FQ

- Page 25 - Number of data block records, byte 23, always equals 05 for the Trendview range. data blocks are always in order.

00 = Analogue inputs, 02 = Digital inputs, 03 = Digital outputs, 06 = Pens, 09 = Totalisers.

Appendix K: Troubleshooting

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Cannot read board hardware identity	0	1,1	An invalid/unsupported I/O card has been identified. Error reading board ID (type) - invalid board type configuration	Diagnostics Messages
Incompatible hardware ID	0	1,1	The number of channels reported by I/O board was invalid. Error reading board ID (type) - can't determine how many channels	Diagnostics Messages
Incompatible hardware ID	1	1,1	An invalid/unsupported I/O card has been identified Invalid board type (setting up working variables)	Diagnostics Messages
Incompatible hardware ID	2	1,1	An invalid/unsupported I/O card has been identified Invalid board type (getting board capability)	Diagnostics Messages
Incompatible hardware ID	3	1,1	An invalid/unsupported I/O card has been identified. Invalid board type (AcqTimer_OnInterrupt)	Diagnostics Messages
Incompatible hardware ID	4	1,1	An invalid/unsupported I/O card has been identified. Invalid board type on board initialisation	Diagnostics Messages
Incompatible hardware ID	5	1,1	An invalid/unsupported I/O card has been identified whilst reading life stats. Invalid board type when reading stats	Diagnostics Messages
Incompatible hardware ID	6	1,1	An invalid/unsupported I/O card has been identified whilst resetting life stats. Invalid board type resetting Life stats	Diagnostics Messages
Incompatible hardware ID	7	1,1	An invalid/unsupported I/O card has been identified. Invalid board type resetting Session stats	Diagnostics Messages
Incompatible hardware ID	8	1,1	An invalid/unsupported I/O card has been identified. Invalid board type finding history size	Diagnostics Messages
Incompatible hardware ID	9	1,1	An invalid/unsupported I/O card has been identified whilst getting life history. Invalid board type getting life history	Diagnostics Messages
Incompatible hardware ID	10	1,1	An invalid/unsupported I/O card has been identified whilst getting session history.	Diagnostics Messages
Incompatible hardware ID	11	1,1	An invalid/unsupported I/O card has been identified during writing life stats operation.	Diagnostics Messages
Incompatible hardware ID	12	1,1	An invalid/unsupported I/O card has been identified whilst in diagnostic mode. Invalid board type writing FieldPortDiagOutput	Diagnostics Messages
Unable to read board revision	0	1,1	Invalid or unsupported board revision for I/O board firmware. Error reading board revision: conversion request or reading value	Diagnostics Messages
Invalid board revision	0	1,1	Invalid or unsupported board revision for I/O board firmware. Error reading board revision: value read was not recognised	Diagnostics Messages
Board not marked as having passed post-mfr test	N/A	N/A	Board has not passed ATE test; return to factory	Diagnostics Messages
Unable to read valid configuration from E2	N/A	N/A	Could not read a valid I/O board configuration	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Unable to read history/stats from E2	0	3,3	Could not read history or stats information from I/O card. Error reading board statistics.	Diagnostics Messages
Fatal startup error	0	1,1	I/O board could not be initialized; suspect I/O board. Errors when trying to initialise board, after numerous attempts	Diagnostics Messages
H/W error prevents execution of command	0	1,1	AI board could not be initialized; suspect AI board. Failed to set acquisition interrupt timer, AI board	Diagnostics Messages
H/W error prevents execution of command	0	1,1	AI board could not be initialized; suspect AI board. Failed to set acquisition interrupt timer, AI board	Diagnostics Messages
H/W error prevents execution of command	1	1,1	PI board could not be initialized; suspect pulse board. Failed to set acquisition interrupt timer, PI board	Diagnostics Messages
H/W error prevents execution of command	2	1,1	DIO/AR board could not be initialized; suspect I/O board. Failed to set acquisition interrupt timer, DIO/AR boards	Diagnostics Messages
H/W error prevents execution of command	3	1,1	AO board could not be initialized; suspect AO board. Failed to set acquisition interrupt timer, AO board	Diagnostics Messages
H/W error prevents execution of command	4	1,1	Internal I/O card failure. Triggered Clock Monitor Failure	Diagnostics Messages
Function code received unknown	N/A	N/A	I/O card did not recognize the command sent to it.	Diagnostics Messages
The 2 fn code bytes failed validation test	N/A	N/A	I/O card did not recognize the command sent to it because the code and inverse code were different.	Diagnostics Messages
Slave still processing previous message	0	2,2	I/O board communications error. Character received from SPI when host should be waiting	Diagnostics Messages
Slave still processing previous message	1	2,2	I/O board field port/diagnostic communications error. Character received from FieldPort before ready for next command	Diagnostics Messages
Slave still processing previous message	2	2,2	I/O board communications error. Non-clocking char received from SPI when should be clocking reply	Diagnostics Messages
Cannot execute this command in present state	N/A	N/A	The command could not currently be executed, because the I/O card is in the wrong state to accept the command.	Diagnostics Messages
Wrong number of arguments for this message	N/A	N/A	The message sent to the I/O card was invalid: it had the wrong number of arguments	Diagnostics Messages
Arguments of the message were invalid	0	4,4	AI board could not be initialized; suspect AI board. Invalid frequency sent to SetAcqFreq	Diagnostics Messages
Arguments of the message were invalid	1	4,4	AI board could not be initialized; suspect AI board. Invalid frequency sent to GetAcqFreq	Diagnostics Messages
Arguments of the message were invalid	2	4,4	DIO board could not be initialized; suspect I/O board. Invalid mode sent to FlagIntPulseChan	Diagnostics Messages
Arguments of the message were invalid	3	4,4	Illegal channel number requested in message. Invalid channel number sent to SetAcqTimerFreq	Diagnostics Messages
Arguments of the message were invalid	4	4,4	Config change message can not change to raw mode acquisition. Attempted to set raw mode via config change - use SetRawMode	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Arguments of the message were invalid	5	4,4	Active burnout was selected on a channel configured as a RT. Attempted to set active burnout with RT input	Diagnostics Messages
The message had an invalid CRC	N/A	N/A	The message sent to the I/O does not match it's CRC.	Diagnostics Messages
The message was incomplete	N/A	N/A	A incomplete message was detected by the I/O card	Diagnostics Messages
The configuration operation was not successful	N/A	N/A	General failure of an operation that queried or changed configuration	Diagnostics Messages
Unable to determine firmware version number	N/A	N/A	Unable to determine the firmware revision number, so some functions may not operate correctly	Diagnostics Messages
Unable to determine firmware build number	N/A	N/A	Unable to determine the firmware build number.	Diagnostics Messages
Unable to determine the firmware serial number	N/A	N/A	Unable to determine the firmware serial number.	Diagnostics Messages
Unable to determine the board's GUID	N/A	N/A	Unable to determine the firmware revision number given when first ATE tested.	Diagnostics Messages
Unable to determine the life history	N/A	N/A	The life history is not available from card.	Diagnostics Messages
Failure writing output value	0	1,1	There was an error setting the specified AO channel output value. Note that subsequent writes may succeed. Problem writing AO value detected: first attempt to send failed.	Diagnostics Messages
Failure writing output value	1	1,1	There was an error setting the specified AO channel output value (on the second occasion). Note that subsequent writes may succeed. Problem writing AO value detected: second attempt also failed.	Diagnostics Messages
Failure writing output value	2	1,1	There was an error setting the specified AO channel output value because the last selected channel was not deselected first. Problem writing AO value detected: last channel wasn't deselected	Diagnostics Messages
Failure writing output value	3	1,1	Failed to set the identified AI channel correctly for acquisition in ChangeRange command. Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	4	1,1	Failed to set the identified AI channel correctly for acquisition in ChangeAcqFreq command. Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	5	1,1	Failed to set the identified AI channel correctly for acquisition in SetMainsF command. Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	6	1,1	Failed to set the identified AI channel correctly for acquisition (attempting restore in ChangeAcqFreq). Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	7	1,1	Failed to set the identified AI channel correctly for acquisition (attempting restore in ChangeRange). Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	8	1,1	Failed to set the identified AI channel correctly for acquisition in WriteAIConfig command. Failed writing AI ADC values	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Failure writing output value	9	1,1	Failed to set the identified AI channel correctly for acquisition in WriteAIChanConfig command. Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	10	1,1	Failed to set the identified AI channel correctly for acquisition in SetActiveBurnout command. Failed writing AI ADC values	Diagnostics Messages
Failure writing output value	11	1,1	Cannot turn ohms measurement current off; suspect AI board. Failed writing AI ADC values in TurnRTCurrOff command	Diagnostics Messages
An error has occurred during calibration	N/A	N/A	An error has occurred during factory or user calibration.	Diagnostics Messages
Unable to return all or part of cal - may be corrupt	N/A	N/A	Some or all of the calibration data was corrupt, so none could be returned	Diagnostics Messages
Error during I/O board startup	N/A	N/A	An error occurred during I/O card startup	Diagnostics Messages
The reply message larger than buffer	N/A	N/A	The I/O card reply was longer than allowed and so overflowed the buffer.	Diagnostics Messages
Unable to read configuration	0	3,3	General error; one or more values could not be read from the EEPROM. Error reading long value from EEPROM	Diagnostics Messages
Unable to read configuration	1	3,3	The stored AI configuration could not be read on power-up. Error reading AI config from EEPROM on power-up	Diagnostics Messages
Unable to read configuration	2	3,3	The stored AO configuration could not be read on power-up. Error reading AO config from EEPROM on power-up	Diagnostics Messages
Unable to read configuration	3	3,3	The stored digital/pulse configuration could not be read on power-up. Error reading DIG config from EEPROM on power-up	Diagnostics Messages
Unable to write configuration	0	3,3	The default board configuration could not be written on power-up. Error writing Board Setup to EEPROM on power-up	Diagnostics Messages
Unable to write configuration	1	3,3	The AI configuration could not be written to EEPROM on configuration change. Error writing AI config to EEPROM	Diagnostics Messages
Unable to write configuration	2	3,3	The AO configuration could not be written to EEPROM on configuration change. Error writing AO config to EEPROM	Diagnostics Messages
Unable to write configuration	3	3,3	The digital configuration could not be written to EEPROM on configuration change. Error writing DIG config to EEPROM	Diagnostics Messages
Unable to write configuration	4	3,3	The AI configuration could not be written on configuration change. Error writing AI config to EEPROM	Diagnostics Messages
Unable to write configuration	5	3,3	The AO configuration could not be written on configuration change. Error writing AO config to EEPROM	Diagnostics Messages
Unable to write configuration	6	3,3	The digital/pulse configuration could not be written on configuration change. Error writing DIG config to EEPROM	Diagnostics Messages
Unable to write configuration	7	3,3	The AI configuration could not be written on configuration change after ChangeRange command. Error writing AI config to EEPROM	Diagnostics Messages
Unable to write configuration	8	3,3	The AI configuration could not be written on configuration change after ChangeAcqFreq command. Error writing AI config to EEPROM	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Unable to write configuration	9	3,3	The AI configuration could not be written on configuration change after SetDiagInterval command. Error writing AI setup to EEPROM	Diagnostics Messages
Unable to write configuration	10	3,3	The AI configuration could not be written on configuration change after SetBdTestData command. Error writing AI setup to EEPROM	Diagnostics Messages
Unable to write configuration	11	3,3	The AI configuration could not be written on configuration change after SetBdGuid command. Error writing AI setup to EEPROM	Diagnostics Messages
Unable to write configuration	12	3,3	The AI configuration could not be written on configuration change after WrAIConfig command. Error writing AI config to EEPROM	Diagnostics Messages
Unable to write configuration	13	3,3	The AI configuration could not be written on configuration change after WrAIChanConfig command. Error writing AI config to EEPROM	Diagnostics Messages
Unable to write configuration	14	3,3	The AI configuration could not be written on configuration change after WrBoardSetup command. Error writing AI setup to EEPROM	Diagnostics Messages
Unable to write configuration	15	3,3	The AI configuration could not be written on configuration change after SetMainsF command Error writing AI setup to EEPROM	Diagnostics Messages
Unable to write configuration	16	3,3	The digital configuration could not be written on configuration change after WrDigConfig command. Error writing DIG Cfg to EEPROM	Diagnostics Messages
Unable to write configuration	17	3,3	The AO configuration could not be written on configuration change after WrAOConfig command. Error writing AO Cfg to EEPROM	Diagnostics Messages
Unable to write configuration	18	3,3	The AI configuration could not be written on configuration change after SetActiveBnout command. Error writing AI Cfg to EEPROM	Diagnostics Messages
Watchdog timer timed out	0	4,4	COP I/O Watchdog timer timeout; I/O board has failed. COP Failure was triggered	Diagnostics Messages
Error reading NV (EEPROM)	0	3,3	The I/O board serial number could not be identified by the I/O firmware. Error reading Board ID (serial number): couldn't read EEPROM	Diagnostics Messages
Error reading NV (EEPROM)	1	3,3	I/O board setup information could not be read. Error reading Board Setup: couldn't read EEPROM	Diagnostics Messages
Error reading NV (EEPROM)	2	3,3	The AI card calibration history could not be read on power-up. Error reading AI calibration history from EEPROM on power-up	Diagnostics Messages
Error reading NV (EEPROM)	3	3,3	The AO card calibration history could not be read on power-up. Error reading AO calibration from EEPROM on power-up	Diagnostics Messages
Error reading NV (EEPROM)	4	3,3	The AO card calibration history could not be read. Error reading AO calibration history from EEPROM	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Error reading NV (EEPROM)	5	3,3	I/O board could not correctly determine whether this is the first time this board has been powered-up, so could not default the values. Error reading FirstPower-up signature from EEPROM	Diagnostics Messages
Error reading NV (EEPROM)	6	3,3	Could not read the initial resistance held for active burnout. Error reading Initial loop resistance from EEPROM	Diagnostics Messages
Error reading NV (EEPROM)	7	3,3	Could not read the current resistance held for active burnout. Error reading Current loop resistance from EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	0	3,3	General error writing persistent data (EEWriteLong). Error writing data to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	1	3,3	I/O board has completed first-time power-up defaulting; however could not log the fact. Error writing FirstPower-up signature to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	2	3,3	Life stats could not be persisted on I/O card. Error writing to Life Stats in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	3	3,3	Board stats could not be persisted on AI card. Error writing to AI Board Stats in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	4	3,3	Board calibration could not be persisted on AI card (ReadDefaultAICal). Error writing AI calibration to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	5	3,3	Board calibration history could not be persisted on AI card (MakeEmptyAICalHist). Error writing AI calibration history to EE	Diagnostics Messages
Error writing to NV (EEPROM)	6	3,3	Board calibration history could not be persisted on AI card. Error writing AI calibration history to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	7	3,3	Board stats could not be persisted on AO card. Error writing to AO Board Stats in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	8	3,3	Board calibration could not be persisted on AO card (ReadDefaultAOCal). Error writing AO calibration data to EE	Diagnostics Messages
Error writing to NV (EEPROM)	9	3,3	Board calibration could not be persisted on AO card (MakeEmptyAOCalHist). Error writing AO calibration history to EE	Diagnostics Messages
Error writing to NV (EEPROM)	10	3,3	Board calibration history could not be persisted on AO card. Error writing AO calibration history to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	11	3,3	Board stats could not be persisted on digital I/O card. Error writing to DIO Board Stats in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	12	3,3	Board stats could not be persisted on alarm card Error writing to AR Board Stats in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	13	3,3	Board stats could not be persisted on pulse card Error writing to PI Board Stats in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	14	3,3	The I/O board serial number could not be saved Error writing Board ID to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	15	3,3	The I/O board calibration information could not be saved. Error writing Board Calibration to EEPROM	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Error writing to NV (EEPROM)	16	3,3	The I/O board stats information could not be saved. Error writing Stats to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	17	3,3	The AO board calibration information could not be saved. Error writing AO Cal values to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	18	3,3	The AO board calibration defaults could not be saved. Error writing defaults to AO cal history in EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	19	3,3	Could not write the initial resistance held for active burnout. Error writing AI loop resistance to EEPROM at start-up	Diagnostics Messages
Error writing to NV (EEPROM)	20	3,3	Could not write the current resistance held for active burnout. Error writing AI Current loop resistance to EEPROM	Diagnostics Messages
Error writing to NV (EEPROM)	21	3,3	Could not write the initial resistance held for active burnout. Error writing AI Initial loop resistance to EEPROM	Diagnostics Messages
No board serial number on power-up	0	3,3	The I/O board serial number could not be confirmed as correct. Error reading Board ID (serial number): failed CRC check	Diagnostics Messages
CRC error on reading setup from NV memory (EEPROM)	1	3,3	The setup file stored on the I/O board has become corrupted. Error reading Board Setup: failed CRC check	Diagnostics Messages
There are readings missing from channel	0	4,4	50Hz acquisition is not possible whilst active burnout is selected. 10Hz operation is the maximum. 50Hz acquisition with active burnout caused lost readings - use 10Hz max	Diagnostics Messages
More data than buffer can hold; some overwritten	N/A	N/A	More data than buffer can hold, only part returned; but some has also been overwritten	Diagnostics Messages
Can't execute: invalid state	0	4,4	The stored calibration is for an illegal range Invalid gain in ReadWorkingCals	Diagnostics Messages
Can't execute: invalid state	1	4,4	The I/O card internal state is unable to take a CJC reading. Invalid state in CJC state machine on AI board	Diagnostics Messages
Can't execute: invalid state	2	4,4	The I/O card internal state is unable to take read/operate a digital. Invalid state relating to DIG board pointer update	Diagnostics Messages
Can't execute: invalid state	3	4,4	The I/O card internal state is unable to take a reading for all AI channels. Invalid state of AdcStatus for SPI master (AI board)	Diagnostics Messages
Can't execute: invalid state	4	4,4	The I/O card internal state is unable to update for all AO channels. Invalid state of DacStatus - SPI master (AO board)	Diagnostics Messages
Can't execute: invalid state	5	4,4	The I/O card internal state is unable to take a reading for all AI channels. Invalid state of ReadingType (AI board)	Diagnostics Messages
Can't execute: invalid state	6	4,4	The communications to the I/O card have failed due to the I/O cards internal state. Invalid state of MessageStatus (Host or FieldPort)	Diagnostics Messages
Can't execute: invalid state	7	4,4	Error whilst making an active burnout measurement. Invalid state of Active Burnout measurement type	Diagnostics Messages
Can't execute: invalid state	8	4,4	Error whilst making an active burnout measurement. Invalid state of gain in Active Burnout calculation	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Unable to execute: unspecified reason	0	4,4	The measured pulse frequency is too high for the digital I/O board; try using a dedicated pulse card channel.	Diagnostics Messages
Unable to execute: unspecified reason	1	4,4	The command referenced an illegal/invalid board channel number on the DIO board	Diagnostics Messages
Unable to execute: unspecified reason	2	4,4	I/O card is not able to operate on SPI bus Invalid board type for SPI master function	Diagnostics Messages
Unable to execute: unspecified reason	3	4,4	An illegal operation on the I/O board firmware was found.	Diagnostics Messages
Unable to execute: unspecified reason	4	4,4	Error sending data to SPI for AI Active Burnout readings	Diagnostics Messages
Unable to execute: unspecified reason	5	4,4	Data received for AI Active Burnout indicates an error condition	Diagnostics Messages
Unable to execute: unspecified reason	6	4,4	Error ADC not ready while taking Active Burnout readings	Diagnostics Messages
Unable to execute: unspecified reason	7	4,4	Could not initialise active burnout - will try again next power-up	Diagnostics Messages
Unspecified error has occurred	N/A	N/A	I/O card failure: An unspecified error has occurred	Diagnostics Messages
Unable to enable or disable timer interrupts	N/A	N/A	I/O card failure: Unable to enable or disable timer interrupts	Diagnostics Messages
Error with RS232 port	0	2,2	Diagnostic FieldPort OverRun error	Diagnostics Messages
Error with RS232 port	1	2,2	Diagnostic FieldPort Framing error	Diagnostics Messages
Error with RS232 port	3	2,2	Diagnostic FieldPort Receive Buffer	Diagnostics Messages
Error with RS232 port	4	2,2	Diagnostic FieldPort Noise error	Diagnostics Messages
Error with RS232 port	5	2,2	Diagnostic FieldPort Idle error	Diagnostics Messages
Error with Host SPI	0	2,2	Host SPI Port OverRun error	Diagnostics Messages
Error with Host SPI	1	2,2	Host SPI Port Receive Buffer Overflow error	Diagnostics Messages
Error with Host SPI	2	2,2	Host SPI Port Software Receive Buffer Overflowed	Diagnostics Messages
Master SPI (ADC or DAC) Receive buffer overflowed	0	1,1	Master SPI (Adc or Dac) Receive Buffer overflowed and was reset	Diagnostics Messages
Clock monitor failure occurred	N/A	N/A	The I/O card clock monitor failed.	Diagnostics Messages
Error with master SPI (ADC or DAC)	0	1,1	Master SPI (Adc or Dac) Over-run error	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Error with master SPI (ADC or DAC)	1	1,1	Master SPI (Adc or Dac) Receive Buffer Overflow error	Diagnostics Messages
Waited too long without response	0	4,4	I/O card has timed out waiting for SPITransfer	Diagnostics Messages
Waited too long without response	1	4,4	I/O card has timed out waiting for AdcSpiSend	Diagnostics Messages
Waited too long without response	2	4,4	I/O card has timed out waiting for ResetADC	Diagnostics Messages
Waited too long without response	3	4,4	I/O card has timed out waiting for CheckSelectedAD	Diagnostics Messages
An error has occurred with channel	N/A	N/A	General error that the I/O card channel specified has failed to make a measurement or set the output.	Diagnostics Messages
Calib vals not written properly in factory or field cal	0	3,3	The calibration values written in factory or field calibration could not be read. Reading EEPROM cals failed, so did attempted default read	Diagnostics Messages
CJC port error detected	0	1,1	Communications to the CJC failed, subsequent retries may have succeeded. CJC driver OverRun error	Diagnostics Messages
CJC port error detected	1	1,1	Communications to the CJC failed, subsequent retries may have succeeded. CJC driver Framing error	Diagnostics Messages
CJC port error detected	2	1,1	Communications to the CJC failed, subsequent retries may have succeeded. CJC driver Parity error	Diagnostics Messages
CJC port error detected	3	1,1	Communications to the CJC failed, subsequent retries may have succeeded. CJC driver Receive Buffer Overflow error	Diagnostics Messages
CJC port error detected	4	1,1	Communications to the CJC failed, subsequent retries may have succeeded. CJC driver Noise error	Diagnostics Messages
CJC port error detected	5	1,1	Communications to the CJC failed, subsequent retries may have succeeded. CJC driver Idle error	Diagnostics Messages
Cannot enable ADC chip	0	4,4	The I/O card internal and/or external communications have failed to be initialized correctly. Failed to configure and enable SPI master	Diagnostics Messages
Cannot enable ADC chip	1	4,4	Failed to initialize the CJC driver. Failed to enable CJC Driver	Diagnostics Messages
Can't initialise the SPI for ADCs	N/A	N/A	General error that the I/O card channel specified has failed to make a measurement.	Diagnostics Messages
Can't initialise ADC speeds, ranges, etc	0	1,1	One or more measurements on an AI channel have failed. Error selecting input pair on initialisation of AI board	Diagnostics Messages
Can't initialise ADC speeds, ranges, etc	1	1,1	One or more measurements on an AI channel have failed. Error setting relays (P1, P2) on initialisation of AI board	Diagnostics Messages
Can't initialise ADC speeds, ranges, etc	2	1,1	An invalid configuration has been sent to the AI board. Error setting filter value on initialisation of AI board	Diagnostics Messages
Can't initialise ADC speeds, ranges, etc	3	1,1	An AI channel could not be reset on the AI board. Error while resetting ADCs - more detail on channel specific faults	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Can't initialise ADC speeds, ranges, etc	4	1,1	An AI channel could not be initialized on the AI. Error initialising an ADC channel	Diagnostics Messages
Can't initialise the CJC	0	1,2	CJC failed to initialize. Check that CJC is fitted. Failed several attempts to initialise CJC device on AI board	Diagnostics Messages
ADC not ready for requested op chan	0	4,4	ADC conversion timed out - perhaps ADC filter value too slow for acq. Rate. ADC not ready	Diagnostics Messages
Failed to reset ADC converters	0	1,1	An AI channel cannot be reset correctly. Failed to reset ADC on AI board	Diagnostics Messages
Factory cal read from EEPROM was corrupt on power-up	0	3,3	An error occurred whilst reading the factory calibration on power-up; return to factory or try user calibrating. Error reading an AI factory calibration from EEPROM on power-up	Diagnostics Messages
Factory RT cal read from EEPROM was corrupt on power-up	1	3,3	An error occurred whilst reading the RT calibration on power-up; return to factory. Error reading AI RT calibration from EEPROM on power-up	Diagnostics Messages
User cal read from EEPROM was corrupt on power-up	0	3,3	An error occurred whilst reading the user calibration on power-up; try re-user calibrating Error reading an AI user calibration from EEPROM on power-up	Diagnostics Messages
User cal read from EEPROM was corrupt on power-up	1	3,3	Several errors occurred whilst reading the user calibration on power-up; try re-user calibrating Multiple errors reading AI user cal on power-up: factory calibrations set	Diagnostics Messages
Both calcs read from EEPROM were corrupt	N/A	N/A	Both factory and user calibrations read from EEPROM were corrupt	Diagnostics Messages
There is no CJC reading available	N/A	N/A	There is no CJC reading available	Diagnostics Messages
The last CJC value was not read correctly	N/A	N/A	The last CJC value was not read correctly	Diagnostics Messages
ADC chip failed self test chan	0	1,1	Did not pass the self test - value read wasn't the expected default on given channel.	Diagnostics Messages
Detected open circuit load on an enabled AO channel	N/A	N/A	The AO channel has an O/C load i.e. load has been removed.	Diagnostics Messages
Requested more than 21mA output	N/A	N/A	The AO channel has been requested to retransmit >21mA.	Diagnostics Messages
Ambient temperature out of limits	N/A	N/A	The AI card ambient temperature is outside of operating limits	Diagnostics Messages
Active burnout almost failed on AI channel	N/A	N/A	The T/C on the specified AI channel has almost burnout, however a value can still be measured (T/C almost failed O/C).	Diagnostics Messages
Active burnout S/C detected on AI channel	N/A	N/A	The T/C on the specified AI channel has burnout (failed O/C) whilst set to active burnout mode.	Diagnostics Messages
Active burnout degraded on AI channel	N/A	N/A	The T/C on the specified AI channel has degraded performance, however a value can still be measured.	Diagnostics Messages
Out of burnout on AI channel	N/A	N/A	The T/C on the specified AI channel has recovered from a burnout condition. Suspect a bad connection/failing T/C.	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Upscale burnout on AI channel	N/A	N/A	The T/C on the specified AI channel has burnout (failed O/C). The pen has gone upscale as stated in the setup.	Diagnostics Messages
Downscale burnout on AI channel	N/A	N/A	The T/C on the specified AI channel has burnout (failed O/C). The pen has gone downscale as stated in the setup.	Diagnostics Messages
AI channel dual point compensation error, using single point 1	N/A	N/A	Dual point compensation was specified, but one or more points were invalid therefore setup has been defaulted to single point compensation using point 1.	Diagnostics Messages
AI channel: User analogue high and low limits are same	N/A	N/A	User limits were required for the specified analogue channel; however both limits were incorrectly detected with the value.	Diagnostics Messages
AI channel; removing fast scanning support	N/A	N/A	Fast scanning option is disabled or is illegal for board/channel, but was specified in the setup file	Diagnostics Messages
AI channel; updating illegal acquisition rate	N/A	N/A	The acquisition rate specified in the setup for an AI channel was not allowed for board and option selected	Diagnostics Messages
AO channel; incorrect retransmit pen	N/A	N/A	The setup for the given AO channel specified an invalid pen to retransmit.	Diagnostics Messages
Slot number of channels changed – x channels previously; currently y channels	N/A	N/A	The I/O card is the same type as that run previously, however has a different number of channels. This will be as a result of a board upgrade /downgrade.	Diagnostics Messages
Slot setup mismatch: AO in setup; updating to AI	N/A	N/A	An AO board was detected on the previous run, but now an AI board has been detected, therefore the AI setup will be used instead of the AO.	Diagnostics Messages
Slot setup mismatch: AO in setup; updating to Pulse	N/A	N/A	An AO board was detected on the previous run, but now a pulse board has been detected, therefore the pulse setup will be used instead of the AO.	Diagnostics Messages
Slot setup mismatch: AI in setup; updating to AO	N/A	N/A	An AI board was detected on the previous run, but now an AO board has been detected, therefore the AO setup will be used instead of the AI.	Diagnostics Messages
Slot setup mismatch: AI in setup; updating to Pulse	N/A	N/A	An AI board was detected on the previous run, but now a pulse board has been detected, therefore the pulse setup will be used instead of the AI.	Diagnostics Messages
Slot setup mismatch: Pulse in setup; updating to AI	N/A	N/A	A pulse board was detected on the previous run, but now an AI board has been detected, therefore the AI setup will be used instead of the pulse.	Diagnostics Messages
Slot setup mismatch: Pulse in setup; updating to AO	N/A	N/A	A pulse board was detected on the previous run, but now an AO board has been detected, therefore the AO setup will be used instead of the pulse.	Diagnostics Messages
Slot setup mismatch: DIO in setup; updating to Alarm	N/A	N/A	A DIO board was detected on the previous run, but now an alarm board has been detected, therefore the alarm setup will be used instead of the DIO.	Diagnostics Messages
Slot setup mismatch: Alarm in setup; updating to DIO	N/A	N/A	An alarm board was detected on the previous run, but now a DIO board has been detected, therefore the DIO setup will be used instead of the alarm.	Diagnostics Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Slot setup unspecified for AI card	N/A	N/A	A warning that a new AI board has been fitted.	Diagnostics Messages
Slot setup unspecified for AO card	N/A	N/A	A warning that a new AO board has been fitted.	Diagnostics Messages
Slot setup unspecified for pulse card	N/A	N/A	A warning that a new pulse board has been fitted.	Diagnostics Messages
Slot setup unspecified for DIO card	N/A	N/A	A warning that a new DIO board has been fitted.	Diagnostics Messages
Slot setup unspecified for Alarm card	N/A	N/A	A warning that a new alarm board has been fitted.	Diagnostics Messages
Firmware upgrade	N/A	N/A	Notification that the recorder has just detected that the software has been upgraded from the last successful run	System Status and Messages
Configuration Loaded	N/A	N/A	Notification that the configuration has been successfully loaded	System Status and Messages
Setup Changed	N/A	N/A	Notification that the user has changed one or more items on the recorder setup	System Status and Messages
Pen x using scripts but option not available	N/A	N/A	Scripts are selected on Pen X, but the recorder options disables scripts	Diagnostics and System Status and Messages
Invalid number format. Exponential numbers must be entered in the format 1.23E-12	N/A	N/A	The number entered was not in the correct format.	Diagnostics Status DIO and Messages
AUTO OPS - Failed to load remotely uploaded configuration	N/A	N/A	Configuration remote download has failed.	
Configuration remotely loaded	N/A	N/A	Configuration has been remotely downloaded successfully.	System Status and Messages
FTP transfer operation timeout failure	N/A	N/A	The requested FTP operation has timed out.	System Status and Messages
FTP transfer operation failed	N/A	N/A	The requested FTP operation has failed.	System Status and Messages
FTP transfer finished successfully	N/A	N/A	The requested FTP operation has completed successfully.	System Status and Messages
Scheduled Export data performed	N/A	N/A	The scheduled data export completed successfully	System Status and Messages
Media Missing	N/A	N/A	Report that the specified media is not inserted	System Status and Messages
Media Full	N/A	N/A	Report that the specified media is full	System Status and Messages
Scheduled export failed - media removed during export	N/A	N/A	The scheduled export failed because the media was removed during transfer operation.	System Status and Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Scheduled export failed - unknown media error	N/A	N/A	The scheduled export failed because of an unknown cause	System Status and Messages
Scheduled export failed - could not create export folder	N/A	N/A	The scheduled export failed because the export folder was not present and could not be created.	System Status and Messages
Scheduled export failed - no media present	N/A	N/A	The scheduled export has failed because no media is present	System Status and Messages
Media space too low for next scheduled data transfer	N/A	N/A	The space available on the media is too little for the next scheduled operation	System Status and Messages
Unable to load	N/A	N/A	Unable to load requested file	Diagnostics and System Status and Messages
Message time earlier than oldest chart data	N/A	N/A	No chart data exists for time of message (the data blocks have been recycled)	System Status and Messages
Layout not valid or incorrect recorder type	N/A	N/A	Layout specified is invalid or invalid for the recorder type that it is trying to be used on	System Status and Messages
Recorder now operating in daylight saving time	N/A	N/A	Notification that the recorder is now operating in daylight saving mode	System Status and Messages
Recorder now operating in standard time	N/A	N/A	Notification that the recorder is now operating in standard time mode	System Status and Messages
Setup error	N/A	N/A	An unrecoverable error was found in the recorder setup file.	System Status and Messages
Reset Passwords	N/A	N/A	The passwords held in the recorder have been deleted.	
This user is not permitted to log in at this time	N/A	N/A	The user is not allowed to log on because it is outside of their time allocation.	
You must have at least one top level user in the system if passwords are enabled	N/A	N/A	There must be at least one administrator user when passwords are enabled.	
Reset password data to factory default. This will invoke a recorder restart	N/A	N/A	A prompt to tell the user that resetting the passwords to the factory default will automatically cause the recorder to restart.	
Login Failed	N/A	N/A	General fail message, specific cause has already been identified previously.	
Login has failed: Error Unknown	N/A	N/A	General fail message, specific cause could not be identified.	
Policy Failed - Password configuration unsuccessful	N/A	N/A	Password system has failed to start-up correctly because of a problem with the configuration	
This account needs to be reset by an administrator	N/A	N/A	This account must be reset by someone with administrator authorization	
Access Denied to Area	N/A	N/A	Access to the area that the operator tried to access is refused because the operator has not got the authority level necessary	
Password Failure	N/A	N/A	User has tried to login and has failed.	

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
Inactivity Timeout	N/A	N/A	Recorder inactivity has timed the current user out; so the user must re-log on.	
Unknown Password Error	N/A	N/A	Password system has failed to start-up correctly for an unknown reason	
Supplied username contains space characters	N/A	N/A	A username cannot contain space characters.	
DPPQ - FATAL ERROR - DATA LOSS	N/A	N/A	Acquired I/O card data has been lost	Diagnostics Status IO and Messages
Data reset has been performed	N/A	N/A	The data held internally has been deleted	System Status and Messages
The touch screen was NOT calibrated	N/A	N/A	The touch screen requires calibration	System Status and Messages
Message from Slot:X Code:46 PC2:0	46	N/A	Notification that the IO module on Slot 'X' has detected CRC error on reading board serial number from E2 during recorder power-up	Diagnostics Status IO and Messages
Message from Slot:X Code:7	7	N/A	Notification that the IO module on Slot 'X' is unable to read history/stats from E2	Diagnostics Status IO and Messages
Schedule Reset on Slot – X	N/A	N/A	Notification that the recorder is attempting to reset the ADC(s) of IO module on Slot 'X'	Diagnostics Status IO and Messages
m_FreeBlockQueue. GetHeadBlock() returned a NULL empty block	N/A	N/A	Notification that the recorder is not able to store the pen data. This could be due to one of the following causes: 1. Write operation failed on rear SD card 2. Configuration is loaded to its maximum capacity 3. In rare cases due to Recorder migration to Firmware R211.2 from an earlier version - Restart the Recorder once and perform a data reset - On Power Cycle, if the issue persists, replace the SD Card	System Status and Messages
Secure Self Certificates installation failed	N/A	N/A	Notification if the "Certificates.cer" format file is not available in the front SD card/USB	System Status and Messages
Secure Custom Certificates Installation Failed	N/A	N/A	This could be due to one of the following causes: - If the "CertificateCA" is not enabled in the Security Options. - If the CERT password given in the Security Options is not correct. Note: The password used to export the custom device certificate will be used for installing "Device.pfx" certificate in the recorder. This should be provided in the Security Options > CERT Password. - If the folder and the file names created in the front SD Card/USB are not as recommended. (For more details refer " Loading a Custom CA Certificate: " on page 100).	System Status and Messages
QMDataIntegrity.cpp: Line(134) blockId==QMC_INVALID_BLOCK_NUMBER	N/A	N/A	This error message occurs during recorder power up when SRAM block content is not matching with the current system configuration. Example: SD card size or Block structure or Lithium Battery life. - To resolve this issue, replace the rear SD card.	System/Diagnostics Status and Messages

Error Messages

Table 24.1 :

Error Message	Code	LED Flash code	Description/Cause	Type
>20 failures: Board B is in wrong speed mode for requested on opchan	N/A	N/A	This could be due to one of the following causes: - if the ADC is latched-up to one state or crystal is associated to that particular ADC went wrong - when AI card is facing continues ADC tuning failure for that-particular OP Channel To resolve this issue, upgrade I/O firmware to AK-18 version.	System/Diagnostics Status and Messages
I/O Card=A, CMD=RD_Anal_Block Unknown SPI Driver Error No 9779 data:1024	N/A	N/A	This message is **** issue in EzTrend on-board AI.	System/Diagnostics Status and Messages
File Error 53:	N/A	N/A	Check the NAS configuration in the recorder and associated credentials to NAS.	System/Diagnostics Status and Messages
Timeout sending Email, error (0)	N/A	N/A	This could be due to one of the following causes: - If the Email server // Email client is shut-down - If the network is not available To resolve this issue, make sure Email Server/Email Client or Network is available.	System/Diagnostics Status and Messages
Invalid Pen Transaction Point Reset.	N/A	N/A	Recorder maintains transaction points for pen Data to keep track of indexes for next export of new data. This error comes while exporting NEW data when recorder is not able to find the last transaction point stored. Recorder tries to reset to last known transaction point to recover. In this case it looks like it is not finding any valid transaction point. To recover from this error one can perform: 1) Export all data 2) Perform Data Reset.	System/Diagnostics Status and Messages
Flushing UnPersisted Blocks / Launching Disk Services	N/A	N/A	When recorder is having FTP memory full and we disable the pens, file accosicted to the pen is closed and partial data is flushed during periodic flushing of data in recorder the same file is being used to flush the data which is creating problem. Note: As a workaround, It is recommended to export the data before committing any config changes when the recorder has FTP memory low warning message.	N/A

Information Messages

Table 24.2 :

Information Message	Code	LED Flash code	Description/Cause	Type
Message from Slot:X Code:46 PC2:0	46	N/A	Notification that the IO module on Slot 'X' has detected CRC error on reading board serial number from E2 during recorder power-up	Diagnostics Status IO and Messages

Error Messages

Table 24.2 :

Information Message	Code	LED Flash code	Description/Cause	Type
Message from Slot:X Code:7	7	N/A	Notification that the IO module on Slot 'X' is unable to read history/stats from E2	Diagnostics Status IO and Messages
Schedule Reset on Slot – X	N/A	N/A	Notification that the recorder is attempting to reset the ADC(s) of IO module on Slot 'X'	Diagnostics Status IO and Messages

Appendix L: GR Series AMS2750 capabilities


AMS2750 and the GR Series Recorders

The recorders can operate in 2 Modes:

1. Temperature Uniformity Survey (TUS) – Stand alone recorder that measures T/C's and RTD's in oven/furnace, only available on an **Multitrend GR** and **DR Graphic** recorder.
2. Process mode – Screen & Timers. Program when next survey and calibration is due. Any recorder type. (can run separate on side of the oven as part of the process instruments).

Note: Instrumentation and Instrumentation Calibration refer to AMS2750.

Note: It is recommended that the recorders be used with the rear cover in place when using them for recording data for AMS2750 applications or any thermocouple measurement to minimize the ambient effects on the cold junction compensation measurement.

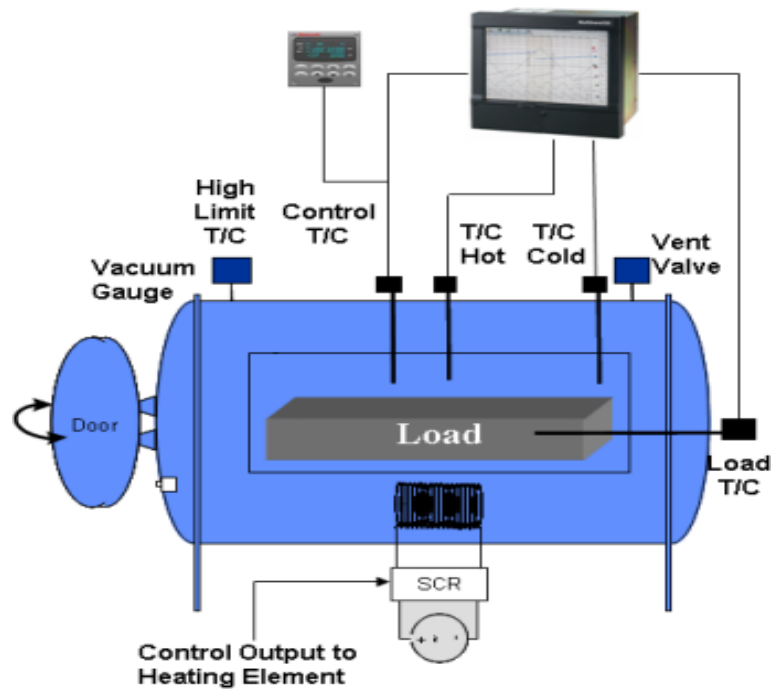

AMS2750 Process mode

AMS2750 process is used when the recorder is attached to the process in the role of a recording device. All **Multitrend GR**, **Minitrend GR**, **eZtrend GR** and **DR Graphic** recorders can operate in the Process mode and can be used as a process recorder to monitor process timers for calibration due dates and thermocouple usage set by the user.

Process mode adds some new status screens and timers to the recorder to help with AMS2750 compliance of the process, giving a countdown to SAT and TUS intervals as well as control TUS Sensor and instrument calibration. The standard **GR Series** recorders are capable of performing this task by enabling the appropriate number of credits in the Credits Option. This additional functionality provides you with an easier to use more complete solution, especially in conjunction with the thermocouple usage tracking facility, see [“TUS Sensor Usage Tracking \(AMS2750\)” on page 418](#).

Note

Abbreviated terms used in this document

- TUS - Temperature Uniformity Survey
- AMS2750 - Aerospace Material Specification
- SAT - System Accuracy Test

The abbreviation will be used throughout this document.

AMS2750 Credit Option

(Main Menu select *Configure > Setup > Edit > General > Factory > Credits > Options*).

AMS2750 Process Mode is available as a credit option, this allows the specification of the AMS2750 modes. To activate credit options, see [“Options” on page 206](#).

AMS2750 Process Mode requires 5 credits to be enabled. If more credits are required please contact **Honeywell**, for contact details.



AMS2750 Process option enables the AMS2750 process mode and TUS Sensor usage tracking. This option is available for the **Multitrend GR**, **Minitrend GR**, **eZtrend GR** and **DR Graphic** recorders.

AMS2750 Process mode

Scroll down the menu and select: AMS2750 Process


AMS2750 Process Menu

(Main Menu > Screen > Edit > Screens) or (Main Menu > Configure > Layout > Edit > Screens).

Available on the **Multitrend GR**, **Minitrend GR** **eZtrend GR** and **DR Graphic** recorders.

A dedicated status screen is available for the process mode based on a group, this displays the parameters for the process, furnace details, as well as the countdown timers and thermocouple tracking status.

To enable the process timers select any *Screen#*, go to *Template Type* and select AMS2750 Process.

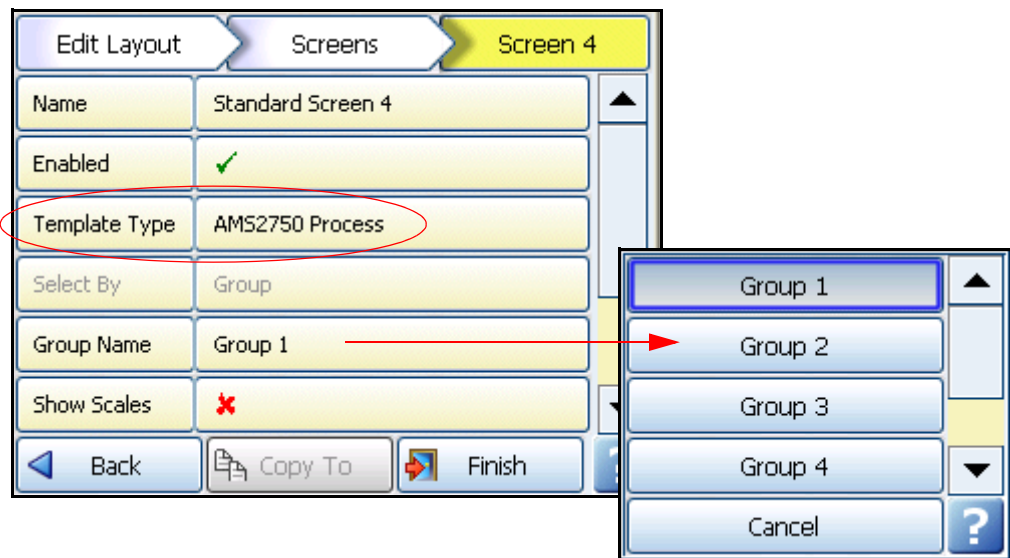

The screen has a group name selection where you can select the groups 1 to 6. This relates to the furnaces 1 to 6 as configured in [“I/O + AMS2750 \(Process Mode\)” on page 411](#), Furnace configuration menu.

NOTE: Pens must be assigned to the individual groups in the Group item in [“Pens Menu” on page 85](#).

For details on the complete Screen menu go to [“Screens” on page 167](#).


AMS2750 Process Screen

Process Screen details

When the AMS2750 Process screen first appears all the buttons are grey until the due dates are set. Select the button on the screen to set the due dates.

Use the Screen button at the top of the recorder screen to change the screens using the Next and Previous buttons.

AMS2750 Process mode

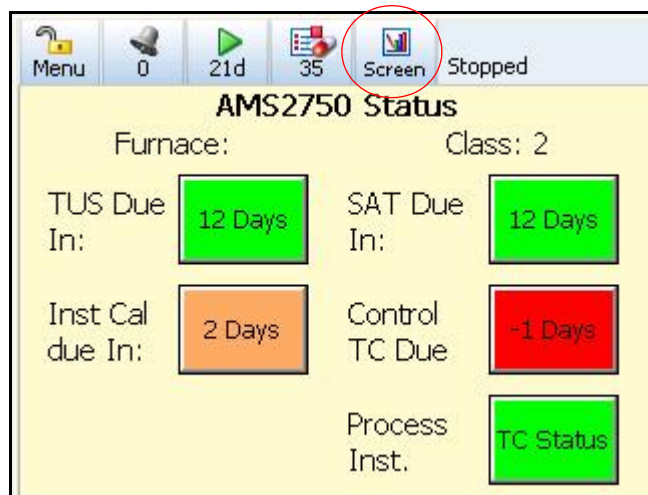

Example of a Process screen on a **Minitrend GR** or **eZtrend GR** recorder.

AMS2750 Process screen. Shows countdown timers that can be set manually by the user.

Green - TC is over 5 days from expiry

Amber - TC's is 0 to 5 days from expiry


Red - TC's has expired.

Select the on screen buttons to set the countdown timers for each timer individually and follow the on screen instructions.

The AMS2750 process screen for the recorder will display the countdown timers for the SAT, TUS, Instrument Calibration and the Control Thermocouple calibration. The number of days remaining are displayed on a colour coded button.

The furnace name and the furnace class is also displayed

AMS2750 Process mode

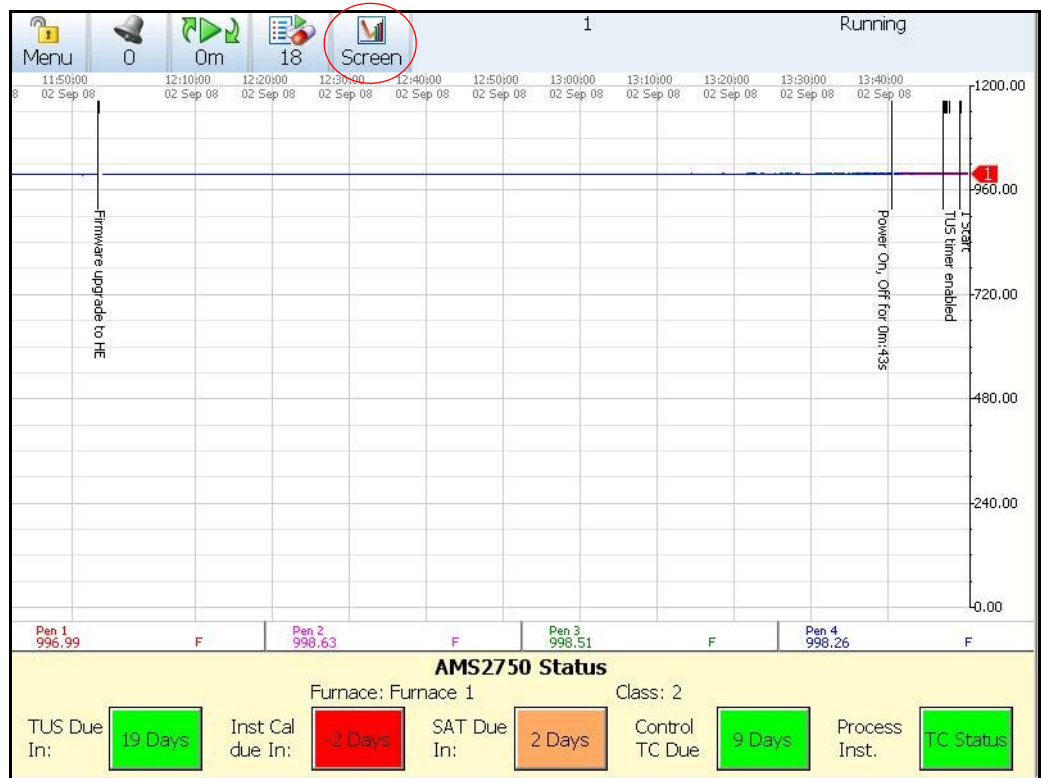

Example of a process screen on an **SX** recorder

Countdown Timers

SAT, TUS, Control TUS Sensor and Instrument calibration timers

When a SAT, TUS, Instrument Cal or Control TUS Sensor button is pressed you may be asked to enter user name and password if this function is enabled. See ["Passwords \(AMS2750\)" on page 459](#).

The timer reset screen is displayed that shows the next suggested date for SAT and TUS depending on Furnace class, material and instrumentation type, or provide a date 1 month in the future for Control TUS Sensor or Instrument calibration.

The SAT, TUS, Control TUS Sensor and Instrument Cal timers are separately implemented within a class, where there is one instance per group/furnace (6 in total).

Each timer has a date to expiry, the date is initially set to zero, this indicates that the relevant timer is not required – or has not yet been used.

A timer processing class coordinates the class instances for the thermocouple usage timers and the individual TUS, SAT, Control TUS Sensor and Instrument Cal Countdown Timers.

The timer can be disabled, by clearing the timer to zero; it will then be shown as unused.

TUS Due In: SAT Due In:

The TUS and SAT countdown timers track the next date for survey/test and displays this information on the AMS2750 process screen. The user is alerted when these timers are about to expire.

AMS2750 Process mode

SAT Timer Reset

Please enter the date for the next SAT. The suggested date for Furnace 1 based on its class, instrument type and last SAT date is 09 Oct 2008. Enter the new date to change it and use OK to confirm or Cancel to exit. You may also enable/disable this timer

SAT date

2	Oct	2008
---	-----	------

Disable	✓	✗
---------	---	---

When a SAT timer is reset a message is posted to the system message queue. When a SAT timer enters a warning period or expires a message will be posted to the system message list. Upon expiry for SAT or TUS, the recorder displays non-compliance and logs a message to the system message list.

You can reset the date/time for SAT or TUS, providing another new target time/date for the timers. Upon reset a message is logged into the system message list. This is password protected for tracking. See [“Passwords \(AMS2750\)” on page 459](#).

SAT interval timer

The SAT timer is based on tables found in AMS2750 that are dependent on Furnace class, Instrument type and if it is a parts or raw material furnace.

Instrument Cal. Due In:

A countdown timer provides a countdown to the next instrument calibration. This can be changed by selecting this button and changing the date using the on screen date selection. This will reset the next instrument calibration date.

Instrument Cal. Timer Reset

Please enter the date for the next Instrument Cal.. Enter the new date to change it and use OK to confirm or Cancel to exit. You may also enable/disable this timer.

Instrument Cal. date

17	Sept	2008
----	------	------

Disable	✓	✗
---------	---	---

AMS2750 Process mode

The user can change the date and select OK, this will reset the timer to countdown to the new date.

The button marked with the “X” will simply return the user to the process screen with the countdown timer unchanged.

The disabled button will set the timer to an “Unused” state by setting the time to 0. The timer will then be displayed as Unused with a grey button. To re-enable the button is pressed and a date entered and OK selected.

Control TUS Sensor due:

A countdown timer provides a countdown to the next control TUS Sensor calibration. This can be changed by selecting this button and changing the date using the on screen date selection. This will reset the next control thermocouple calibration date.

Process Inst.:

Displays status of the thermocouple usage tracking, this shows the rolled up status for all TUS Sensor being tracked, the colour of the box determines the state of the TUS Sensor closest to expiry. If the user presses the TUS Sensor Status button this goes directly to the TUS Sensor tracking status screen. [See “Thermocouple Usage” on page 418.](#)

Note – this button shows the status for ALL thermocouples being monitored for usage in the system not just for group being displayed.

Timer Reset

When a SAT, TUS, Instrument Cal or Control TUS Sensor button is pressed you may be asked to enter a user name and password if enabled. [See “Passwords \(AMS2750\)” on page 459.](#)

The dialog box shows the next suggested date for SAT and TUS depending on Furnace class, material and instrumentation type, or provides a date 1 month in the future for Control TUS Sensor or Instrument calibration.

SAT

System Accuracy Tests (SAT)

AMS2750 - defines what equipment requires SAT, the frequency, waiver conditions and the test procedure to use

Refer to the section on [“AMS2750 Process mode” on page 406](#) onwards for more details on SAT.

I/O + AMS2750 (Process Mode)


(Main Menu > Configure > Setup > Edit >)

Normally labelled Field IO, this button has been modified for AMS2750 configuration. All other analogue inputs are not affected. This menu includes:

[“Furnace Configuration Menu \(Process Mode\)” on page 413 \(AMS2750 button\)](#)

[“Sensors Configuration Menu \(Process Mode\)” on page 414](#)

AMS2750 Process mode

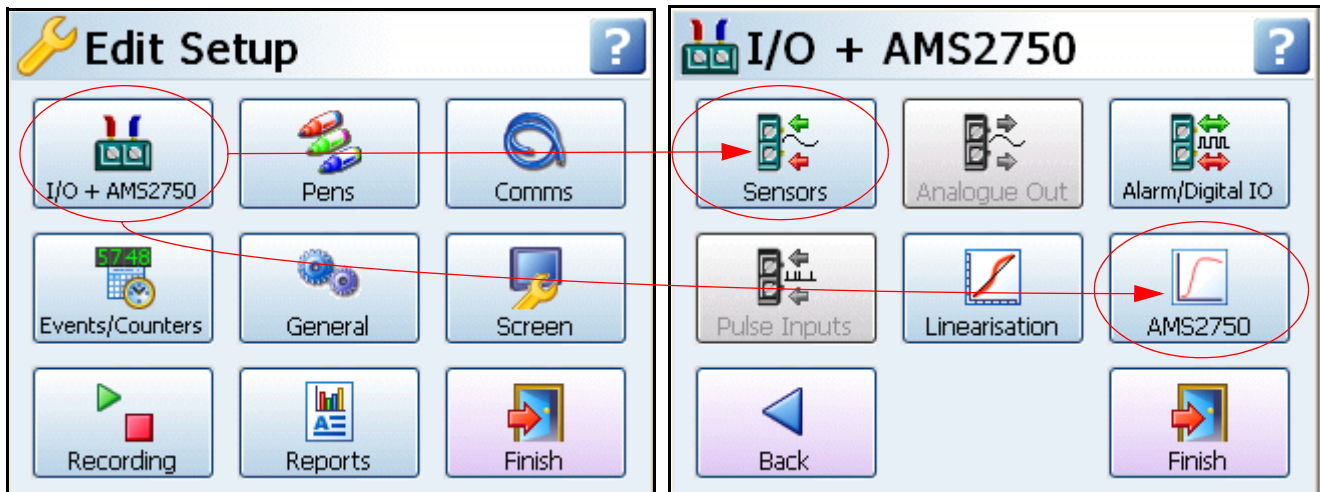

AMS2750 Button (Process Mode)

(Main Menu > Configure > Setup > Edit > I/O + AMS2750)

This button produces the Furnace Configuration Menus

Furnace Configuration Menu (Process Mode)

(Main Menu > Configure > Setup > Edit > I/O + AMS2750)

Refer to AMS2750.

The left screenshot shows the 'AMS2750' menu with a list of six furnaces (Furnace 1 to Furnace 6). The right screenshot shows the 'Furnace 1' configuration menu with fields for Name, Manufacturer, Model No., Class Mat., Mat. Type, and Inst. Type. A red arrow points from 'Furnace 1' in the left menu to the 'Furnace 1' configuration menu on the right.

Up to 6 furnaces or ovens can be configured and fed into one recorder. Furnaces 1 to 6 relate directly to Groups 1 to 6 configured in [“AMS2750 Process Menu” on page 407](#). Select each furnace in turn and configure as required.

- **Name** - Name or tag used to identify this furnace. 39 characters of Alphanumeric.
- **Manufacturer** - Enter the manufacturer of the furnace.
- **Model Number** - Unique Model or Serial number of this furnace. 19 characters Alphanumeric
- **Class** - Enter the Furnace class, 1 to 6 numeric
- **Mat. Type** - Enter the type of material or load, Parts or Raw material furnace
- **Instrument Type** - (A to F) Refer to AMS2750.
- **Into cycle at** - used to define a temperature cycle for a certain number of uses. When the furnace has reached the high temperature set here and then falls below the Low temperature set in the menu below, this is a complete temperature cycle.
Eg. Into cycle is set to 110 (can go higher) in use, once it drops back to the Out of cycle set eg. Out of cycle is set to 90, the cycle is complete.
- **Out of cycle at** - Set Out of cycle as explained above in Into Cycle.

When all the furnace details are complete, select Finish and Commit.

AMS2750 Process mode

Sensors Button

(Main Menu > Configure > Setup > Edit > I/O + AMS2750)

This button produces the Sensor Configuration Menus


Sensors Configuration Menu (Process Mode)

(Main Menu > Configure > Setup > Edit > I/O + Sensors)

Refer to AMS2750 for TC Sensor information.

NOTE: As per AMS2750 Standard the Noble metals T/C's (R,S & B) and RTD do not require tracking of the number of uses but do require Tracking Calibration, see [page 416](#). The Track Usage will not be available in the menu for these types of TC Sensor.

The number of sensors available depends on the hardware fitted in the recorder.

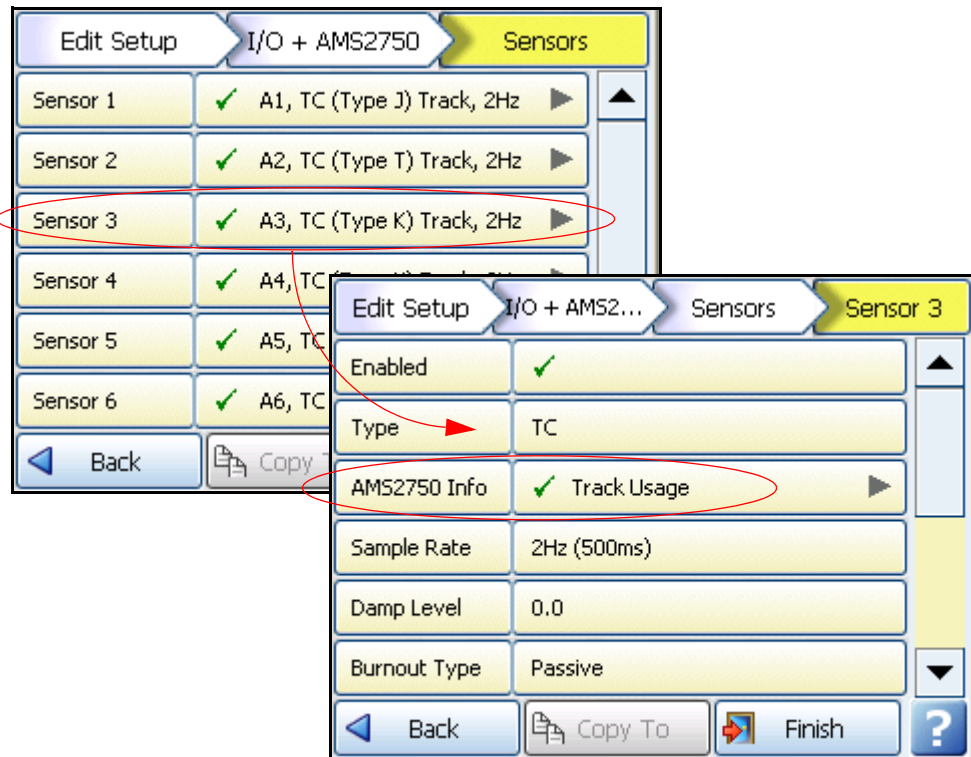

Select a Sensor

- **Enabled** - Toggle On and Off.
- **Type** - Select this for a list of available Signal Inputs.
- **AMS2750 Info** - See [“AMS2750 Info \(Process Mode\)” on page 416](#).
- **Sample Rate** - Select this for a list of available Analogue Input sample speeds. A Fast Scanning range of 50Hz (20ms) is available as a firmware option (not available for the **eZtrend GR** recorder). See [“Firmware Credit System” on page 253](#). Arranged in 2 banks of 3 inputs, and sample rate must be the same within each bank, only for **eZtrend GR** recorder.

AMS2750 Process mode

- **Damp Level** - The damping filter is an advanced algorithm offering improved response over more traditional methods. It works by producing configurable levels of damping - but at the same time being able to respond rapidly to large input changes. Enter the Damp Level in Engineering Units.
- **Burnout Type** - Only available when Type is set to TC (Thermocouple). Toggle between Active and Passive. Active means it will send out a current to the TC. Set to Passive means it takes a reading without sending out a current. The T/C is wired differently for Active and Passive Burnout (see [Figure 2.22 Input signal wiring](#), on page 33). (Active Burnout is not available for the **eZtrend GR** recorder).

Active Burnout checks the health of the thermocouples every 30 seconds, if your process requires continuous check of the thermocouples to see if they are in burnout you should use Passive Burnout. Active burnout is an implementation of thermocouple health and provides error warning messages for a range of thermocouple activity/failure conditions. Passive burnout does not provide any error warning messages.

If the thermocouple wiring changes and the channel is set to Active, select Passive and Commit the change. Then return to the menu and select Active and Commit the change to update burnout settings.
- **Show Burnout** - Only available when Type is set to TC. Toggle between Upscale and Downscale Burnout.
- **TC Type** - Only available when Type is set to TC. Select this for a list of available TC types.
- **CJ Comp** - Only available when Type is set to TC. Select this for a list of available CJ Compensation. See ["Thermocouple CJC Compensation"](#) on page 364.
 - **Int Automatic** - Uses the cold junction sensor in the recorder as a variable reference temperature
 - **Ext 0 Deg C** - Assumes the cold junction is held at 0°C to provide a 0mV reference, external to the recorder
 - **Ext with Spec Temp** - Uses a reference junction held at a constant temperature. Specify the temperature that the cold junction sensor is to be set at.
 - **Ext Input** - Use a thermocouple or resistance thermometer from another channel to measure the cold junction sensor
- **Units** - (Ohms, Volts and Amps only). This is the Units of Measurement for each input. Select and enter a value. Max 13 characters. For Thermocouple and Resistance Thermometer units, see ["Localisation"](#) on page 146.
- **Label** - Select and enter a identification label for the input. Select and enter a label. Max 15 characters.
- **Sensor Comp** - Sensor Compensation may be required to improve accuracy on a sub range. This is an adjustment to the value of the signal input on each channel, based on the Engineering units settings. Choose from Single Point, Dual Point or Multi Point Cal, see ["Sensor Compensation"](#) on page 377

AMS2750 Process mode

AMS2750 Info (Process Mode)

(Main Menu > Configure > Setup > Edit > I/O + Sensors > AMS2750 Info)

The items in this menu are different depending on if the recorder is in Process mode or TUS mode. In Process mode this menu is used to track the usage of each sensor. For TUS mode, see [“AMS2750 Info \(TUS Mode\)” on page 427](#).

The left screenshot shows the 'Sensor 1' configuration screen. The 'AMS2750 Info' option is circled in red. The right screenshot shows the 'AMS2750 Info' sub-menu. The 'Track Usage' option is highlighted by a red arrow.

Sensor 1	
Enabled	✓
Type	TC
AMS2750 Info	✓ TUS Sensor/Track Usage
Sample Rate	10Hz (100ms)
Damp Level	0.0
Burnout Type	Passive
Show Burnout	Upscale
TC Type	Type M
CJ Comp.	Int Automatic

AMS2750 Info	
TUS Sensor	✓
Control Sensor	✗
Track Usage	✓
Serial No.	1
Position	1
Manufacturer	HTS-TC
Type	Non-expendable
Renewed On	7/12/2021
Track Cal.	✓

This menu shows Track Usage for a recorder in Process mode.

- **Track Usage** - Check this if you wish to track the usage of this TUS Sensor.
- **Type** - expendable (Designed for a single use; not reusable), non-expendable thermocouple (Designed for more than one use, refer to AMS2750 spec.). Number of uses, usually 0, this is overridden to allow reuse of salvaged thermocouples, this is clearly logged.
- **Renewed On** - Enter a date using the date selection screen for when the sensor was last renewed. i.e. the current TUS Sensor was connected on this date.
- **Track Cal.** - Check this to track the calibration information of this sensor.
- **Next Cal. Date** - Enter a date using the date selection screen for when the next calibration is due for renewal.
- **Cal. Adjust** - Cal adjust for each TUS Sensor up to 9 cal points. Extrapolates between those points. Calibration adjustments can be added and deleted, by selecting Add or delete. In the Cal. Point (Deg C) column use the touch screen and the on-screen keypad to enter the calibration point value. In the Correction (Deg C) column enter the amount by which the sensor can be allowed + or - from the Cal point, in degrees C, before being regarded as out of calibration. EG. cal point 1 = 100 (-5), cal point 2 = 300 (1.0), cal point 3 = 500 (-.75). Looks for the setpoint = 150 and works out the sensor cal for 150. See [“TUS Sensor Usage Tracking \(AMS2750\)” on page 418](#).
- **Copy Cal. Adjust** - the ability to copy settings from one input to another. See [page 428](#)
- **Cert. No.** - enter the certificate number for the sensor.

Pens for TUS Sensor (Process Mode)

Set up and configure pens to display the readings for each thermocouple.

Pens can be allocated to a Group with other pens to display information. Pens are required to be put into a group and then the group # is selected in the Screen menu and displayed on the Process screen. [See “Pens Menu” on page 85](#). To run reports pens must be in a group.

Up to 6 groups of pens can be created. The screen has a group name selection where you can select the groups 1 to 6. [See “AMS2750 Process Menu” on page 407](#).

Groups 1 to 6 relate directly to furnaces 1 to 6 as configured in “I/O + AMS2750 (Process Mode)” [on page 411](#), Furnace configuration menu.

TUS Sensor Calibration Adjustments

If a thermocouple has been calibrated, the calibration points can be added to the additional TUS info for each sensor, the calibration will then be added to the existing single or dual point cal (Instrument cal)>, under process conditions and the relevant corrections for each soak extracted into the report.

The tables can contain just a single entry, effectively acting as a single point calibration and will be applied across the whole range.

A total of 9 points are available allowing you to specify 1 to 9 calibration points and the sensor correction from that cal point. e.g. cal point 300 deg C, correction = 0.6. This would add a 0.6 degree C correction at 300 degrees C.

Ins./Del	Cal. Point (Deg C)	Correction (Deg C)
1	50.0	0.2
2	150.0	0.4
3	300.0	0.6
Add	✓	✗

If only one cal point is entered then it will be taken as a single point cal and that correction applied across the whole range.

If two or more points are added, then a reference table will be generated, this will use the standard reference table functionality currently within **GR Series** and apply that to the signal.

All thermocouple calibration adjustments will be performed after the existing single or dual cal has been applied to the signal.

TUS Sensor Usage Tracking (AMS2750)

(Main menu > Status > TC Usage)

TUS Sensor Usage Tracking is available with both TUS and Process options.

It provides a means to track the usage of TUS Sensor within the recorder when being used as a process instrument. This gives an indication to when thermocouples need replacing dependent on load cycles and other factors specified in AMS2750.

TUS Sensor usage tracking is shown as a status screen within the recorder. It shows the current status of the thermocouple within the furnace in process mode.

A TUS Sensor has to be configured to be tracked for either calibration or usage within the sensor configuration.


If a thermocouple is set to be tracked but has no expiry or recalibration requirement, the number of days in use will be shown as opposed to a countdown till expiry.

Up to 16 sensor status buttons will be displayed on a **DR Graphic & Minitrend GR**, or **eZtrend GR** and 24 on an **Multitrend GR**. If more sensors are available than fit on a single page then the "Next" button will be available and will show the remainder of the sensors.

To activate a TUS Sensor to be tracked, see ["AMS2750 Info \(Process Mode\)" on page 416](#)

or ["AMS2750 Info \(TUS Mode\)" on page 427](#).

Figure 25.1 Thermocouple Usage

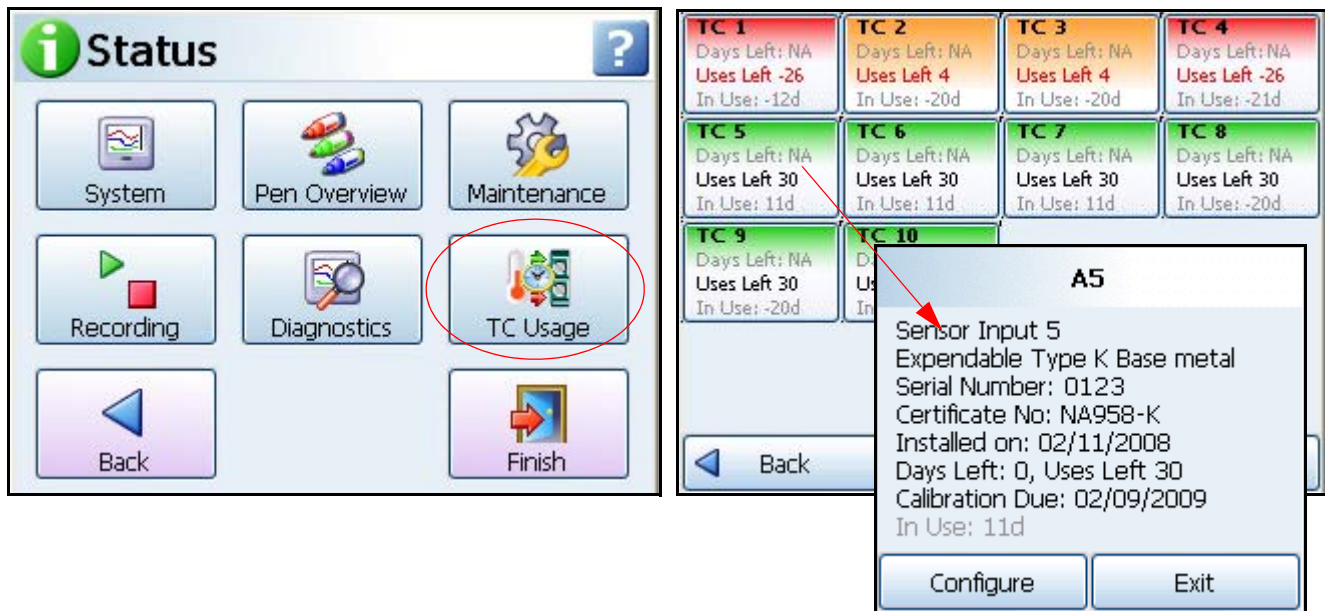

The status for each sensor is shown as a status button, and shows the following top level information.

- Sensor Input/Thermocouple ID
- Overall health – Green = TUS Sensor is over 5 days from expiry, Amber = TUS Sensor is 0 to 5 days from expiry, Red = TUS Sensor has expired.

AMS2750 Process mode

- Countdown in uses/days to end of life - days left, Uses left and how long the TC has been in use.

By selecting a sensor a dialog box appears showing more information and also providing a configure button for the sensor. The additional information is as follows and as shown above.


- Type of TUS Sensor - Expendable or Non-expendable, and metal type
- Serial Number - unique to that TUS Sensor
- Certificate No. - of sensor
- Installed on - the date when the current TUS Sensor was connected
- Calibration on - the date when the TUS Sensor was last calibrated.

Select the Configure button to take a short cut to the Sensors menu (*Main Menu > Configure > Setup > Edit > I/O AMS2750 > Sensors*). You can access the thermocouple and change the details for the newly connected replacement TUS Sensor. When a thermocouple is reset a message is added to the system message list to indicate a reset.

User alert system to display when a TUS Sensor is reaching end of life, and when one or more have reached end of life.

The colour coding for the TUS Sensor Status button on the Process screen are as follows:

- Green - TUS Sensor is over 5 days from expiry
- Amber - TUS Sensor is 0 to 5 days from expiry
- Red - TUS Sensor has expired.

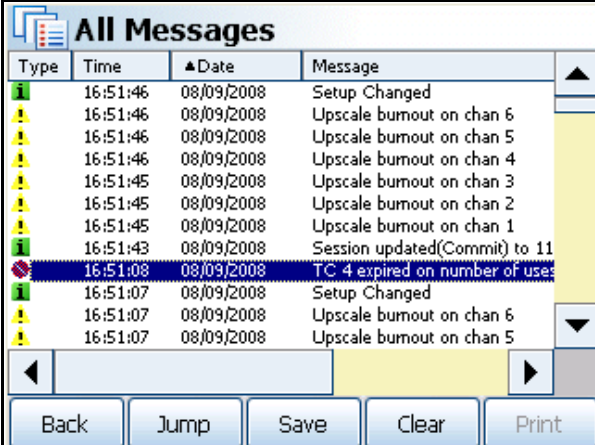

Type	Time	▲Date	Message
i	16:51:46	08/09/2008	Setup Changed
!	16:51:46	08/09/2008	Upscale burnout on chan 6
!	16:51:46	08/09/2008	Upscale burnout on chan 5
!	16:51:46	08/09/2008	Upscale burnout on chan 4
!	16:51:45	08/09/2008	Upscale burnout on chan 3
!	16:51:45	08/09/2008	Upscale burnout on chan 2
!	16:51:45	08/09/2008	Upscale burnout on chan 1
i	16:51:43	08/09/2008	Session updated(Commit) to 11
i	16:51:08	08/09/2008	TC 4 expired on number of uses
i	16:51:07	08/09/2008	Setup Changed
!	16:51:07	08/09/2008	Upscale burnout on chan 6
!	16:51:07	08/09/2008	Upscale burnout on chan 5

When the end of life of a TUS Sensor is reached a message is added to the system message list to indicate a thermocouple has reached end of life, for each TUS Sensor and RDT.

When the recorder is in AMS2750 process mode as an option in the credit menu, you cannot select the "Track Usage" option for B, R, S or RDT type TUS Sensor.

Per AMS2750 these are considered noble metal thermocouples and should be tracked based on when they require recalibration and not based on uses. The other types of thermocouples can be selected for the "track usage" function but the B, R or S types greyed out and cannot be selected.

TUS mode

Temperature Uniformity Survey (TUS) Mode

The Temperature Uniformity Survey (TUS) is a key requirement for a Nadcap audit. The basic test is to determine how well a furnace performs relative to its design. In particular the uniformity of the temperature within the volume of the working area of the furnace compared to the programmed setpoint.

There are 6 classes of Furnace (Class 1 to 6) based on how well they maintain the temperature within the furnace working area, with class 1 being the tightest and Class 6 the least stringent.

The TUS is performed on a regular basis to insure the furnace continues to meet the uniformity that is defined by the process procedures and the requirements for heat treating a particular part or material. Refer to AMS2750 spec

The TUS also involves the soak time and the amount of temperature overshoot observed (if any).

Another key factor in the heat treatment process is monitoring the number of times the TUS Sensor have been used and the temperatures they have been exposed too to insure they are accurate and reliable.

This type of capability for doing uniformity surveys and documenting the results has been added to the **DR Graphic & Multitrend GR** recorder and provides an easy to use and understand TUS process screen along with a PC analysis software.

Temperature uniformity survey (TUS) mode can be performed using an **DR Graphic & Multitrend GR** recorder that is configured to be used as a TUS test instrument. The **DR Graphic & Multitrend GR** recorder provides a custom display for the user and outputs a custom data set enabling the AMS2750 Report Generation Tool to produce a TUS report. This is a dedicated mode especially for TUS surveys and is only available on the **DR Graphic & Multitrend GR** recorder.

TUS mode on the **DR Graphic & Multitrend GR** recorder is intended to operate as a stand alone piece of test equipment.

A total of 40 sensors can be monitored and the data incorporated into a single report by the **Multitrend GR** recorder. These are consecutive pens from 1 to 40, on a 9 sensors system this assumes the pens are 1 to 9 and map directly to analogue inputs 1 to 9.

The probing method for a TUS survey (AMS2750) is supported using MODBUS master within the **DR Graphic & Multitrend GR** recorder performing the TUS, retrieving the additional information via MODBUS from compatible controller/recorder instruments.

TUS mode is selectable using a specific option in the credits system.

TUS mode

AMS2750 (TUS) - Credit Option

(Main Menu select Configure > Setup > Edit > General > Factory > Credits > Options).

AMS2750 TUS Mode is available as a credit option, this allows the specification of the AMS2750 modes. To activate credit options [“Options” on page 206](#).

AMS2750 TUS Mode requires 10 credits to be enabled. If more credits are required please contact **Honeywell**.

Option	Credits	Status
Counters (3)		✓
Modbus Master (10)		✗
Remote View (3)		✓
Email (3)		✓
OPC (8)		✓
Pw Net Sync (5)		✗
AMS2750 Process (5)		✗
AMS2750 TUS (10)		✓
Extra Pens (3)	6	

Navigation buttons: Back, Copy To, Finish, ?

AMS2750 TUS option enables the recorder to carry out TUS, this also enables the TUS Sensor usage tracking. TUS is **ONLY** available on the **DR Graphic & Multitrend GR** recorder, and is not provided on the **Minitrend GR** and **eZtrend GR** models.


Scroll down the menu and select: AMS2750 TUS

AMS2750 Process and AMS2750 TUS options are mutually exclusive.

AMS2750 (TUS) Screen

To enable the AMS2750 TUS screen go from the *Main Menu > Screen > Edit > Screens* (or *Main Menu > Configure > Layout > Edit > Screens*).

The next available screen will default to AMS2750 TUS when this option is selected in the credits. This TUS screen is fixed to that screen number and cannot be changed to another screen type unless the credit option is disabled.

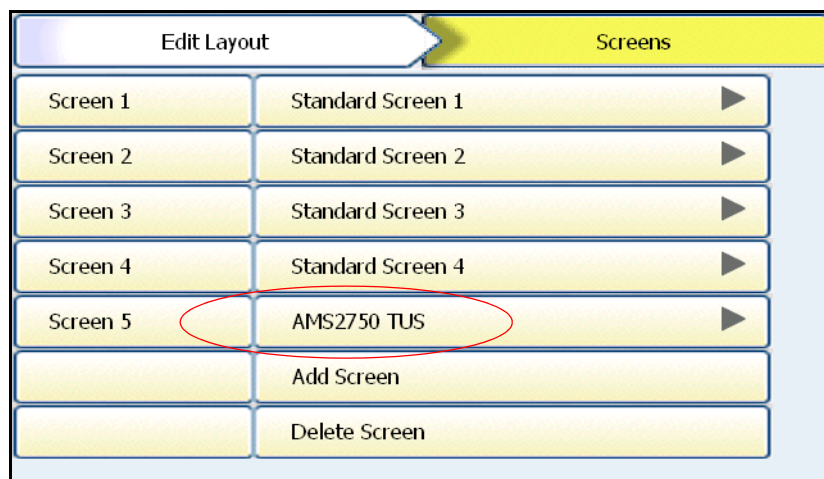

For complete details of the Screen menu go to [“Screens” on page 167](#).

Use the Screen button at the top of the recorder screen to change the screens using the Next and Previous buttons


I/O + AMS2750 (TUS)

(*Main Menu > Configure > Setup > Edit >*)

Normally labelled Field IO, this button has been modified for AMS2750 configuration. All other analogue inputs are not affected. This menu includes:

[“Furnace Configuration Menu \(TUS\)” on page 424 \(AMS2750 button\)](#)

[“Sensor Configuration Menu \(TUS\)” on page 427](#)

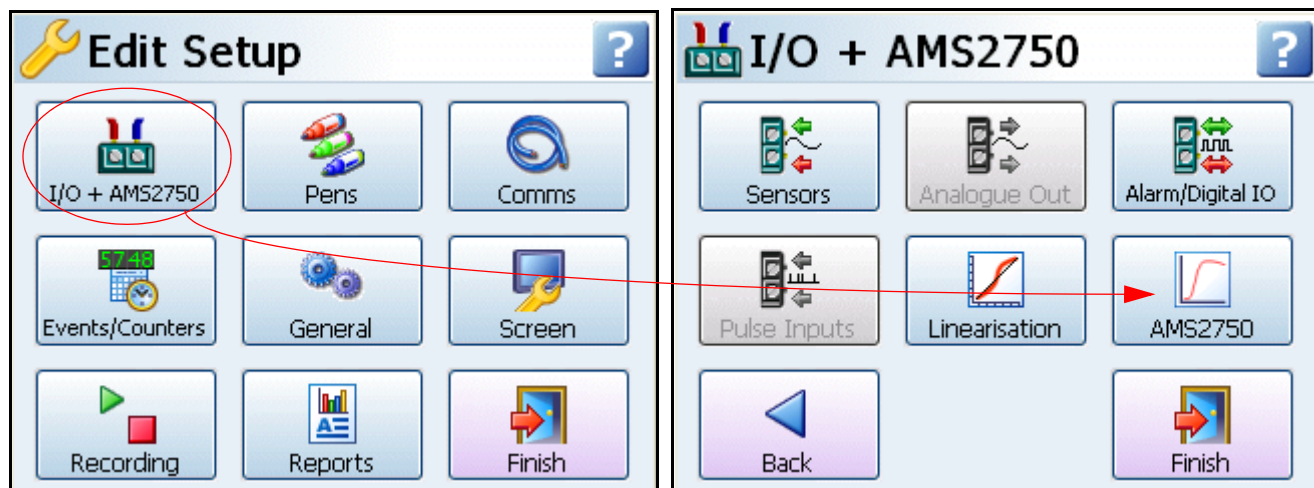

TUS mode

AMS2750 Menu (TUS)

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > AMS2750)

Each configuration requires TUS specific entries, these are as follows

Ramp and soak configuration, there are up to six ramp and soak settings available, these specify the different soak temperatures required for the TUS.

Timers, the timers associated with the TUS soak and ramp detection can be adjusted to suit the user.

The tolerance/hysteresis of the soak stability detection can be adjusted to suite the user, this defines how stability is determined in the soak.

- [“Furnace #” on page 424](#)
- [“Stability Detect” on page 425](#)
- [“Setpoint #” on page 426](#)

Edit Setup	I/O + AMS2750	AMS2750
Furnace 1	Grahams Parts Oven	▶
Stability Detect	✓ Timer Enable/Auto Enable	▶
Setpoint 1	✗ 150.0 Deg C	▶
Setpoint 2	✗ 300.0 Deg C	▶
Setpoint 3	✗ 500.0 Deg C	▶
Setpoint 4	✗ 750.0 Deg C	▶
Setpoint 5	✗ 1100.0 Deg C	▶
Setpoint 6	✗ 1300.0 Deg C	▶

 Back  Copy To  Finish 

TUS mode

Furnace Configuration Menu (TUS)

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > AMS2750 >Furnace #)

Refer to AMS2750.

Furnace #

Edit Setup	I/O + AMS2750	AMS2750	Furnace 1
Name	Grahams Parts Oven		<div style="display: flex; align-items: center;"> <div style="margin-bottom: 10px;">▲</div> <div style="flex-grow: 1; border-left: 1px solid black; border-right: 1px solid black; border-bottom: 1px solid black; position: relative;"> <div style="position: absolute; top: -10px; right: 0; width: 100%; height: 100%; background: linear-gradient(to bottom, transparent 49%, #ccc 49%, #ccc 51%, transparent 51%); background-size: 2px 100%;"></div> </div> <div style="margin-top: 10px;">▼</div> </div>
Manufacturer	Joe Bloggs		
Model No.	XRH56748		
Class	2		
Mat. Type	Parts		
Shape	Rectangular		
Meas. Units	Metres		
Height	8.0 Metres		
Width	5.0 Metres		
◀ Back	Copy To	Finish	?

A number of parameters are needed for each furnace requiring a TUS, they are stored in a furnace configuration within the setup and are as follows

- **Name** - Name or tag used to identify this furnace. 39 characters of Alphanumeric.
- **Manufacturer** - Enter the manufacturer of the furnace.
- **Model Number** - Unique Model or Serial number of this furnace. 19 characters Alpha-numeric
- **Class** - Enter the Furnace class, 1 to 6 numeric
- **Mat. Type** - Enter the type of material or load, Parts or Raw material furnace
- **Shape** - Furnace shape, rectangular, cylindrical or other
- **Meas. Units** - Furnace measurement units (Metres, millimetres, feet or inches)
- **Height** - Furnace height dependent on shape
- **Width** - Furnace width dependent on shape
- **Depth** - Furnace depth dependent on shape

Note: these are the dimensions for the qualified working area

- **Inst. Type** - Instrument Type (A to F) Refer to AMS2750.

TUS mode

- **Into cycle at** - used to define a temperature cycle for a certain number of uses. When the furnace has reached the high temperature set here and then falls below the Low temperature set in the menu below, this is a complete temperature cycle. Eg. Into cycle is set to 110 (can go higher) in use, once it drops back to the Out of cycle set eg. Out of cycle is set to 90, the cycle is complete.
- **Out of cycle at** - Set Out of cycle as explained above in Into Cycle.

When all the details are complete, select Finish and Commit, or go Back to Stability Detect and setpoint menus.

Stability Detect

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > AMS2750 > Stability Detect)

During the TUS the recorder starts to monitor all sensors for stability, all sensors must remain stable for a minimum of 2 minutes in order to progress to "in soak, in stability" mode. no TC's can drift by more than "X" degrees within a 2 minute period for stability to be achieved" (X defaults to 0.5 Deg C) [See "During survey" on page 450.](#)

This time is determined by how you set up the stability parameters whether you base it on time or the degree (temperature) variation

The tolerance/hysteresis of the soak stability detection can be adjusted to suite the user, this defines how stability is determined in the soak.

Stability detect is measured in 3 ways.

1. Timeout, see below
2. Automated detection, see below
3. Manual stability, the user can determine when stability has been achieved and can use the manual override button on the TUS screen to register stability.

Edit Setup	I/O + AMS2750	AMS2750	Stability Detect
Timer Enable	✓		
Time	10 Mins.		
Auto Enable	✓		
Degree Change	0.5 Deg C		

- **Timer Enable** - Default is off. Check this to enable the Stability Detect Timer
- **Time** - (default 10 mins). Timer based stability, the system will be deemed stable after the defined period of time that all TUS Sensor remain within tolerance from the point at which they all enter the soak band.
- **Auto Enable** - Default is off. Automatic stability, Stability will deemed to be achieved when all TUS Sensor are within tolerance band required for soak for class and no TUS Sensor continues to change in temperature by more than a user defined degree step between readings.
- **Degree Change** - This becomes enabled when Auto Enable is activated. Default is 0.5 degree over 2 mins, looks for an amount of temperature drift on any TUS Sensor.

When all the details are complete, select Finish and Commit, or go Back to Furnace or Setpoint menus.

TUS mode

Setpoint

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > AMS2750 > Setpoint)

The configured setpoint or soak level, this is the level configured for each thermocouple configuration as per AMS2750. Up to 6 setpoints can be configured individually as a part of a single survey. The setpoints must be done in an increasingly progressive order.

Edit Setup	I/O + AMS2750	AMS2750	Setpoint 1
Enabled	✓		
Setpoint	150.0 Deg C		
Stable Soak Time	30 Mins.		
Tolerance Override	✓		
Tolerance	2.0 Deg C		

- **Enabled** - Default is off. Check to enable.
- **Setpoint** - Enter the survey setpoint value as a temperature.
- **Stable Soak Time** - soak time for the actual survey period. Per AMS2750, the minimum survey soak time is 30 minutes.
- **Tolerance Override** - Check to enable. This will become the working tolerance for the soak in the TUS as opposed to the tolerance for the class.
- **Tolerance** - set a tolerance override temp value.

When all the details are complete, select Finish and Commit, or go Back to the Furnace or Stability Detect menus.

TUS mode

Sensor Configuration Menu (TUS)

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > Sensors)

Refer to AMS2750, section 3.1 and Table 1, and Table 2 for TUS Sensor information.

The number of sensors available depends on the hardware fitted in the recorder.

The menu configuration is the same as [“Sensors Configuration Menu \(Process Mode\)” on page 414](#)

Sensor

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > Sensors > Sensor #)

The menu configuration is the same as [“Sensors Configuration Menu \(Process Mode\)” on page 414](#) except for the AMS2750 Info menu.

AMS2750 Info (TUS Mode)

(Main Menu > Configure > Setup > Edit > I/O + AMS2750 > Sensors > Sensor # > AMS2750 Info)

In TUS mode (DR Graphic & Multitrend GR recorders only) each sensor requires additional information, this information is stored separately to the recorder configuration allowing it to be reused for multiple furnaces (or recorder configurations)

Edit Setup	I/O + AMS2750	Sensors	Sensor 1	AMS2750 Info
TUS Sensor	✓			▲
Control Sensor	✗			
Track Usage	✓			
Serial No.	1			
Position	1			
Manufacturer	HTS-TC			
Type	Non-expendable			
Renewed On	7/12/2021			
Track Cal.	✓			▼
Back	Copy Cal.	Finish	?	

TUS mode

- **TUS Sensor** - Check this to include this TUS Sensor in the TUS
- **Control TUS Sensor** - Depending on Instrument type refer to AMS2750 specification, section 3.3. If a TC is set to be "control TUS Sensor" i.e. the input is spliced into the control TUS Sensor, all functions will remain the same as for all other survey TUS Sensor, except there will be no calibration adjustments for the Control TUS Sensor.
- **Track Usage** - Check this if you wish to track the usage of this TUS Sensor.
- **Serial Number** - Batch or Serial number of this sensor, 40 Alphanumeric.
- **Position** - of thermocouple, enter the position of the sensor in the furnace.
Eg. Top left front or Bottom right back.
- **Manufacturer** - Enter the manufacturer of the sensor, 20 alphanumeric
- **Type** - expendable, non-expendable TUS Sensor. Number of uses, usually 0, this is overridden to allow reuse of salvaged thermocouples, this is clearly logged.
- **Renewed On** - Enter a date using the date selection screen for when the sensor was last renewed. i.e. the current TUS Sensor was connected on this date.
- **Track Cal.** - Check this to track the calibration information of this sensor.
- **Next Cal. Date** - Enter a date using the date selection screen for when the next calibration is due for renewal.
- **Cal. Adjust** - Cal adjust for each TUS Sensor up to 9 cal points. Extrapolates between those points. Calibration adjustments can be added and deleted, by selecting Add. In the Cal. Point (Deg C) column use the touch screen and the on-screen keypad to enter the calibration point value. In the Correction (Deg C) column enter the amount by which the sensor can be allowed + or - from the Cal point, in degrees C, before being regarded as out of calibration. EG. cal point 1 = 100 (-5), cal point 2 = 300 (1.0), cal point 3 = 500 (-.75). Looks for the setpoint = 150 and works out the sensor cal for 150. [See "TUS Sensor Usage Tracking \(AMS2750\)" on page 418.](#)
 - **Copy Cal. Adjust** - the ability to copy settings from one input to another with copy capability up to 12 TC survey with 9 TC Cal. Configure one channel completely including the adjust factors then select "Copy Cal Adjust" at the bottom of the screen.

Next Cal. Date	02/11/2010
Cal. Adjust	0 Points
Cert. No.	
Back	Copy Cal. Adjust Finish

When the "Copy Cal. Adjust" is pressed a multi selection screen is displayed which allows the choice of multiple channels to copy to. A channel is selected by touching the corresponding channel number, and when completed the user applies the changes by touching the tick, the finish & commit as usual.

Note that the source channel will always be blocked by a "no entry" sign as it is not possible to copy a channel to itself, as shown below. In this example channel one is being copied to channels 2 through 10.

This capability is available in both AMS2750 survey and process modes, and what is copied is listed below

TUS mode

Select Channels to Copy to:

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48		

Clear ✓ ✕

Each channel has a number of pieces of information that are used by the instrument and the generated survey report. The copy function does not just copy the Cal. Adjust-ment table, the following other items are copied

Table 25.1 :

TUS Mode	Process Mode
Track usage flag	Track usage flag
Serial number	
Manufacturer	
Type	Type
Renewed On date	Renewed On date
Track Cal flag	Track Cal flag
Next Cal date	Next Cal date
Cal. Adjust table in full	Cal. Adjust table in full
Certificate number	Certificate number

- **Cert. No.** - enter the certificate number for the sensor, 20 alphanumeric

Any sensor correction factor is deemed to be a single point cal, configured within the Analogue input configuration menu.

Note: All above information is copied from the source channel as is, and the user would need to go to each designation channel and adjust the specific information that would be different for the designation channels.

Pens for TUS Sensor (TUS Mode)

This is not available in TUS mode, available in Process mode only.

TUS mode


TUS survey process screen

A survey status screen is available as a standard process screen in the **DR Graphic & SX** recorder. it is available at all times and the screen cannot be deleted. See [“AMS2750 \(TUS\) Screen” on page 422.](#)

This screen is only available when TUS is selected in the credit system. See [“AMS2750 \(TUS\) - Credit Option” on page 421.](#)

The survey status screen displays information about the TUS and provides on-screen buttons to control the survey, Start/Stop TUS, Configure TUS and Export TUS.

Top panel - shows a summary of the survey details plus TUS operation buttons

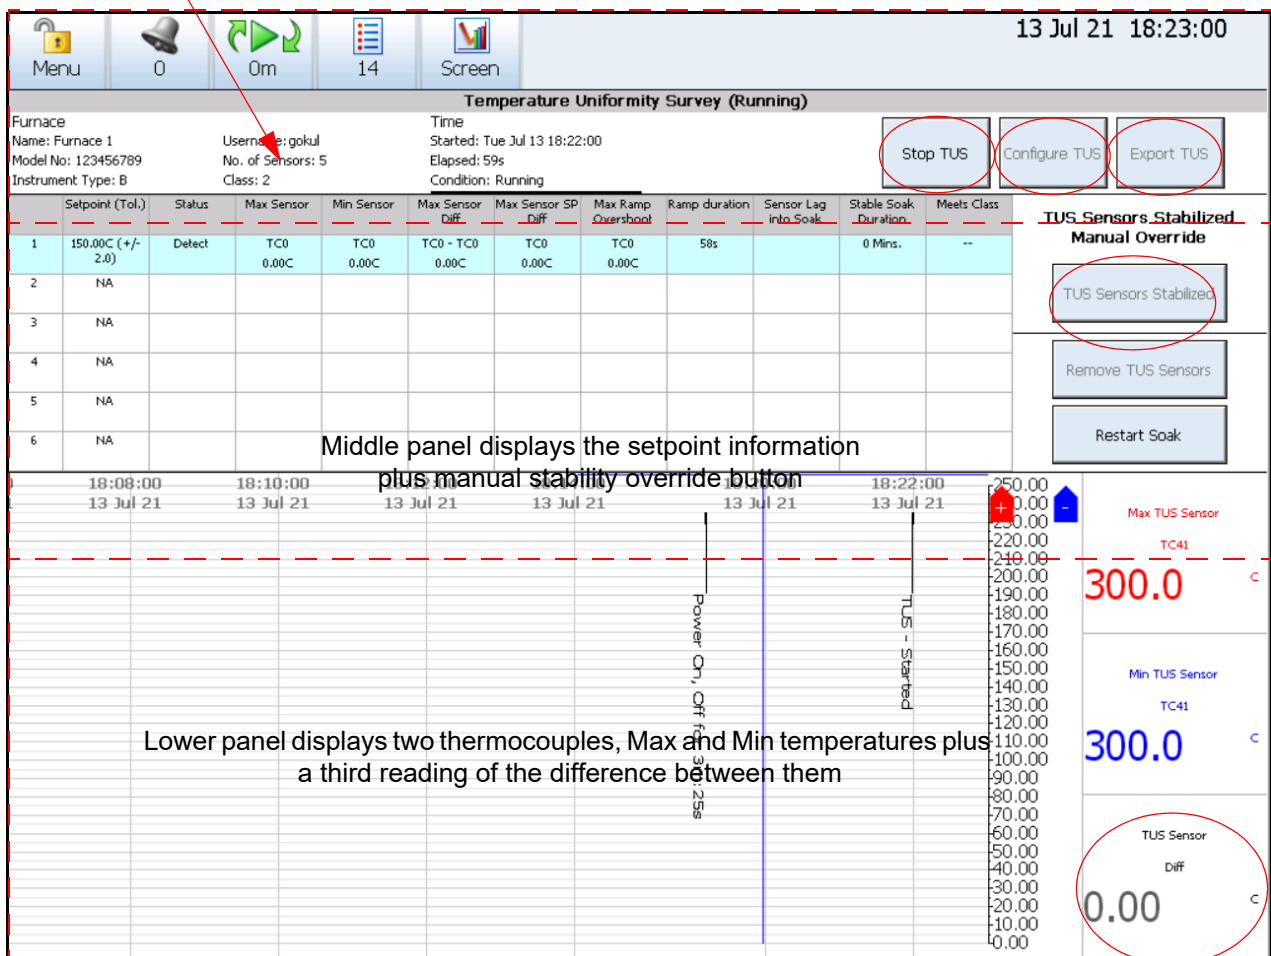

- See [“Top Panel” on page 431.](#)
- See [“TUS Survey Process screen - Middle panel” on page 434.](#)
- See [“TUS Survey Process screen - Lower panel” on page 436.](#)

Top Panel

The top panel shows a summary of the survey including the furnace details and TUS control buttons. All information displayed here has been entered in the [See “AMS2750 Menu \(TUS\)” on page 423](#).

Other information displayed includes: The start time is entered into the “started” field in the top panel and the elapsed timer shows how much time has passed since the survey was started, this will be updated within a 2 second period. The Condition field will display the status of running.

The Start/Stop button

This displays the configuration confirmation wizard, if accepted it starts the TUS running, see [“Configure Confirmation Wizard” on page 431](#). This is only available when a TUS is not running and can be password protected. See [“Passwords \(AMS2750\)” on page 459](#).

The Stop button is available when a TUS is running, it prompts the user for confirmation to stop the current TUS, this button is password protected.

When the TUS is started an event is triggered and a message is logged into the system events.

The Configure TUS button

The configure TUS button allows you to quickly check and modify the relevant TUS information before starting a TUS, this will not start the survey. It displays the TUS Configuration Confirmation wizard of which there are two screens. It is only available when a TUS is not running and is password protected.

The Export TUS button

The export button allows you to export the most recently completed TUS data file, and will prompt for a USB key, external SD card or Network Share folder (NAS) as follows. The .tus file can be loaded into a PC to be read by the AMS2750 Report Generation Tool which generates a full report.

Configure Confirmation Wizard

The “Start” and “Configure” buttons display the configuration confirmation wizard which displays the currently configured details and consists of two configuration screens.

- **Screen 1** of the wizard shows the furnace and temperature profile (ramps & soaks) details, allowing the user to edit the configuration or load a saved configuration. You can accept the details and progress or cancel out of the wizard at this point
- **Screen 2** of the wizard shows the sensor configuration, specifically the sensor ID, position and status. Changes can be made here to the sensor configuration, you can at this stage proceed or cancel the wizard.

You are prompted for additional notes as a free format text when starting a TUS.

This will display the currently configure furnace details and the target soak information for the TUS, the user has 4 options on this page.

TUS mode

TUS Configuration Confirmation		
Name	Furnace 1	
Manufacturer	HTS	
Model No.	1234	
Class	2	
Mat. Type	Parts	
Shape	Rectangular	
Height	5.00 Feet	
Width	5.00 Feet	
Depth	5.00 Feet	
Into cycle at	160.00 Deg C	
Out of cycle at	155.00 Deg C	

Name	Soak	Time
Setpoint 1	150.00 Deg C	30 Mins.

Load ConfigEdit ConfigCancelNext >

TUS Configuration - Screen 1

- **Load Config** - Configurations can be loaded via external media into the recorder manually, this will allow you to load in a new configuration to perform another furnace survey.
- **Edit Config** - will take you directly into a setup edit and into the AMS2750 configuration page to edit furnace and soak details, you can modify the details as required. Once completed you will be returned to the wizard page showing the newly loaded configuration details. Note – if a configuration is changed so that it requires system restart then you will not be returned to the same place in the wizard and any parked configurations will be over written.
- **Cancel** - will take you back to the TUS screen, but this will not cancel any changes made in the load or edit config options.
- **Next** - will move you onto the second page of the configuration confirmation wizard, this will provide an overview of the currently attached sensors included in the TUS and their status, the screen is as follows

Screen 2 shows the following information on the thermocouples

- **TUS Sensor Number** – the number relating to the analogue input for the thermocouple.
- **Position** – The text position of the sensor within the furnace.
- **Status** – the current status of the sensor with relation to the thermocouple tracking. The status will display “good” for a thermocouple whose usage or calibration is OK and not within an expiry period. “Warning” for a thermocouple whose status is OK but a calibration or usage is due to expire shortly, or “expired” for a thermocouple that has expired on either usage or calibration.

TUS mode

If a thermocouple is included in the TUS but has been set not to be tracked the status will be shown as “good”.

	Sensor No.	Position	Status
●	1	1	Good
●	9 (CTC)		Good
●	10		Good

Change Sensors Cancel Done

TUS Configuration - Screen 2

A coloured icon will be listed on the line of the TUS Sensor as a visual aid to identify issues quickly. The colours will be defined as Green for good, Amber for warning and Red for expired.

- **Change Sensors button** - will take you directly to the sensor status page for thermocouple usage, This helps to identify the exact issue relating to a thermocouple and take the appropriate action as described in the section TUS Sensor Usage status screen, see [“Thermocouple Usage Tracking \(AMS2750\)” on page 416](#). If none of the thermocouples have been configured to be included in the usage tracking then the “Change Sensors” button will be greyed out.
- **The Cancel button** - will simply cancel the dialog and return to the process screen, but this will not cancel any changes made in “change sensors” option.
- **The Done button** - will prompt the “Start a TUS now” dialog to be displayed. Select No, to return to the process screen, or selects Yes to start TUS. The next screen to be displayed will be the start TUS note entry screen, see [“Start a Survey” on page 450](#).

TUS mode

TUS Survey Process screen - Middle panel

Middle section lists up to 6 setpoints that have been entered for the survey. This section shows the currently configured soak levels.

If you only have 2 setpoints eg. 600 and 950, this would give a temperature difference of 300. Check AMS2750 spec to see if a temperature difference of 300 is allowable, if not an additional setpoint may need to be added.

Each setpoint in the list has a tolerance width band (see table in spec)

Status shows what stage of the survey is running.

There are four stages of the survey: Detect, Soak (unstable), Stable soak and Done. These are shown in more detail in [“During survey” on page 450](#).

Furnace

Name: Furnace 1

Model No: QW-234-Y-45

Instrument Type: B

Username: NA

No. of TC's: 8

Class: 2

Time

Started: Fri Aug 29 15:21:07

Elapsed: 1h:25m:53s

Condition: Running

Stop TUS

Configure TUS

Export TUS

Setpoint (Tol.)	Status	Max TC	Min TC	Max TC Diff	Max TC/SP Diff	Max Ramp Overshoot	Ramp duration	TC Lag into Soak	Stable Soak Duration	Meets Class
1 400.00F (+/-10.0)	Done	TC2 405.09F	TC1 402.66F	TC2 - TC1 2.43F	TC2 5.09F	TC7 405.29F	2m:35s	1s	30 Mins.	2
2 600.00F (+/-10.0)	Done	TC2 600.72F	TC1 598.18F	TC2 - TC1 2.54F	TC1 1.82F	TC2 600.72F	4m:46s	22s	30 Mins.	1
3 1000.00F (+/-10.0)	Detect	TC0 0.00F	TC0 0.00F	TC0 - TC0 0.00F	TC0 0.00F	TC0 0.00F	10s		0 Mins.	--
4 NA										
5 NA										
6 NA										

TC's Stabilized Manual Override

TC's Stabilized

Remove TC's

Restart Soak

15:00:00	15:10:00	15:20:00	15:30:00	15:40:00	15:50:00	16:00:00	16:10:00	16:20:00	16:30:00	16:40:00
29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08	29 Aug 08
										</

- **Detect** (blue) is when the TUS Sensor are coming up to temperature, including any under or overshoot, and begins to level out around the setpoint.
- **Soak unstable** (magenta) begins when the first TUS Sensor are within the tolerance band and begin levelling out around the setpoint. As soon as the first TUS Sensor goes into soak the setpoint turns magenta.
- **Stable soak** (yellow) is a minimum 30 minute test period of the stable TUS Sensor. Check spec for stable soak time as it depends on size of oven and load and some ovens require longer stable soak duration. It enters this stage based on the Stability criteria that was set up during the AMS2750 setup.
- **Done** – (Red or Green) the setpoint survey step has completed (minimum of 30 minutes) and recorder indicates whether that survey setpoint was successful or not.

Other colour codes are Green when the survey is complete, grey when the TUS has been stopped and not complete and Red when a TUS Sensor has failed.

- **First column** - Number of the TUS Sensor
- **Setpoint (Tol.)** - The configured setpoint or soak level, this is the level configured for each soak within the AMS2750 setup configuration.

TUS mode

- **Status** - This shows the current status of the soak, and can be one of the following
 - **Blank** - A soak for the setpoint has not been started yet.
 - **Detect** - The first stage starts when the temperature is ramping up towards the setpoint.
 - **Soak** - All TC's have entered the soak level and are in tolerance, but not yet stable.
 - **Stable** - All TC's within soak and stability for less than 30 minutes, if over 30 minutes will show "Done".
 - **Done** - A soak has been completed where all TC's have remained within tolerance for at least 30 minutes after stability.
 - **Failed** - Indicates that stability was achieved for a setpoint but did not remain within the required limits for at least 30 minutes.
- **Max. TUS Sensor** - Shows the maximum temperature reached for a soak period whilst in stability and the TC that made the measurement.
- **Min. TUS Sensor** - Shows the minimum temperature reached for a soak period whilst in stability and the TC that made the measurement. In the case where more than one TC is at the same level the first TC to reach this level is displayed and recorded.
- **Max. TUS Sensor Diff.** - Shows the largest difference between the Maximum and Minimum TC's. In the case where more than one TC is at the same level the first TC to reach this level is displayed and recorded.
- **Max. TUS Sensor /SP Diff.** - Shows the largest difference between the measured temperature and the setpoint and which TC made the measurement. In the case where more than one TC is at the same level the first TC to reach this level is displayed and recorded.
- **Max. Ramp Overshoot** - This will monitor the maximum overshoot entering soak before stability is achieved and which TC made the measurement. In the case where more than one TC is at the same level the first TC to reach this level is displayed and recorded.
- **Ramp Deviation** - The total time taken for all TC's to enter the soak from the previous setpoint or start of survey. It shows the first TC to get within the temperature tolerance eg +/- 6. This reading stops when all the TC's are within the tolerance of the setpoint.
- **T/C lag into Soak** - Shows the time difference between the first TC and the last TC comes into the tolerance band (hottest and the coldest). Lag is the time difference between the first and last TC's entering the setpoint tolerance band.
- **Stable Soak Duration** - Measures the length of time all the TC's are with in the tolerance band of the setpoint. When in stable soak show the Max TC and Min TC readings for the entire run period. TC1-10 Diff (difference) and TC/SP Diff are also displayed.
- **Meets Class** - On a successful soak period, the actual class met by the soak is shown.

The survey auto detects the next TUS Sensor to test when last one has either completed or failed (out of band width) and will carry on testing the others.


The "TC's Stabilized" button

This button will only be enabled (available) when a soak has all TUS Sensor within the soak and acceptable tolerance, pressing the button will override the stability detection and put the current soak from "soak" mode to "stable" mode.


TUS mode

TUS Survey Process screen - Lower panel

The graph will display the current state of the highest and lowest temperature sensors, as the TUS is not running this will simply show the full scale i.e. not zoomed in to any specific soak.

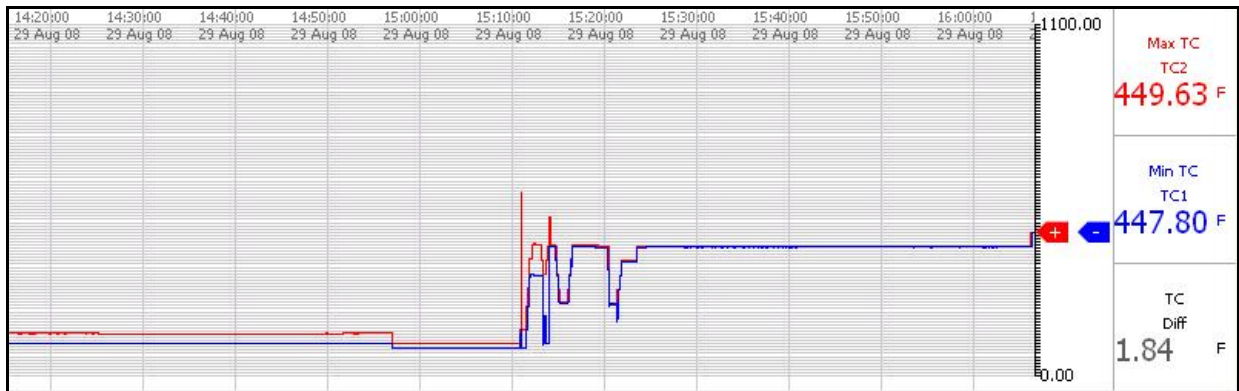


The pens on the graph area show two thermocouples, one minimum temp and one maximum temp. When the TUS Sensor reach the soak period the chart reconfigures and zooms in on the setpoint area contained inside the tolerance width band. The lower panel displays digital readings of the two TUS Sensor, Max and Min (hottest and coldest), and a third pen displays a digital reading of the difference in temperature between the two TUS Sensor.

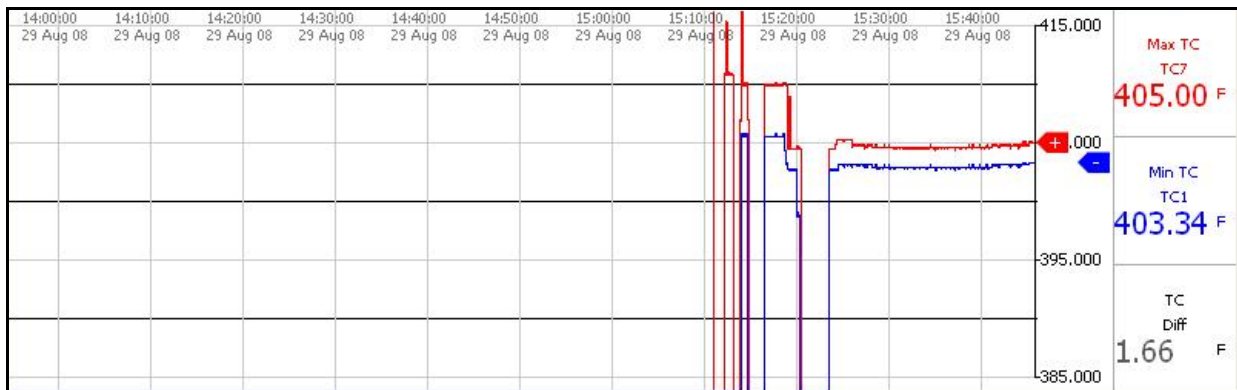

It also will automatically “Zoom-in” when the temperature reaches the lower limit as defined by the AMS2750 specification for the defined Furnace Class. So for example, if the furnace being surveyed is defined to be a Class 2 furnace and you are doing a survey SP at 600°F, the trend graph will switch from a full scale graph (say 0 to 1100°F) to a Zoomed in scale that shows the configured SP ± the Furnace class limit.

TUS mode

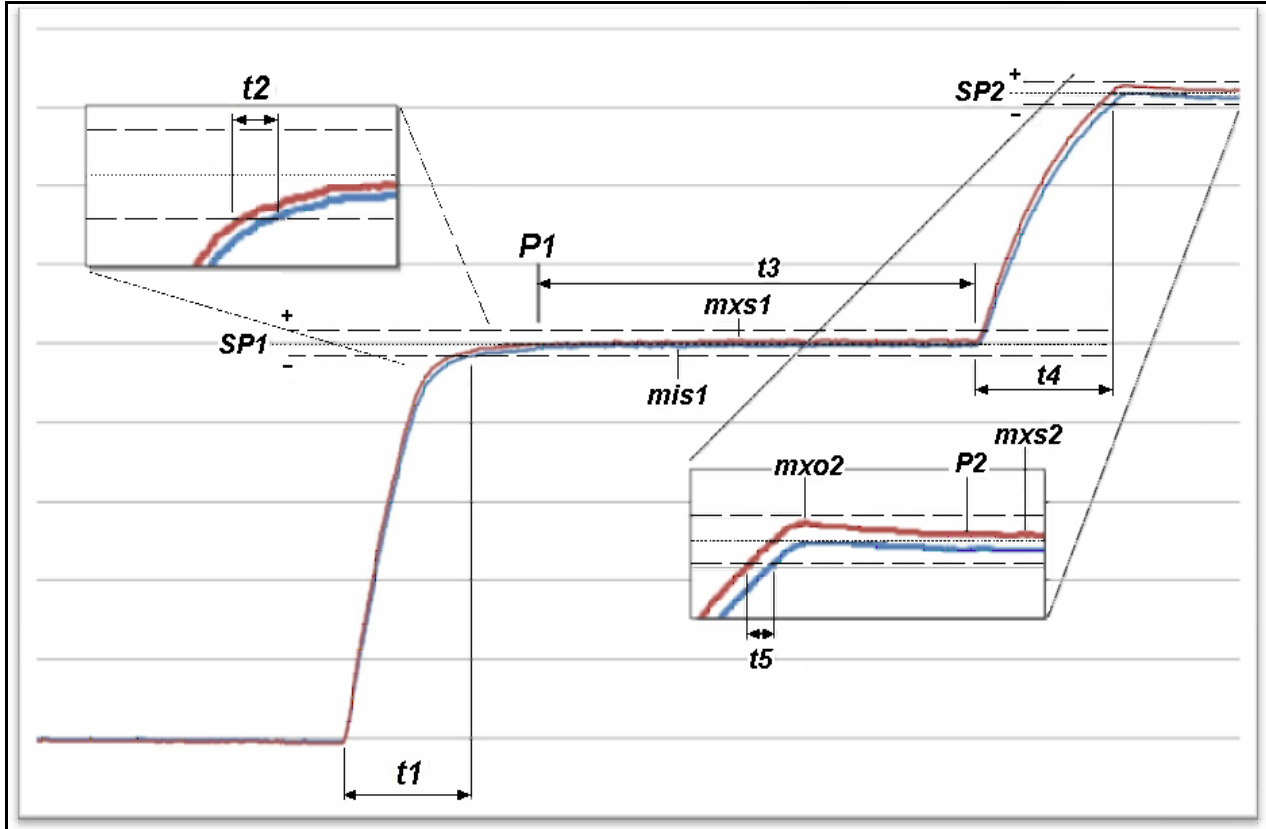

- SP1 = setpoint 1 and SP2 = setpoint 2.
- Time t_1 = the ramp time for the first ramp
- Time t_2 = time between first TUS Sensor entering soak zone and Last TUS Sensor entering soak Zone for setpoint 1 (SP1)
- Point P_1 = The point where all TUS Sensor are stable and lie within the SP1 Tolerance limits. Timer t_3 starts at this point
- Time t_3 = the soak time SP1. Must be at least 30 minutes within SP1 tolerance limits
- Value mxs_1 = Maximum temperature value during the SP1 soak period.
- Value mis_1 = Minimum temperature value during the SP1 soak period.
- Time t_4 = the ramp time for the second ramp
- Time t_5 = time between first TUS Sensor entering soak zone and Last TUS Sensor entering soak Zone for setpoint 2 (SP2)
- Value mxo_2 = Maximum temperature overshoot recorded prior to P_2 . The value for mxo_1 in this example would be the value of the TC at P_1 as there is no measured "overshoot".
- Point P_2 = The point where all TUS Sensor are stable and lie within the SP2 Tolerance limits.
- Value mxs_2 = Maximum temperature value during the SP2 soak period.

AMS Input Calibration

When the GR recorder is credit enabled for either AMS TUS or AMS Process mode, an additional calibration function is provided to simplify and speed up the configuration of Input Correction Factors. This assists in the automatic reporting of the as found and as left settings as defined in AMS2750. The resultant calibration report becomes an important part of the overall AMS2750 audit process.

All thermocouples (K, R, S, B, J, T, E, N, C, G, L, M, D, Platinel and Chromel/Copel) and Platinum based RTDs (PT100, PT200, PT500, PT1000) supported by the Honeywell GR series recorder can be enabled for use in Temperature Uniformity Surveys (TUS).

NOTE: some of the thermocouples listed may not be permitted for use with regard to the AMS2750 standard.

Input Correction Factors

A simplified calibration process is used to apply adjustments (**Input Correction Factors**), to each analogue input channel in the form of a multi-point look up table. This ensures that the instrument performs with maximum accuracy.


Sensor Correction Factors

Each AMS2750 enabled temperature channel allows the user to input the **Sensor Correction Factors**, that accompany a calibrated TC or TC wire reel. The correction factors entered must conform to the requirements of AMS2750. These factors are entered here:

(Configure > Setup > Edit Setup> I/O+AMS2750> Sensors> AMS2750 Info> Cal adjust)

NOTE: The sensor correction factors are not included in the input calibration as a calibrator is used and no sensors are attached.

Calibration process flow chart

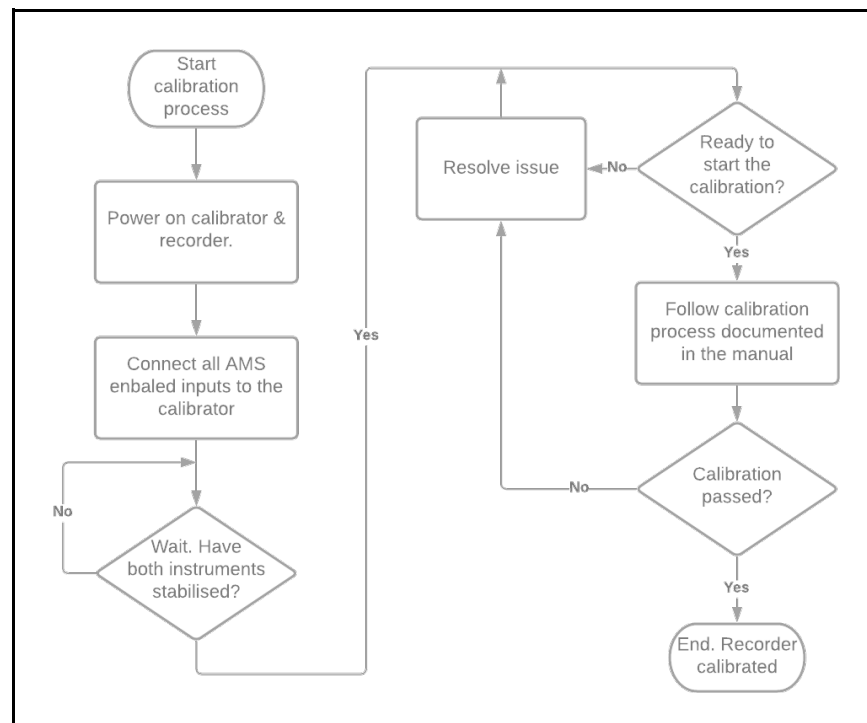


TUS mode

Input Calibration for AMS2750

IMPORTANT NOTE BEFORE STARTING CALIBRATION.

1. It is important to ensure that both the calibrating instrument and the recorder being calibrated have been switched on and allowed to warm up and stabilise for at least an hour.
 2. All inputs will be calibrated at the same time, so the user will be required to make a test lead that connects all TUS configured recorder inputs in parallel to the calibrator. In the unlikely event that different types of inputs, for example 10 x type K TC's and 1 PT100 RTD's, two appropriate calibrators will be required.
 3. For multiple RTD inputs, multiple calibrated RTD sources will be required as RTD's cannot be operated in parallel.
 4. At any point during the process the user may choose to use the "Save" facility to output the calibration table at its latest state (either complete or incomplete) in .RTF format.
 5. When the calibration is complete, the user may save to an .RTF file, but a full format report is created and is in .CAL format. The .CAL file may be exported at any time after calibration is complete and must be input into the AMS Report tool to create a full format calibration report in non-editable.pdf format.
 6. The full calibration data is also included with the .TUS file after the next survey.
- (Menu> Configure > Setup > Edit Setup> General > Factory > Calibration)

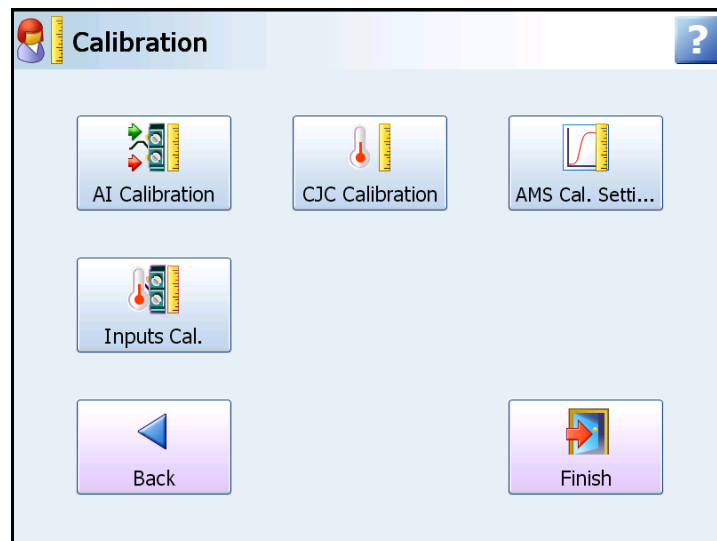

An additional two menus are available with AMS enabled: the **AMS Calibration Settings** button and the **Inputs Calibration** button.

To start the calibration process, the calibration points must first be configured in the AMS Calibration Settings as below.

TUS mode

AMS Calibration Settings

Click on the AMS Calibration Settings button to configure the instrument calibration.

Edit Setup	General	Factory	Calibration	AMS2750
Cal. Points	6 Points			▲
Last Cal. Passed	✓			
Last Calibration	15:04:52 2/9/2021			
Next Calibration	15:04:52 8/8/2021			
Calibrator Type	Testit			
Calibrator Serial No.	w3rt5678			
Traceable To	NIST			
Technician Id	AK			
Cal. Performed By	RD			▼
Back		Copy To	Finish	?

Menus items

Cal. Points.

Click “Cal Points” to enter the required calibration temperatures appropriate to your process requirements. (Reference the AMS2750 document to ensure that the calibration points comply with the requirements).

Ins/Del	Cal. Point (°C)	Calibrator Error (°C)
1	0.0	0.0
2	100.0	0.0
3	200.0	0.0
4	300.0	0.0
5	400.0	0.0
6	500.0	0.0

Add	✓	✕
-----	---	---

TUS mode

Column 1 is the calibration point number, the user may add calibration points by selecting Add in the bottom right. By clicking on any calibration point number, the user may also Insert Above or Insert Below to add additional points. If there are seven or more already entered the user can choose to Delete a calibration point too.

Note:

1. For AMS TUS instruments there must always be at least 6 calibration points as a requirement of AMS and you cannot exit this screen until 6 points are configured.
2. For AMS Process mode instruments there must always be at least 3 calibration points as a requirement of AMS and you cannot exit this screen until 3 points are configured.

Column 2 shows the calibration point temperature. By clicking on an existing temperature, the user may edit the value.

Column 3 this entry is optional, leave at "0" if not used. It may be a requirement for the calibration report to show the calibrator error at the calibration points, this field allows the user to enter that calibrator error. This value would be derived from the calibrator certificate where appropriate. This value is NOT used in the recorder calibration and is simply reported on the AMS calibration report. It is also normal practice, to maximise accuracy, to align calibration values with the survey set points. Refer to the AMS requirements for full details.

Last Cal. Passed

This is a status report set by the system and cannot be edited.

Last Calibration

Date and time of last completed calibration. This is a status report set by the system and cannot be edited.

Next Calibration

The furthest date and time of next calibration. This is a status report set by the system and cannot be edited.

All the remaining menu items are optional depending on the relevant quality process being used and may be left blank. However, if they are filled in they will be documented on the calibration report generated by the recorder on completion of the calibration process, and are required as part of the AMS auditing process.

Calibrator Type

Enter the make, type and other reference information of the calibrator used to generate the test inputs.

Calibrator Serial number

Enter the serial number of the calibrator used to generate the test inputs.

Traceable To

Enter the source of the calibrator's calibration – for example NIST.

Technician ID

If required enter technician ID.

Cal Performed By

If required enter the name or reference of the person who completed the calibration.

TUS mode

Cal Performed For

If required enter the name of the person who the calibration is being completed for.


Quality Organisation

If required enter the name of the quality organisation associated with the calibration process.

When changes to these settings are complete finish and commit the new configuration. Then return back to the complete the calibration.

Inputs Calibration Process

Click the Inputs Calibration button, the recorder displays the following note.

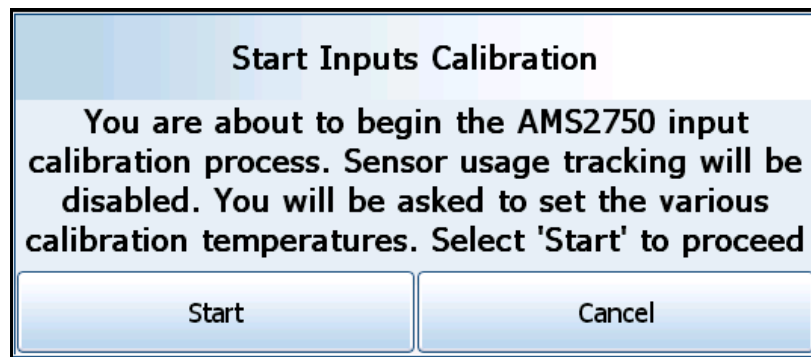


Whilst the instrument is being calibrated, the sensor use checking is disabled, this prevents invalid counts on the sensor usage (where applicable).

Before pressing Start, check the following:

- The calibration will be carried out on any AMS enabled inputs, it is important to make sure that the input configuration, including sensor type, TC, RTD, type of TC etc is complete. The adjustments or Correction factors generated here will be populated into the relevant sensor input multipoint offset table in the inputs section.
- Make sure that all inputs to be calibrated and connected to an appropriate calibrator (as referenced in the settings).

The calibration progress is displayed in table format as follows.

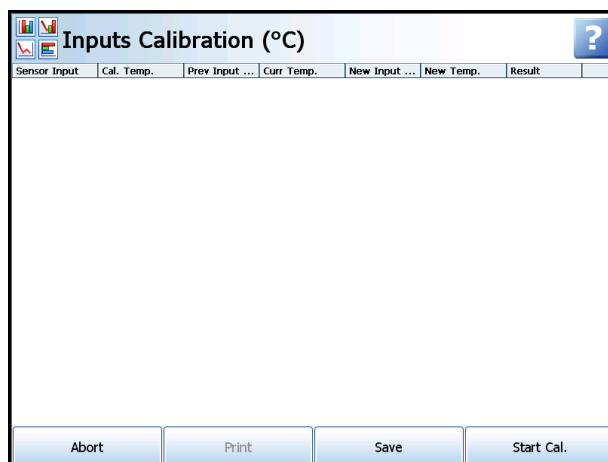

TUS mode

Initially the screen is blank as above, as the process has not yet started. The user has the option to:

Abort – leave the cal process immediately and lose any progress made.

Save – save text file of the table to local media.

Start Cal. – initiate the calibration process.

The recorder will prompt the operator to set the temperature calibrator to the first calibration temperature, in this case 0°C.

The screenshot shows a software window titled "Inputs Calibration (°C)". At the top, there is a header bar with icons on the left and a question mark icon on the right. Below the header is a table with columns: Sensor Input, Cal. Temp., Prev Input ..., Curr Temp., New Input ..., New Temp., and Result. The main area of the window contains a large text box with the following text: "Set the next calibration temperature" and "Set the calibrator to 0.00°C and select 'Measure' once stabilised". Below this text are two buttons: "Measure" and "Abort". At the bottom of the window, there are four buttons: "Abort", "Print", "Save", and "Start Cal."

When the temperature has been set on the calibrator, press Measure. The recorder will then sample all enabled inputs and update the table as follows.

The screenshot shows the same software window as before, but now it displays a table of calibration data. The table has the following columns: Sensor Input, Cal. Temp., Prev Input ..., Curr Temp., New Input ..., New Temp., and Result. The data is as follows:

Sensor Input	Cal. Temp.	Prev Input ...	Curr Temp.	New Input ...	New Temp.	Result
TC1	0.0	-2.56	0.60	-3.15	0.0	Pass
TC2	0.0	-2.53	0.60	-3.13	0.0	Pass
TC3	0.0	-2.54	0.60	-3.13	0.0	Pass
TC4	0.0	-2.65	0.61	-3.26	-0.1	Pass
TC5	0.0	-2.61	0.60	-3.21	0.0	Pass
TC6	0.0	-2.61	0.60	-3.21	0.0	Pass
TC7	0.0	-2.58	0.60	-3.18	0.0	Pass
TC8	0.0	-2.59	0.60	-3.19	0.0	Pass
TC9	0.0	-1.64	0.52	-2.16	-0.0	Pass
TC10	0.0	-1.14	0.65	-1.79	-0.0	Pass
TC11	0.0	-1.60	0.54	-2.13	-0.0	Pass
TC12	0.0	-1.50	0.54	-2.04	-0.0	Pass
TC13	0.0	-1.21	0.50	-1.71	0.0	Pass
TC14	0.0	-1.21	0.52	-1.73	-0.0	Pass
TC15	0.0	-0.80	0.51	-1.31	0.0	Pass
TC16	0.0	-0.77	0.52	-1.30	0.0	Pass
RT17	0.0	0.17	-0.02	0.19	0.0	Pass

At the bottom of the window, there are four buttons: "Abort", "Print", "Save", and "Next Cal. Temp.". Numbered callouts 1 through 7 point to various elements: 1 points to the top-left icon, 2 points to the title bar, 3 points to the table header, 4 points to the table body, 5 points to the "Next Cal. Temp." button, 6 points to the "Save" button, and 7 points to the question mark icon in the top-right corner.

TUS mode

Columns:

1. Sensor input – this column lists all the AMS sensor inputs sampled, and in this case is 16 TCs and 1 RTD
2. Calibration temperature – will show the calibration temperature, in this case 0°C
3. Previous input adjust – is the as found correction offset for each enabled channel
4. Current temperature – is the measured temperature with the as found offsets applied.
5. New input adjustment – the recorder generates a new input adjustment based on any error between the calibration temperature (applied by the calibrator) in column 1, and the value read by the instrument in column 2. The new input adjustment or “as left” correction offset is displayed in column 5
6. New temperature – this is the resultant temperature now the as left offset has been applied.
7. Result – this column displays a Pass or Fail corresponding to being less than 0.6°C in error or greater than 0.6°C in error respectively. In the example above all channels have Passed

The user now has the option to Abort, Save or proceed to the next Calibration temperature. Select Next Cal. Temp to move to the next programmed calibration point.

Set the next calibration temperature

Set the calibrator to 100.00°C and select 'Measure' once stabilised

Measure

Abort

In this example the configuration has a calibration point at 100°C, the calibrator is set to the correct temperature and press Measure.

The calibration results table is updated as shown below.

Inputs Calibration (°C)						
Sensor Input	Cal. Temp.	Prev Input Adj.	Curr Temp.	New Input Adj.	New Temp.	Result
TC9	0.0	-1.64	0.52	-2.16	-0.0	Pass
TC10	0.0	-1.14	0.65	-1.79	-0.0	Pass
TC11	0.0	-1.60	0.54	-2.13	-0.0	Pass
TC12	0.0	-1.50	0.54	-2.04	-0.0	Pass
TC13	0.0	-1.21	0.50	-1.71	0.0	Pass
TC14	0.0	-1.21	0.52	-1.73	-0.0	Pass
TC15	0.0	-0.00	0.51	-1.31	0.0	Pass
TC16	0.0	-0.77	0.52	-1.30	0.0	Pass
RT17	0.0	0.17	-0.02	0.19	0.0	Pass
TC1	100.0	-2.47	100.48	-2.95	99.9	Pass
TC2	100.0	-2.45	100.48	-2.93	100.0	Pass
TC3	100.0	-2.45	100.42	-2.88	100.1	Pass
TC4	100.0	-2.46	100.53	-2.99	100.0	Pass
TC5	100.0	-2.47	100.48	-2.95	100.0	Pass
TC6	100.0	-2.47	100.48	-2.95	100.0	Pass
TC7	100.0	-2.44	100.48	-2.93	100.0	Pass
TC8	100.0	-2.45	100.53	-2.99	100.0	Pass
TC9	100.0	-1.55	100.60	-2.16	100.0	Pass
TC10	100.0	-1.14	101.17	-2.32	100.0	Pass
TC11	100.0	-1.55	100.50	-2.04	100.0	Pass
TC12	100.0	-1.45	100.50	-1.96	100.0	Pass
TC13	100.0	-1.16	100.40	-1.56	100.0	Pass
TC14	100.0	-1.17	100.41	-1.58	100.0	Pass
TC15	100.0	-0.78	100.37	-1.16	100.0	Pass
TC16	100.0	-0.75	100.38	-1.14	100.0	Pass
RT17	100.0	0.08	99.95	0.13	100.0	Pass

◀
▶

Abort

Print


Save

Next Cal. Temp.

TUS mode

Repeat this process for all the configured calibration points.

Note that at any point the calibration process can be aborted, for example if there is an issue with one of the inputs that requires investigation.

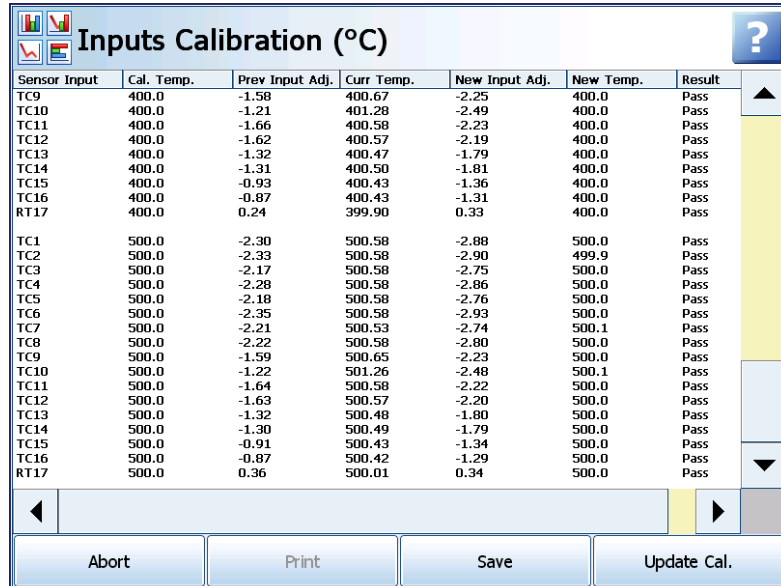


Sensor Input	Cal. Temp.	Prev Input Adj.	Curr Temp.	New Input Adj.	New Temp.	Result
TC9	400.0	-1.58	400.67	-2.25	400.0	Pass
TC10	400.0	-1.21	401.28	-2.49	400.0	Pass
TC11	400.0	-1.66	400.58	-2.23	400.0	Pass
TC12	400.0	-1.62	400.57	-2.19	400.0	Pass
TC13	400.0	-1.32	400.47	-1.79	400.0	Pass
TC14	400.0	-1.31	400.50	-1.81	400.0	Pass
TC15	400.0	-0.93	400.43	-1.36	400.0	Pass
TC16	400.0	-0.87	400.43	-1.31	400.0	Pass
RT17	400.0	0.24	399.90	0.33	400.0	Pass
TC1	500.0	-2.30	500.58	-2.88	500.0	Pass
TC2	500.0	-2.33	500.58	-2.90	499.9	Pass
TC3	500.0	-2.17	500.58	-2.75	500.0	Pass
TC4	500.0	-2.28	500.58	-2.86	500.0	Pass
TC5	500.0	-2.18	500.58	-2.76	500.0	Pass
TC6	500.0	-2.35	500.58	-2.93	500.0	Pass
TC7	500.0	-2.21	500.53	-2.74	500.1	Pass
TC8	500.0	-2.22	500.58	-2.80	500.0	Pass
TC9	500.0	-1.59	500.65	-2.23	500.0	Pass
TC10	500.0	-1.22	501.26	-2.48	500.1	Pass
TC11	500.0	-1.64	500.58	-2.22	500.0	Pass
TC12	500.0	-1.63	500.57	-2.20	500.0	Pass
TC13	500.0	-1.32	500.48	-1.80	500.0	Pass
TC14	500.0	-1.30	500.49	-1.79	500.0	Pass
TC15	500.0	-0.91	500.43	-1.34	500.0	Pass
TC16	500.0	-0.87	500.42	-1.29	500.0	Pass
RT17	500.0	0.36	500.01	0.34	500.0	Pass

When the last calibration is complete, as above, the table will be fully updated and all calibration points will be documented. At this point the user may choose the save option, to **save** a copy of the calibration table in .RTF format to either a SD or USB memory device.

Update Cal.

Now select Update Cal., the bottom right-hand button. This updates all the relevant inputs and commits those changes to the recorder configuration. A warning screen is displayed as follows.

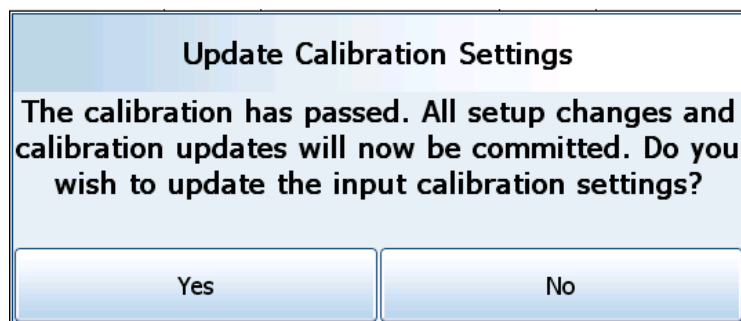

Update Calibration Settings

The calibration has passed. All setup changes and calibration updates will now be committed. Do you wish to update the input calibration settings?


Yes
No

NOTE: If any changes have been made to the calibration settings prior to the calibration process just completed, the recorder will request the user to commit those changes prior to displaying the screen shown above. The recorder will automatically return to the above screen to complete the calibration process.

In the unlikely event that an issue is noticed with the calibration process, this enables the user to stop the configuration update. If the **No** option is selected, the user is requested to confirm an abort, or cancel.

TUS mode


When **Yes** is selected, a reminder to disconnect the calibrator is displayed to avoid causing false usage counts on the TUS inputs.

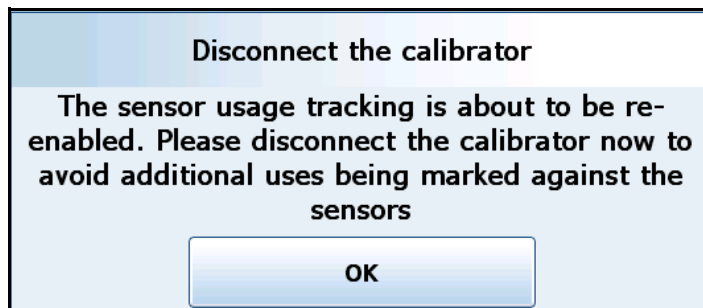

The calibration process is now complete, return to the main screen.

Calibration Report

To export the calibration file at any time, select the AMS status menu
(Menu> Status> AMS2750>Export Cal.)

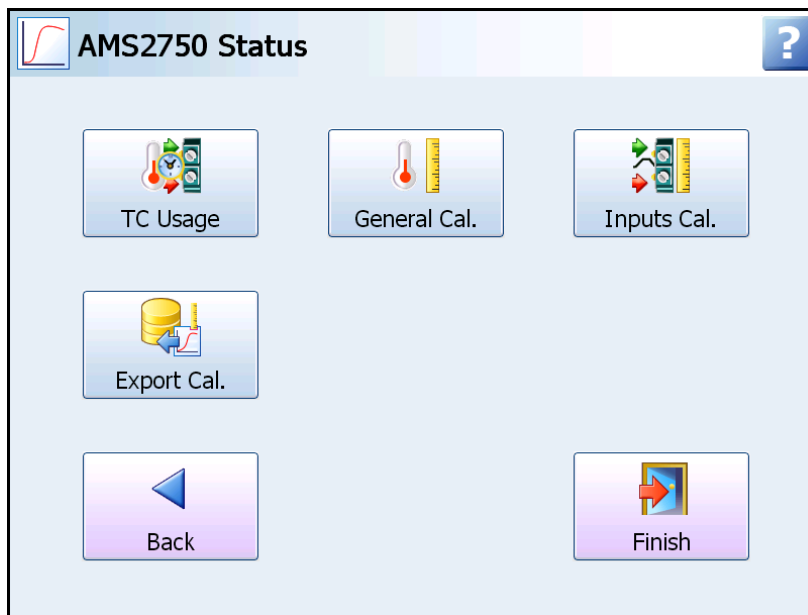

TUS mode

TC Usage

Select TC Usage to check the status of the sensor tracking. Each enabled AMS sensor reports the **Days Left** and **Usage Left** (where enabled) to be tracked in the sensor configuration, each sensor is reported in conformance with AMS2750, where the time and uses is influenced by the type of sensor and the temperature cycles to which it has been exposed.

TC1 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC2 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC3 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC4 Days Left: 89 Uses Left: 4 In Use: 1 day(s)
TC5 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC6 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC7 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC8 Days Left: 89 Uses Left: 4 In Use: 1 day(s)
TC9 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC10 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC11 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC12 Days Left: 89 Uses Left: 4 In Use: 1 day(s)
TC13 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC14 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC15 Days Left: 89 Uses Left: 4 In Use: 1 day(s)	TC16 Days Left: 89 Uses Left: 4 In Use: 1 day(s)
RT17 Days Left: NA Uses Left: NA Cal. due in: 47 day(s)			

Back

Prev

Next

General Cal.

This entry shows an overview summary of the current calibration status of the recorder which can be saved to an .RTF format file.

General Cal.		?
Item	Setting	
Id	0001	▲
Name	902335	
Serial No.	Multitrend GR	
Last Calibration Passed	✓	
Last Calibration Date	2/10/2021 15:28:35	
Next Calibration Date	8/9/2021 15:28:35	
Calibrator Type	Testit	
Calibrator Serial No.	w3rt5678	
Traceable To	NIST	
Technician Id	AK	
Calibration Performed By	RD	
Calibration Performed For	GC	
Quality Organisation	GAD	
Cal. Point 1	0.0 °C	
Cal. Point 2	100.0 °C	
Cal. Point 3	200.0 °C	
Cal. Point 4	300.0 °C	
Cal. Point 5	400.0 °C	
Cal. Point 6	500.0 °C	
TC1 Calibration	Passed	
TC2 Calibration	Passed	
TC3 Calibration	Passed	
TC4 Calibration	Passed	
TC5 Calibration	Passed	▼
<div>Back</div> <div>Print</div> <div>Save</div>		

TUS mode

General Cal. errors

If any changes are made to one or more inputs after a calibration is completed, these will be reflected in the General Cal. table. The example below shows:

Input channel 1 has had a change to one or more of the input calibration values.

Input channel 2 has had a change of sensor type, so the existing calibration values will no longer be valid.

Input channel 3 has been disabled.

Cal. Point 6	500.0 °C
TC1 Calibration	Invalid due to input calibration change
TC2 Calibration	Invalid due to sensor type change
TC3 Calibration	Disabled
TC4 Calibration	Passed

Note that the General Cal screen will report “Not Calibrated” if selected prior to a calibration being carried out.

Inputs Cal

The Inputs Cal. button shows the current state of the input calibration for TUS enabled sensors which can be saved to an .RTF format file.

Inputs Calibration (°C)								
Sensor ...	Cal. Temp	Prev Inpu...	Prev. Me...	Input Adj...	Measured...	Result	Cal. Adjust	Total A
TC1	0.0	-3.15	0.01	-3.16	0.00	Passed	0.00	-3.16
TC2	0.0	-3.13	0.01	-3.13	0.00	Passed	0.00	-3.13
TC3	0.0	-3.13	0.07	-3.20	0.00	Passed	0.00	-3.20
TC4	0.0	-3.26	-0.05	-3.20	0.00	Passed	0.00	-3.20
TC5	0.0	-3.21	0.01	-3.21	0.00	Passed	0.00	-3.21
TC6	0.0	-3.21	0.01	-3.22	-0.06	Passed	0.00	-3.22
TC7	0.0	-3.18	0.01	-3.19	0.00	Passed	0.00	-3.19
TC8	0.0	-3.19	0.01	-3.20	0.00	Passed	0.00	-3.20
TC9	0.0	-2.16	0.09	-2.25	-0.00	Passed	0.00	-2.25
TC10	0.0	-1.79	0.16	-1.96	-0.00	Passed	0.00	-1.96
TC11	0.0	-2.13	-0.01	-2.13	0.00	Passed	0.00	-2.13
TC12	0.0	-2.04	0.00	-2.04	0.00	Passed	0.00	-2.04
TC13	0.0	-1.71	-0.08	-1.62	-0.00	Passed	0.00	-1.62
TC14	0.0	-1.73	-0.06	-1.67	0.00	Passed	0.00	-1.67
TC15	0.0	-1.31	-0.10	-1.20	-0.00	Passed	0.00	-1.20
TC16	0.0	-1.30	-0.12	-1.18	0.00	Passed	0.00	-1.18
RT17	0.0	0.19	0.04	0.14	0.00	Passed	0.00	0.14
TC1	100.0	-2.95	100.04	-3.00	100.00	Passed	0.00	-3.00
TC2	100.0	-2.93	100.10	-3.03	100.00	Passed	0.00	-3.03
TC3	100.0	-2.88	100.15	-3.04	100.00	Passed	0.00	-3.04
TC4	100.0	-2.99	100.10	-3.10	99.94	Passed	0.00	-3.10
TC5	100.0	-2.95	100.04	-2.99	100.06	Passed	0.00	-2.99
TC6	100.0	-2.95	100.10	-3.06	100.00	Passed	0.00	-3.06
TC7	100.0	-2.93	100.04	-2.97	100.06	Passed	0.00	-2.97
TC8	100.0	-2.99	100.04	-3.04	100.06	Passed	0.00	-3.04
TC9	100.0	-2.16	100.05	-2.20	100.00	Passed	0.00	-2.20
TC10	100.0	-2.32	100.12	-2.44	100.02	Passed	0.00	-2.44

Note: when viewed here, (in the status menu) the **Inputs Cal.** table has two additional columns on the right-hand side (**Cal. Adjust** and **Total Adjust**).

Cal. Adjust.

This column shows the applied sensor **correction factor** at that temperature.

Total Adjust.

This column shows the sum of the **input correction factor** and **sensor correction factor** for each calibration point and for every sensor.

For a Temperature Uniformity Survey, the **Total Adjustment** must not exceed the limits given by the furnace survey class. So for a Class 2 furnace, the total adjustments must not exceed $\pm 10^{\circ}\text{F}$ or $\pm 6^{\circ}\text{C}$.

This table will be empty until a calibration is completed.


TUS mode

Calibration Report Status.

When a calibration is complete the report can be exported and saved to .PDF file using the AMS Report Tool and represents a record of the calibration process.

However, there are some scenarios where intended (or unintended) changes to the instrument configuration would impact the report. Any report file exported from the recorder after that change, will include warnings of the changes.


Using TC1 in the example below, in the image below shows the status of TC1 straight after a calibration, with no changes to the instrument.

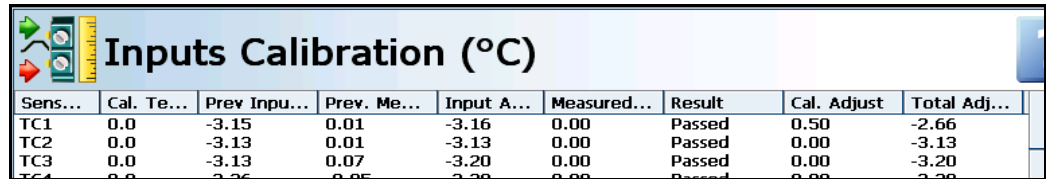

Sens...	Cal. Te...	Prev Inpu...	Prev. Me...	Input A...	Measured...	Result	Cal. Adjust	Total Adj...
TC1	0.0	-3.15	0.01	-3.16	0.00	Passed	0.50	-2.66
TC2	0.0	-3.13	0.01	-3.13	0.00	Passed	0.00	-3.13
TC3	0.0	-3.13	0.07	-3.20	0.00	Passed	0.00	-3.20

Type Change


A Type Change will be reported if a channel (or channels) have had the input type changed. In this case channel 1 has been changed from TC type K to +-100mV, and is no longer included in the survey. Note that the result column for TC1 now reports "Type Changed".

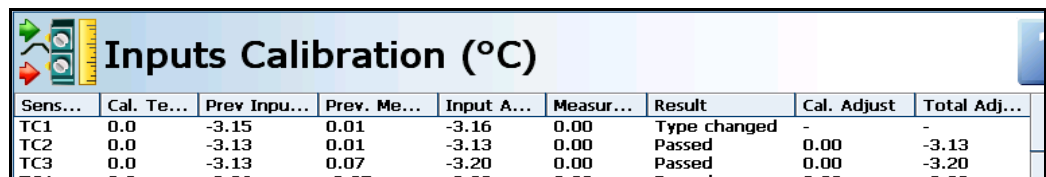

Sens...	Cal. Te...	Prev Inpu...	Prev. Me...	Input A...	Measured...	Result	Cal. Adjust	Total Adj...
TC1	0.0	-3.15	0.01	-3.16	0.00	Type changed	-	-
TC2	0.0	-3.13	0.01	-3.13	0.00	Passed	0.00	-3.13
TC3	0.0	-3.13	0.07	-3.20	0.00	Passed	0.00	-3.20

Disabled


Disabled will be reported if the channel has been "switched off" in the configuration. In the example below, channel one has been switched off and is no longer used by the recorder in anyway. Note that the result column for TC1 now reports "Disabled".

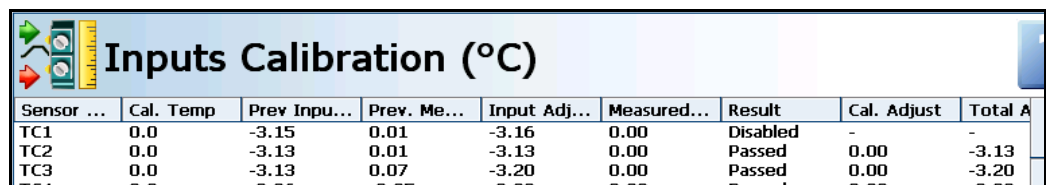

Sensor ...	Cal. Temp	Prev Inpu...	Prev. Me...	Input Adj...	Measured...	Result	Cal. Adjust	Total A
TC1	0.0	-3.15	0.01	-3.16	0.00	Disabled	-	-
TC2	0.0	-3.13	0.01	-3.13	0.00	Passed	0.00	-3.13
TC3	0.0	-3.13	0.07	-3.20	0.00	Passed	0.00	-3.20

Cal. Changed

Cal Changed is reported if any changes are made to the calibration values for that channel. In the example below a single point in the channel 1 input **correction offset** was adjusted.

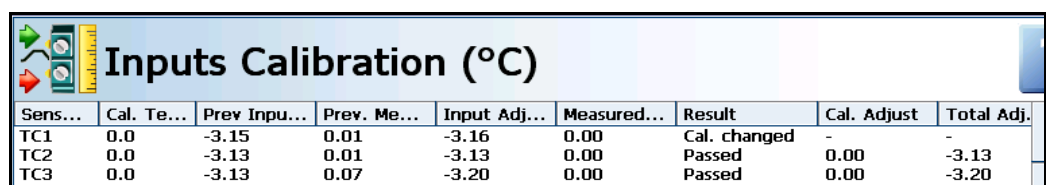

Sens...	Cal. Te...	Prev Inpu...	Prev. Me...	Input Adj...	Measured...	Result	Cal. Adjust	Total Adj.
TC1	0.0	-3.15	0.01	-3.16	0.00	Cal. changed	-	-
TC2	0.0	-3.13	0.01	-3.13	0.00	Passed	0.00	-3.13
TC3	0.0	-3.13	0.07	-3.20	0.00	Passed	0.00	-3.20

TUS mode

Export Cal

Select this button to export the full calibration report to a .CAL format file. This file must be opened in the AMS2750 report tool to view and create a .PDF calibration file.

Note, this option will be greyed out and not selectable until a calibration is carried out.

Start a Survey

The start TUS button will produce the configuration confirmation wizard, see [“Configure Confirmation Wizard” on page 431](#)

At the end of the wizard the Start TUS dialog appears. This allows you to enter 150 characters of free format notes using the SIP or a keyboard if attached, which is included in the TUS data file and the report generated by the AMS2750 Report Generation Tool.

You can select cancel to return to the process screen, but any notes that were entered will be lost.

When a TUS is running you will not be allowed to enter configuration i.e. when a survey is running you cannot enter setup. The user will have to complete or abort the TUS to enter configuration mode.

You can press the start button, this will return to the process screen and start the TUS monitoring.

When the TUS is started an event will be triggered identifying this and a message will be logged into the system events.

Warning messages may appear if a previous TUS file has not been exported. Only one TUS file is saved in the memory.

Events can be set up to Start or Stop a TUS. See [“Events \(AMS2750\)” on page 456](#).

During survey

Once a survey has been started the TUS process screen will be set to the Running condition.

Each soak is allocated a separate status line, with all soaks being shown in this fixed format.

The system will detect when all relevant TC's are within the acceptable soak limits and will populate the information in the line of the relevant soak.

The “TC's Stabilized” button will only be enabled (available) when a soak has all TC's within the soak and acceptable tolerance, pressing the button will override the stability detection and put the current soak from “soak” mode to “stable” mode.

The “Configure TUS” and “Export TUS” button will be disabled whilst a TUS is running.

Survey status


Once a TUS is started the recorder moves between three operating modes, this helps automate the process and provide feedback as to how the survey is performing.

1. See [“Detect” mode” on page 451](#).
2. See [“Soak” mode” on page 452](#).
3. See [“Stable \(in soak\)” mode” on page 453](#).

TUS mode

“Detect” mode

Detect - (Light Blue) starts when the point value for the survey setpoint begins to rise.

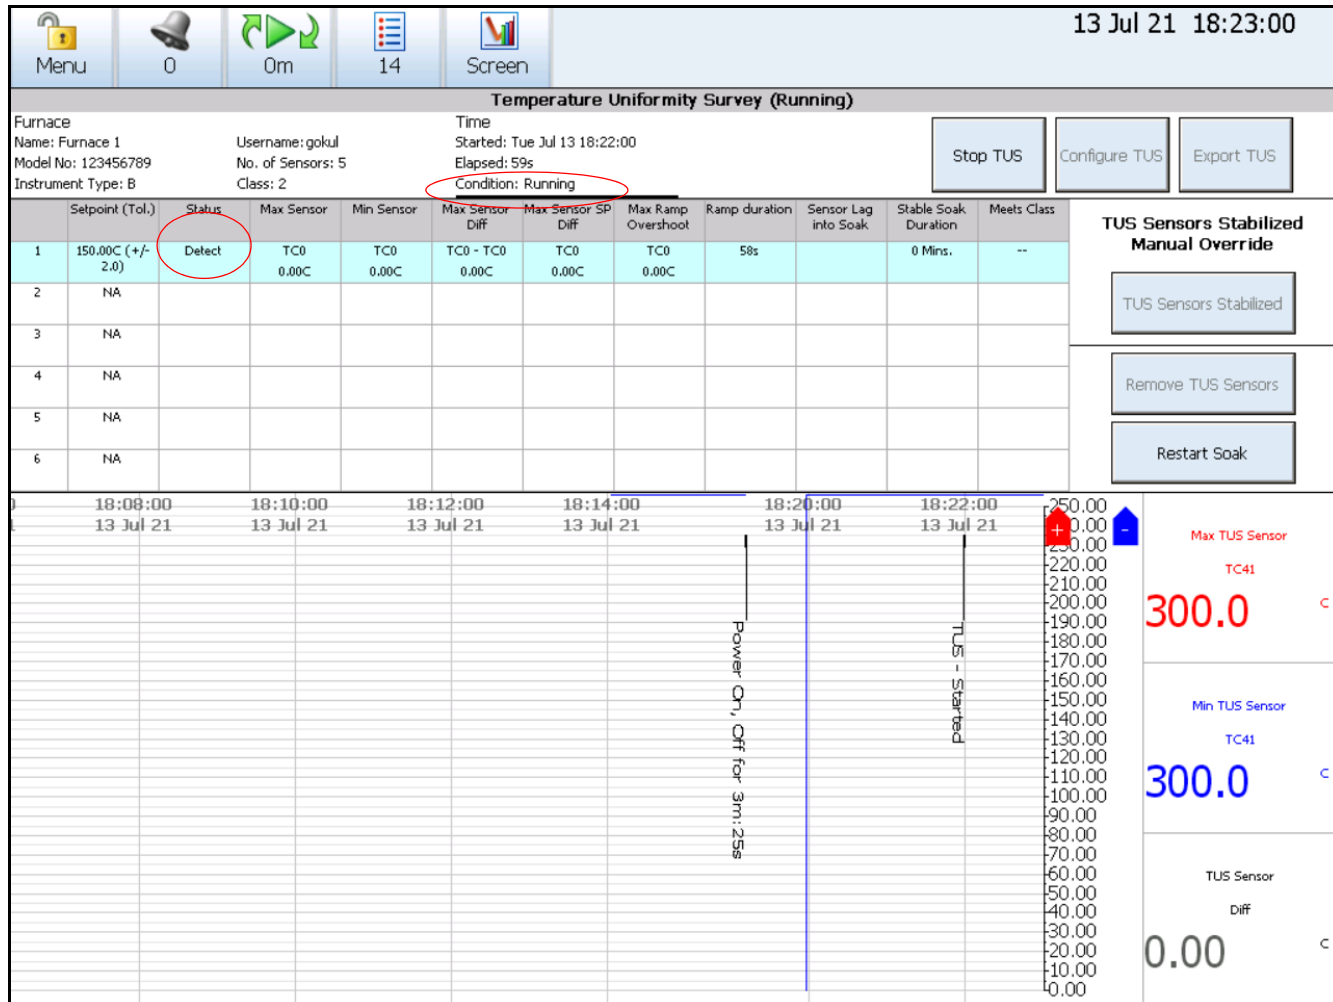

When the recorder is in Detect phase the timers for monitoring the duration of this step will start. At the top of the TUS screen. It will also indicate the process is “Running” along with other status information concerning this particular survey.

The recorder is in “Detect” mode when any or all sensors are outside any of the pre-defined soak temperatures and the point value for that survey setpoint begins to rise.

The recorder monitors all sensors in this mode checking them with each soak level, when all sensors levels fall within one of the soaks for a qualification period of 2 minutes then the recorder proceeds to “in soak” mode.

The “Detect” (out of soak) mode is timed, this tracks the ramp time until “in soak” is achieved.

Temperature overshoot


Temperature overshoot is detected, logged and displayed. An overshoot is deemed as a failure if outside the soak limits defined by the class of the furnace.

Overshoot will be the highest value recorded for a TC after it enters the soak band but before stability occurs. This could be a negative value if the TC does not reach the setpoint before stability is activated.

TUS mode

“Soak” mode

Soak – (Magenta) starts when all TUS Sensor for the survey are within the tolerance limits for the defined furnace class but stability period has not started.

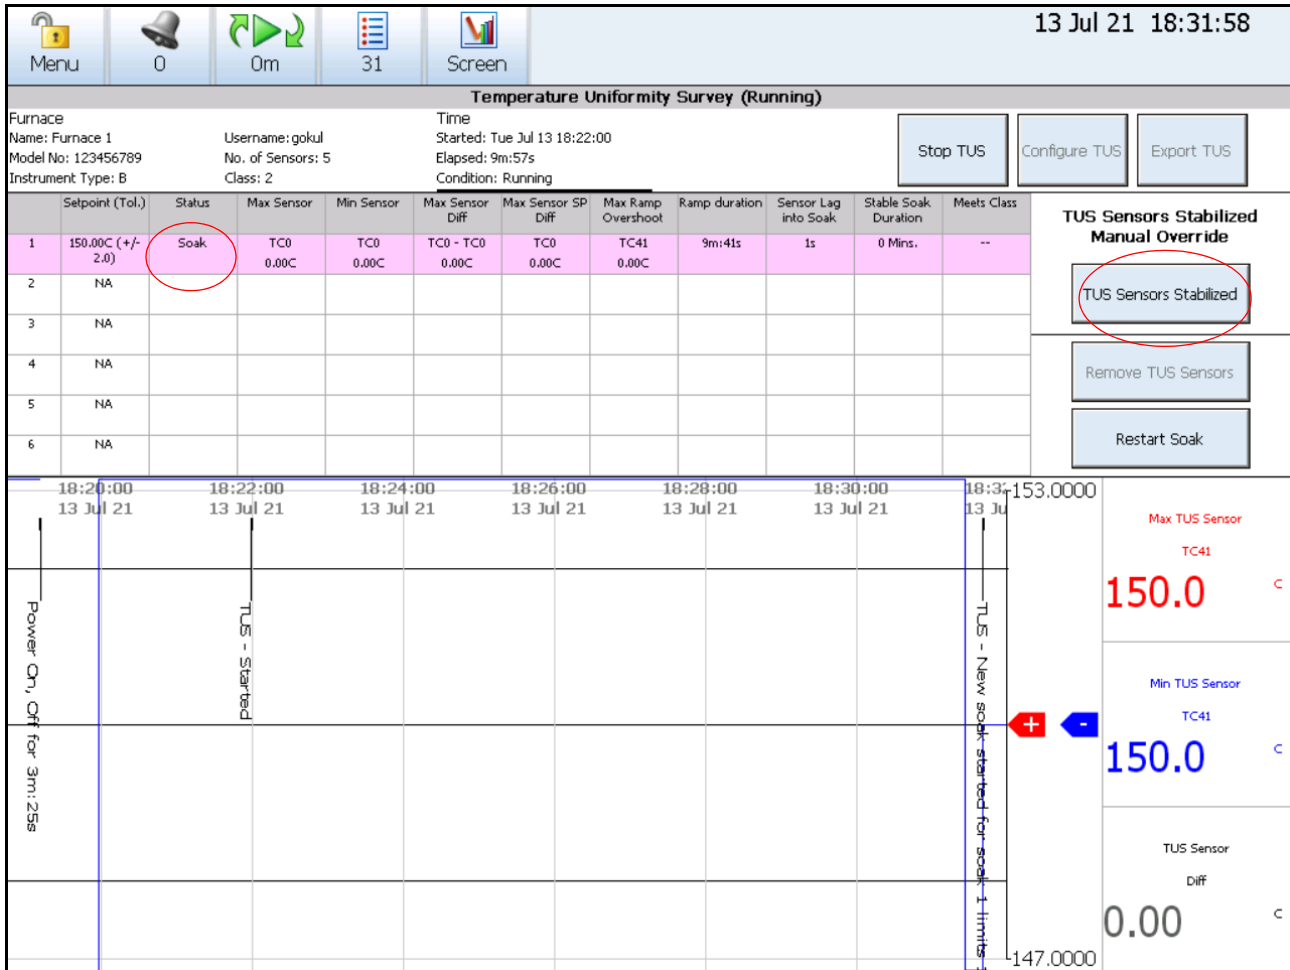

The recorder enters this mode when all sensors have been within the soak tolerance for a qualification period. This is based on the survey setpoint and the defined class of the furnace.

The recorder switches to the second survey phase defined as the “Soak” phase. When this happens the recorder changes the trend graph from a full scale graph to a “Zoomed-in” display. The recorder begins to check for the time it takes before all the survey inputs are within the soak band. The amount of overshoot, if any, and the time it took to reach this first survey setpoint. The recorder starts to monitor all sensors for stability, all sensors must remain stable for 2 minutes in order to progress to “in soak, in stability” mode.

If any sensor falls outside of the soak tolerance, then the recorder falls back to an “out of soak” mode.

The time between the first and last sensors entering soak is recorded.

TUS Sensor Stabilized

A manual override of “in stability” can be performed. The TUS Sensor Stabilized button can be pressed if the trend graph shows all requirements are within the defined limits to start this stability run. This button is not active until the stability conditions have actually been met, but once they are achieved, it allows you to start the uniformity test rather than waiting for the pre-defined conditions to be met.


TUS mode

Restart Soak

The setpoint run can be restarted if required. Under certain conditions, the AMS2750 spec allows “bad” TUS Sensor to be removed from the survey and Restart Soak button provides the ability to do that. These conditions are defined within the AMS2750 spec and depends on the quantities of TUS Sensor that are in the survey and their relative positions.

“Stable (in soak)” mode

Stable – (Yellow) the actual period that the survey data is being collected.

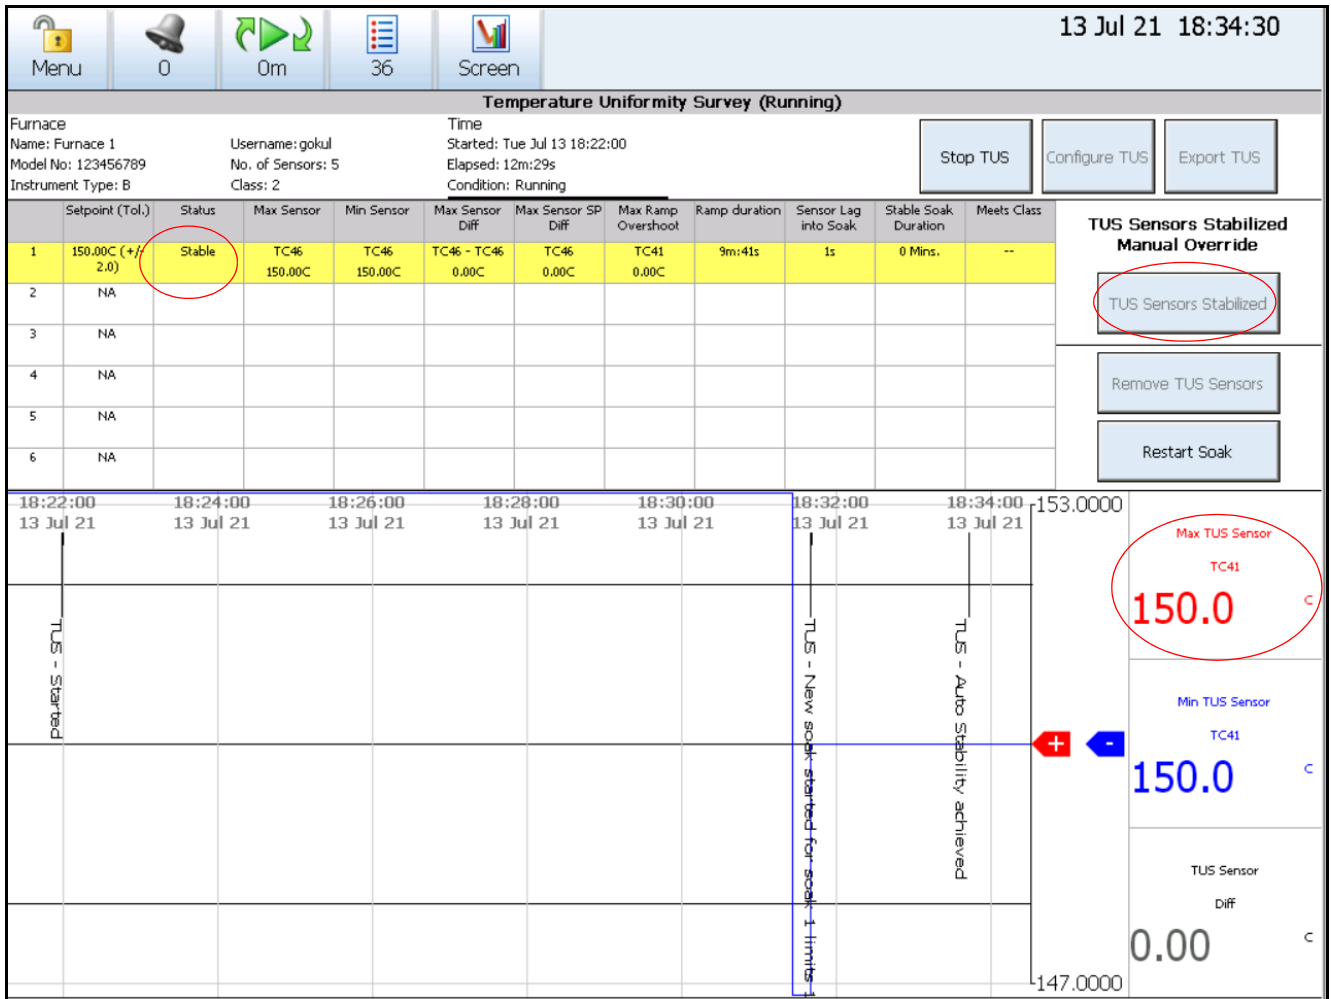

The recorder enters this mode automatically when all sensor signals are within soak AND have remained stable within tolerance limits for the qualification period.

A manual override button is available only when the “in soak” mode has been present for at least 2 minutes. [See “TUS Sensor Stabilized” on page 452.](#)

A timer is started to measure the stability period achieved, this continues to count up until the configured amount of time for the TUS has been reached.


If at any time one or more sensors fail the stability, but remain “in soak” then the “in soak in stability” recorded history is checked and a new “in soak in stability” time generated. If this time is less than one minute then the mode drops back to “in soak”.

TUS mode

The recorder shows Max, Min and temperature differences for the current survey setpoint and the lag time it took for the first and last TUS Sensor to enter the soak mode. It also provides a running record of the time that the recorder has been in the Stable mode. The Stable mode is the actual time and reading taken to determine the uniformity of the furnace at this particular setpoint and is the temperature readings that get documented in the Survey Report.

Done

Done – (Red or Green) the setpoint survey step has completed (minimum of 30 minutes) and recorder indicates whether that survey setpoint was successful or not.

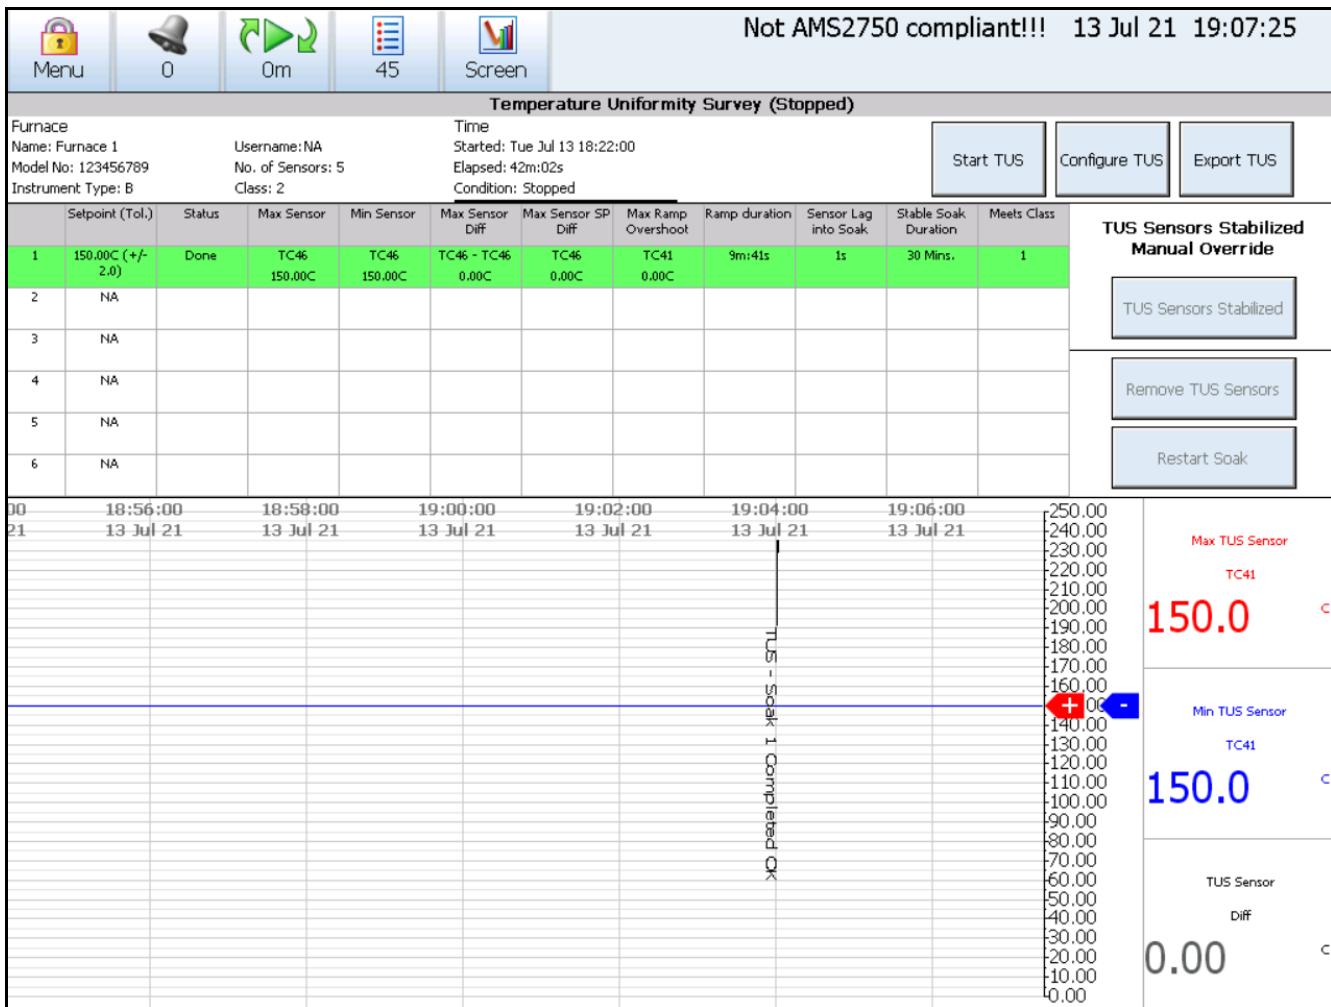

When the Stable time period specified in the recorder's configuration has been satisfied, the recorder will determine if the uniformity survey for that survey setpoint has passed or failed to meet the requirements for the defined class of furnace.

If it passes, this is indicated by setting the colour for this survey setpoint to green and indication the Status as being "Done". It also indicates the level of the furnace class that was actually achieved, which could be better than the class specified in the recorder set up.

If it fails, the indication is shown as Red.

TUS mode


Failure

If a sensor fails during a TUS causing a test “fail”, the recorder allows you to “disable” that particular TUS Sensor and re run that setpoint. This action is permitted under AMS2750, but the number of TC’s that can be disabled is in accordance with AMS2750, i.e. for a 9 TUS Sensor test no failures are permitted. The recorder does not take into account TUS Sensor position when allowing a failed sensor to be removed, and it is your responsibility to ensure conformance with AMS2750.

Remove TUS Sensor

If the TUS Sensor fails (goes out of tolerance). The “Remove TUS Sensor” button can be used to eliminate that TUS Sensor from the calculations (setpoint rerun). This will ask you which one is to be removed and do you want to rerun.

This is to allow you to remove the “bad” TUS Sensor and redo the survey without having to replace the TUS Sensor before repeating the run.

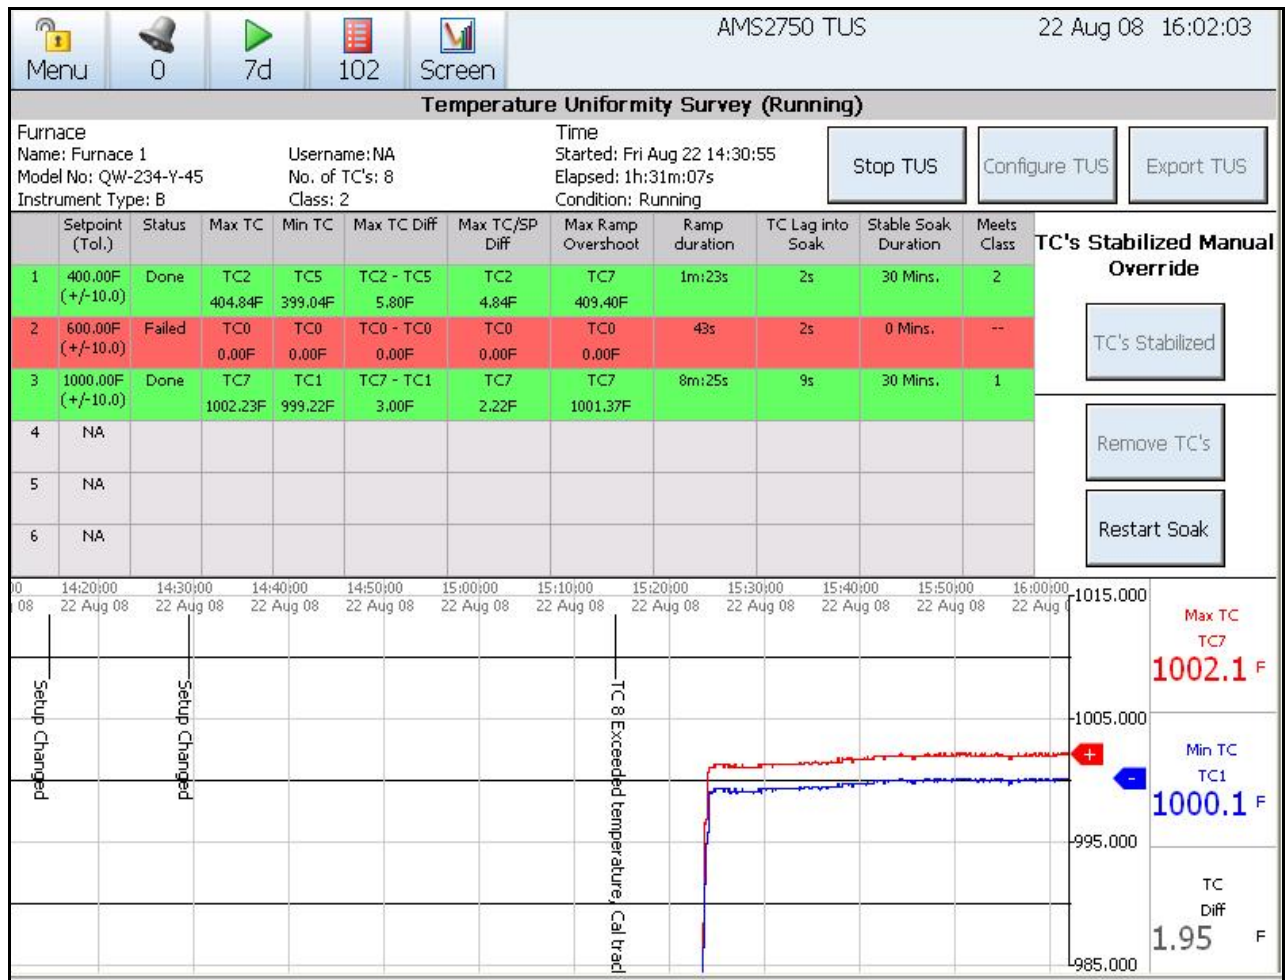

TUS can be stopped at any time. If there is a failure the survey carries on running the test on the others but it is not a valid test because of the failure. All 9 TUS Sensor would have to run again to complete the test with no failures.

Example: 9 TUS Sensor (+ 1 control TUS Sensor) are required for an oven of a certain size. The sensors are placed in each corner of the rectangular furnace and one in the middle. The control TC is usually placed on the edge of the load. No failures allowed. With 10 -16 TUS Sensor one failure is allowed, see AMS2750 spec for details.

Ending the Survey

This process is repeated until each of the survey setpoints has been completed.

Select Export TUS. A TUS data file is generated with all the relevant information for the AMS2750 Report Generation Tool to produce a survey report.

The user is prompted to enter free format notes which is included in the TUS.

When the entire survey has been completed you can export the TUS data file to the removable media. The file can be exported prior to the completion of all the survey setpoints but those not completed would be indicated as not having been completed when the report is generated.

The data file being exported is a completely separate data file from the recorder's normal saved data (name.tus).

When loaded on the media, this data can be imported to the AMS2750 Report Generation Tool to generate the actual hard copy Temperature Uniformity Survey report. These data files can be saved to a folder on the PC for archival purposes but the AMS275D Report Generation Tool is require to actually open these files and to create the report.

The recorder only archives a single TUS report in the recorder's buffer, the files should be archived in the PC or on a DVD for permanent record retention.

The survey ends when the user presses the stop survey button, or the survey runs for a continuous period of 72 hours (including stable time).

A simple report is generated within the recorder that is available as with other recorder based reports.

An event is triggered to indicate a TUS has ended, and a message is logged into the system message list.

Events (AMS2750)

Two new Event Causes have been added:

- **TUS** (Temperature uniformity Survey) - This will only be enabled if the AMS2750 TUS or TUS Process option has been enabled in the recorder credits menu. Select either Start or Stop TUS. When a TUS is started or stopped this can be used to trigger and effect
- **AMS2750 Timer** - This will only be enabled if the AMS2750 TUS or the TUS Process option has been enabled in the recorder credits menu.

A new Event Effect has been added:

- **Update Tabular Readings** - Triggering this event causes the tabular display to update and show the latest set of readings. This does not show any periodic readings, but shows a new line when the "add tabbed data" event effect is triggered.


For full details on Event setup see ["Events Menu" on page 120](#).

TUS mode

Audit Trail (AMS2750)

When running a TUS on the recorder the recorder does provide an audit trail of the actions that occur during the TUS and these can be seen on the trend graph or reviewed as part of the recorder's Message screen. An actual message screen showing the system messages that occurred during the TUS.

Messages

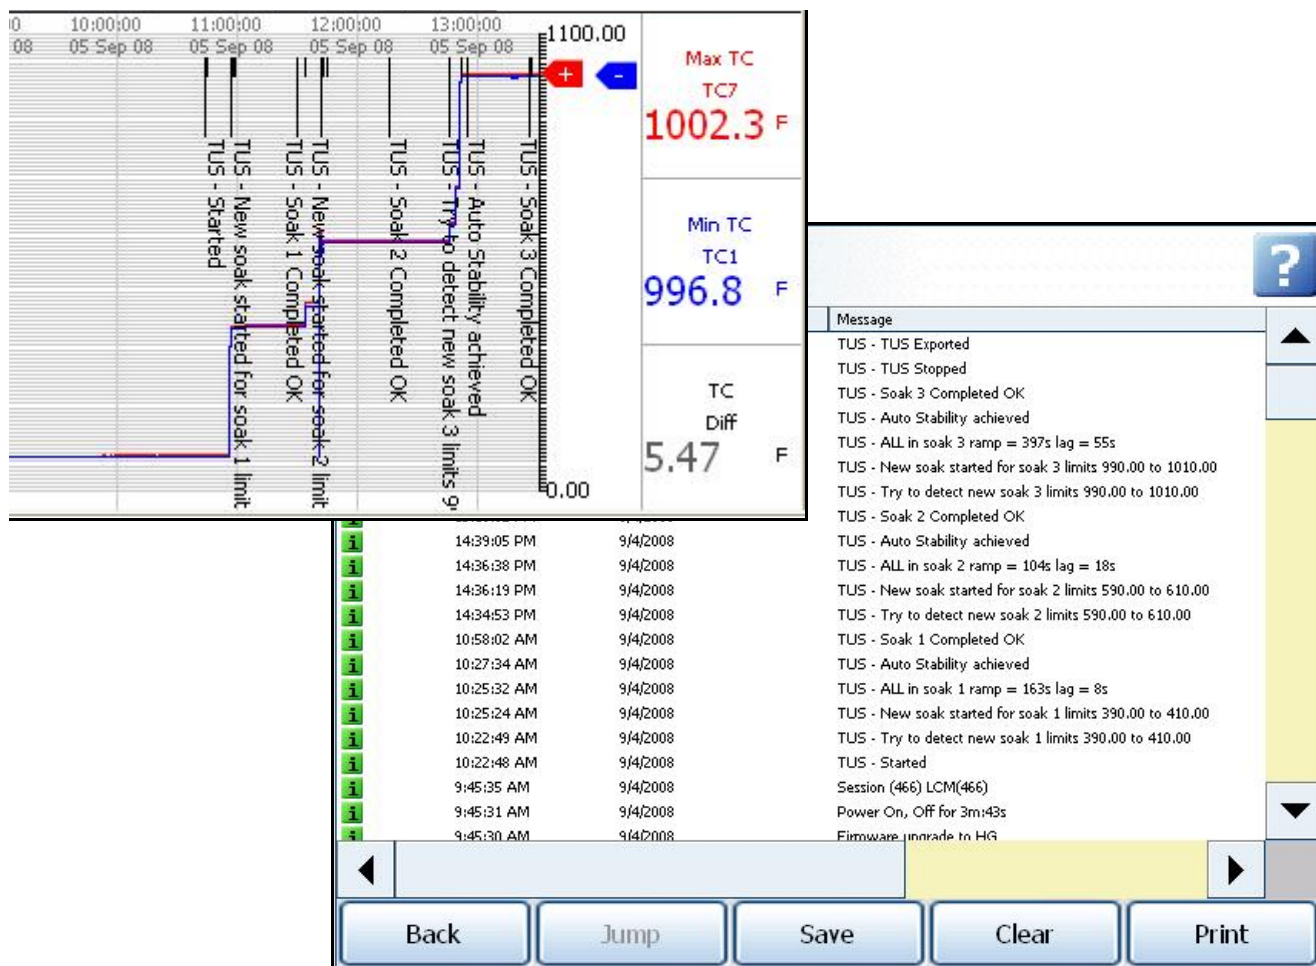

TUS Data file

Once a TUS is stopped a TUS data file is created with all the information required for the AMS2750 Report Generation Tool to produce a TUS report.

The data file is only available for export from the recorder to front CF, USB key or Network Share folder (NAS), the TUS instrument is portable and stand alone and extraction of this file via network is not a requirement.

The .tus file contains logged data at 2 minute intervals. This is independent of the logging in the recorder.

Configuration details, the furnace, sensor and ramp soak configuration details are included within the file.

TUS Logged data

Data is logged for each sensor (pen) within the TUS, at the configured rate. The data is time stamped and any power outages indicated within the format.

The algorithm in the recorder is acquiring data once per sec evaluating the Max and Min TUS Sensor.

The logging in the TUS is every 2 mins. The chances of the 2 minute data point recording the highest TUS Sensor reading at the same time as the recorder 1 sec data point is 1 in 120.

Looking at the recorder logged data (1 per/sec) it could show the highest temp TUS Sensor at 652.3 but the TUS logged data (2 min) might miss that point and its highest recorder TUS Sensor could be 651.7.

Check the recorder logged data that runs at 1 per sec to find Max & Min TUS Sensor readings. TUS logged data only logs once every 2 minutes so it will only correspond to the Max Min readings for those data points.

If the logged data is set to 1 per second the readings for Max Min on the TUS Sensor are the same as the recorder logged data.

The same data can be logged to other pens for saving to **TrendManager Suite** software for additional analysis

TUS periodic data logging

The data logging for the TUS populates a single set of readings taken from the Data item table of the latest processing cycle, this is aligned to the top of an even minute 2, 4, 6 past the hour for example.

The logging runs on a TUS enabled recorder at all times so when a TUS is started the most recently populated time can be used as the first log.

The data readings are built at the end of the relevant processing cycle on the aligned 2 minute time period, they are compiled into a single record which has a total capacity for 48 inputs.

Each record contains a Date and time, an event indicator, 48 readings and a CRC.

A logged data file is generated on internal SD card, this provides the storage for the full TUS logged data, and will contain only the logged data.

TUS Soak data

The soak information is maintained in a single NV SRAM record, this stores all information relating to Max, Min, deviation and timers for all 48 channels. Only the active channels are populated.

The information will be built up over the period of the ramp/soak. Once a soak have been completed the soak record will be saved to a soak data file.

The soak data file will hold a maximum of 6 soaks and will be pre-generated on the internal SD card in the root directory.

Power loss during TUS

If power is lost during TUS, the TUS resumes when power is re-applied if the power outage has been less than 20 minutes, a power outage of more than 20 minutes automatically stops the TUS when power is re-applied.

Passwords (AMS2750)

If power is lost during TUS and is less than 20 minutes then the TUS automatically resumes, the data is marked that power was lost and the duration for which it was lost.

If power is lost during TUS and TUS is resumed, any uncompleted soak is reset.

Passwords (AMS2750)

The **GR Series** recorders provides full password system to comply with 21CFR Part 11. 50 Users with unique ID & Password, time-outs, expiry of passwords, password definitions and audit trail information.

- Extended Security and Password Capabilities
- Provides security to recorder functions, audit trail of actions
- Password expiration, reuse and password customisation
- 21CFR Part 11 compliant

For full information on the password system and setup, [“Section 5:Security” on page 219](#)

When passwords are enabled in the recorder these are the areas that are password protected.

TUS Screen

The TUS screen can be password protected, if passwords are enabled in the recorder, to prevent unauthorized individuals from starting the TUS. The TUS screen provides controls for the operator that allows them to take some actions relative to the actual data collection process.

Configuration and Start/Stop buttons on the TUS screen

The Configure TUS and Start/Stop buttons are only available when a TUS is not running. If passwords are enabled in the recorder these buttons are password protected. This will restrict unauthorized access to start/stop and configure the TUS.

TUS Sensor Usage

Pressing the “configure” button will prompt for a password if passwords are enabled in the recorder. Thermocouple usage tracking is shown as a status screen within the recorder. It shows the current status of the thermocouple within the furnace in process mode.

Process mode

You can reset the date/time for SAT or TUS, providing another new target time/date for the timers. Upon reset a message will be logged into the system message list. If enabled this is password protected for tracking.

Timer reset dialog

When a SAT, TUS, Instrument Cal or Control TUS Sensor button is pressed they will be challenged to enter user name and password if passwords are enabled. This is to restrict unauthorized access when resetting new dates.

TrendManager Suite Software (AMS2750)

Refer to the **TrendManager Suites** software manual (43-TV-25-11) for full details on AMS2750 functionality.

AMS2750 includes

- Process or TUS Mode selection in hardware wizard setup
- Furnace configuration for Process and TUS modes
- Setpoint and Stability configuration for TUS mode
- Event Cause to set TC Timers or Alert Timers and Event Cause to Start/Stop TUS.

Screen Designer (AMS2750)

Tabular mode canned screen are configurable from within Screen Designer

The TUS process screen is not accessible from within Screen Designer, this is a fixed screen that is always within a TUS enabled **DR Graphic & Multitrend GR** recorder.

AMS2750 Report Generation Tool

The AMS2750 Report Generation Tool is a stand alone software package and operates independently of the **TrendManager Suite** software. The AMS2750 Report Generation Tool is used for generating a TUS report, using data from the recorder. The AMS2750 Report Generation Tool also provides the ability to produce a SAT template report for manual entry or populated within the tool.

Note: Only GR Series Recorders with firmware R220 and newer will be compatible with AMS2750F Standard and with current version of AMS2750 Report Generation Tool as well. The data files generated using previous firmware versions of GR series and X series are no longer supported.

Overview

TUS reports are generated using the self contained data file from the recorder and is outputted in PDF format for printing and sign off.

Data files generated by the recorder are imported directly from the SD card or USB key plugged into the PC, or Network Share folder (NAS). There is no facility for remote communications.

SAT report templates can be generated by the tool from fixed format, the templates can be stored for re-use by furnace.

SAT report templates can be output to PDF and printed for users to fill in manually.

SAT reports templates can be filled out within the AMS2750 Report Generation Tool to produce a completed SAT report, the reports can be exported in PDF format for printing and sign off.

Once a completed TUS or SAT report has been generated you can save it in a location of your choice for easy retrieval.

You are able to save the completed SAT or TUS report (in PDF format) to a specified directory/drive.


The reporting tool is currently only available in English.

Installation

The Report Generation Tool is a stand alone application that is installed separately from the **TrendManager Suite** software, and requires a separate code to enable its use; this will be supplied with the software.

The software is compatible with Windows Server 2012, Windows Server 2016, Windows Server 2019, Windows 10, and Windows 11.

AMS2750 Report Generation Tool

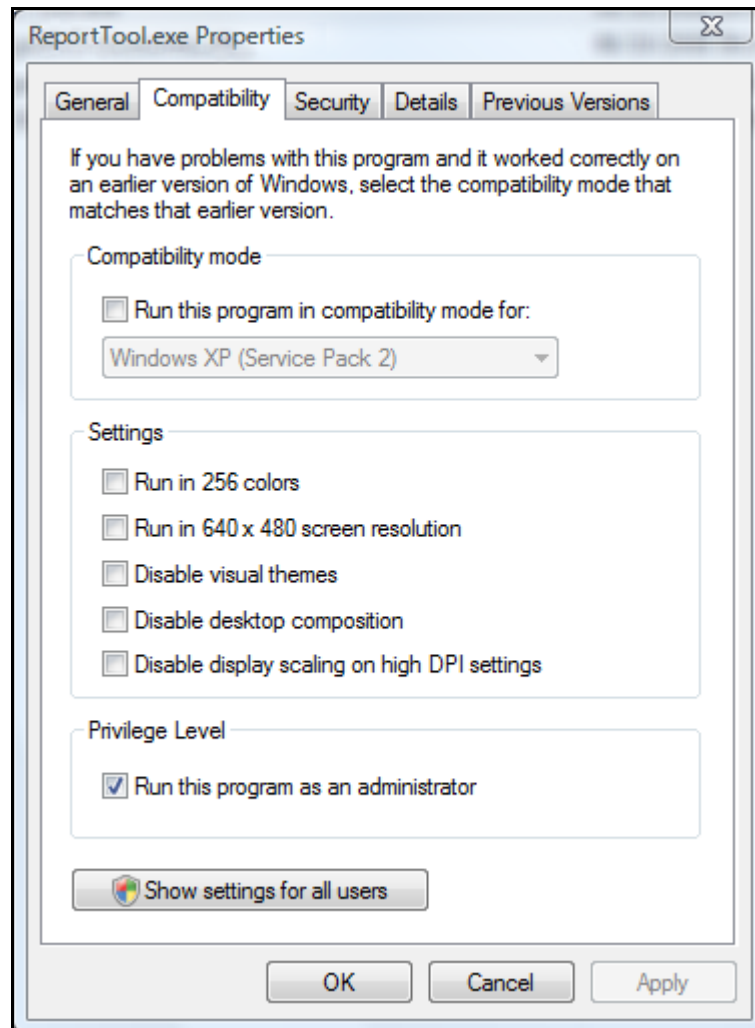

Additional install

Adobe Reader®

The AMS2750 Report Generation Tool generates files in PDF format that you can view and print on the same PC as the AMS2750 Report Generation Tool.

The installer shall prompt you to install a compatible version of Adobe Reader if it is not already installed.

If Adobe Reader is required you will be prompted to begin installation. An installable version is provided on the product envelope.

AMS2750 Report Generation Tool

Introduction

This document provides information regarding AMS2750 Report Generation Tool user interface and will help you in understanding how this application works and what the various screens are.


This application is used to create TUS and SAT Reports based on the AMS275 standard. Reports will be created in PDF format.

Splash Screen

This is the first screen that appears when you run the application. It remains on screen for around one second and then disappears. This indicates that AMS2750 Report Generation Tool application is about to start.

Report Tool User Interface

When the tool opens it will be blank. At the top are two tabs labelled Reports and Help.

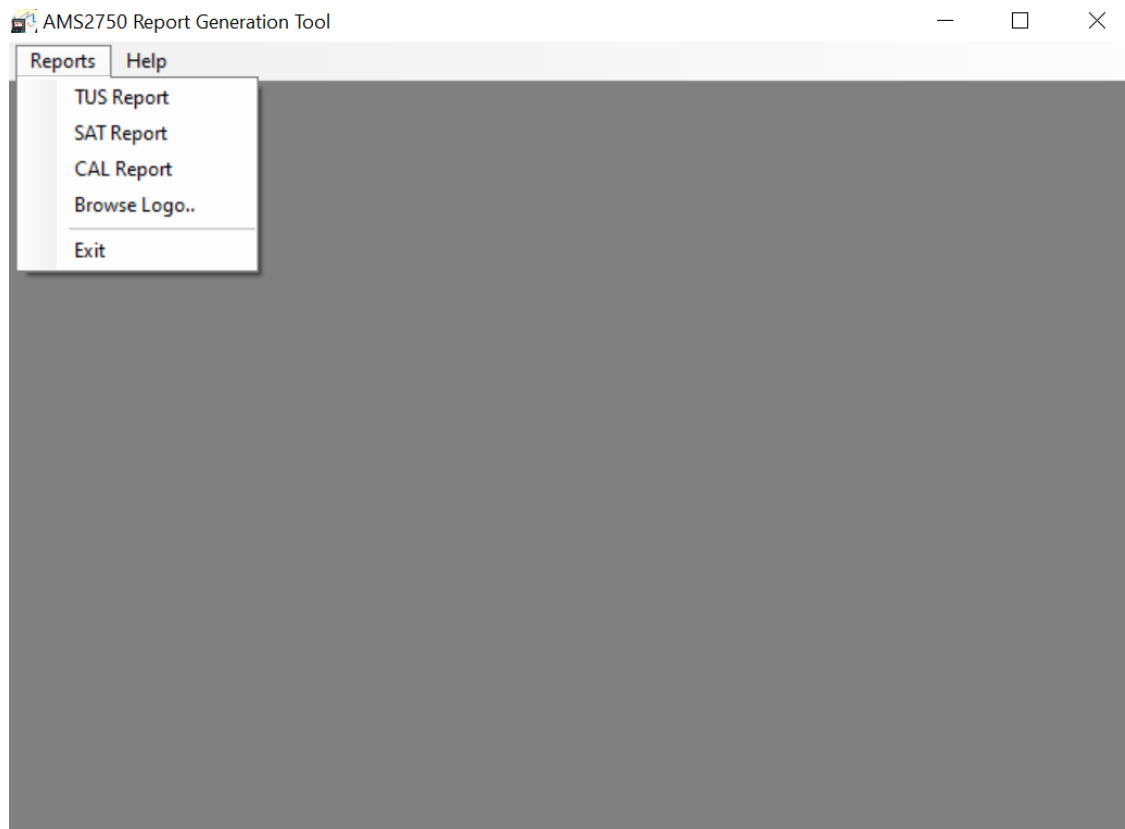

Reports tab - select to create a TUS report or a SAT report using the creation wizard. The Browse Logo option is here so you can select a logo to use as a header on your report. Exit will produce a question asking if you want to close the application, Yes will close the application.

Help Tab - this opens the Help menu and the About sub menu gives version information of the application.

CAL Report (Calibration Report Generation)

The calibration report will have information about various calibration parameters of the recorder at the time the calibration process was performed.

Browse Logo..

You can insert your own company Logo/image which will appear on the top of every page of the generated report. A new folder "Images" will be created after you select "Browse Logo..." and be stored along with the application. When you use a logo it will be stored in this Images folder for future use.

You can select any logo image so long as it is either .bmp or .jpg format. It should not be any bigger than 14mm (0.55") height) x 63.5 (2.5") width. Ideal dimensions in pixels are 81x81, 96x96, 300x300.

When the first report with new logo is created, Honeywell.jpg will be saved in "images" folder as a backup for future.

After selecting any logo, another file with name logo .jpg will be created and placed in the images folder. This logo will be used for subsequent reports until user selects another image. If you select logo.jpg again from the Images folder, a message will appear informing you that this file is already selected and prompting you to select another if this one is no longer required.


A backup copy of the Honeywell logo will always be kept at this location with name "Honeywell.jpg". This can be used at any time to re-use the logo again in the report.

Add a Logo

Select Browse Logo.. and browser the window will open.

Go to where your logo is located and select it by clicking on Open.

This logo will now appear on the top of every page of the generated report. The logo selected will be placed automatically into the Images folder and become the default for subsequent reports until another is selected.

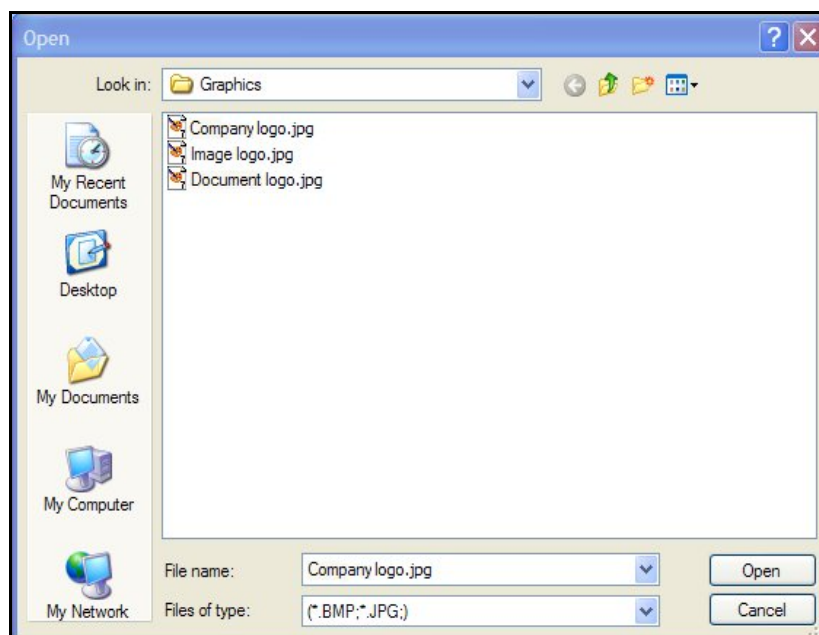

AMS2750 Report Generation Tool

SAT Report Wizard

When you select the SAT Report menu option the wizard will be started. This will help creation of SAT Report.

Step 1 – Obtain information

This information will be printed on the SAT report.

SAT Report Wizard

Please provide information for creating SAT Report.

Oven Name/ID	Furnace 3	Control Sensor	T/C 10
Manufacturer	Big Oven Manufacturer	Tolerance	+/- 10F
Location	Ft. Washington PA	Oven Class	2
Procedure Number	P100-1A	Additional Comments	
If not performed In house			
SAT Calibration Company Name			
SAT Calibration Company Representative			

Generate PDF Cancel

- **Oven Name/ID** - enter the name or ID of the furnace or oven
- **Control Sensor** - enter an identifier for the Control Sensor
- **Manufacturer** - enter Manufacturer of the furnace or oven
- **Tolerance** - of the furnace or oven
- **Location** - enter the location of the company site
- **Oven Class** - Refer to AMS2750
- **Procedure number** - enter a procedure number for the SAT, where applicable
- **Additional Comments** - Add any comments to appear on the report

If the SAT test is not performed In house

- enter - **SAT Calibration Company Name**
- enter - **SAT Calibration Company Representative**


Generate PDF - This will start process of generating SAT Report PDF.

Cancel - Shows message box "Do you like to exit SAT Report Wizard?" If user selects Yes then wizard will be cancelled.


AMS2750 Report Generation Tool

Step 2 – Obtain location to save SAT Report PDF

This screen helps in obtaining the location to save PDF file. Reports can be saved on your local PC, remote machines or on any external devices attached with the machine. Reports can be saved only in the PDF format.

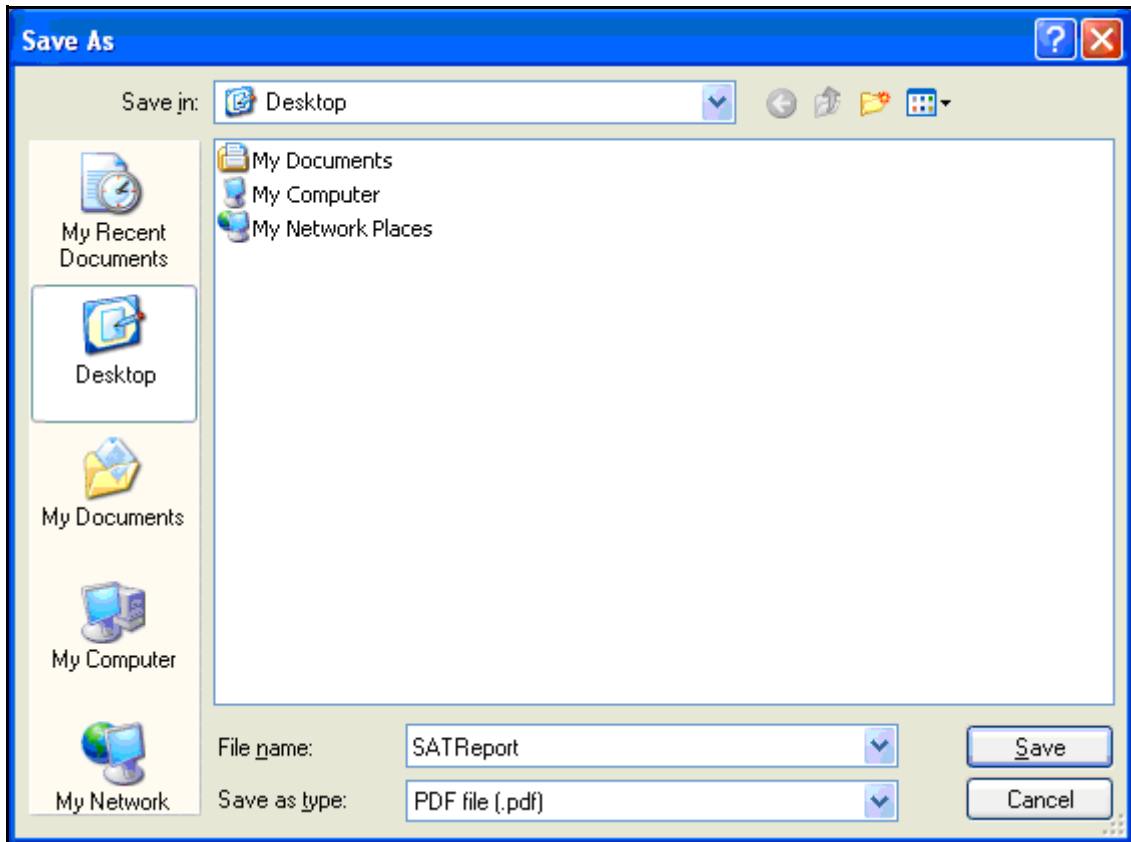

An egg timer message is produced informing you that the report is being created.

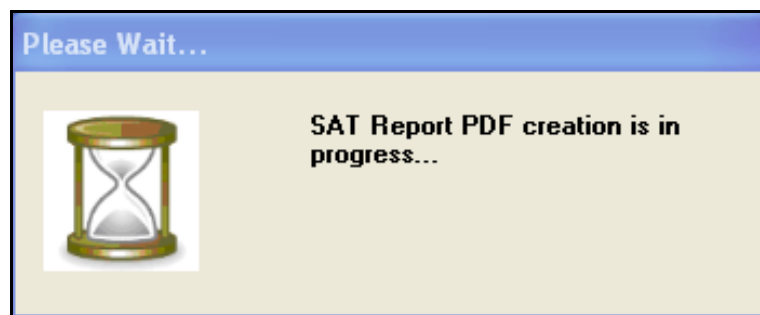

When the report is created a message is produced informing the report has been successfully created and shows the path location to where the file is now saved.

Once the report is created, if appropriate version of acrobat reader is installed then user will be prompted with the message box "Would you like to open/print the generated report?" If user selects "Yes" then report will be opened with installed Acrobat Reader.

The SAT report is complete

AMS2750 Report Generation Tool

SAT Report example

System Accuracy Test Log

Oven Name/ID <u>Furnace 3</u> Manufacturer <u>Big Oven Manufacturer</u> Location <u>Ft. Washington PA</u> Oven Class <u>2</u>	Control Sensor <u>T/C 10</u> Tolerance <u>+/- 10F</u> Additional Comments _____ _____ _____ _____	
--	---	--

SAT Calibration Company Name (If not done in - house) _____

SAT Calibration Company Representative _____

SAT Calibration Company Representative Signature _____

Thermocouple Placement Information

Date / Time	Controller/Recorder Indication	Uncorrected Test Instrument Reading	Correction for Test TC	Correction for Test Instrument	Corrected Test Instrument Reading	Reading Error	Pass /Fail	Tech	Test sensor / Test Indicator

SAT Procedure Number: 100-1A
 Approval Sign Off: _____

Engineer Name: _____

REF PROCEDURE: 100-1A

TUS Report Wizard

When you select TUS Report menu option the wizard will be started. This will help creation of the TUS Report.


Appropriate fields such as Instrument Info, Site Info and Furnace layout image are pre-populated with previously entered furnace information if the furnace ID of the currently loaded TUS data file is found to match a previously stored furnace ID. Where no stored information is found the relevant fields will be left as default (usually blank).

Step 1 – Select TUS file

TUS File Location - Enter the TUS file location/ file path or use the browse button to locate the TUS file required to create a TUS report. The file extension for the data file is .tus.

The Next button will validate the TUS file location and move you on to the next screen.

The Cancel button shows a message box "Do you like to exit TUS Report Wizard?" If Yes the wizard is cancelled.

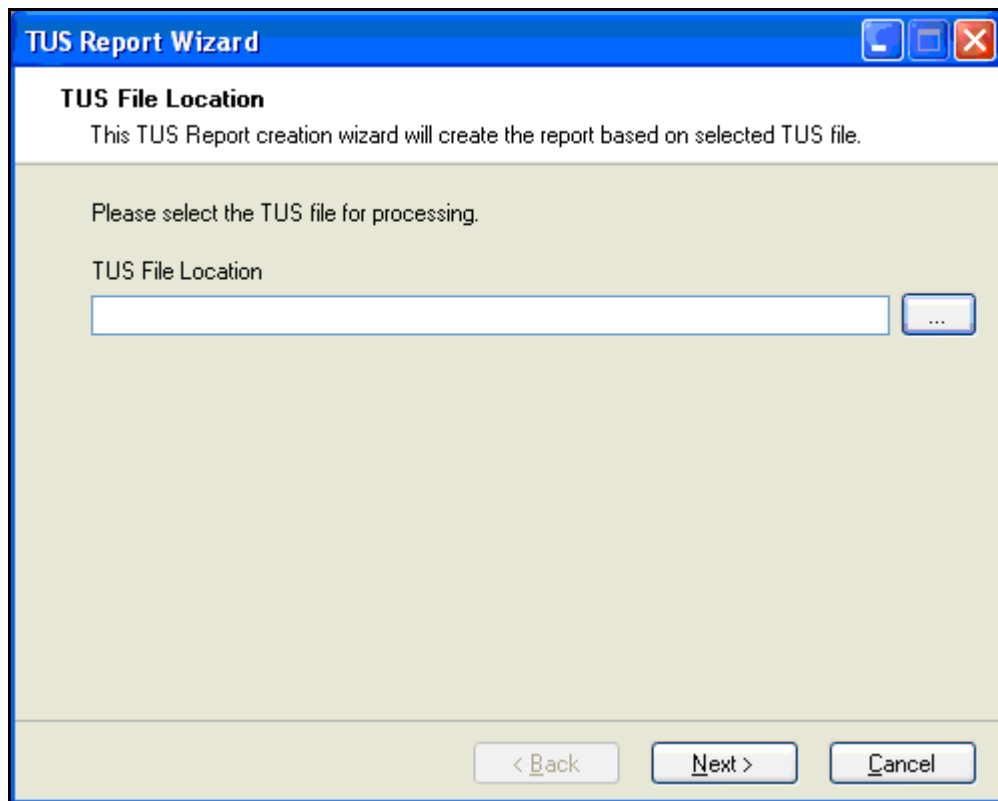

The screenshot shows a Windows-style dialog box titled "TUS Report Wizard". The main heading is "TUS File Location". Below the heading, it says "This TUS Report creation wizard will create the report based on selected TUS file." and "Please select the TUS file for processing." There is a text input field labeled "TUS File Location" with a browse button (three dots) to its right. At the bottom, there are three buttons: "< Back", "Next >", and "Cancel".

AMS2750 Report Generation Tool

Step 2 - Certificate and Procedure Number

The screenshot shows the 'AMS2750 Report Generation Tool' window. Inside, there is a 'TUS Report Wizard' dialog box with the title 'Certificate and Procedure Number'. The dialog contains the following elements:

- A checkbox labeled 'Display Cal Report as a part of Tus Report.' which is checked.
- A text prompt: 'Please enter the Report Reference Number for this completed TUS.' followed by an empty text input field.
- A text prompt: 'Generate CAL Report as a part of TUS report.' followed by an empty text input field.
- A text prompt: 'Next Survey Due Date (Editable MM/DD/YYYY)' followed by a text input field containing '5/11/2021' and a small calendar icon button.
- At the bottom, three buttons: '< Back', 'Next >', and 'Cancel'.

Below the dialog box, in the main window's status area, it says 'Press F1 for Help'.

This close-up shows the 'Next Survey Due Date (Editable MM/DD/YYYY)' field with the date '10/24/2008' entered. To the right of the field is a red warning icon with an exclamation mark and a small '...' button. Below the field, a yellow warning box displays the message: 'Next Survey Date should be greater than current date'.

Display Cal report as part of Tus Report - The user can view the CAL as part of the TUS report by selecting this option. Uncheck the checkbox not to print the CAL as a part of the TUS report. By default, the checkbox will be checked.

Please enter the Report Reference Number for this completed TUS.

Generate CAL Report as a part of TUS report.

Next Survey Due Date (Editable MM/DD/YYYY) - This field is derived from the TUS data file, using the fields: Instrument type (A to E), Material Type (Parts or Raw Material) and Furnace class. Calendar select button is available.

If the Next Survey Due Date is past the survey date, a warning box will appear "Next Survey date should be greater than current date", this will be prompted when "Next" is selected.

AMS2750 Report Generation Tool

Step 3 Recorder Certificate Information

This refers to the recorder calibration certificate.

Display Cal report as part of Tus Report - The user can view the CAL as part of the TUS report by selecting this option. Uncheck the checkbox not to print the CAL as a part of the TUS report. By default, the checkbox will be checked.

Please enter the Report Reference Number for this completed TUS.

Generate CAL Report as a part of TUS report..

Next Survey Due Date (Editable MM/DD/YYYY) - This field is derived from the TUS data file, using the fields: Instrument type (A to E), Material Type (Parts or Raw Material) and Furnace class. Calendar select button is available

Please enter Calibration Certificate number of the test recorder used to complete the TUS

Enter Certificate Expiry Date (MM/DD/YYYY) - enter the expiry date of the Recorder Calibration Certificate.

If the survey date is past the certificate expiry date, a warning box will be prompted when "Next" is selected. The message says "Certificate Expiry date is past the survey date, would you like to continue?". The generated report shall also highlight the expired date.

The screenshot shows the 'AMS2750 Report Generation Tool' window with a 'Reports' menu. A 'TUS Report Wizard' dialog box is open, titled 'Certificate and Procedure Number'. It contains the following fields and controls:

- Display Cal Report as a part of Tus Report.** with a checked checkbox.
- Please enter the Report Reference Number for this completed TUS.** with an empty text input field.
- Generate CAL Report as a part of TUS report.** with an empty text input field.
- Next Survey Due Date (Editable MM/DD/YYYY)** with a text input field containing '5/11/2021' and a calendar icon button.
- Navigation buttons at the bottom: '< Back', 'Next >', and 'Cancel'.

At the bottom of the main window, there is a status bar that says 'Press F1 for Help'.

AMS2750 Report Generation Tool

Step 4 – Furnace Instruments

Instruments 1 to 5

There are five instrument information boxes available associated with the furnace/TUS. All the screens are the same as shown here.

Enter the Furnace instrument information, including the instrumentation associated with the furnace, such as the Temperature controller, Recorder etc.

TUS Report Wizard

Thermal Processing Equipment Instruments - Instrument 1

Please enter the details for the control, measuring and recording instrumentation of the Thermal Processing Equipment. This information will be included in the TUS report.

Purpose

Asset Tag

Model ID

Serial Number

Cal. Certificate No.

Cal. Due Date ...
(MM/DD/YYYY)

< Back Next > Cancel

Purpose - what is it used for a part or raw material.

Asset Tag - enter for the instrument

Model ID - Model number of the instrument

Serial Number - Serial number of the instrument

Cal. Certificate No. - Calibration certificate number for the furnace/instrument

Cal. Due Date (MM/DD/YYYY) - If date is valid then it is compared with Survey Date and if the date is past the survey date then message box will be shown that "Calibration Due Date is past the Survey Date, would you like to continue?"


The number of instrument boxes to be completed depends on the furnace class and the instrumentation used on the furnace, complete as many as required based on AMS2750.

AMS2750 Report Generation Tool

Step 5 Furnace Comments

Enter the serial number for the furnace or oven.

Allows you to enter any general comments concerning the furnace; these will be included in the report.

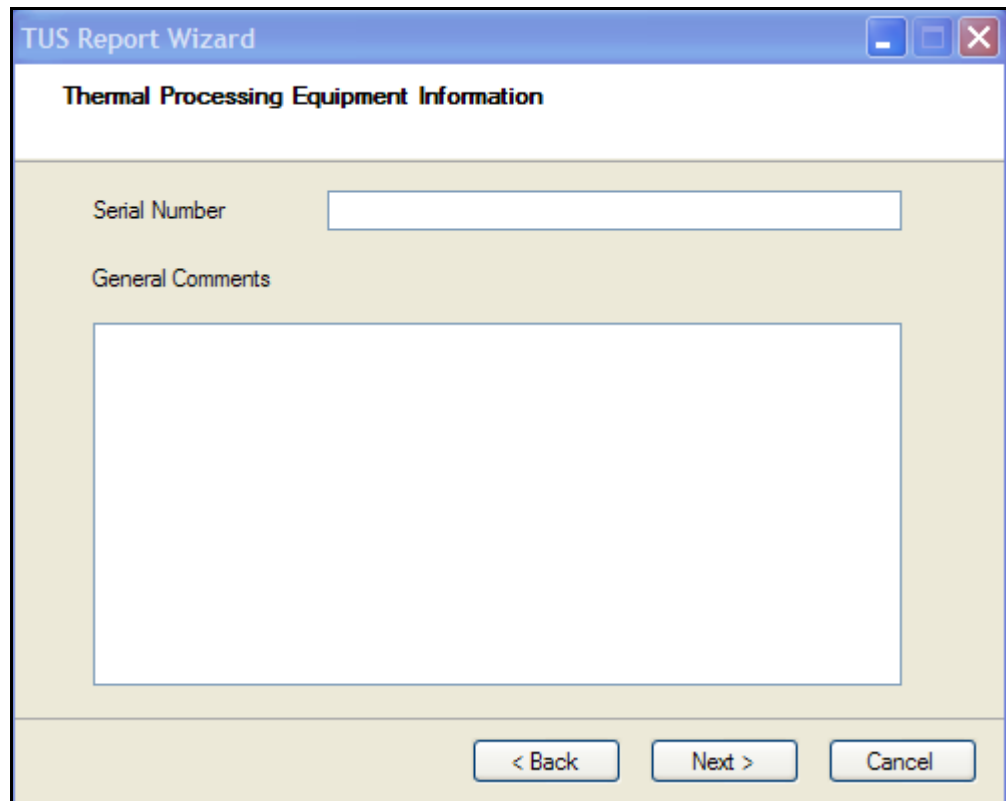

The screenshot shows a Windows-style dialog box titled "TUS Report Wizard". The main heading inside is "Thermal Processing Equipment Information". Below this heading, there are two input fields: "Serial Number" followed by a single-line text box, and "General Comments" followed by a larger multi-line text area. At the bottom of the dialog, there are three buttons: "< Back", "Next >", and "Cancel". The dialog has a standard Windows window frame with minimize, maximize, and close buttons in the top right corner.

AMS2750 Report Generation Tool

Step 6 Site Information

Enter the Customer Name, Location Address and Contact Name that will be entered onto the report.

Please enter the name of the Survey Testing Company if the survey is not performed in-house. If the survey is performed in house this field can be left blank. Customer specific Process information can be entered for Job Name, Customer Name and Comments.

The screenshot shows a Windows-style dialog box titled "TUS Report Wizard". Inside, the "Site Information" section contains several input fields. The "Customer Name" field is filled with "Heat Treatment Plant". The "Location Address" field is filled with "Washington". The "Contact Name" field is empty. Below this, a text prompt says "Please enter the name of the Survey Testing Company if the survey is not performed in-house." followed by an empty text box. The "Customer Specific Process Information" section contains three fields: "Job Name" filled with "Heating Parts", "Customer Name" filled with "Airship", and a large empty "Comments" text area. At the bottom right are three buttons: "< Back", "Next >", and "Cancel".

Site Information	
Customer Name	Heat Treatment Plant
Location Address	Washington
Contact Name	
Please enter the name of the Survey Testing Company if the survey is not performed in-house.	
Customer Specific Process Information	
Job Name	Heating Parts
Customer Name	Airship
Comments	
< Back Next > Cancel	


Step 7 Furnace Thermocouple Positioning

This screen is used to show the positions of thermocouples inside the furnace. This will default to the image of 9 thermocouples rectangular/square. The down arrow will provide more options for commonly used layouts found for survey layouts.

These are static bitmap images and cannot be changed; care needs to be taken to make sure that the position of the T/C as positioned in the furnace matches the diagram.

Add and references or comments in “Add Notes”. These will appear in the TUS report.

Alternatively you can upload your own “Custom” layout (graphic image).

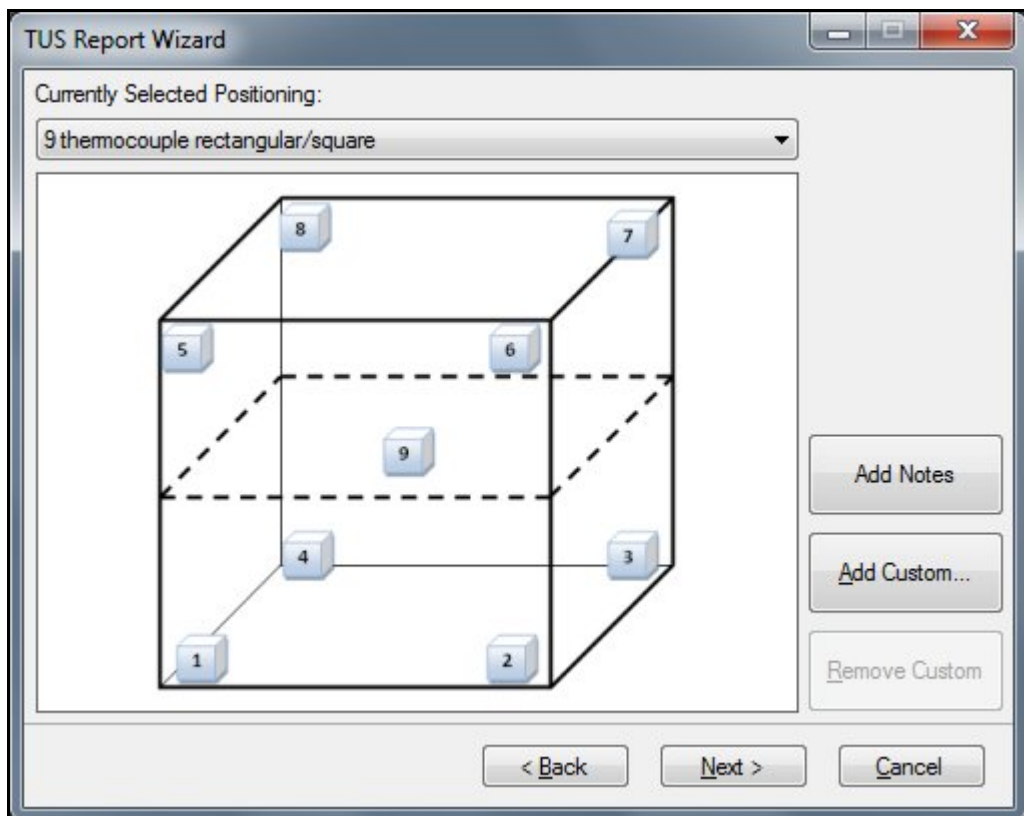

Default layouts include:

- 9 thermocouple rectangular/square
- 5 thermocouple rectangular/square
- 5 thermocouple cylindrical
- 9 thermocouple cylindrical (A)
- 9 thermocouple cylindrical (B)

Add Notes - Allows the user to add furnace identification details or other notes related. This will reflect in TUS Report.

AMS2750 Report Generation Tool

Add Custom - Allows user to add custom images. The TC Positioning Layout Form will be displayed, see [“TC Positioning Layout Form” on page 475](#). Custom images are the responsibility of the user and the AMS2750 Report Generation Tool will notify you if the image fails to meet certain requirements i.e. file type, size limitations.


Remove Custom Button - This button remains enabled for only custom images. If this button is pressed it removes the selected image from the database.

TC Positioning Layout Form

When “Add Custom” button is used the TC Positioning Layout box appears so you can upload your own image.

Enter the Layout name and then select the “Upload Image” button

Upload Image - Once image is selected it will be shown in Thermocouple Layout image box. Image should be in BMP or JPEG format. Supported image size is around 260 x 250 pixels. If the image is not supported then Error icon is shown besides the “Thermocouple Layout image” label.

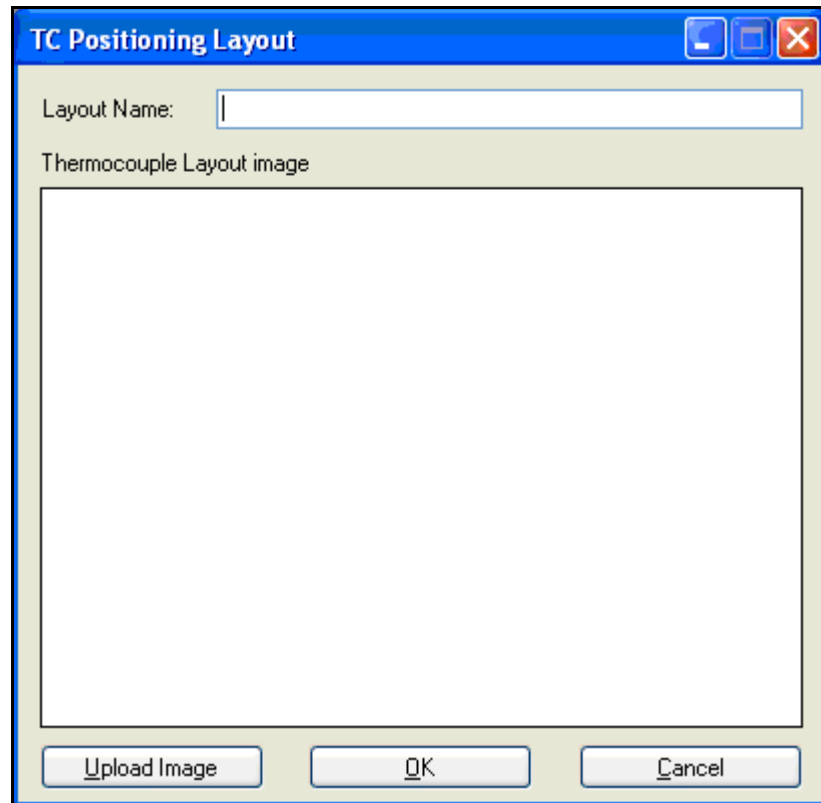


The image shows a Windows-style dialog box titled "TC Positioning Layout". It has a blue title bar with standard minimize, maximize, and close buttons. The main area is light gray and contains a text input field labeled "Layout Name:" and a large rectangular area labeled "Thermocouple Layout image". At the bottom, there are three buttons: "Upload Image", "OK", and "Cancel".

AMS2750 Report Generation Tool

Step 8 - TUS Offset Information

These are offsets information; “As Found” and “As Left”, in which customer would put into the controller to create a bias if they needed to do.

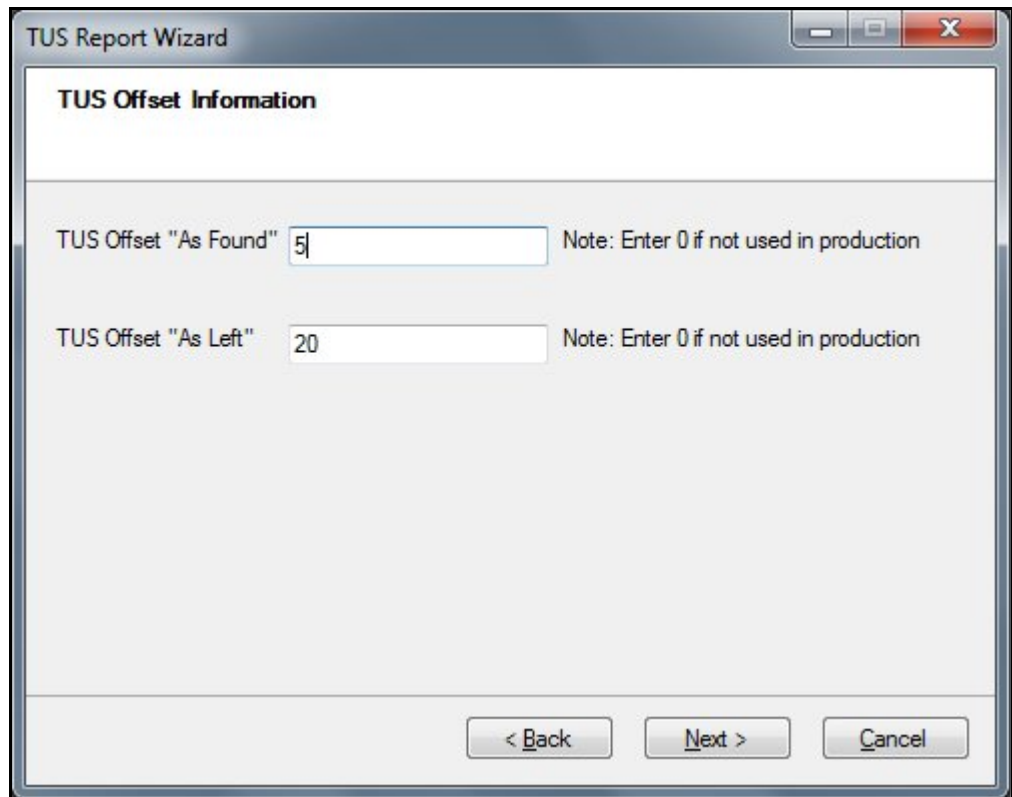

The screenshot shows a Windows-style dialog box titled "TUS Report Wizard". The main heading inside is "TUS Offset Information". There are two input fields. The first is labeled "TUS Offset 'As Found'" and contains the value "5". The second is labeled "TUS Offset 'As Left'" and contains the value "20". To the right of each input field is a note: "Note: Enter 0 if not used in production". At the bottom right of the dialog are three buttons: "< Back", "Next >", and "Cancel".

Offset Type	Value	Note
TUS Offset "As Found"	5	Note: Enter 0 if not used in production
TUS Offset "As Left"	20	Note: Enter 0 if not used in production

AMS2750 Report Generation Tool

Step 9 – Plot Readings Form

The screenshot shows the 'AMS2750 Report Generation Tool' window. Inside, there is a 'TUS Report Wizard' dialog box with a 'Plot Readings' tab. The dialog has two input fields: 'Start the graph plot for each SetPoint, when TC's are within' with a value of 30 and 'Deg. C of the SetPoint', and 'Time to show readings once stability reached for set point 1' with a value of 30 and 'Minutes'. At the bottom of the dialog are three buttons: '< Back', 'Next >', and 'Cancel'. The main window has a menu bar with 'Reports' and 'Help'. A status bar at the bottom of the main window says 'Press F1 for Help'.

Start the graph plot for each Setpoint, when TC's are within "X" Deg of the Setpoint - This indicates that it will only start the readings table and graph once all thermocouples are within "X" degrees of setpoint. For example: A setpoint is at 100 Deg C and you enter 30 then it will start plotting when all thermocouple readings reach to 70 Deg C. This does not affect the data in the TUS file, only the data being graphed for the report.

Time to show readings once stability reached for set point 1 "X" Minutes - This is to allow only specified period of recorded data to be in tabular form after TC's are defined as "stable" or until the temperature moves outside the range detailed. For example "Only 30 minutes of data shall be in tabular form once stability has been reached"

Note: Time to show readings once stability reached for set point 1 - If the time set by the user exceeds the end time of the TUS survey, then the user will get entries up to the end time of the TUS survey irrespective of the time value set by the user.

AMS2750 Report Generation Tool

Step 10 - Results and Affirmation

This screen summarises each setpoint temperature result by stating which furnace class it met during the TUS, and prompts you to enter general survey comments, and an affirmation field where you will make the statement as to whether the survey is a pass or fail.

The screenshot shows a software window titled "TUS Report Wizard" with a standard Windows-style title bar (minimize, maximize, close buttons). The main content area is titled "Results Summary" and displays "SP 1 @ 200 °F Aborted". Below this, there is a label "TUS Test Complies with :" followed by a text box containing "AMS2750 Standard". Further down, there are two side-by-side text areas: "General Survey Comments" on the left and "Affirmation" on the right, both with vertical scrollbars. Below the "General Survey Comments" area, a note states "* Comments & Affirmation are included in TUS Report". To the right of the "Affirmation" area, there is a label "Authorized Person" above a text box. At the bottom of the window, there are three buttons: "< Back", "Next >", and "Cancel".

TUS Test Complies with: AMS 2750 or other processing specifications. Enter any other compliance required to additional specifications (e.g. Mil-6875, BAC-5621, etc.)


Enter any text required into the General Survey Comments & Affirmations field.

Enter the name of the Authorized Person who is creating the TUS report.


AMS2750 Report Generation Tool

Step 11 - Save TUS Report

This screen helps in obtaining the location to save the PDF file. Reports can be saved on your local PC, remote machine or on any external devices attached with the machine. Reports can be saved only in the PDF format.

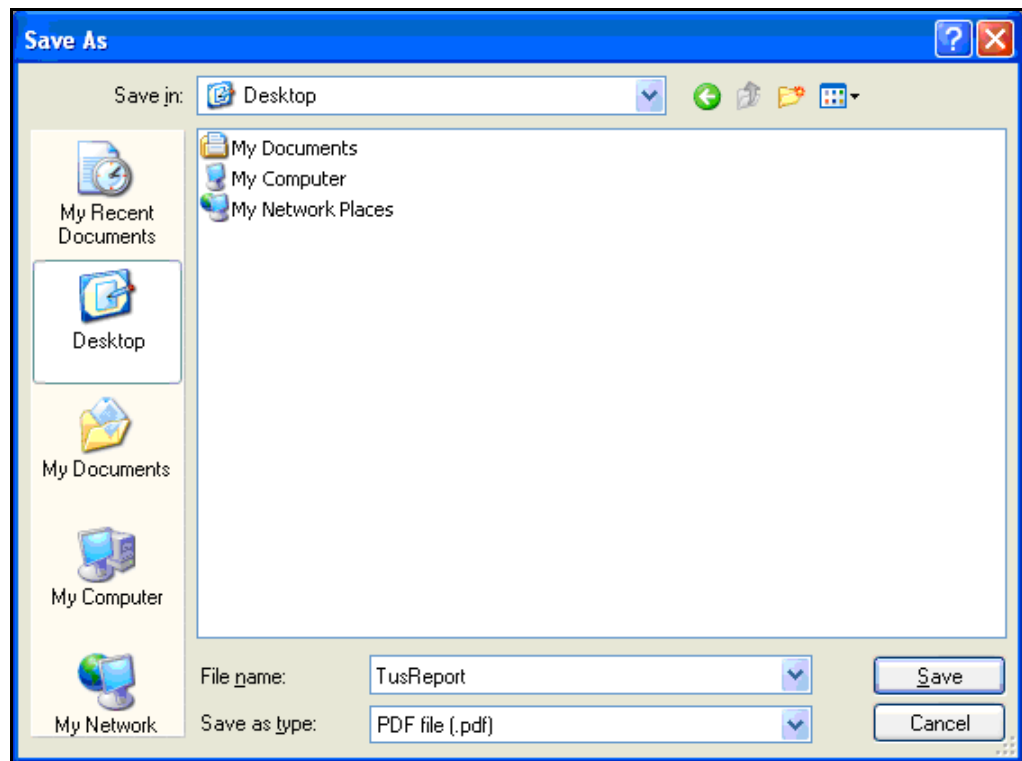

An egg timer message is produced informing you that the report is being created.

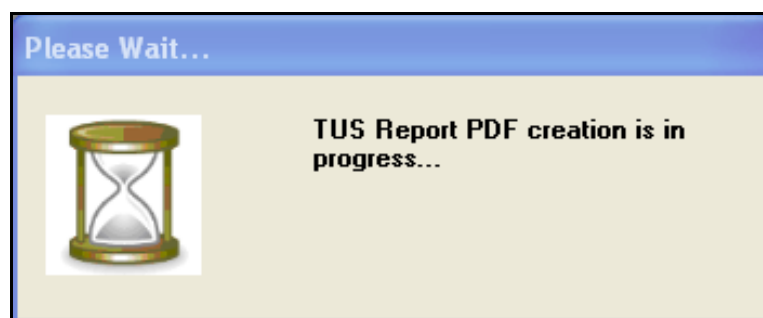

When the report is created a message is produced informing the report has been successfully created and shows the path location to where the file is now saved.

Print TUS Report

Once the report is created, if appropriate version of acrobat reader is installed then user will be prompted with the message box "Would you like to open/print the generated report?" If user selects "Yes" then report will be opened with installed acrobat reader tool.

The TUS report is complete

A final dialog appears asking if you wish to exit the application

AMS2750 Report Generation Tool

Header and Footer report information

The header and footer information that is auto-displayed on the report includes:

Header

- Report Reference Number
- Customer Name or Reference
- Furnace Tag, Name or Reference
- Logo option

Footer

The Footer information includes:

- Page Number of total number
- Report Generated by ** TUS Report Tool"

AMS2750 Report Generation Tool

TUS Report - Example

The next few pages show selected pages from a sample test TUS report

Report Reference Number:					
Customer:	testing				
Equipment:	Furnace 1				
Honeywell					
Temperature Uniformity Survey Report					
Site Information					
Customer			testing		
Location Address					
Contact Name					
Customer Specific Process Information					
Job Name					
Customer Name					
Comments					
Thermal Processing Equipment					
Equipment Name			Furnace 1		
Equipment Manufacturer			HTS		
Furnace Class			2		
Model Number		1234	Serial Number		
Material Type		Parts	Instrument Type		B
Asset Tag	Model No.	Serial No.	Instrument Purpose	Cal. Certificate No.	Cal. Due Date
	123	23	testing	123	
Comments					
Survey Affirmation					
Report Reference Number:					
Issue Date: 7/6/2021					
Affirmation:					
TUS Test Complies with: AMS2750 Standard					
Customer Signature:			Date:		
Authorized Person:			Date: 7/6/2021		
Approved		Signed:	Date:		
		Printed:			
Temperature Uniformity Class Achieved By Set Point					
SP1 150.0 °C		Met the requirements of Class 1 Furnace		Survey Passed <input type="checkbox"/> Failed <input type="checkbox"/>	
<hr/>					
Report Generated By Honeywell Report Tool		All measured values (except the control TUS Sensor) are corrected		Page: 1 of 12	

AMS2750 Report Generation Tool

Sample pages taken from a test TUS report

Report Reference Number:		Honeywell
Customer: testing		
Equipment: Furnace 1		
Max Difference across Survey TUS Sensors During Measurement		
	Difference in °C	
SP1 150.0 °C	0.0	
<i>All channels shown are corrected</i>		
Max Difference between Survey TUS Sensors & Controller Setpoint During Measurement		
	Difference in °C	
SP1 150.0 °C	1.0	
<i>All channels shown are corrected</i>		
Maximum Ramp Overshoot		
	In °C	
SP1 150.0 °C	1.0	
<i>All channels shown are corrected</i>		
Ramp Duration- Measured from last TUS Sensor to leave Previous Dwell, to last TUS Sensor to Enter Next SP		
	Ramp Time - HH:MM:SS	
SP1 150.0 °C	00:31:41	
<i>All channels shown are corrected</i>		
TUS Sensor Lag- Time Between 1st TUS Sensor to Enter Dwell Zone, to last TUS Sensor to Enter Dwell Zone		
	Lag Time - HH:MM:SS	
SP1 150.0 °C	00:00:00	
<i>All channels shown are corrected</i>		
Survey Comments		
Pre TUS Instrument Comments	Ignored invalid input calibration.	
Post TUS Instrument Comments	All soaks have been completed the survey was stopped automatically	
Survey Details		
Atmosphere		
Load Conditions		
Batch/Lot Number		
Initial Or Periodic		
Recorded Data File	Furnace 1 - 3 - 01 Jul 21.tus	
Temperature Units	°C	
Survey Instrument Type	Trendview Recorder	
Survey Instrument Serial No.	999230	
Survey Instrument Certificate No. &		
Report Generated By Honeywell Report Tool		
All measured values (except the control TUS Sensor) are corrected		
Page: 2 of 12		

AMS2750 Report Generation Tool

Sample pages taken from a test TUS report.

Report Reference Number:		Honeywell	
Customer: testing			
Equipment: Furnace 1			
Expiry Date			
Procedure Number			
Data Interval		120 Seconds	
Start Time & Date		7/1/2021 14:08:18	
End Time & Date		7/1/2021 14:34:03	
Next Survey Due		7/15/2021	
Survey Engineer		gokul	
Identification Of the Testing Company (If not performed In House)			
Signature for the Testing company (If not performed In House)			

Survey SetPoint Temperatures			
	Temperature	Tolerance	Furnace Class
Set Point 1	150.0 °C	+/- 2.000 °C	1

Test TUS Sensor Identification		
	Serial No.	Report Reference Number
CH1	1	HTS-CERT001
CH-CNTRL		
CH10		

Test TUS Sensor Correction Factors*	
	SP1 150.0 °C
CH1	0.0
CH-CNTRL	0.0
CH10	0.0

**Accuracy derived from TUS Sensor Cal certs*

Survey Recorder Correction Factors*	
	SP1 150.0 °C
CH1	0.0
CH-CNTRL	0.0
CH10	0.0

**Accuracy derived from Recorder Cal*

Instrument As Found/ As left tables
Ref Calibration Cert: Date:
Calibration for input CH-CNTRL

Report Generated By Honeywell Report Tool All measured values (except the control TUS Sensor) are corrected Page: 3 of 12

AMS2750 Report Generation Tool

Sample pages taken from a test TUS report.


Report Reference Number:		Honeywell
Customer: testing		
Equipment: Furnace 1		
Injected Temperature	Previous correction	Current correction
100.0	0.0	-2.6
125.0	0.0	6.6
150.0	0.0	5.1
175.0	0.0	3.4
200.0	0.0	1.4
225.0	0.0	4.7

Calibration for input CH10		
Injected Temperature	Previous correction	Current correction
100.0	0.0	-6.9
125.0	0.0	2.1
150.0	0.0	0.2
175.0	0.0	-1.8
200.0	0.0	-4.1
225.0	0.0	-1.1

Report Generated By Honeywell Report Tool	All measured values (except the control TUS Sensor) are corrected	Page: 4 of 12
---	---	---------------

AMS2750 Report Generation Tool

Sample pages taken from a test TUS report.

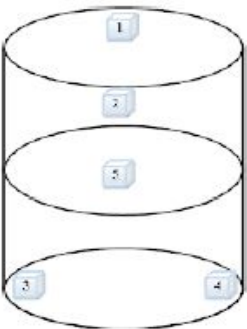
Report Reference Number:		Honeywell	
Customer: testing			
Equipment: Furnace 1			
TUS Sensor Furnace Position			
			
Qualified Work Area			
Width (x) ft	5	Volume: Cubic ft	125
Height (y) ft	5	Notes:	
Depth (z) ft	5		
CH1		1	
CH-CNTRL			
CH10			

Report Generated By Honeywell Report Tool All measured values (except the control TUS Sensor) are corrected Page: 5 of 12

AMS2750 Report Generation Tool

Sample pages taken from a test TUS report.

Report Reference Number:
Customer: testing
Equipment: Furnace 1



Temperature Uniformity Survey Results

Max & Min TUS Sensor Temps During Measurement Period		
	SP1 150.0 °C	
	Min	Max
CH1	151.0	151.0
CH-CNTRL	151.0	151.0
CH10	151.0	151.0
Limit TUS Sensor	CH 10	CH 10
Value	151.0	151.0
Uniformity	+1.0 °C	+1.0 °C

All channels shown are corrected


Report Generated By Honeywell Report Tool

All measured values (except the control TUS Sensor) are corrected

Page: 6 of 12


AMS2750 Report Generation Tool

Sample pages taken from a test TUS report.

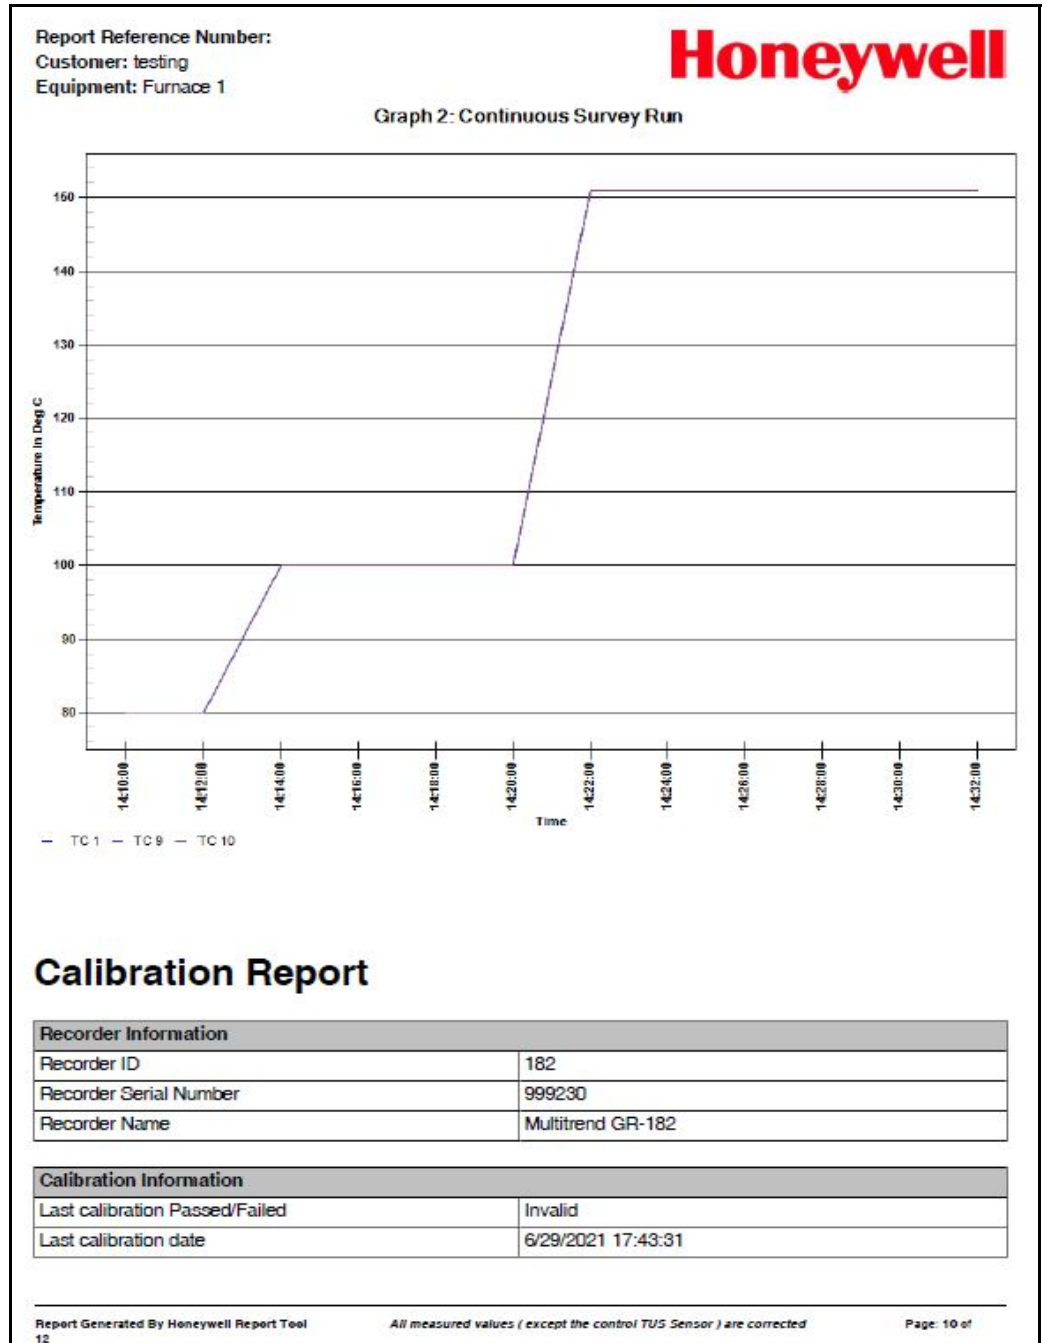

AMS2750 Report Generation Tool

Sample pages taken from a test TUS report

Report Reference Number:					
Customer: testing					
Equipment: Furnace 1					
Calibration for CH10					
Temperature °C	As Found Offset	Measured Temperature °C	As Left Offset	New Measured Temperature °C	Result
175	0	176.78	-1.78	175.01	Passed
200	0	204.06	-4.06	200	Passed
225	0	226.1	-1.1	225	Passed

Report Generated By Honeywell Report Tool

All measured values (except the control TUS Sensor) are corrected

Page: 12 of 12

AMS2750 Report Generation Tool

Calibration Certificate Report - Example

The next few pages show selected pages from a sample test Calibration Certificate report



Calibration Certificate

Recorder Information	
Recorder ID	1
Recorder Serial Number	999999
Recorder Name	Minitrend GR

Calibration Information	
Last calibration Passed/Failed	Passed
Last calibration date	4/5/2021 11:19:13
Next calibration date	10/2/2021 11:19:13
Calibrator type	NA
Calibrator number	1234
Traceable to	NA
Technician ID	1
Calibration performed by	xyz
Calibration performed for	abc
Quality Organisation	sss
Humidity %	0%
Mode	TUS

Calibration Temperatures		
Point No.	Cal point Temperature °C	Max Allowed Error °C
1	0	0.6
2	100	0.6
3	200	0.6
4	300	0.6
5	400	0.6
6	500	0.6
7	600	0.6

Sensor Information			
Name	Property	Type	Result
GH1	Expendable	Type K	Passed
GH2	Expendable	Type K	Passed
GH3	Expendable	Type K	Passed
GH4	Expendable	Type K	Passed

AMS2750 Report Generation Tool

Sample pages taken from a test Calibration Certificate report



Calibration for CH1					
Temperature °C	As Found Offset	Measured Temperature °C	As Left Offset	New Measured Temperature °C	Result
0	-6.9	2.75	-4.9	0.2	Passed
100	90	7.28	92.8	100.2	Passed
200	186.4	10.82	191	200.2	Passed
300	279.4	14.17	289.3	300.2	Passed
400	375.3	18.7	387	400.2	Passed
500	471.8	22.64	485	500.2	Passed
600	568.3	26.57	583	600.2	Passed

Calibration for CH2					
Temperature °C	As Found Offset	Measured Temperature °C	As Left Offset	New Measured Temperature °C	Result
0	-6.9	2.75	-4.9	0.2	Passed
100	90	7.28	92.8	100.2	Passed
200	186.4	10.82	191	200.2	Passed
300	279.4	14.17	289.3	300.2	Passed
400	375.3	18.7	387	400.2	Passed
500	471.8	22.64	485	500.2	Passed
600	568.3	26.57	583	600.2	Passed

Calibration for CH3					
Temperature °C	As Found Offset	Measured Temperature °C	As Left Offset	New Measured Temperature °C	Result
0	-6.9	2.75	-4.9	0.2	Passed
100	90	7.28	92.8	100.2	Passed
200	186.4	10.82	191	200.2	Passed
300	279.4	14.17	289.3	300.2	Passed
400	375.3	18.7	387	400.2	Passed
500	471.8	22.64	485	500.2	Passed
600	568.3	26.57	583	600.2	Passed

Calibration for CH4					
Temperature °C	As Found Offset	Measured Temperature °C	As Left Offset	New Measured Temperature °C	Result
0	-38.15	53.68	-45.19	0.33	Passed
100	65.06	58.71	52.33	100.22	Passed
200	162.9	60.79	151.31	200.13	Passed
300	263.97	59.11	252.14	299.67	Passed
400	362.59	58.58	352.4	400.04	Passed

Report Generated By Honeywell Report Tool

All measured values (except the control TUS Sensor) are corrected

Page: 2 of 8

AMS2750 Report Generation Tool

Sample pages taken from a test Calibration Certificate report.

Report Reference Number:

Customer: testing

Equipment: Furnace 1



Calibration for CH10

Temperature °C	As Found Offset	Measured Temperature °C	As Left Offset	New Measured Temperature °C	Result
175	0	176.78	-1.78	175.01	Passed
200	0	204.06	-4.06	200	Passed
225	0	226.1	-1.1	225	Passed

A

<i>AC Power</i>	25
<i>Acknowledge Alarm</i>	185
<i>Active X Control</i>	287
<i>Add Screen</i>	169
<i>Administrator, Passwords</i>	175
<i>AI Calibration</i>	142
Factory Calibration	142
<i>Alarm</i>	
Event Causes	124
<i>Alarm Acknowledge</i>	
Event Effects	131
<i>Alarm Markers</i>	248
Alarm Marker Flash Colours	248
<i>Alarm Messages</i>	197
<i>Alarm Relay Card Connections</i>	40
4 and 8 Alarm Relay Cards	40
Channel Numbers	41
<i>Alarm/Digital IO Diagnostics</i>	212
<i>Alarm/Digital IO Menu</i>	79
Alarm Relay Card	79
Digital IO Card	79
<i>Alarms Appendix D</i>	367
<i>Alarms Menu</i>	185
Acknowledge Alarm	185
Change Log Speed	90
Configure Alarms	185
Deviation	89
Email Alarm	90
High and Low	89
Mark Chart	90
Rate Up or Rate Down	89
View Alarms	185
<i>Alarms, Pens</i>	89
<i>All Messages</i>	197
<i>AMS2750</i>	
Audit Trail	457
Events	456
Passwords	459
Screen Designer	460
TC Cal Adjust	417
TC Usage Tracking	418
TrendManager Pro Software	460
<i>AMS2750 (Process Mode)</i>	413
Countdown Timers (AMS2750)	409
Credit Option	406
Furnace Config. Menu	413
Info	416
Menu	407
Process Screen	407
Sensors Config. Menu	414
<i>AMS2750 (TUS Mode)</i>	420
Copy Cal. Adjust	428
Credit Option	421
Furnace Config. Menu	424
Info	427
Menu	423
Sensor Config. Menu	427
TUS Screen	422
<i>AMS2750 Capabilities</i>	405
<i>AMS2750 Process mode</i>	406
<i>AMS2750 Report Generation Tool</i>	461
<i>Analogue In Menu</i>	75
<i>Analogue Input Card</i>	31, 32
Channel Numbers	32
CJC Connectors	34
Connection Details	32
Current Input	32
Diagnostics	211
Signal Wiring	33
<i>Analogue Out Menu</i>	78
<i>Analogue Output Card</i>	36
Channel Numbers	36
Connection Details	37
Diagnostics	212
<i>Analogue Output Specifications</i>	313
<i>Appearance</i>	171
<i>Appendix A Quality and Safety</i>	345
<i>Appendix B Maths Expressions</i>	347
<i>Appendix C Thermocouple Connections</i>	363
<i>Appendix D Alarms</i>	367
<i>Appendix E Ethernet</i>	369
<i>Appendix F Fuzzy Logging</i>	371
<i>Appendix G F sub zero Sterilisation</i>	375
<i>Appendix H Calibration</i>	377
<i>Appendix I Battery Data</i>	379
<i>Appendix J</i>	
Function Codes and Memory Maps	381
<i>Appendix K Troubleshooting</i>	389, 403
<i>Appendix L</i>	
AMS2750 Capabilities	405
<i>Audit Trail (AMS2750)</i>	457

B

<i>Backlight Event Effects</i>	132
<i>Backlights</i>	311
<i>Barcode Reader</i>	45
<i>Barcodes for Batch</i>	193
<i>Batch</i>	
Event Causes	124
Event Effects	134
<i>Batch Commands</i>	193
<i>Batch Mark on Chart</i>	192
<i>Batch Menu</i>	148
Barcodes for Batch	193
Concurrent Batch Mode	148
<i>Batch process screens</i>	150
<i>Batch Setup/Control</i>	190
Batch Commands	193
Batch Mark on Chart	192
<i>Batch, Overview</i>	55
<i>Battery Data Appendix I</i>	379
<i>Battery Safety</i>	379
Processor Board	379
<i>Brightness</i>	
Screen Saver	155

C

<i>Cables</i>	24
<i>Calibrate, Screen</i>	189
<i>Calibration</i>	142
AI Calibration	142
Appendix H	377
CJC Calibration	144
Maintenance	312
Sensor Compensation	377
User Calibration	142
<i>Calibration Input Range</i>	143
<i>Card and Slot Positions</i>	27
<i>Card Positions and Channel numbers</i>	73
<i>CE Mark</i>	345
<i>Change Chart Speed</i>	
Event Effects	134
<i>Change Log Speed, Alarms</i>	90
<i>Change Passwords</i>	177
<i>Channel Mapping</i>	
Map button	187
Parent Pens	188
<i>Channel Mapping Objects</i>	188
<i>Channel Mapping Widgets</i>	187
<i>Characterisation Tables</i>	82
<i>Chart Control</i>	

Event Effects	133
<i>Chart Controls</i>	
Event	281
Realtime	281
<i>Chart Speeds</i>	247
<i>Charts</i>	154
<i>CJC Calibration</i>	144
<i>CJC Connectors</i>	34
<i>Clean Screen</i>	189
<i>Cleaning the Recorder</i>	311
<i>Clear All Messages</i>	
Event Effects	133
<i>Client/Server Network</i>	116
<i>Commit Configuration</i>	216
<i>Commit Later, Configuration</i>	217
<i>Comms</i>	
Data Logging and Transfer	261
Getting connected - IP Address	260
Hubs or Switches	259
Internet Security Settings	287
Local Area Network	261
Modbus Capabilities	285
PC Ethernet Connections	259
Protocols	258
Remote Networks	261
Remote Viewer	286
Software Installation	264
Standard Communications Interfaces	257
Web Browser	286
<i>Comms Connections</i>	44
<i>Comms Diagnostics</i>	214
FTP Status	215
Modbus Status	214
Peers Status	215
SMTP Status	215
<i>Comms Menu</i>	
DNS/WINS/MDNS	97
IP Address	95
IP Address Entry	96
Ports	97, 109
Services	95
TCP/IP	95
USB Comms Ports	109
<i>Comms Server</i>	269
Add a Database	273
Add a Database Server	273
Add a Device	273
Add a new Device	270
Add Pens for Logging	279
Administration	270
Client Connections	280
Comms Server Overview	269
Configure Database Logging	270
Connect to a Database	273
Connect to a Database Server	270
Database	269
Database Logging	280
Delete a Database	273
Delete a Device	276

Diagnostics	270
Edit a Device	276
Logging Configuration	278
Network Settings	270
Preferences	270
Shutdown	270
Status Screen	280
Summary of Logging Changes	279
Comms Server Database	284
Comms Server Overview	269
Comms Server Setup	272
Comms Server Start up	269
Comms Server Status Screen	280
Comms Services Menu	108
Email	113
FTP	118
Modbus	109
Peers	119
SNTP	115
Web	113
Comms, Overview	51
Communications Connections	
Ethernet Connections	44
Concurrent Batch Mode	148
General Batch Properties	148
Group# Batch	150
Configure Alarms	185
Configure Menu	69
Edit Layout	167
Layout	167
Load Layout	173
Passwords	174
Save Layout	172
Setup Menu	70
Control TC	428
Copy Cal. Adjust	
AMS2750 (TUS Mode)	428
Countdown Timers	409
Counters	
Event Causes	126
Event Effects	132
Counters - Process View and Reset	201
Counters Menu	135
Credits	140
Cursor	240
Custom Screens	251

D

Data Logging and Transfer	261
Data Storage, Overview	52
Database Management Tool	290
Database Size Management	272

Daylight Saving	146
DC Input 24V	44
DC Power	25
Default Time Zone	67
Delayed Event	
Event Effects	133
Delete Screen	169
Demo Traces	145
Deviation Alarm Markers	248
Deviation Alarms	89
Diagnostics	
Alarm/Digital IO	212
Analogue In	211
Analogue Out	212
Comms	214
Comms Server	270
Event Status	213
Hardware Status	211
Media	216
Pulse Inputs	213
Diagnostics Messages	197
Diagnostics Status	210
Digital Input	
Event Causes	124
Digital IO Card Connections	40
8 and 16 Digital Input/Output Cards	42
Channel Numbers	43
Digital Outputs	
Event Effects	131
Dimensions	12
Discard Configuration	216
Display Alert	
Event Effects	134
Display, Overview	51
Displaying Totals	94
DNS/WINS/MDNS	97
DR Graphic recorders alarm card channel number mapping	41
DR Graphic recorders alarm card slot position 41	
DR Graphic recorders Digital I/O card channel number mapping	43
DR Graphic recorders Digital I/O card slot position	43
Dual Point Cal	377
During a Survey (AMS2750)	450

E

Edit Custom Screens	186
Edit Layout	167
Add Screen	169

Appearance	171
Delete Screen	169
Screens	167
Settings	170
<i>Edit Recording</i>	158
<i>Edit Recording Menu</i>	
Scheduled Export	158
Storage Alarm	160
Storage Bias	159
<i>Edit Screen Properties</i>	
Custom Screens	186
Standard Screens	186
<i>Edit Setup</i>	71
<i>Edit Standard Screens</i>	186
<i>Electrical Installation</i>	
24V DC Input	44
AC Power	25
Alarm Relay Card Connections	40
Analogue Input Card	31
Analogue Output Card	36
Cables	24
Comms Connections	44
DC & AC Power	25
Digital IO Card Connections	40
Fuses	24
Installation Category	24
Pulse Input Card	37
Signal Wiring	24
SPNC Relay	44
Transmitter Power Supply Card	39
<i>Email</i>	113
Event Effects	131
<i>Email Alarm</i>	90
<i>Embedded Process Values</i>	128
Events Menu	128
<i>Enable Hot Button</i>	170
<i>Ending the Survey</i>	456
<i>Enter Replay Screen</i>	
Event Effects	134
<i>Error Alert</i>	138
<i>Error Messages</i>	389
<i>ESS - Extended Security System</i>	220
<i>Ethernet</i>	
Connections	44
Rear Port	109
<i>Ethernet Appendix E</i>	369
<i>Event Causes</i>	124
Alarm	124
AMS2750 Timer	124
Batch	124
Counters	126
Digital Input	124
Hot Button	124
Max Mins (Reset)	124
Scheduled Event Causes	125
System	124
TC Burn Out	124
Totaliser	124

TUS Start	124
TUS Stop	124
User Action	124
<i>Event Chart Controls</i>	281
<i>Event Effects</i>	128
Alarm Acknowledge	131
Backlight	132
Batch	134
Change Chart Speed	134
Chart Control	133
Clear All Messages	133
Counters	132
Delayed Event	133
Digital Outputs	131
Display Alert	134
Email	131
Embedded Process Values	128
Enter Replay Screen	134
Exit Replay Screen	134
Logging	131
Mark on Chart	128
Max Mins Reset	133
Play Sound	133
Preset Markers	136
Print Screen	132
Reports	134
Screen Change	132
Script Timers	133
Time Sync	136
Totaliser	131
Update Tabular Readings	134
<i>Event Status</i>	
Diagnostics	213
<i>Event triggering from Scripts</i>	134
<i>Events (AMS2750)</i>	456
<i>Events Menu</i>	120
Event Causes	124
Event Effects	128
<i>Events, Overview</i>	55
<i>Events/Counters</i>	120
<i>Exit Replay Screen</i>	
Event Effects	134
<i>Export Format</i>	
File Type	162
<i>Export Now</i>	195
Network Share folder (NAS)	195
<i>Extra Pens</i>	254

F

<i>F sub 0, Totaliser</i>	91
<i>F sub zero Sterilisation Appendix G</i>	375
<i>Factory Calibration</i>	142
<i>Factory Menu</i>	140
AI Calibration	142

Calibration	142
CJC Calibration	144
Credits	140
Daylight Saving	146
Firmware Upgrade	141
Language	146
Localisation	146
Media Config	146
Temp.Units	146
Time Zone	146
<i>Field IO Menu</i>	72
Alarm Relay	79
Alarm/Digital IO	79
Analogue In Menu	75
Analogue Out	78
Digital IO	79
Pulse Input	81
<i>Field IO Specification</i>	313
Analogue Output	313
Pulse Input Card	313
<i>Finish</i>	
Commit	216
Commit Later	217
Discard	216
<i>Finish button</i>	216
<i>Firmware Credit System</i>	253
<i>Firmware Options</i>	255
<i>Firmware Upgrade</i>	141
<i>First Time Password Setup - ESS</i>	220
<i>FTP</i>	118
<i>FTP Status</i>	215
<i>Full Maths</i>	355
<i>Full Maths & Script Processing</i>	347
<i>Function Codes and Memory Maps</i>	381
<i>Functions and Features, Overview</i>	47
<i>Furnace Config. Menu (Process Mode)</i>	413
<i>Furnace Config. Menu (TUS)</i>	424
<i>Fuses</i>	24
<i>Fuzzy Logging Appendix F</i>	371

G

<i>General Batch Properties</i>	148
<i>General Menu</i>	137
Batch Menu	148
Error Alert	138
Factory	140
Groups	152
Identity	137
Printer Menu	151
<i>Getting connected - IP Address</i>	260
<i>Group# Batch</i>	150
<i>Groups</i>	152

H

<i>Hardware Configuration Lock</i>	235
<i>Hardware Lock</i>	254
<i>Hardware Options, Overview</i>	57
<i>Hardware Status</i>	
Diagnostics	211
<i>Hazardous Voltages</i>	6
<i>Header and Footer report information</i>	480
<i>Help Files</i>	68
<i>High and Low Alarms</i>	89
<i>Hot Button</i>	170, 247
Enable	170
Event Cause	124
User Action	124
<i>Hubs or Switches</i>	259

I

<i>I/O + AMS2750 (TUS)</i>	422
<i>I/O + AMS2750 Process Mode</i>	411
<i>Identity</i>	137
<i>Information Messages</i>	403
<i>Installation</i>	9
24V DC Input	44
Alarm Relay Cards	40
Analogue Input Card	31
Analogue Output Card	36
Comms Connections	44
Digital IO Cards	40
Environment and Location	9
Mechanical Installation	10
Panel cut-out size	10
Pulse Input Card	37
SPNC Relay	44
Transmitter Power Supply Card	39
<i>Installation Category</i>	24
<i>Internal SD Memory</i>	160
<i>Internet Security Settings</i>	287
<i>IP Address</i>	95
<i>IP Address Entry</i>	96
<i>IP Address Troubleshooting</i>	286

J

<i>Jump feature</i>	198
---------------------------	-----

K

Keyboards	45
-----------------	----

L

Language	146
Layout Menu	167
Add Screen	169
Appearance	171
Delete Screen	169
Edit Layout	167
Edit Settings	170
Load Layout	173
Save Layout	172
Screens	167
Layout Settings	170
LED Flash Codes	329
Level	
Permissions Table	223
Levels	
Passwords	176
Linearisation Tables	
Analogue Input	82
Load Certificates	100, 107
Load Layout	173
Load layout	
NAS	172
Load Setup	70
Local Area Network	
Comms	261
Local Settings	67
Default Time Zone	67
Localisation	146
Daylight Saving	146
Language	146
Line Hz	146
Temp.Units	146
Time Zone	146
Log On/Off	66
Logging	87
Event Effects	131
Look-up Tables	82

M

Main Menu	68
Alarms Menu	185
Batch Commands	193

Batch Mark on Chart	192
Batch Setup/Control	190
Configure	69
Layout	167
Messages Menu	197
Passwords	174
Process Menu	200
Recording Menu	194
Screen Menu	186
Setup Menu	70
Status Menu	204
Main Menu Access	65
Maintenance	
Backlights	311
Calibration	312
Cleaning	311
Operating Temperature	311
Touch Screen	312
Maintenance Status	208
Make sure to use the folder and file names as mentioned below	100
Map button	187
Mark Chart, Alarms	90
Mark on Chart	128, 238, 249
Event Effects	128
Maths Credit Options	347
Maths Error Messages	361
Maths Expressions	347
Full Maths	355
Full Maths & Script Processing	347
Maths Variable and Function Tables	348
Script Function Application Examples	356
Maths Variable and Function Tables	348
Max Mins (Reset) Event Causes	124
Max Mins Reset	
Event Effects	133
Max/Min Reset	200
Mechanical Installation	10
Dimensions	12
Installation Instructions	13
Mounting and Viewing Angles	10
Panel cut-out size	10
Panel Mounting	15
Panel Mounting Clamp Installation	15
Media Config	146
Media Diagnostics	216
Memory Maps and Function Codes	381
Menu Bar	238
Screen	239, 240
Menu Path	67
Message Format	199
Message List	198
Jump	198
Message list printing	198
Message Types	197
Alarms	197
All	197

Diagnostics	197
Security	197
System	197
User	197
<i>Messages Menu</i>	197
Alarm Messages	197
All Messages	197
Diagnostics Messages	197
Message Types	197
Messages Format	199
Messages List	198
Security Messages	197
System Messages	197
User Messages	197
<i>Messages Screen printing</i>	197
<i>Minitrend QX and QXe Portable Case</i>	294, 304
<i>Minitrend QX Rear Connections</i>	61
<i>Minitrend QX Standard Screens</i>	59
<i>Modbus</i>	109
<i>Modbus Capabilities</i>	285
<i>Modbus Function Codes</i>	388
<i>Modbus profile tool, data update</i>	276
<i>Modbus Status</i>	214
<i>Modbus, Comms</i>	258
<i>Mounting and Viewing Angles</i>	10
<i>Mounting Clamp Diagram for 45mm panel thickness</i>	19
<i>Multi Point Cal</i>	378
<i>Multitrend SX Portable Case</i>	299
<i>Multitrend SX Rear Connections</i>	63
<i>Multitrend SX Standard Screens</i>	58
Overview	58

N

<i>NAS</i>	
Export Now	195
Save or Load Layout	172
Share Path	98
<i>NAS Button</i>	
Device Selection	172
<i>Network and System Security</i>	331
Backup and Restore	335
Network Security	338
Notices	344
Physical and Environmental Considerations	336
Recorder Security Features	342
Security Checklists	332
Security Updates	337
<i>Network Settings</i>	
Comms Server	270
<i>Network Share Path (NAS)</i>	98

O

<i>OPC UA</i>	258
<i>Operating Temperature</i>	311
<i>Options</i>	206
<i>Overview</i>	47
Batch	55
Comms	51
Data Storage	52
Display	51
Events	55
eZtrend QX Rear Connections	62
eZtrend QXe Standard Screens	60
Functions and Features	47
Minitrend QX Rear Connections	61
Minitrend QX Standard Screens	59
Multitrend SX Rear Connections	63
Multitrend SX Standard Screens	58
Options - Hardware	57
QX Rear Connections	61
QX Standard Screens	59
QXe Rear Connections	62
Recorder Functionality	49
Remote Viewer	53
Security	54
SX Rear Connections	63
SX Standard Screens	58
USB Devices	53

P

<i>Panel cut-out size</i>	10
<i>Panel Mounting</i>	15
<i>Password Net Sync</i>	
Configuration	180
Rules	178
<i>Password Network Synchronisation</i>	178
<i>Password Policy</i>	222
<i>Password Security</i>	219
Audit Trail	222
ESS	220
First Time Password Setup - ESS	220
Level Permissions Table	223
Log On/Off	219
Users and Groups	219
<i>Passwords</i>	174
Add User	176
Administrator	175
Change Passwords	177
Delete User	177
First Time Login	174
Levels	176
Policy	175
Reset Passwords	177

User Administration	175
Users	177
Passwords (AMS2750)	459
Passwords Setup First time ESS	220
PC Ethernet Connections	259
Peers	119
Peers Status	215
Pen Overview Status	207
Pen Pointers	248
Pen Report Information	165
Pens for TC's (Process Mode)	417
Pens Menu	85
Alarms	89
Logging	87
Scale	86
Totaliser	91
Play Sound	
Event Effects	133
Policy, Passwords	175
Ports, Comms	97
Ports, Ethernet	109
Post-Trigger	
Set Post-Trigger time	161
Power up	65
Preface	1
Preset Markers	136
Pre-Trigger	161
Acquiring	161
Alarm Rate	88
Configuration	161
Enable	88
Event processing	161
Export	161
Importing	162
Logging Type	88
Post-Trigger	161
Restart	162
Set Pre-Trigger time	161
Print Screen Event Effects	132
Print Support	45
Printer Menu	151
Printing	
Message List	198
Messages Screens	197
Status Screens	
Status Screen printing	205
Process Menu	200
Counters - View and Reset	201
Max/Min	200
Reports	202
Script Timers	202
Totals - Start, Stop, Reset	200
User Variables	202
Process Mode (AMS2750)	413
Process Screen Overview	237
Processor Board	

Battery Safety	379
Protocols	4, 258
Pulse Input Card	37, 313
Channel Numbers	38
Connection Details	38
Diagnostics	213
Pulse Input Menu	81

Q

Quality and Safety	
CE Mark	345
Safety	345
Quality and Safety Appendix A	345
QX and QXe Portable Case	294, 304
QX Rear Connections	61
QX Standard Screens	59
QXe Rear Connections	62

R

Rate Up or Rate Down Alarms	89
Realtime Chart Controls	281
Recorder Functionality, Overview	49
Recorder Setup	65
Default Time Zone	67
Local Settings	67
LogOn/Off	66
Main Menu	68
Main Menu Access	65
Menu Path	67
Recording Menu	194
Device Selection	196
Export "busy" light	196
Export Now	195
Recording Methodology	194
Recording Methodology	194
Recording Status	209
Relay Alarm/Digital Input Specification	314
Remote Networks	
Comms	261
Remote View	53
Remote Viewer	286
Replay	189, 240
Cursor	240
Report Generation Tool - AMS2750D	290
Report Tool	461
Installation	461
Introduction	463

Overview	461
PDF support	462
SAT Report example	467
SAT Report Wizard	465
TUS Report - Example	481
TUS Report Wizard	468
User Interface	463
Reports	
Event Effects	134
Pen Report Information	165
Process Menu	202
Reset All	203
Run	202
View Archive	203
Reports Menu	163
Reset	
Setup, Layout, Data, All	145
Reset at 16M	
Totalisers	93
Reset Passwords	177
Resistance Thermometers	32
Re-Start Recorder	66
RoHS-II Directive 2011/65/EU	345
RS485 Minitrend GR2, and Multitrend GR3 and DR Graphic recorders	44

S

Safety	2, 345
Battery Data	379
Hazardous Voltage	6
Static Electricity	4
Symbols	3
Safety and Symbol Identification	4
SAT Report Wizard	465
Save Layout	172
NAS	172
Save Setup	70
Saving Message Screens	198
Saving Status Screens	204
Scale Menu	86
Scheduled Events	
Event Causes	125
Scheduled Export	158
Screen Activity	
Alarm Markers	248
Charts Speeds	247
Deviation Alarm Markers	248
Mark on Chart	249
Pen Pointers	248
Screen Markers	250
Screen Change Event Effects	132
Screen Configuration	237

Menu Bar	238
Process Screen Overview	237
Screen Designer Screens	251
Screen Menu Bar	239
Screen Designer	251
Loading a Layout into a Recorder	251
Loading a Template into a Recorder	251
Software	289
Screen Designer (AMS2750)	460
Screen List	189
Screen Markers	250
Screen Menu	153, 186
Calibrate	189
Charts	154
Clean Screen	189
Replay	189
Screen List	189
Screen Saver	153
Tabular Display	156
Touch Test	189
Screen Menu Bar	239
Edit Screen Properties	186
Replay	240
Screen Saver	153
Brightness	155
Dim Saver	154
Screens	167
Tabular Screen	156
Script Function Application Examples	356
Script Timers	
Event Effects	133
Process Menu	202
Scripts, Trigger Events	134
SD CARD	54
SD card	160
SD CARD Handling precautions	54
SD CardFormat	194
Section 13	
Network and System Security	331
Secure Communications	100, 107
Secure FTP	107
WSD	107
Secure FTP	107
Secure FTP for Trend Server	265
Security Messages	197
Security, Overview	54
Security, System and Network	331
Backup and Restore	335
Network Security	338
Notices	344
Physical and Environmental Considerations	336
Recorder Security Features	342
Security Checklists	332
Security Updates	337
Send Recorder Events	270
Chart Controls	281
Sensor Compensation	

Analogue Input Calibration	377	Tabular Display	156
Dual Point Cal	377	TCP/IP	95
Multi Point Cal	378	Temp.Units	146
Single Point Cal	377	Time Zone	146
<i>Sensor Config. Menu (TUS)</i>	427	Totaliser	91
<i>Sensors Config. Menu (Process Mode)</i>	414	Web Enable	113
<i>Server Name, Email</i>	113	<i>Share Path (NAS)</i>	98
<i>Server Name, SNTP</i>	115	<i>Signal Wiring</i>	24
<i>Services</i>	95	<i>Single Point Cal</i>	377
<i>Settings</i>	183	<i>Slave ID</i>	112
Thermocouple Adjustment Factor, Disable	184	<i>SMTP Status</i>	215
Time & Date	183	<i>SNTP</i>	115
Volume, Sound Effects	183	Client / Server Network	116
<i>Settings Update Sounds, Sound Effects</i>	184	<i>Software</i>	289
<i>Setup Menu</i>	70	<i>Software Installation, Comms</i>	264
AI Calibration	142	<i>Sound Effects</i>	
Alarm Relay	79	Set Volume	183
Alarm/Digital IO	79	Update Sounds	184
Alarms Menu	89	<i>Spares List</i>	291
Analogue In Menu	75	eZtrend QXe	300
Analogue Out	78	Minitrend QX	291, 304
Batch Menu	148	Minitrend QX and QXe Portable Case	294, 304
Calibration	142	Multitrend SX	295
Charts	154	Multitrend SX Portable Case	299
CJC Calibration	144	QX and QXe Portable Case	294, 304
Comms Services	108	<i>Specification Tables</i>	317
Counters	135	<i>Specifications</i>	313
Credits	140	<i>Standard Communications Interfaces</i>	257
Daylight Saving	146	<i>Start a Survey (AMS2750)</i>	450
Digital IO	79	<i>Start Up</i>	265
Edit Recording	158	<i>Static Electricity, Safety</i>	4
Edit Setup	71	<i>Status Menu</i>	204
Email	113	Alarm/Digital IO	212
Error Alert	138	Analogue In	211
Events Menu	120	Analogue Out	212
Events/Counters Menu	120	Comms	214
Factory	140	Diagnostics	210
Field IO	72	Event Status	213
Firmware Upgrade	141	General Status	205
FTP	118	Hardware Status	211
General	137	IO Cards	207
Groups	152	Maintenance	208
Identity	137	Media	216
IP Address	95	Options	206
Language	146	Pen Overview	207
Load Menu	70	Pulse Inputs	213
Localisation	146	Recording	209
Logging	87	System	205
Modbus	109	<i>Sterilisation</i>	94
Peers	119	<i>Storage Alarm</i>	160
Pens	85	<i>Storage Bias</i>	159
Printer Menu	151	<i>Storage Media Format</i>	194
Pulse Input	81	<i>Stylus</i>	65
Reports	163	<i>Survey Status (AMS2750)</i>	450
Save Setup	70	<i>SX Rear Connections</i>	63
Scale Menu	86	<i>SX Standard Screens</i>	
Screen Saver	153	Overview	58
Screen Setup	153		
Services	95		
SNTP	115		

<i>Symbols, Safety</i>	3
<i>System</i>	
Event Causes	124
<i>System Accuracy Tests (SAT)</i>	411
<i>System Menu</i>	
General Status	205
IO Cards	207
Options	206
<i>System Messages</i>	197
<i>System Requirements</i>	263
<i>System, Status</i>	205

T

<i>Tabular Display</i>	156
<i>Tabular Screen</i>	156
<i>TC Burn Out, Event Causes</i>	124
<i>TC Cal. Adjust (AMS2750)</i>	417
<i>TC Usage Tracking (AMS2750)</i>	418
<i>TCP/IP</i>	95
DNS/WINS/MDNS	97
IP Address	95
Ports	97
<i>Technical Data & Specifications</i>	313
Analogue Output	313
Field IO	313
Input Range Performance Accuracy Table	322
Pulse Input Card	313
Relay Alarm/Digital Input	314
Specification Tables	317
<i>Temp.Units</i>	146
<i>Temperature Uniformity Survey (TUS)</i>	420
During a Survey	450
Ending the Survey	456
Start a Survey	450
Survey status	450, 454, 455
Detect Mode	451
Soak Mode	452
Stable (in soak) Mode	453
TC Stabilized	452
Temperature overshoot	451
TUS Logged data	458
<i>Thermocouple Adjustment Factor; Disable</i>	184
<i>Thermocouple Connections</i>	
External Reference	365
How Thermocouples work	363
Internal Reference	364
Thermocouple CJC Compensation	364
<i>Thermocouple Connections Appendix C</i>	363
<i>Time & Date</i>	
Settings	183
<i>Time Sync</i>	136
<i>Time Zone</i>	146

<i>Timer (AMS2750)</i>	
Event Causes	124
<i>Totaliser</i>	91
Displaying Totals	94
Event Causes	124
Event Effects	131
F sub 0	91
Sterilisation	94
<i>Totals - Start, Stop, Reset</i>	200
<i>Touch Screen</i>	312
<i>Touch Test</i>	189
<i>Trademarks</i>	1
<i>Transmitter Power Supply Card</i>	39
<i>TrendManager Pro Software</i>	289
(AMS2750)	460
TrendManager Pro	289
TrendServer Pro	289
TrendViewer	289
<i>Troubleshooting</i>	
Error Messages	389
Information Messages	403
<i>TUS Data file</i>	457
<i>TUS Logged data</i>	458
<i>TUS Mode (AMS2750)</i>	420
<i>TUS Report Wizard</i>	468
<i>TUS Start</i>	
Event Causes	124
<i>TUS Stop</i>	
Event Causes	124
<i>TUS survey process screen</i>	430

U

<i>Update Tabular Readings</i>	
Event Effects	134
<i>USB Comms Ports</i>	109
<i>USB Devices</i>	45
Keyboards	45
Print Support	45
USB Keys	45
<i>USB Devices, Overview</i>	53
<i>USB Key Format</i>	194
<i>USB Keys</i>	45
<i>USB Port Availability (Rear)</i>	45
<i>User Action</i>	
Event Causes	124
Hot Button	124
<i>User Calibration</i>	142
<i>User Counters, Event Cause</i>	126
<i>User Messages</i>	197
<i>User Variables</i>	
Process Menu	202



Users, Passwords 177

V,W,X,Y,Z

View Alarms 185
Warnings and Precautions 5
Web Browser 286
 Auto DNS 95
Web Enable 113
WSD (Web Services on Devices) 107
xs-xxxxxx, Auto DNS 95
Zoom In 242
Zoom Out 242
Zooming 244
Zooming Capabilities 245

Sales and Service

For application assistance, current specifications, pricing, or name of the nearest Authorized Distributor, contact one of the offices below.

ASIA PACIFIC	EMEA	AMERICA's
Honeywell Process Solutions, (TAC) hfs-tac-support@honeywell.com	Honeywell Process Solutions, Phone: + 80012026455 or +44 (0)1344 656000	Honeywell Process Solutions, Phone: 1-800-423-9883 Or 215/641-3610 (Sales) 1-800-343-0228
Australia Honeywell Limited Phone: +(61) 7-3846 1255 FAX: +(61) 7-3840 6481 Toll Free 1300-36-39-36 Toll Free Fax: 1300-36-04-70	Email: (Sales) FP-Sales-Apps@Honeywell.com or (TAC) hfs-tac-support@honeywell.com	Email: (Sales) FP-Sales-Apps@Honeywell.com or (TAC) hfs-tac-support@honeywell.com
China – PRC - Shanghai Honeywell China Inc. Phone: (86-21) 5257-4568 Fax: (86-21) 6237-2826		
Singapore Honeywell Pte Ltd. Phone: +(65) 6580 3278 Fax: +(65) 6445-3033		
South Korea Honeywell Korea Co Ltd Phone: +(822) 799 6114 Fax: +(822) 792 9015		

Specifications are subject to change without notice.

For more information

To learn more about Paperless Recorders,
visit <https://process.honeywell.com/>
Or contact your Honeywell Account Manager

Process Solutions Honeywell

1250 W Sam Houston Pkwy S
Houston, TX 77042

Honeywell Control Systems Ltd
Honeywell House, Skimped Hill Lane
Bracknell, England, RG12 1EB

Shanghai City Centre, 100 Jungi Road
Shanghai, China 20061



43-TV-25-41 Rev. 22
September 2022
©2022 Honeywell International Inc.