One Series Transmitter-Switch for Division 1 (Zone 1)

- Electronic pressure and temperature transmitter-switches with no moving parts
- 4-20 mA output and digital process display
- Fully adjustable deadband and smart self diagnostics
- Digital display and tamper-proof keypad adjustment of setpoint and deadband
- Explosion-proof enclosure for Division 1 (Zone 1) hazardous areas
- 2-wire, 4-wire and loop powered models available



120 Series - Electro-Mechanical Pressure and Temperature Switch

- Explosion-proof line of pressure, differential pressure, and temperature models with wide selection of ranges, sensors and pressure connections
- UL, cUL, ATEX certified for hazardous locations
- Single or dual switch outputs
- Welded stainless steel diaphragm pressure sensor
- Internal or external set point adjustment
- : 🖫 🖺 🖸 😧 😥 🔅 🕼

QUICK START INSTRUCTIONS

- I. Press (both) the left and right buttons $\uparrow \rightarrow$ simultaneously.
- II. Press the right button \rightarrow and enter the 4-digit passcode (default = 0000).
- III. Press the right button once \rightarrow and then the left button twice $\$ until SW1 appears on the display.
- IV. Press the right button → and make the desired changes to the switch mode, set point and deadband. Changes are made using the left button *\$*
- V. Press both the right and the left button $\updownarrow \rightarrow$ simultaneously to discard or save changes
 - a. To discard changes, press both the left and the right buttons $\updownarrow \rightarrow$ simultaneously.
 - b. To save changes, press the left button $\$ and then press both the left and the right buttons $\$ \rightarrow simultaneously











PROGRAMMING FLOWCHART

