

Externally powered Loop
(Example Shown below)

Wiring Diagram for Honeywell XYR5000 Wireless

Notes

- a) 24Vdc power goes to only ONE of the two connectors (485 or Modbus) in the base station, never to both connectors.
- b) Terminals labeled with same designation on output module are connected internally (A to A, B to B, 24V to 24V)
- c) Analog outputs are LOOP powered and require 24Vdc power wired to the output. Loop power is NOT supplied internally by the output module.

