

## Ethernet Interface User Manual

Doc. No.: 51-52-25-96

Release: 1

Last Revision Date: 1/01

# Notices and Trademarks

Copyright 2001 by Honeywell  
Release 1 January 2001

## Warranty/Remedy

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is **in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose**. Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

**Sensing and Control**  
Honeywell  
11 West Spring Street  
Freeport, Illinois 61032

Honeywell is a U.S. registered trademark of Honeywell

Other brand or product names are trademarks of their respective owners.

---

## About This Document

### Abstract

This document provides descriptions and procedures for the installation and configuration of the Ethernet Interface Card.

### References

The following list identifies all documents that may be sources of reference for material discussed in this publication.

Document Title	Doc ID
Modbus RTU Serial Communications User Manual	51-52-25-66
UMC800 Controller Modbus RTU Serial Communications	51-52-25-87
UMC800 Control Builder User Guide	51-52-25-63
DPR180/DPR250 Communication Option Manual	US11-6189

### Contacts

#### World Wide Web

The following lists Honeywell's World Wide Web sites that will be of interest to our customers.

Honeywell Organization	WWW Address (URL)
Corporate	<a href="http://www.honeywell.com">http://www.honeywell.com</a>
Sensing and Control	<a href="http://www.honeywell.com/sensing">http://www.honeywell.com/sensing</a>
International	<a href="http://www.honeywell.com/Business/global.asp">http://www.honeywell.com/Business/global.asp</a>

#### Telephone













Contact us by telephone at the numbers listed below.

Organization		Phone Number	
United States and Canada	Honeywell	1-800-423-9883	Tech. Support Q&A Faxback (TACFAQS) Service
		1-888-423-9883	
		1-800-525-7439	
Asia Pacific	Honeywell Asia Pacific Hong Kong	(852) 2829-8298	
Europe	Honeywell PACE, Brussels, Belgium	[32-2] 728-2111	
Latin America	Honeywell, Sunrise, Florida U.S.A.	(954) 845-2600	

---

## Symbol Definitions

The following table lists those symbols that may be used in this document to denote certain conditions.

Symbol	Definition
	This <b>DANGER</b> symbol indicates an imminently hazardous situation, which, if not avoided, <b>will result in death or serious injury</b> .
	This <b>WARNING</b> symbol indicates a potentially hazardous situation, which, if not avoided, <b>could result in death or serious injury</b> .
	This <b>CAUTION</b> symbol may be present on Control Product instrumentation and literature. If present on a product, the user must consult the appropriate part of the accompanying product literature for more information.
	This <b>CAUTION</b> symbol indicates a potentially hazardous situation, which, if not avoided, <b>may result in property damage</b> .
	<b>WARNING</b> <b>PERSONAL INJURY:</b> Risk of electrical shock. This symbol warns the user of a potential shock hazard where HAZARDOUS LIVE voltages greater than 30 Vrms, 42.4 Vpeak, or 60 Vdc may be accessible. <b>Failure to comply with these instructions could result in death or serious injury.</b>
	ATTENTION, Electrostatic Discharge (ESD) hazards. Observe precautions for handling electrostatic sensitive devices
	Protective Earth (PE) terminal. Provided for connection of the protective earth (green or green/yellow) supply system conductor.
	Functional earth terminal. Used for non-safety purposes such as noise immunity improvement. NOTE: This connection shall be bonded to protective earth at the source of supply in accordance with national local electrical code requirements.
	Earth Ground. Functional earth connection. NOTE: This connection shall be bonded to Protective earth at the source of supply in accordance with national and local electrical code requirements.
	Chassis Ground. Identifies a connection to the chassis or frame of the equipment shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.
	Earth Ground. Functional earth connection. NOTE: This connection shall be bonded to Protective earth at the source of supply in accordance with national and local electrical code requirements.
	Chassis Ground. Identifies a connection to the chassis or frame of the equipment shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.

---

# Contents

Introduction .....	1
Overview .....	1
Purpose .....	1
Why use an Ethernet interface instead of a serial interface? .....	2
Network Interface .....	2
Network Hardware Address .....	2
Network Protocols .....	3
IP Address and Modbus Slave Address .....	3
Installation and Wiring .....	4
Overview .....	4
Before you start .....	4
Installation .....	4
Wiring .....	5
UMC Wiring .....	5
VRX180/DPR180/DPR250 wiring .....	6
Configuration .....	7
Overview .....	7
Configuration methods .....	7
Configuration procedure .....	7
Network Configuration .....	7
Assign a new IP Address .....	8
Set Configuration Parameters .....	9
1) Network/IP Settings .....	10
2) Serial & Mode Settings .....	11
3) Modem Control Settings .....	12
4) Advanced Modbus Protocol settings .....	12
Basic Commands (D/S/Q) .....	12
Firmware Upgrade .....	13
Firmware Download Using a Network Host .....	13
LED Status Display .....	14
Overview .....	14
Description .....	14
Functions .....	14
Normal functions .....	14
Error functions .....	14

---

Interfacing with PC software.....	15
Overview .....	15
Applications .....	15
Wonderware Server Configuration .....	16
KEPware's OPC Server .....	19
Overview .....	19
Definitions.....	19
Configure the KEPware server .....	20
Technical Support & Sales Information .....	26
IP Addresses, Netmask.....	27
IP Addressing .....	27
Class A Network .....	27
Class B Network .....	27
Class C Network .....	27
Network Address .....	27
Broadcast Address .....	28
IP Netmask .....	28
Private IP Networks and the Internet.....	29
Network RFCs .....	29

---

## Tables

Table 1	Assigning new IP address .....	8
Table 2	Network/IP settings.....	10
Table 3	Serial and mode settings .....	11
Table 4	Basic commands .....	12
Table 5	LED functions.....	14
Table 6	Error indicators .....	14
Table 7	Topic Definition Prompts .....	18
Table 8	IP Netmask.....	28

---

## Figures

Figure 1 UMC Wiring.....	5
Figure 2 DIP switch setting for RS-485 .....	6
Figure 3 VRX180/DPR180/DPR250 Wiring.....	6
Figure 4 Setup menu .....	9
Figure 5 LED Display .....	14



# Introduction

## Overview

### Purpose

The Honeywell Ethernet Interface Card lets you acquire live data over an Ethernet Network. This card may be installed into the following products:

- UMC800
- VRX180
- DPR180
- DPR250

This interface will also allow other Modbus RTU instruments to connect to the Ethernet interface through a multi-drop serial connection. The following instruments may be connected to the Ethernet interface's serial port:

- UDC2300
- UDC3300
- UDC5300
- UDC6300
- VRX100
- VPR100
- VRX150
- DPR100
- DR4300
- DR4500
- other RS-485 Modbus RTU instrument.

You may use this Ethernet interface card to connect to any PC Server or PC Client that has a Modbus/TCP (a.k.a. Modbus Ethernet) protocol driver.

Here are some examples of software packages that have the Modbus/TCP interface:

- Wonderware's InTouch
- Honeywell's PlantScape
- Intellution's FIX
- KEPware's OPC Sever

### **Why use an Ethernet interface instead of a serial interface?**

1. Topology
  - Ethernet is not multidrop-limited to 2000 feet.
  - Not limited to 31 slaves.
  - Uses your existing network infrastructure
  - Accesses data over the network from anywhere in your facility.
2. Multiple Client Access—Simultaneously accessible by supervisors, quality assurance, engineers.
3. Intranet Access from any remote location within firewalls.

### **Network Interface**

Ethernet models support 10Mbit. 10BaseT (RJ-45 connector) for external transceiver connections.

### **Network Hardware Address**

The first 3 bytes are fixed, and read 00-20-4A. The fourth, fifth, and sixth bytes represents the type of the product and the serial number in Hex notation.

## **Network Protocols**

The Ethernet card uses TCP/IP protocols for network communications. The supported protocols are: ARP, UDP, TCP, ICMP, Telnet, TFTP, DHCP, and SNMP. Per the Modbus/TCP specification, the Modbus data messages are transported by TCP for error-free data transport end-to-end. Firmware updates can be done with the TFTP protocol. The IP protocol defines addressing, routing, and data block handling over the network.

## **IP Address and Modbus Slave Address**

Every device connected to the TCP/IP network including the Ethernet card must have a unique IP address. When multiple Modbus devices share a single IP, then Modbus/TCP includes an additional address called the Unit ID. See IP Addresses, Netmask (page 27) for a complete description of IP Addressing.

When the Ethernet card is receiving Modbus/TCP messages from remote masters, the Unit ID is converted to use in the Modbus/RTU message as the slave address.

# Installation and Wiring

## Overview

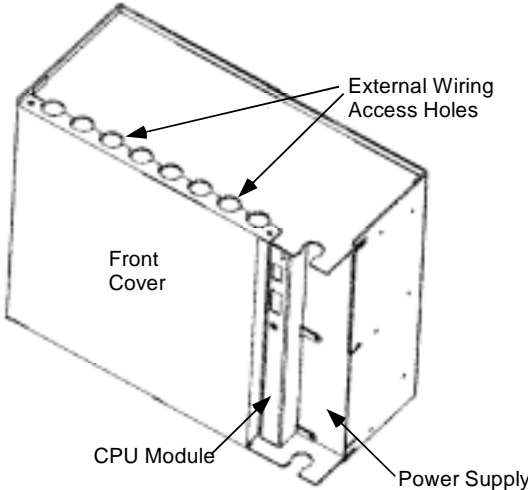
This section explains how to install and wire the Ethernet card into your UMC800, VRX180, DPR250, DPR180.

### Before you start

To avoid damaging the electronics, be sure to guard against electrostatic discharge.

## Installation

If you ordered your instrument from us with the Ethernet option already installed, proceed to Configuration.

Step	Action
1	Disconnect power from your instrument.
2	<div><div><div><div><div><div><span></span></div><div><b>WARNING</b></div></div></div><div><div><div><b>SHOCK HAZARD</b></div><div>Disconnect power before removing cover.</div><div><b>Failure to do so could result in death or serious injury.</b></div></div></div></div></div><div><ul style="list-style-type: none"><li>On UMC800 controller, remove front cover by removing the two screws at the top of the case.</li></ul><div><p>The diagram shows a 3D perspective view of the UMC800 controller. The front cover is shown being removed, with two screws at the top. The CPU module and power supply are visible inside. Arrows point to the 'External Wiring Access Holes' on the top edge of the case.</p></div><ul style="list-style-type: none"><li>On VRX180, DPR250, DPR180 instruments, remove rear cover by removing all screws to the right of the cover.</li></ul></div></div>

Step	Action
3	<p>Install the Ethernet card in any available slot as close to the power supply as possible.</p> <ul style="list-style-type: none"> <li>Loosen the two screws on the Ethernet card.</li> <li>Insert the card, engage the card's male connector with the female connector in the rear.</li> <li>Make sure the card is pushed up and back snugly in place, up and back. Tighten the screws on the card to secure it in place.</li> </ul>

## Wiring

### UMC Wiring

Connect wires according to Figure 1. Write down the Ethernet address from the card label; you will need it when configuring the card.

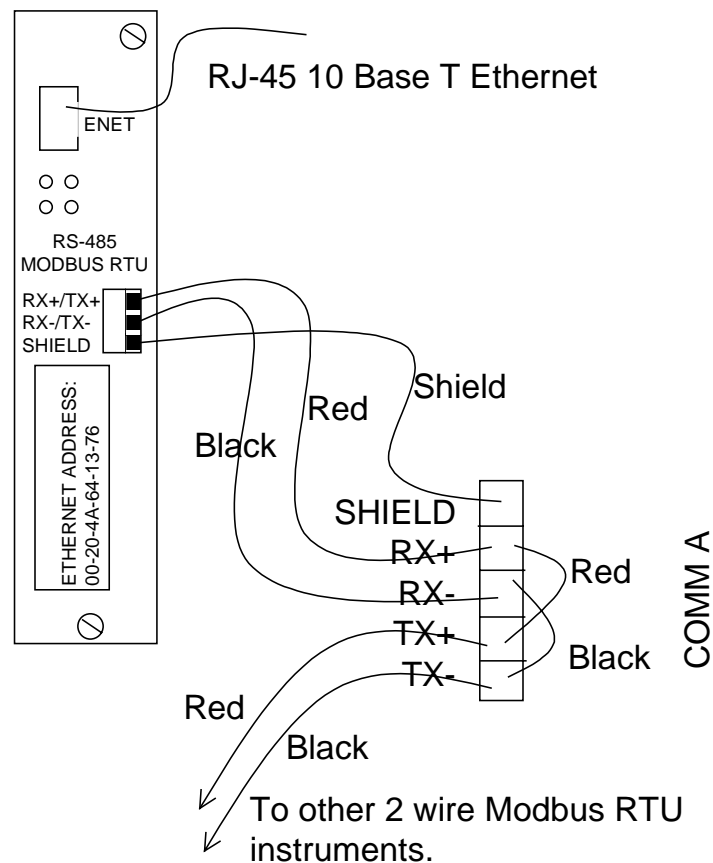


Figure 1 UMC Wiring

VRX180/DPR180/DPR250 wiring

Step	Action
1	Remove the 3 screws (top, middle, bottom) on the stainless steel cover of the serial communications card at the right rear of your instrument.
2	<p>Pull this assembly out of the instrument. Set the 3 DIP switches away from the PC board (Figure 2).</p> <div data-bbox="711 520 1045 869"></div>
<p><b>Figure 2 DIP switch setting for RS-485</b></p>	
3	Reinstall this assembly and replace the 3 screws.
4	<p>Connect wires according to Figure 3.</p> <div data-bbox="545 1083 1133 1675"></div>
<p><b>Figure 3 VRX180/DPR180/DPR250 Wiring</b></p>	
5	Write down the Ethernet address from the card label; you will need it when configuring the card.

# Configuration

## Overview

### Configuration methods

The Ethernet card can be configured by a Telnet connection to configure the unit remotely over the network.

The Ethernet card configuration is stored in nonvolatile memory and is retained without AC power. The configuration can be changed any time. The Ethernet card performs a reset after the configuration has been changed and stored.



#### ATTENTION

If you enter the configuration mode while the unit is operating, even if nothing is changed, this will disrupt your network operation.

---

## Configuration procedure

### Network Configuration

Obtain a static IP address from your network administrator. For the purposes of upcoming examples, we will assume this IP address is 164.145.185.52.

## Assign a new IP Address

Table 1 describes how to assign a temporary IP address over the network.

**Table 1 Assigning new IP address**

Step	Action
1	<p>Set a static ARP with the desired IP address (obtain from your network administrator) using the Ethernet address of the Ethernet card (see the Ethernet card label). (Ethernet address is also known as hardware address or MAC address).</p> <p>The following example shows the use of ARP in Win95/98/NT, (from the DOS prompt) and UNIX environments. This example assumes your IP address is 164.145.185.52 and the Ethernet address of the Ethernet card is 00-20-4A-52-14-EC.</p> <p><i>Note: For the ARP command to work in Windows, the ARP table on the PC must have at least 1 IP address defined other than its own. Type "ARP -A" at the DOS command prompt to verify that there is at least 1 entry in the ARP table. If there is no other entry beside the local machine, ping another IP machine on your network to build the ARP table. This has to be a host other than the machine on which you are working. Once there is at least 1 entry in the ARP table, use the following commands to ARP an IP address to the Ethernet card.</i></p> <p><b>arp -s 164.145.185.52 00-20-4A-52-14-EC</b></p> <p>The command example for most Unix systems is:</p> <p><b>arp -s 164.145.185.52 00:20:4A:52:14:EC</b></p>
2	<p>Open a Telnet connection to port number 1. This connection will fail, but the Ethernet card will change its IP address to the one designated in the arp command line.</p> <p><b>telnet 164.145.185.52 1</b></p>
3	<p>Open a Telnet connection to port 9999 and set all required parameters.</p> <p><b>telnet 164.145.185.52 9999</b></p> <p>See Figure 4.</p> <p><b>NOTE:</b> The temporary IP address by ARP is reverted after every power reset of the Ethernet card. Be sure to log into Ethernet card and store the parameters to make the changes permanent.</p>



## Set Configuration Parameters

After completing step 3 above, you should see the window in Figure 4.

Press Enter to change parameters, otherwise after a short delay the Ethernet card will automatically restart. You'll be happy to know that other than the IP address and serial port settings (baud rate, etc.) the Ethernet card is preconfigured to be suitable with most applications. For all settings you are shown the default values, if you just press Enter, the existing values will stay unchanged.

```

Telnet - 164.145.185.52
Connect Edit Terminal Help

Serial Number 5205356  MAC address 00:20:4A:52:14:EC
Software Version 01.2b7 (000712)

Press Enter to go into Setup Mode, wait to close

CoBox MB Setup, Lantronix, Inc.
1) Network/IP Settings:
   Ethernet Interface Autodetect
   IP Address ..... 164.145.185.052
   Default Gateway ..... 164.145.185.001
   Netmask ..... 255.255.255.000
2) Serial & Mode Settings:
   Protocol ..... Modbus/RTU,Slave(s) attached
   Serial Interface ..... 19200,8,N,1,RS485,0B25
3) Modem Control Settings:
   Modem control not available with RS422/RS485
4) Advanced Modbus Protocol settings:
   Slave Addr/Unit Id Source .. Modbus/TCP header
   Modbus Serial Broadcasts ... Disabled
   Character,Message Timeout .. 00050 ms,05000 ms

D)efault settings, S)ave, Q)uit without save
Select Command or parameter set (1..4) to change: █

```

Figure 4 Setup menu

## 1) Network/IP Settings

To change the basic network parameters in the setup menu in Figure 4, press “1”. The following values can be set/changed.

**Table 2 Network/IP settings**

Parameter	Setting
IP Address	<p>The IP address must be set to a unique value on your network. The IP address you see here should be the same address you entered in Table 1.</p> <p>If you are not familiar with IP addressing on your network, please consult your system administrator. Please refer to IP Addresses, Netmask (page 27) for more details about IP addresses.</p>
Set Gateway IP Address (Y/N)	<p>Most users could choose “N” for this case. You only need to choose “Y” if your Ethernet card must communicate to remote TCP/IP networks through a router or gateway. If you select “Y”, you must also enter the IP address of the default gateway within your local network. If in doubt, consult your network administrator.</p>
Set Netmask (N for default)	<p>Most users could select “N”, which causes the Ethernet card to automatically use the standard netmask appropriate for the IP address you’ve entered. Users who want a non-standard netmask need to enter the number of host bits in the IP address.</p>

## 2) Serial & Mode Settings

To change the basic serial parameters in the setup menu in Figure 4, press “2”. The following values can be set/changed.

**Table 3 Serial and mode settings**

Parameter	Setting
Attached Device (1=Slave, 2=Master)	Select “1” for this application.  Modbus/RTU devices are defined as either slave or master devices.
Serial Protocol (1 = Modbus/RTU, 2 = Modbus/ASCII)	Select “1” for this application.  Serial Modbus comes in two types. Modbus/RTU uses 8-bit data bytes to send binary information. However, some devices cannot handle 8-bit data bytes, so Modbus/ASCII is used, which is a slower protocol where each 8-bit data byte is converted to 2, 8-bit ASCII characters.
Use Serial Connector (1=DB25, 2=DB9)	Select “1” for this application.
Interface Type (1 = RS-232, 2 = RS-422, 3 = RS-485)	Select “3” for this application.
Enter Serial Parameters (B, D, P, S)	Use the DOS mode command style to enter the following four parameters:  Enter the baud rate of the attached slave device (300/ 600/ 1200/ 2400/ 4800/ 9600/ 19,200/ 38,400, or 115,000).  Enter “8” data bits.  Enter “N” parity.  Enter “1” stop bits.  Example: 38400,8,N,1

### 3) Modem Control Settings

Not available with RS-485.

### 4) Advanced Modbus Protocol settings

We recommend leaving these at the default settings shown in Figure 4. Changing them requires thought and planning.

### Basic Commands (D/S/Q)

After setting parameters 1) through 4) in Figure 4, choose from the following 3 basic commands.

**Table 4 Basic commands**

Command	Function
D)efault Settings	Resets all parameters to the factory default as shown in Figure 4. Only the IP address is not changed.
S)ave	Saves the currently displayed parameter settings into non-volatile memory and exits configuration mode. It will trigger a reset.
Q)uit without saving	Ignores any parameter changes you made and exits configuration mode. It will trigger a reset.

## Firmware Upgrade

### Firmware Download Using a Network Host

If you received a .ROM firmware upgrade file you must download it from your PC to the Ethernet card.

To download new firmware from a computer to the Ethernet card, it is necessary to have a TFTP client sending a binary file. TFTP is standard in Windows NT.



**TIP**

The file to be downloaded must be the .ROM (binary) image and not the .HEX (ASCII) version.

---

To load the Ethernet card with the new firmware you will need to use a TFTP client. Windows NT and Windows 2000 have a command line version built in.

The following example assumes you are using Windows NT and the target Ethernet Interface IP address is "164.145.185.52" and the firmware upgrade file name is "MOD131.ROM".

Step	Action
1	Access the DOS prompt.
2	Change to the directory where you placed the MOD131.ROM file.
3	At the DOS prompt type:  TFTP -i 164.145.185.52 PUT mod131.rom 4D
4	After pressing Enter in Step 3, TFTP should return with "Successful" prompt and the Ethernet card should reboot, indicated by all LEDs turning on, then the red LED flashing then staying on.

---

# LED Status Display

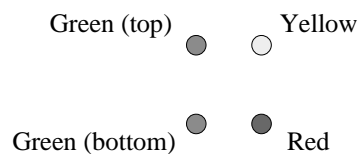
## Overview

### Description

Four LEDs display the status of the Ethernet card.

## Functions

### Normal functions



**Figure 5 LED Display**

**Table 5 LED functions**

LED	Function
Green (top)	Displays the Modbus/TCP activity.
Yellow	Displays the Modbus/RTU activity.
Red	Off during normal operation, on or blinking during error or configuration mode. See Table 6.
Green (bottom)	Works with Red to indicate type of error. See Table 6.

### Error functions

**Table 6 Error indicators**

Pattern	Meaning
Red on, Green (bottom) blinks 1 time.	EPROM checksum error.
Red on, Green (bottom) blinks 2 times.	RAM error.
Red on, Green (bottom) blinks 3 times.	Network controller error (Token Ring).
Red on, Green (bottom) blinks 4 times.	EEPROM checksum error.
Red on, Green (bottom) blinks 5 times.	IP address already used on the network.
Green (bottom) and Red blinking 4 times.	Network connection faulty. This pattern should appear only after power up. Even though the Ethernet card is going into operation mode, the problem will potentially exist.
Green (bottom) and Red blinking 5 times.	No DHCP response was received.

# Interfacing with PC Software

## Overview

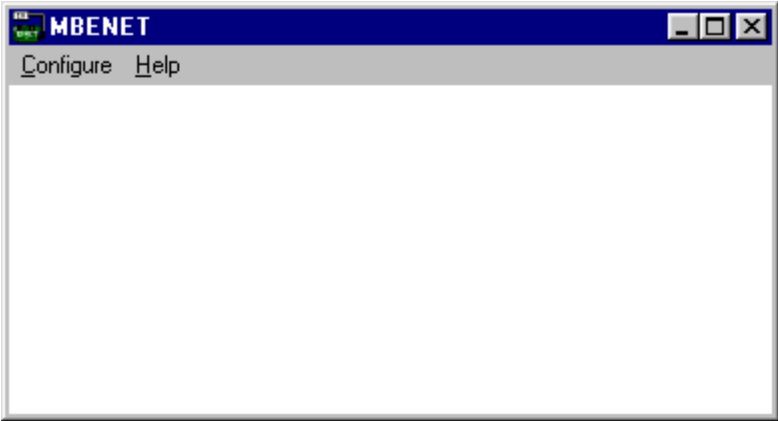
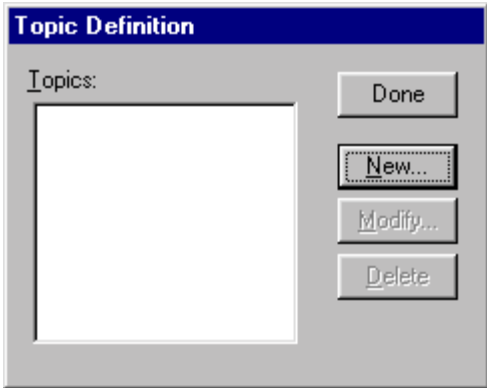
### Applications

This section describes how to set up the following software for use with the Ethernet card:


- Wonderware's InTouch
- KEPware's OPC Server

# Wonderware Server Configuration

This procedure describes how to configure your instrument for use with Wonderware. It uses the UMC800 as an example. If you are configuring a different Honeywell product, then use a different model (VRX180, DPR250, DPR180).

Step	Action
1	<p>Start the Wonderware Modicon MODBUS Ethernet I/O server (Version: 7,3,0,5 or later) by double clicking on its icon. The following window below will appear.</p> <div></div>
2	<p>Select "Configure". Two menu items appear:</p> <ul style="list-style-type: none"><li>• Topic Definition - A topic is a logical controller name. There may be several topics for a single controller.</li><li>• Server settings</li></ul>
3	<p>Select Topic Definition. The following box appears.</p> <div></div>



Step	Action
4	<div>Select New.... The MBENET Topic Definition box appears:</div> <div></div> <div>See Table 7 for description of prompts.</div>

**Table 7 Topic Definition Prompts**

Prompt	What to enter
Topic Name	Enter name such as UMC800
IP Address	Enter IP address of the Ethernet Interface. Such as 164.145.185.52.
Dest_Index or Unit_ID	Enter the device's Modbus RTU Slave/Unit Address.
Slave Device Type	584/984 PLC
Unsolicited Messages	Not selected
String Variable Style	Full Length
Register Type	Binary
Block I/O Sizes	Enter the maximum number of registers allowed per request s device dependent. Look these numbers up in your device's Modbus RTU Communications User Manual.  Read is function code 3 and 4.  Write is function code 16d.
Update Interval	Enter the polling rate to the device.
Reply Timeout	Enter the retry interval before a communication error message is generated

Wonderware Technical Support can be reached at: <http://www.wonderware.com/Support/>

Wonderware Sales can be contacted at: <http://www.wonderware.com/Aboutus/sales/>

**Corporate Headquarters**  
**Western Regional Office**  
100 Technology Drive  
Irvine, CA 92618 U.S.A.  
Phone 949-727-3200  
Fax 949-727-3270

## KEPware's OPC Server

### Overview

The KEPware OPC server (KEPServerEX) permits connecting Honeywell LeaderLine products to a large number of SCADA packages and other client applications using OPC server technology.

Below is a list of some of the SCADA software packages that the KEPware's OPC server may be used to interface with when these SCADA software packages are configured as OPC clients:

- Honeywell's PlantScape®
- Rockwell's RSView32®
- GE's Cimplicity®
- Iconics' Genesis32®
- Think & Do's Live!
- Wonderware's InTouch® and OPCLink®
- Intellutions's Fix Dynamics® and OPC Power Toll®
- Siemen's WinCC
- CiTect SCADA MMI/HMI Software for Windows®



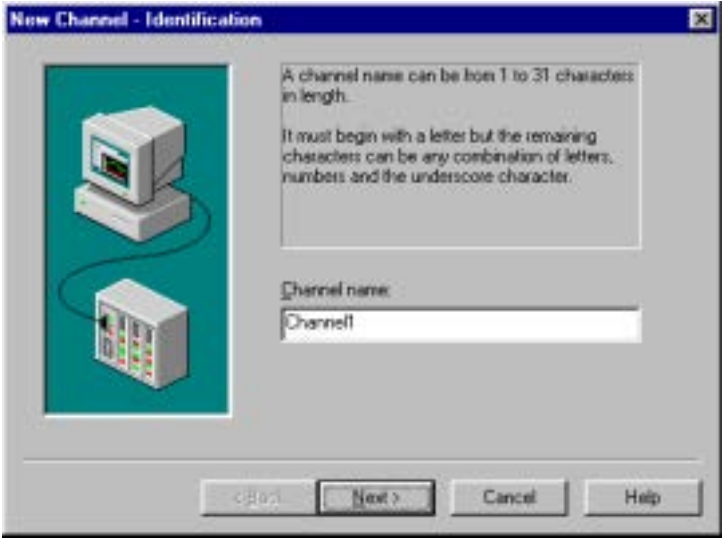
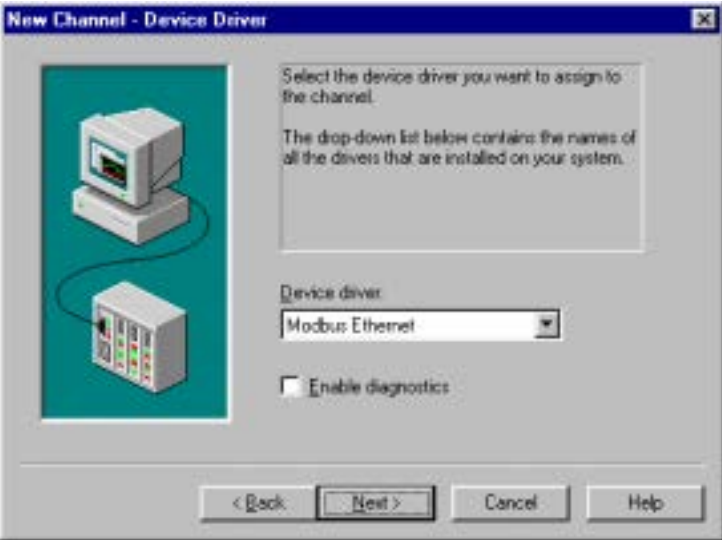
We evaluated KEPware's OPC Server Version 4.00.122. The KEPware server accepts requests from client application(s). The server will process these requests and transmits them to the Ethernet link. When the Honeywell device replies to these requests the server will pass the responses back to the requesting client(s).

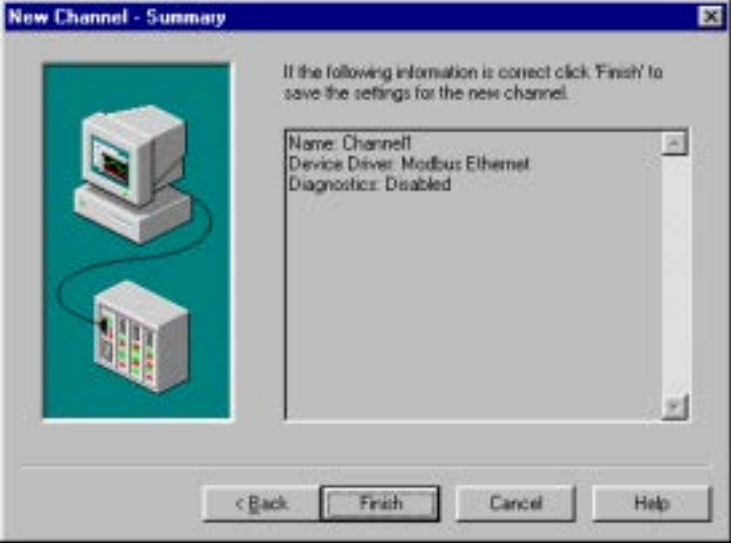


### Definitions


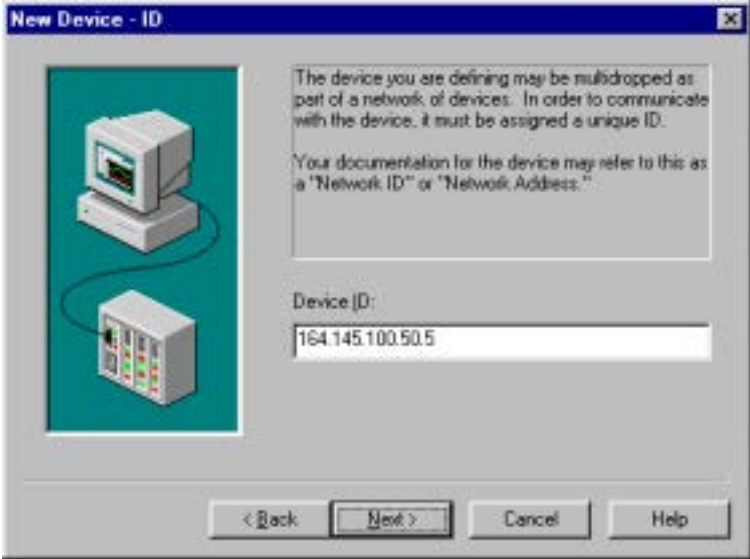
**Channel:** A channel is a communication link between the KEPware server and the communication driver.

**Driver:** The communication driver software knows the protocol of the device. The KEPware OPC server allows you to connect a given channel to a driver appropriate for the devices communicating through this channel. The driver for this application is Modbus Ethernet.

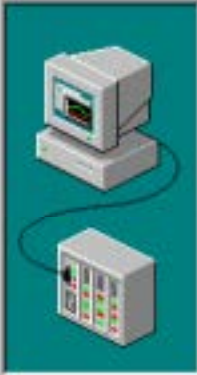
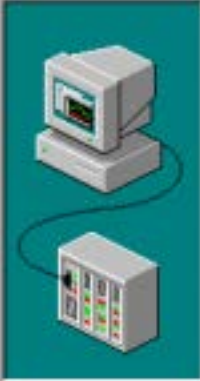
Configure the KEPware server

Step	Action
1	<div>Start a Project:<ul style="list-style-type: none"><li>Start the server and click on the "New Project" icon .</li></ul></div>
2	<div>Set up a Channel:<ul style="list-style-type: none"><li>Click on the "New Channel" icon .</li><li>Type a channel name in the New Channel - Identification setup box and then click <u>N</u>ext.</li></ul><div><p>The "New Channel - Identification" dialog box contains a graphic of a computer and a rack of modules on the left. On the right, it states: "A channel name can be from 1 to 31 characters in length. It must begin with a letter but the remaining characters can be any combination of letters, numbers and the underscore character." Below this is a text field labeled "Channel name:" containing the text "Channel1". At the bottom are buttons for "&lt; Back", "Next &gt;", "Cancel", and "Help".</p></div><ul style="list-style-type: none"><li>Select the Device Driver to be Modbus Ethernet in the New Channel - Device Driver setup box and then click <u>N</u>ext.</li></ul><div><p>The "New Channel - Device Driver" dialog box contains the same computer and rack graphic on the left. On the right, it states: "Select the device driver you want to assign to the channel. The drop-down list below contains the names of all the drivers that are installed on your system." Below this is a drop-down menu labeled "Device driver:" with "Modbus Ethernet" selected. There is an unchecked checkbox labeled "Enable diagnostics". At the bottom are buttons for "&lt; Back", "Next &gt;", "Cancel", and "Help".</p></div></div>

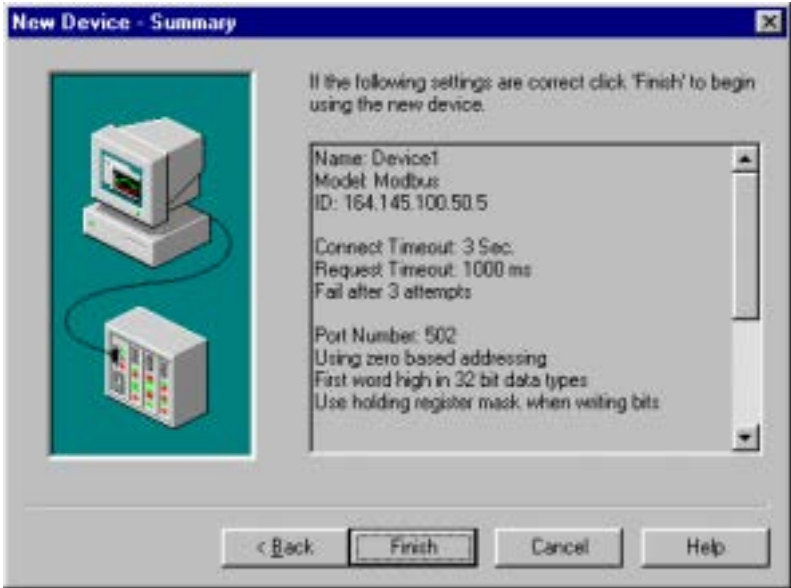

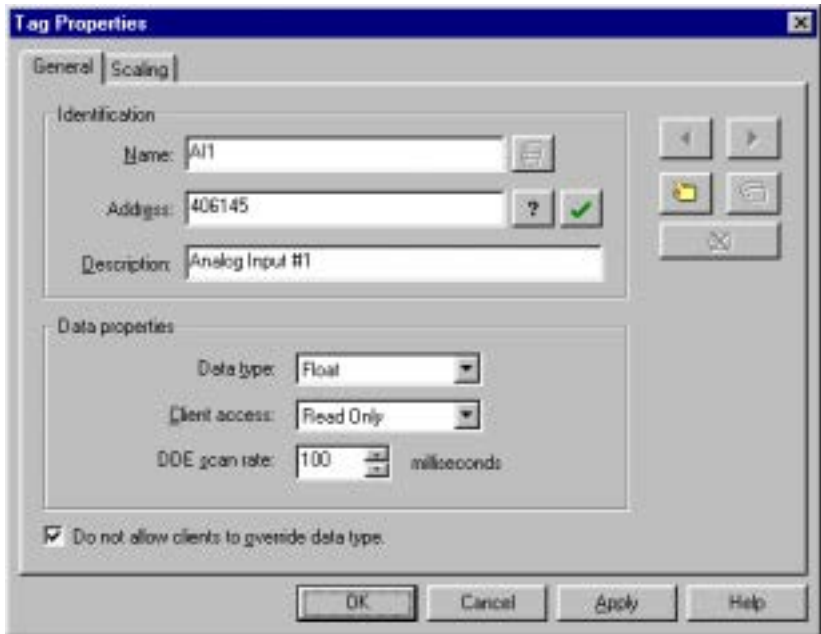
Step	Action
	<ul style="list-style-type: none"> <li>Press Finish in the New Channel - Summary box.</li> </ul> 
3	<p>Set up a Device:</p>  <ul style="list-style-type: none"> <li>Click on the "New Device" icon.</li> <li>Type a device name in the New Device - Name setup box and click <u>N</u>ext.</li> </ul> 

Step	Action
	<div><ul style="list-style-type: none"><li>Select Device Model to be Modbus in the New Device - Model setup box and then click <u>N</u>ext.</li></ul><div></div><ul style="list-style-type: none"><li>Enter the Device ID in the New Device - ID setup box where the Device ID is the IP Address "X.X.X.X" followed by ".Y" where ".Y" is the Modbus RTU slave ID or address of the Modbus RTU serial slave and then click <u>N</u>ext.</li></ul><div></div></div>

Step	Action
	<ul style="list-style-type: none"> <li>Enter the device's communication parameters in the New Device - Communication Parameters set up box and then click <u>N</u>ext. The values shown are good to start with, you should not have to change them.</li> </ul> <div data-bbox="548 411 1292 968" data-label="Image"> <p>The screenshot shows a dialog box titled "New Device - Communications Parameters". On the left is an illustration of a PC connected to a rack-mounted device. On the right, there is instructional text: "Enter the parameters you wish to use while communicating with the device. Connect timeout refers to the time to wait for a successful initial connection. Request timeout refers to the time to wait for a request to be serviced." Below this are three input fields: "Connect timeout" set to 3 seconds, "Request timeout" set to 1000 milliseconds, and "Fail after" set to 3 successive timeouts. At the bottom are buttons for "&lt; Back", "Next &gt;", "Cancel", and "Help".</p> </div> <ul style="list-style-type: none"> <li>Leave the Devices Port address as 502 in the New Device - TCP/IP set up. After this is set click <u>N</u>ext.</li> </ul> <div data-bbox="542 1085 1292 1646" data-label="Image"> <p>The screenshot shows a dialog box titled "New Device - TCP/IP". On the left is the same PC and rack device illustration. On the right, the text says: "Specify the TCP/IP port this device will be using. Valid ports for this device are 0 to 65535. The default port is 502." Below this is a "Port:" label followed by a text box containing the value "502". At the bottom are buttons for "&lt; Back", "Next &gt;", "Cancel", and "Help".</p> </div>

Step	Action
	<div><ul style="list-style-type: none"><li>See New Device - Settings for the proper settings and then click <u>N</u>ext.</li></ul><div><div><div>New Device - Settings</div><div></div><div><p>The driver can be configured with different settings for each device. Refer to the online help for assistance.</p><p>General</p><p><input checked="" type="checkbox"/> Use zero based addressing</p><p><input type="checkbox"/> First word low in 32 bit data types</p><p><input checked="" type="checkbox"/> Use holding register bit mask writes</p><p>Mailbox Settings</p><p>Client Privileges: <input type="text" value="Read Only"/></p><div><div>&lt; Back</div><div>Next &gt;</div><div>Cancel</div><div>Help</div></div></div></div></div><div><ul style="list-style-type: none"><li>Set the block sizes according to the limits for the device you are connected to as stated in the Modbus User Manual for the device you are communicating to. After these values are set click <u>N</u>ext.</li></ul><div><div><div>New Device - Block Sizes</div><div></div><div><p>Specify the maximum block sizes when reading data from this device. Refer to the online help for assistance.</p><p>Coils (0-999 in multiples of 8)</p><p>Output: <input type="text" value="96"/></p><p>Input: <input type="text" value="96"/></p><p>Registers (1-120)</p><p>Internal: <input type="text" value="120"/></p><p>Holding: <input type="text" value="120"/></p><div><div>&lt; Back</div><div>Next &gt;</div><div>Cancel</div><div>Help</div></div></div></div></div></div></div>



Step	Action
	<ul style="list-style-type: none"> <li>Review the data just entered, if you agree click <u>F</u>inish.</li> </ul>  <p>The 'New Device - Summary' dialog box shows a summary of the device configuration. On the left is an illustration of a computer connected to a PLC. On the right, the following settings are listed: Name: Device1, Model: Modbus, ID: 164.145.100.50.5, Connect Timeout: 3 Sec, Request Timeout: 1000 ms, Fail after 3 attempts, Port Number: 502, Using zero based addressing, First word high in 32 bit data types, and Use holding register mask when writing bits. At the bottom are buttons for '&lt; Back', 'Finish', 'Cancel', and 'Help'.</p>
4	<p>Inserting New Tags:</p>  <ul style="list-style-type: none"> <li>Click on the New Tag icon.</li> <li>Fill in the data in the Tag Properties set up box and then press OK. Example of the data for Analog Input #1 is shown in this figure.</li> </ul>  <p>The 'Tag Properties' dialog box has two tabs: 'General' and 'Scaling'. The 'General' tab is active. It contains fields for 'Name' (AI1), 'Address' (406145), and 'Description' (Analog Input #1). There are also buttons for navigation and a green checkmark button. The 'Data properties' section includes 'Data type' (Float), 'Client access' (Read Only), and 'DOE scan rate' (100 milliseconds). A checkbox 'Do not allow clients to override data type' is checked. At the bottom are buttons for 'OK', 'Cancel', 'Apply', and 'Help'.</p> <ul style="list-style-type: none"> <li>Repeat the Inserting New Tag steps above for adding additional tags to the system.</li> </ul>

Now that you have a channel, device and tags defined you may access the tags via the client software. KEPware comes with a sample client that is useful to verify things are set up before you layout the details in the "final" client software application.

### **Technical Support & Sales Information**

The product's vendor will supply technical support.

KEPware Inc. may be reached at this web site:

<http://www.kepware.com>

KEPware Technical Support can be reached at this site:

<http://www.kepserver.com/services.html>

KEPware Inc.

81 Bridge Street

Yarmouth, ME 04096

Phone: 1-888-KEPware or (207) 846-5881

Fax: (207) 846-5947

# IP Addresses, Netmask

## IP Addressing

An IP address is a 32-bit value, divided into 4 octets of 8 bits each. The standard representation is 4 decimal numbers (in the range of 0..255), divided by dots.

Example: 192.2.1.123

This is called decimal-dot notation.

The IP address is divided in 2 parts: network and host. To support different needs, 3 “network classes” have been defined. Depending on the network class, the last 1, 2, or 3 bytes define the host, while the remaining part defines the network. In the following, “x” stands for the host part of the IP address:

## Class A Network

IP address 1.x.x.x to 127.x.x.x

Only 127 different networks of this class exist. These have a very large number of potential connected devices (up to 16,777,216)

Example: 10.0.0.1, (network 10, host 0.0.1)

## Class B Network

IP address 128.0.x.x to 191.255.xxx.xxx

These networks are used for large company networks. Every network can consist of up to 65,534 devices.

Example: 172.1.3.2 (network 172.1, host 3.2)

## Class C Network

IP address 192.0.0.xxx to 223.255.255.xxx

Example: 192.7.1.9 (network 192.7.1, host 9)

These network addresses are most common and are often used in small companies. These networks can consist of a maximum number of 254 hosts.

Example: 192.7.1.9 (network 192.7.1, host 9)

The remaining addresses 224.x.x.x - 239.x.x.x are defined as “class D” and are used as a multicast addresses.

The addresses 240.x.x.x. - 254.x.x.x are defined as “class E” and are reserved addresses.

## Network Address

The host address with all host bits set to “0” is used to address the network as a whole (for example in routing entries).

## Broadcast Address

The address with the host part bits set to “1” is the broadcast address, meaning “for every station”.

Network and Broadcast addresses must not be used as a host address (e.g. 192.168.0.0 identifies the entire network, 192.168.0.255 identifies the broadcast address).

## IP Netmask

The netmask is used to divide the IP address differently from the standard defined by the classes A, B, and C. A netmask defines how many bits from the IP address are to be taken as the network section and how many bits are to be taken as the host section. When the number of host bits is entered, the Ethernet card calculates the netmask. The netmask is displayed in standard decimal-dot notation.

**Table 8 IP Netmask**

	Network Bits	Host Bits	Netmask
Class A	8	24	255.0.0.0
Class B	16	16	255.255.0.0
Class C	24	8	255.255.255.0

Netmask	Host bits
255.255.255.252	2
255.255.255.248	3
255.255.255.240	4
255.255.255.224	5
255.255.255.192	6
255.255.255.128	7
255.255.255.0	8
255.255.254.0	9
255.255.252.0	10
255.255.248.0	11
.	.
.	.
255.128.0.0	23
255.0.0.0	24

## **Private IP Networks and the Internet**

If your network is not connected to the Internet and there are no plans to make such a connection you may use any IP address you wish.

If you are not connected to the Internet and have plans to connect, or you are connected to the Internet and want to operate your Ethernet card on an Intranet you should use one of the sub-networks below. These network numbers have been reserved for such networks. If you have any questions about IP assignment consult your network administrator.

**Class A 10.x.x.x**

**Class B 172.16.x.x**

**Class C 192.168.0.x**

## **Network RFCs**

For more information regarding IP addressing see the following documents. These can be located on the World Wide Web using one of the directories or indices.

- RFC 950 Internet Standard Subnetting Procedure
- RFC 1700 Assigned Numbers
- RFC 1117 Internet Numbers
- RFC 1597 Address Allocation for Private Internets





**Honeywell**

---

**Sensing and Control**  
Honeywell  
11 West Spring Street  
Freeport, IL 61032