

1. USE:

- 1.1 Maximum results and long life of the valves can be maintained under normal working conditions and according with pressure/temperature rating and corrosion data chart.

2. MANUAL OPERATION:

- 2.1 The opening and closing of the valve is done by turning the lever a ¼ turn (90 degrees)
A. Valve in Open Position – the lever is in line with the valve or pipeline.
B. Valve in Closed Position – the lever is at right angle with the valve or pipeline.

3. DISASSEMBLY & CLEANING PROCEDURE:

Caution: ball valve can trap fluids in the ball cavity when closed.

Clean all components thoroughly and examine all seating/sealing surfaces. NO eroded or corroded leak paths are permissible. If any are found, the part must be replaced. The ball must have no scratches across its seating surface and any damage to the port lip will destroy the new seats, a damaged ball must not be re-used.

- 3.1 If the valve has been used to control hazardous media, it must be decontaminated before disassembly. It is recommended that the following steps are taken for safe removal and reassembly.
- A. Relieve the line pressure.
 - B. Place valve in half-open position and flush the line to remove any hazardous material from the valve.
 - C. All persons involved in the removal and disassembly of the valve should wear the proper protective clothing, such as face shield, gloves, etc.

Maintenance of parts is easy, even if the valve is installed in the line: By removing all the body bolts except one and loosening the remain one, valve body can be swung out. Seats, gaskets and ball can be replaced without disturbing pipe alignment. On threaded lines, valve can be screwed on without the use of unions, as the three-piece construction makes valve ends free, by removing the bolts.

4. GENERAL INFORMATION FOR INSTALLATION:

- 4.1 The valve can be installed in any position on the pipeline.
4.2 Before installation of the valves, the pipe must be flushed clean of dirt, burrs and welding residues, or the seats and ball surface will be damaged.
4.3 The pipe must be free from tension.

5. INSTALLATION OF THREADED VALVES

- 5.1 Use conventional sealant, such as hemp core, Teflon, etc. on the threads.
5.2 Apply wrench only on the hexagon of the valve ends. Tightening by using the valve body or lever can seriously damage the valve.
5.3 In some applications, screwed valves are back welded on site, these valves must be treated as per instructions for weld end valves before back welding.

6. INSTALLATION OF WELD-END VALVES

- 6.1 Tack weld the valve on the pipe in four points on both end caps.
6.2 With the valve in the open position, (lever to be parallel to the axis of the pipe), remove all the body bolts except one. Loosen the nut on the remaining bolt. Swing the body outside the pipe.
6.3 Take off PTFE gasket from body, embed new graphite gasket into gasket groove of body.
 - **Note:** Weld-End valves contain PTFE joint gaskets for temporary purposes only, the provided graphite joint gaskets shall be used in place of the PTFE joint gaskets for final installation.
6.4 Finish welding both end caps on the pipe.
6.5 When cooled down, clean both end caps and body surface.
6.6 Swing the body back in position and replace the bolts. Tighten all nuts slightly. This operation is very important, to keep body and end caps perfectly parallel, thus preventing distortion of the end caps.
6.7 With the valve in the closed position, tighten the body bolts in a uniform pattern as to evenly compress the new

graphite gaskets. (Reference the following table for proper body bolt torques)

6.8 Check proper operation of the valve.

BOLT TIGHTENING SPECIFICATIONS

The body bolts of the valve should be tightened evenly.

Tighten one-side snugly, then the one diagonal across.

Repeat for the other bolts, bringing them all down tightly in sequence.

| Valve Size | Break Away Torque (In-lbs.) | Torque of Body Bolts (In-lbs.) | Torque of Stem Nut (In-lbs.) |
|------------|--------------------------------|-----------------------------------|---------------------------------|
| 1/4" | 75 | 70 ~ 80 | 78 |
| 3/8" | 75 | 70 ~ 80 | 78 |
| 1/2" | 80 | 70 ~ 80 | 87 |
| 3/4" | 110 | 125 ~ 160 | 87 |
| 1" | 150 | 170 ~ 200 | 130 |
| 1-1/4" | 225 | 195 ~ 220 | 130 |
| 1-1/2" | 320 | 335 ~ 375 | 174 |
| 2" | 460 | 370 ~ 405 | 174 |
| 2-1/2" | 610 | 415 ~ 440 | 208 |
| 3" | 1000 | 435 ~ 485 | 208 |
| 4" | 1600 | 485 ~ 515 | 226 |


MATERIALS LIST

| NO. | PART NAME | MATERIAL | Q'TY |
|-----|-------------------|-----------------------------|------|
| 1 | Body | ASTM A351 Gr.CF8M | 1 |
| 2 | End Cap | ASTM A351 Gr.CF8M | 2 |
| 3 | Ball | SUS316 | 1 |
| 4 | Stem | SUS316 | 1 |
| 5 | Stem Nut | SUS304 | 2 |
| 6 | Belleville Washer | SUS301 | 2 |
| 7 | Handle | SUS304 | 1 |
| 8 | Seat | PTFE | 2 |
| 9 | Gland Bush | SUS304 | 1 |
| 10 | Gland Packing | GRAPHITE | 1 |
| 11 | Stem Seal | RPTFE | 1 |
| 12 | Lock Saddle | SUS304 | 1 |
| 13 | Joint Gasket | GRAPHITE | 2 |
| 14 | Bolt | SUS304 | • |
| 15 | Stop Bolt & Nut | SUS304 | 1 |
| 16 | Handle Sleeve | VINYL | 1 |
| 17 | Bolt Nut | SUS304 | ↑ |
| 18 | Stem Washer | SUS304 | 1 |
| 19 | Bushing | 15% Glass Fiber Filled+PTFE | 1 |
| 20 | Locking Device | SUS304 | 1 |
| 21 | Antistatic Device | SUS304 | 2 |
| 22 | Stop Washer | SUS304 | 1 |
| 23 | Stop Nut | SUS304 | 1 |

Socket weld and butt weld uses CF3M material

For 1/2" to 11/2"- 4pcs; For 2"-4"- 6pcs

For 1/2" to 11/2"- 4pcs; For 2" 6pcs, For 2 1/2"-4"-12pcs.

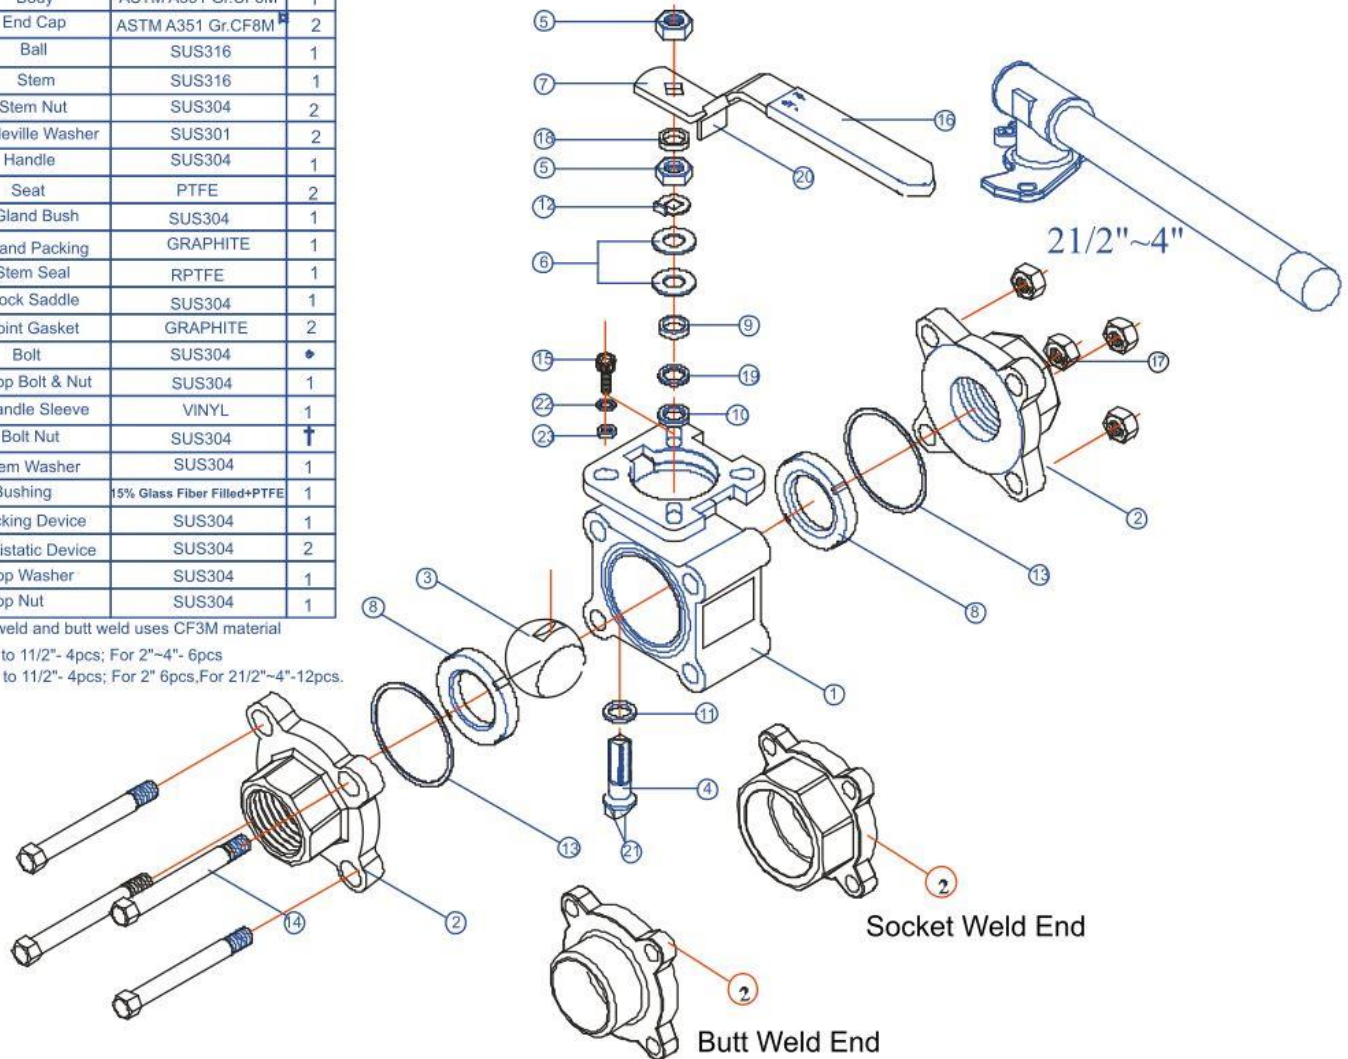

A-T Controls product, when properly selected, is designed to perform its intended function safely during its useful life. However, the purchaser or user of A-T Controls products should be aware that A-T Controls products might be used in numerous applications under a wide variety of industrial service conditions. Although A-T Controls can provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser / user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of A-T Controls products. The user should read and understand the installation operation maintenance (IOM) instructions included with the product, and train its employees and contractors in the safe use of A-T Controls products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only. Because A-T Controls is continually improving and upgrading its product design, the specifications, dimensions and information contained in this literature are subject to change without notice. Should any question arise concerning these specifications, the purchaser/user should contact A-T Controls.

For product specifications go to <http://download.a-tcontrols.com/>

A-T Controls, Inc. • 9955 International Boulevard, Cincinnati, OH 45246 • Phone: (513) 530-5175 • Fax: (513) 247-5462 • www.a-tcontrols.com