
# Design and Application Details MICRO-RATIO® Valves

#### **Principle of Operation**

MICRO-RATIO® Valve assemblies typically consist of a fixed-gradient air butterfly valve mechanically linked to one or more adjustable gradient SYNCHRO Fuel Control Valve(s).

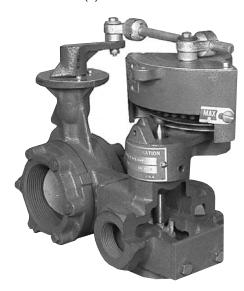

Cut-away view of M- 3" x 1-1/4" -P MICRO-RATIO ® Valve

The tandem linkage gives accurate proportioning of the air/fuel(s) ratios required for your specific burner system/application.

The multiple screw adjustment feature of the SYNCHRO Valve provides a mechanical means of adjusting the air/fuel(s) ratios at each of twelve valve positions throughout the capacity range of each valve.

**Maximum application flexibility** is provided from over 500 possible valve combinations.

**Air-gas-oil valves in tandem-linked combination** are ideal for multi-zone or stand-by fuel system control.

Air-gas-oil SYNCHRO Valves may be used independently for single control or throttling of multiple flow paths or fuels.

#### Nomenclature

MICRO-RATIO® Valve assemblies are designated by listing the individual valves, starting with the air valve, then each of the fuel valves to be included, as well as their relative position in the assembly.


#### Examples:

"Duplex" MICRO-RATIO ® Valve assembly

**M-6"** x 2"-P (air) x (gas)

"Quadriplex" MICRO-RATIO ® Valve assembly

**M-10"** x 4" -M x 1/2" -O -200 x 2" -P (air) x (gas) x (oil) x (gas)

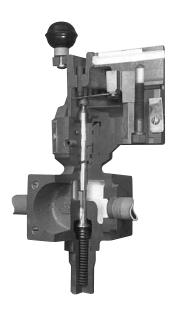

Cut-away view of 3/4" -O -200 SYNCHRO Oil Valve with standard cam assembly



Cut-away view of 2-1/2" -P SYNCHRO Gas Valve with standard cam assembly

#### **Capacities and Specifications** SYNCHRO and MICRO-RATIO® Valves

#### General

All Maxon Flow Control Valves are designed for throttling service only and are not intended for tight shut-off.

Flow direction is not a factor with butterfly-type valve bodies; however, with poppet-type SYNCHRO Valves, fluid flow through the valve must only be in the direction indicated by the arrowhead cast into each valve body.

#### SYNCHRO Valve Specifications

	ambient tempera	Cv Flow	Maximum Inlet	Torque Required [2]	Maximum Fluid		
Туре	Size	Factor [1]	Pressure (PSIG)	(inch-pounds)	Temperature		
	1-1/2"-M	80					
	3"-S	80					
	2"-M	405					
	4"-S	135		120	200°F		
Standard	2-1/2"-M	200			(93°C)		
Butterfly	3"-M	380	5		(55.5)		
Type	4"-M	600					
	6"-M	1550					
	8"-M	2750		180			
	10"-M [4]	4300		180	200°F		
	12"-M [4]	6200			(93°C)		
	1-1/2" -M -SHP	00	45				
Special	3" -S -SHP	80	15				
High	2" -M -SHP	405	40		20005		
Pressure (SHP)	4" -S -SHP	135	12	180	200°F (93°C)		
Butterfly	2-1/2" -M -SHP	200	11		(55 0)		
Туре	3" -M -SHP	380	9				
	4" -M -SHP	600	6				
	1/2" -P	4.6					
	3/4" -P	6.5	20				
Gas	1" -P	8			200°F		
Poppet	1-1/4" -P	11.8	15	90	(93°C)		
Туре	1-1/2" -P	17.7	13		(55.5)		
	2" -P	40	5				
	2-1/2" -P	50					
	3/8" -O -8	0.05		125 @			
	1/2" -O -20	0.14		10 PSIG			
Oil	1/2" -O -50	0.35			350°F		
Poppet	1/2" -O -100	0.7	300	or	(177°C)		
Туре	3/4" -O -200	1.41		220 @	` ′		
	1" -O -400	2.82		250 PSIG			
	1" -O -750	5.3					

- [1] Cv factors based on flow through a wide-open valve.
- [2] Torque required is shown for maximum rated pressure unless noted

otherwise. At lower pressures, less torque may be required.

[3] High temperature version is available up to 450°F.

[4] 10M and 12M SYNCHRO Valves are available as specials only

All valve combinations will be assembled in "right hand" flow direction unless specified as "left hand" assembly. When looking directly at the air valve indicator dial, a "right hand" arrangement is indicated by flow coming from the right side of the fuel valve quadrant and flowing to the left side. A "left hand" assembly is opposite, with flow from left to right.

For instructions for reversing valve body flow direction in the field, see page 7016.

Torque requirements listed in tables below are important and are to be used in selecting your automatic control operators. Torque figures (inchpounds) are additive for your complete MICRO-RATIO® Valve assembly.

Example: For M-6" x 2" -P MICRO-RATIO® Valve:

M- 6" requires 60 in-lbs 2" -P requires 90 in-lbs

M- 6" x 2" -P assembly requires 150 in-lbs

The automatic control motor you select must be capable of developing at least 150 in-lbs of torque in order to throttle this particular MICRO-RATIO® Valve combination if valve is applied at maximum inlet pressures shown.

#### Air Control Valve Specifications

Maximum ambient temperature: 125°F (52°C) Maximum fluid temperature: 200°F (93°C) High temperature version available to 800°F

Butterfly Type Air Valve Size	Cv Flow Factor [1]	Maximum Inlet Pressure (PSIG)	Torque Required [2] (inch-pounds)
M- 1-1/2"	80		
M- 2"	135		5
M- 2-1/2"	200		5
M- 3"	380		
M- 4"	600		30
M- 6"	1550	5	60
M- 8"	3750	5	100
M- 10"	4300		100
M- 12"	6200		
M- 14"	8430		200
M- 16"	11020		200
M- 18"	13950		


- [1] Cv factors based on flow through a wide-open valve.
- [2] Torque required is shown for maximum rated pressure. At lower pressures, less torque may be required.

#### (M-) Style Control Valves - Air Service

Air Valves are normally sized to match the combustion air pipe sizing. Pressure drops of 1" wc to 2.5" wc are typical. If supply pressures are higher than required, smaller valves can be used, or travel limited to restrict maximum flow rate.


**Note:** The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

[1] S.T.P. = Standard Temperature and Pressure defined at: (60°F and 14.7 PSIA and 15.6°C and 760mm Hg)

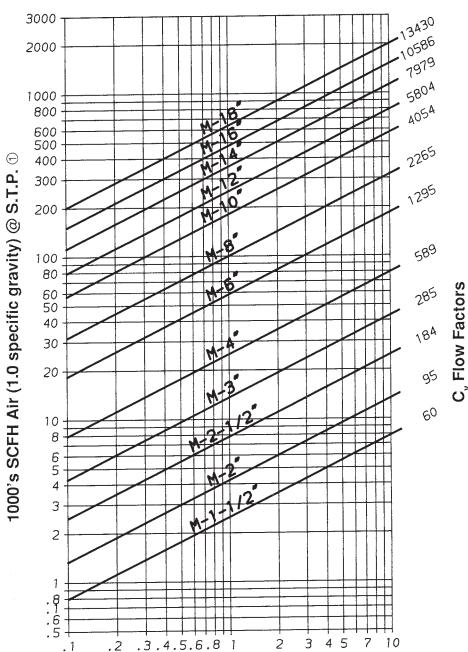

Pressure Drop in Inches Water Column

#### SYNCHRO Gas Valves - Natural Gas Service

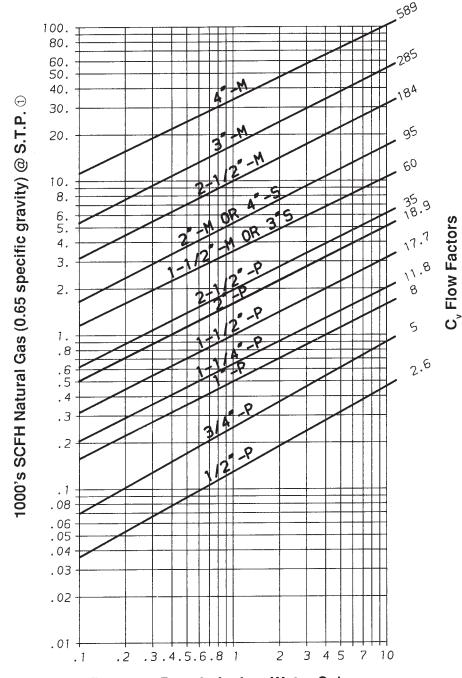

**Note:** The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

[1] S.T.P. = Standard Temperature and Pressure defined at: (60°F and 14.7 PSIA and 15.6°C and 760mm Hg)

Pressure Drop in Inches Water Column


**Gas Valves** are normally sized based on inlet pressure and allowable pressure drop. See guidelines at right.

	Gas Inlet Pressure	Suggested Pressure Drop
	3" wc - 5" wc	0.5" wc - 1.5" wc
	4 osi - 8 osi	1" wc - 2" wc
	8 osi - 16 osi	2" wc - 5" wc
Ì	2 psi - 3 psi	6" wc - 10" wc

#### SYNCHRO Gas Valves - Propane Gas Service

Note: The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

[1] S.T.P. = Standard Temperature and Pressure defined at: (60°F and 14.7 PSIA and 15.6°C and 760mm Hg)

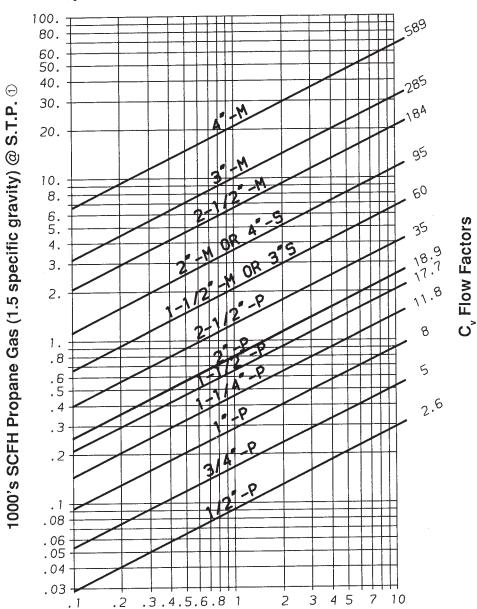


Pressure Drop in Inches Water Column

**Gas Valves** are normally sized based on inlet pressure and allowable pressure drop. See guidelines at right.

Gas Inlet Pressure	Suggested Pressure Drop
3" wc - 5" wc	0.5" wc - 1.5" wc
4 osi - 8 osi	1" wc - 2" wc
8 osi - 16 osi	2" wc - 5" wc
2 psi - 3 psi	6" wc - 10" wc

#### SYNCHRO Oil Valves - #2 Fuel Oil Service

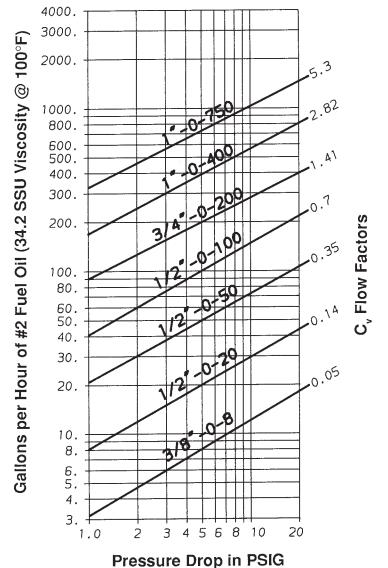

**Oil Valves** are normally sized for approximately 5 psi pressure drop. **For #2 oil service**, see chart at left.

For preheated #5 or #6 oil, multiply the required flow rate in gph by the factor given in the table shown below the chart, then select a valve based upon that equivalent flow of #2 oil and its allowable pressure drop.


**Note:** The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

Trocomo Drop in resis

Oil Grade	#	5	#6					
Temperature (°F) at Inlet	125	160	122	140	180	210	220	
Factor	1.43	1.11	2.86	2	1.25	1.11	1.05	

**For example:** To size for 5 psi drop with a 50 gph flow of #6 preheated to  $140^{\circ}$ F, the multiplier is "2". Equivalent flow of #2 oil is then  $50 \times 2$ , or 100 gph. Chart shows that a 5 psi drop will require use of a 1/2" -O -100 SYNCHRO Oil Valve.

#### (M-) Style Manual Air Control Butterfly-type Valves

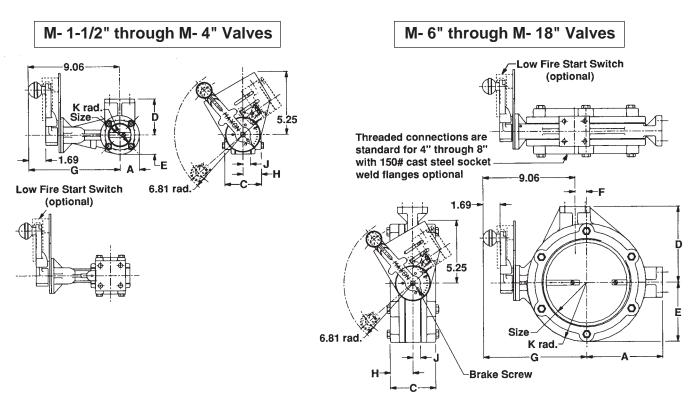

Size	Α	C	D	Е	<b>F</b> [2]	G	<b>H</b> [1]	J	K
M- 1-1/2"	1.75	2.62		1.75			1.81		1.75
M- 2"	1.94	3.62	3.56	1.94			1.01		1.94
M- 2-1/2"	2.38	3.88		2.38		9	1.94	]	2.38
M- 3"	2.62	4.0	4.06	2.62		9	2.0	0.75	2.62
M- 4"	3.19	4.25	4.56	3.19			2.12		3.19
M- 6"	6.06	4.25	6.06	4.44			2.12		4.44
M- 8"	7.5	4.5	7.56	5.88	1.12	10.12	2.25		5.88
M- 10"	7.75	6.5	8.38	6.5	3.62	12.38	3.25	1.25	8
M- 12"	8.75	5.31	9.5	8	4.62	13.38	2.69		9.5
M- 14"	9.75	5.38	10.5	8.69	5.75	14.5	2.09	4.5	10.5
M- 16"	10.62	8.12	11 20	9.69	6.62	15.38	4.06	1.5	11.75
M- 18"	11.62	8.5	11.38	10.75	7.62	16.38	4.25		12.5

<sup>[1]</sup> M- 10" and larger are wafer-type. Companion flanges not included.

Pipe threads on this page conform to NPT (ANSI Standard B2.1)

<sup>[2]</sup> Centerline offset (on M- 8" and larger sizes only)


#### **SYNCHRO Oil Valves**

3.69

# 9.25 4.06 2.44

**Standard Cam Version** 

#### **SYNCHRO Gas Poppet Valves**

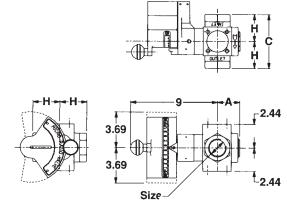

**Standard Cam Version** 

#### **SYNCHRO Oil Valves**

Size	(	2	Н		
Size	350°F	450°F	350°F	450°F	
3/8" -O -8					
1/2" -O -20					
1/2" -O 50				2.25	
1/2" -O -100	4	4.5	2		
3/4" -O -200					
1" -O -400					
1" -O 750					


#### **SYNCHRO Gas Poppet Valves**


Size	Α	С	Н		
1/2" -P					
3/4" -P	1.81	4.25	2.12		
1" -P					
1-1/4" -P	2.31	5.62	2.81		
1-1/2" -P	2.31	5.02	2.01		
2" -P	3.75	7.25	3.62		
2-1/2" -P	3.75	7.5	3.75		

Pipe threads on this page conform to NPT (ANSI Standard B2.1)

NOTE: 1/2" through 1" SYNCHRO Oil Valves are also available in ISO Rp 7/1 and ISO 228-1 threads.

#### (-M) Style SYNCHRO Butterfly-type Gas Valves (1-1/2" through 6") - cast iron bodies

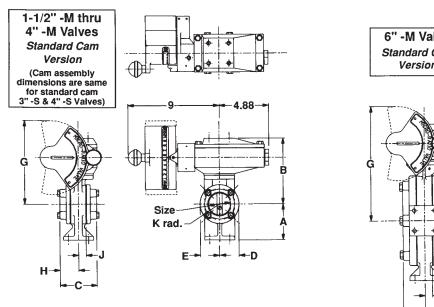


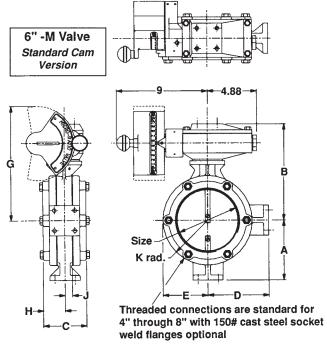

Size	Α	В	С	D	Е	G	Н	J	K
1-1/2" -M			3.62	1.94	1.94		1.82	0.75	1.94
3" -S			7.0	2.56	2.56		3.5	2.25	2.56
2"-M	3.56	6.5	3.62	1.91	1.94	8.31	1.82	0.75	1.94
4" -S			8.25	3.19	3.19		4.12	2.75	3.19
2-1/2" -M			3.88	2.38	2.38		1.94		2.38
3"-M	4.06	7.5	4.0	2.62	2.62	0.24	2.0	0.75	2.56
4" -M	4.56	7.5	4.25	3.19	3.19	9.31	2.12	0.75	3.19
6"-M	5.94	9.56	4.25	6.06	4.44	11.31	2.12		4.44

Pipe threads on this page conform to NPT (ANSI Standard B2.1)

#### (-M) Style SYNCHRO Butterfly-type Gas Valves (8" through 12") - cast iron bodies

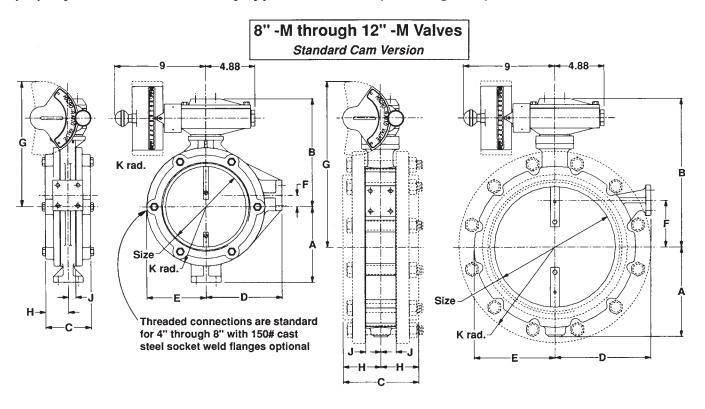


Pipe threads on this page conform to NPT (ANSI Standard B2.1)


NOTE: 10M and 12M SYNCHRO Valves are available as specials only

#### (-M) Style SYNCHRO Butterfly-type Gas Valves (1-1/2" through 4" sizes, steel bodies)

#### 1-1/2" through 3" -M Valves

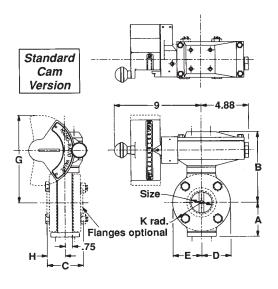

#### 4" -M Valves

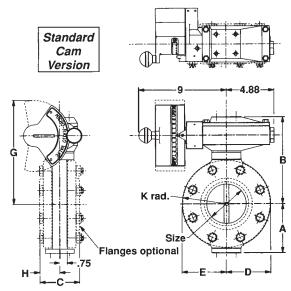


NOTE: Companion flange sets for these wafer type valves are optional and available in 150# ANSI cast steel flat faced welding flanges. Companion flange sets include 2 flanges, gaskets, nuts & bolts.

Size	Α	В	С	D&E	G	Н	K	Bolt Holes
1-1/2" -M	3.62	7.31	3.38	2.25	9.06	1.69	2.5	
2" -M	3.56	7.38	3.62	3	9.12	1.81	3	4
2-1/2" -M	4.06	7.88	3.88	3.5	9.12	1.94	3.5	4
3" -M	4.31	8.12	4	3.75	9.88	2	3.75	
4" -M	5.06	9	4.25	4.56	10.75	2.12	4.5	8

Pipe threads on this page conform to NPT (ANSI Standard B2.1)

#### MICRO-RATIO® Valve arrangements (right hand arrangement shown)

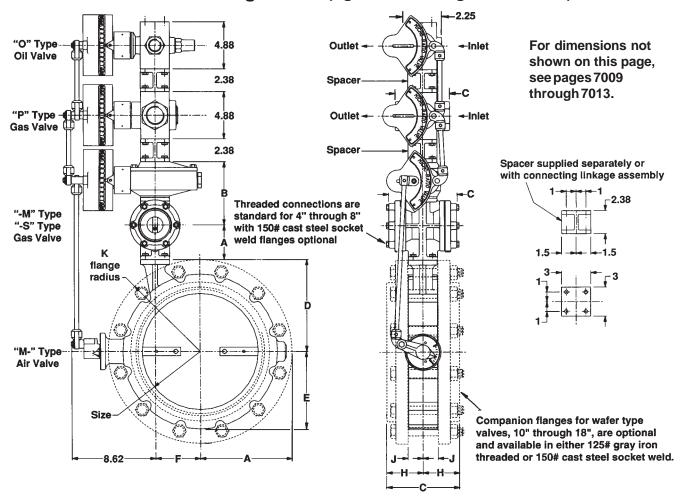

			Air Co	ntual Val					SYNCHRO Gas Valves					
Air Control Valves									Butterfly	/-type		Poppet-type		
Size	Α	С	D	Е	F	Н	J	K	Size	Α	В	С	Size	С
M- 1-1/2"	1.75	2.00		1.75		4.04		1.75	1-1/2" -M			3.62	1/2" -P	
M- 2"	1.94	3.62	3.56	1.94		1.81		1.94	3" -S			7.0	3/4" -P	4.25
M- 2-1/2"	2.38	3.88	1	2.38		1.94		2.38	2" -M	3.56	6.5	3.62	1"-P	
M- 3"	2.62	4.0	4.06	2.62		2.0	0.75	2.62	4" -S			8.25	1-1/4" -P	F 00
M- 4"	3.19	4.25	4.56	3.19		2.12		3.19	2-1/2" -M			3.88	1-1/2" -P	5.62
M- 6"	6.06	4.25	6.06	4.44		2.12		4.44	3" -M	4.06	7.5	4.0	2" -P	7.25
M- 8"	7.5	4.5	7.56	5.88	1.12	2.25		5.88	4" -M	4.56	7.5	4.25	2-1/2" -P	7.5
M- 10"	7.75	6.5	8.38	6.5	3.62	3.25	1.25	8	6" -M	5.94	9.5	4.25		
M- 12"	8.75	5.31	9.5	8	4.62	2.60		9.5	8" -M	7.38	10.69	4.5		
M-14"	9.75	5.38	10.5	8.69	5.75	2.69	1.5	10.5	10" -M [1]	7.75	13.75	6.5		
M- 16"	10.62	8.12	11.38	9.69	6.62	4.06	1.5	11.75	12" -M [1]	8.75	14.75	7.5		
M- 18"	11.62	8.5	11.30	10.75	7.62	4.25		12.5	[1] 10M an	d 12M S	NCHRO	are availa	ble as speci	als only


Pipe threads on this page conform to NPT (ANSI Standard B2.1)

# Component Identification MICRO-RATIO® and SYNCHRO Flow Control Valves

#### (-M) SYNCHRO Gas Valve Butterfly-type


## (-O) SYNCHRO Oil Valve Poppet-type

#### (-P) SYNCHRO Gas Valve Poppet-type

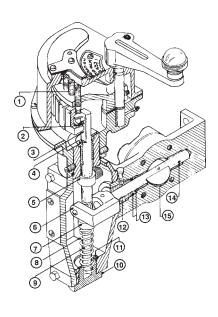


**Duplex MICRO-RATIO® Valve** 

(M-) air valve with (-M) type gas valve

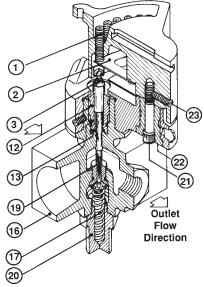

End-Drilled

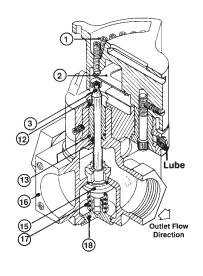

#### Legend

#### Item Description

- 1 Adjusting Screws
- 2 Cam Springs
- 3 Plunger/Cap Assembly
- 4 Plunger Bushing
- 5 Set Collar
- 6 Operating Crank
- 7 Upper Spring Retainer
- 8 Gas Valve Spring
- 9 Spring Return Shaft
- 10 Shaft Retainer
- 11 Lower Spring Retainer
- 12 Packing Collar
- 13 O-rings
- 14 Operating Shaft
- 15 Valve Disc
- 16 Valve Body
- 17 Valve Disc Spring
- 18 Valve Disc Guide
- 19 Valve Stem
- 20 Spring Support Plug
- 21 Stud Bolt
- 22 Bushing
- 23 Locking Screw

#### **Suggested Spare Parts**

- Cam Springs
- Plunger/Cap Assembly
- Adjusting Screws

Order spare parts for Flow Control Valves by identifying required items from drawings above, and referencing information on SYNCHRO Valve nameplate (shown at right)

Adjusting Slo

ide-Drille

#### **SYNCHRO Valve Nameplate**




# Suggested Maintenance/Inspection Procedures Maxon MICRO-RATIO® Valves

## Field Rotation of SYNCHRO Valves in MICRO-RATIO® Valve Assemblies

Flow direction through (-P) and (-O) poppet-type SYNCHRO Valves must be in the direction indicated on valve body casting. If reversal of the SYNCHRO Valve body is required for piping convenience, follow these steps:

- 1. Loosen neck set screws (one on each side) [1].
- 2. Remove bracket cap screws [2] and save.
- 3. Remove valve body [3] while supporting air butterfly [5] and adjusting screw carrier assembly [4].
- 4. Rotate valve body [3] 180°, then reposition and install bracket cap screws [2] loosely.
- Check carefully that screw carrier assembly [4] is lowered into position, then tighten neck set screws [1] into neck indentation.
- 6. Tighten bracket cap screws [2].

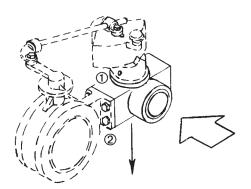


#### **Valve Lubrication Suggestions**

Some lubrication of moving parts may be required. All moving parts, O-rings and cam strips are lubricated at time of manufacturing. A periodic inspection should be performed to insure all parts continue to move freely and function properly. A periodic re-application of lubricant will extend the service life of your Maxon MICRO-RATIO® Valve.

#### The following lubricants are suggested:

Manufacturer	Lubricant
Keystone Div., Philadelphia, PA	#84-EP-2, NLGI#2 Lithium base grease
Standard Oil Co. (of Indiana)	Stanolith grease #42
Shell Oil Co.	Alvania grease #1
Stewart Warner Corp.	Alemite lubricant #32

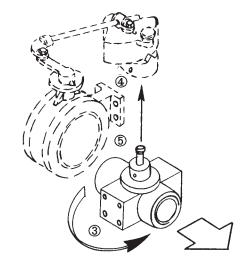

## Capacities and Specifications

#### Series "CV" Control Valves and Series "BV" Balancing Valves

#### General

All Maxon Flow Control Valves are designed for **throttling service only** and are not intended for tight shut-off.

## Series "CV" Valves are offered in four different versions:

- Standard assemblies without connecting base and linkage (CB & L) assembly (order CB & L separately)
- UL (Underwriters Laboratory) listed assemblies without CB & L (CB & L ordered separately)
- 3. Standard assemblies with CB & L to accept electric control operators, such as:
  - A. Penn/Johnson #M-80 or #M-81
  - B. Honeywell #M644, #M744, #M941, #M944 or #M7044
  - C. Barber-Colman #EA50

#### **Designations**

Both of these valve types are designated first by the nominal pipe size (inlet and outlet) followed by the letters indicating the valve series.

#### Example:

1" - Series "BV" Balancing Valve 1-1/4" -U Series "CV" Control Valve

UL (Underwriters Laboratory) listed series "CV" Valve assemblies are available in all sizes for air, natural gas and liquefied petroleum gas service.

#### Series "CV" Control Valve Specifications

Maximum ambient temperature: 125°F (52°C) Maximum fluid temperature: 150°F (66°C)

Butterfly-type Series "CV" Valve Size	Cv Flow Factor [1]	Maximum Inlet Pressure (PSIG)	Torque Required [2 (inch-pounds)		
1/2" -CV	5				
3/4" -U -CV [3]	5				
3/4" -CV	11				
1" -U -CV [3]	11	25			
1" -CV	18				
1-1/4" -U -CV [3]	10		25		
1-1/4" -CV	42				
1-1/2" -CV	80				
2" -CV	138	20			
2-1/2" -CV	180	20			
3" -CV	265	15			

- [1] Cv factors based on flow through a wide-open valves.
- [2] Torque required is shown for maximum rated pressure. At lower pressures, less torque may be required.
- [3] "U" designates undersized ports.


#### Series "BV" Balancing Valve Specifications

Maximum ambient temperature: 125°F (52°C) Maximum fluid temperature: 150°F (66°C)

Butterfly-type Series "BV" Valve Size	Cv Flow Factor [1]	Maximum Inlet Pressure (PSIG)	
1/2" -BV	5		
3/4" -BV	11		
1" -BV	18	25	
1-1/4" -BV	42		
1-1/2" -BV	80		
2" -BV	138	20	
2-1/2" -BV	180	20	
3" -BV	265	15	

<sup>[1]</sup> Cv factors based on flow through a wide-open valve.

#### Series "BV" and "CV" Gas Control Valves - Natural Gas Service

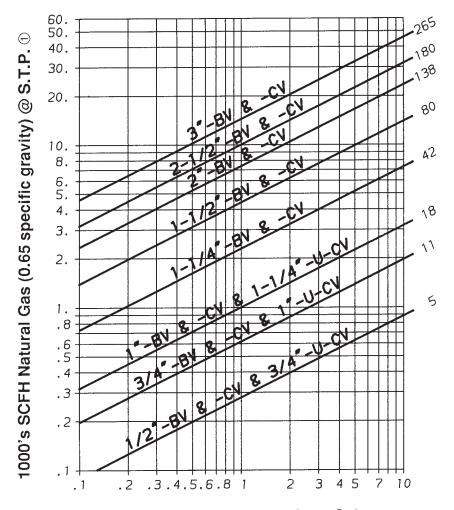

Note: The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

[1] S.T.P. = Standard Temperature and Pressure defined at: (60°F and 14.7 PSIA and 15.6°C and 760mm Hg)

C<sub>v</sub> Flow Factors

Pressure Drop in Inches Water Column

Gas Inlet Pressure	Suggested Pressure Drop		
3" wc - 5" wc	0.5" wc - 1.5" wc		
4 osi - 8 osi	1" wc - 2" wc		
8 osi - 16 osi	2" wc - 5" wc		
2 psi - 3 psi	6" wc - 10" wc		

Gas Valves are normally sized based on inlet pressure and allowable pressure drop. See guidelines at left.


C, Flow Factors

#### **Performance Data**

#### Series "BV" and "CV" Gas Control Valves - Propane Gas Service

Note: The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

[1] S.T.P. = Standard Temperature and Pressure defined at: (60°F and 14.7 PSIA and 15.6°C and 760mm Hg)

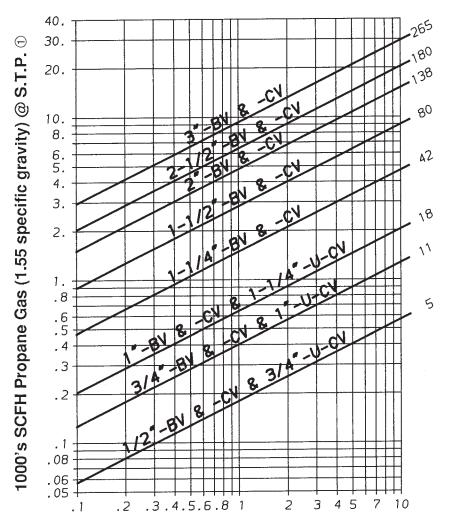


**Pressure Drop in Inches Water Column** 

Gas Valves are normally sized based on inlet pressure and allowable pressure drop. See guidelines at left.

Gas Inlet Pressure	Suggested Pressure Drop		
3" wc - 5" wc	0.5" wc - 1.5" wc		
4 osi - 8 osi	1" wc - 2" wc		
8 osi - 16 osi	2" wc - 5" wc		
2 psi - 3 psi	6" wc - 10" wc		

#### Series "BV" and "CV" Gas Control Valves - Air Service

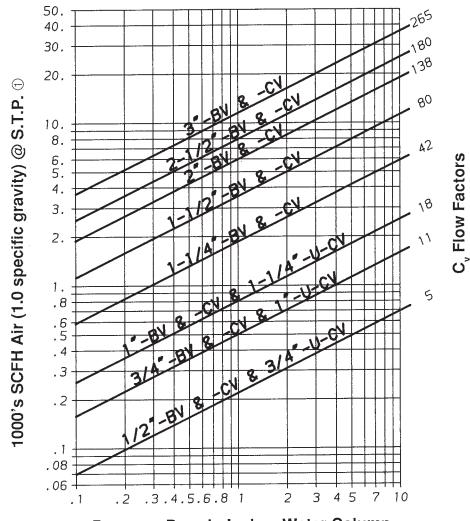


Note: The capacities and pressure drops indicated in this chart are based on flow through a wide-open valve. If valve is less than fully open, higher drops and lower flows will result.

[1] S.T.P. = Standard Temperature and Pressure defined at: (60°F and 14.7 PSIA and 15.6°C and 760mm Hg)

Pressure Drop in Inches Water Column

**Air Valves** are normally sized to match the combustion air pipe sizing. Pressure drops of 1" wc to 2.5" wc are typical. If supply pressures are higher than required, smaller valves can be used, or travel limited to restrict maximum flow rate.

## Series "CV" Control Valves

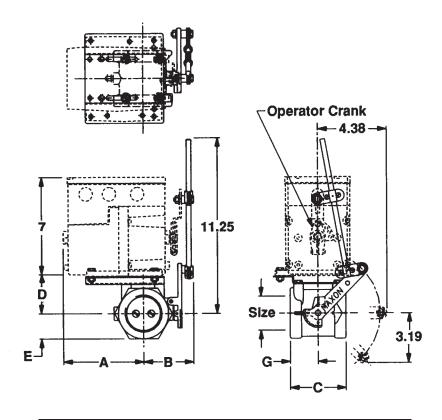


Size	A	Α		C	D	Е	G
Size	<b>B-C</b> [1]	<b>M-H</b> [2]	В	٠	U		
1/2"	4.19	4.62	3.06	3.16	1.78	0.78	1.58
3/4"					1.89		
1"				3.25	1.98	1	1.62
1-1/4"				3.38	1.94	1.19	1.69
1-1/2"	3.94	4.38	3.31	3.62	2.38	1.62	1.81
2"							
2-1/2"	3" 3.19	3.62	4.06	4.62	2.69	1.94	2.31
3"				5	3.06	2.31	2.5


<sup>[1]</sup> Barber-Colman

Pipe threads on this page conform to NPT (ANSI Standard B2.1)

<sup>[2]</sup> Honeywell

## Series "BV" Balancing Valves

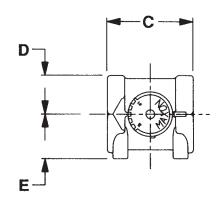

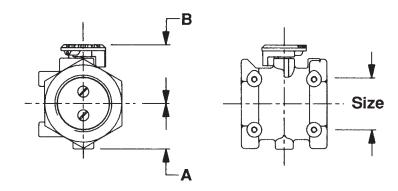


Size	Α	В	С	D	E
1/2"	1.25	2.25	3.16	0.75	1.25
3/4"					
1"		2.25	3.25	1	
1-1/4"	1.38		3.38	1.19	1.44
1-1/2"	1.81	2.5	3.62	1.31	1.56
2"	1.88	2.5	3.02	1.62	1.88
2-1/2"	2.75	3.25	4.62	1.94	2.19
3"	2.75	3.23	5	2.31	2.56


## **Component Identification**


## Series "BV" Balancing Valves and Series "CV" Flow Control Valves

#### Series "BV" Balancing Valve

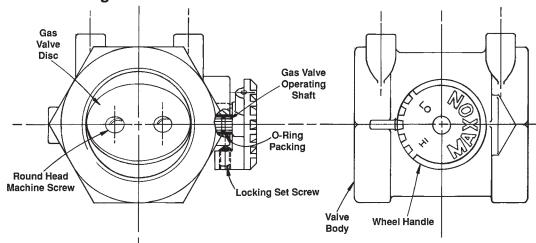

#### Series "CV" Control Valves

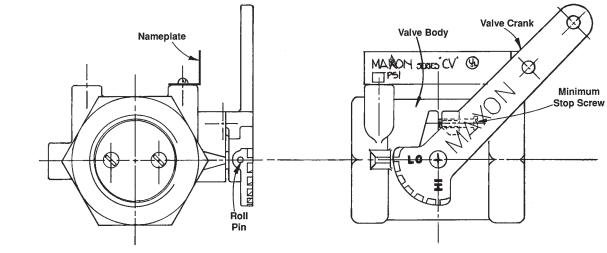

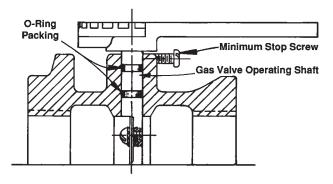

Typical internal construction (Series "CV" Valve shown)




Series "CV" Control Valve Nameplate

**Order spare parts** for Series "CV" and "BV" Flow Control Valves by identifying required items from the drawings above and referencing information on valve nameplate (shown above).

#### **Accessories**

# Adjustable Stop for air control valves


Optional Adjustable Stop shown at right sets a minimum to prevent full closure of the air valve.

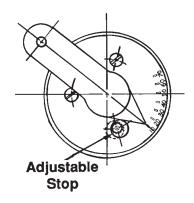

## Position Switches for electrical indication of valve position

Standard Low Fire Start (LFS) Switch opens the circuit when valve leaves minimum position. Weather-proof and Hazardous Location/Weatherproof versions differ only in the physical switch size and rating. High and low fire position switch includes (2) SPDT switches. One switch may be field-set to activate at "high" position, while other is set to activate at "low" fire position.

#### For SYNCHRO Valves

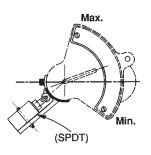

#### **Connecting Base & Linkage Assemblies**

Maxon has designed a broad range of Connecting Base & Linkage Assemblies (CB & L) to properly position and align the popular operators for control of Maxon flow control valves.

Proper position and alignment are essential for smooth and trouble-free operation of flow control valves.



Air operator shown on MICRO-RATIO ® Valve