

# Simpliport® 180





The Reliance<sup>®</sup> Simpliport<sup>®</sup> 180 LED Illuminator has been designed to accept 120VAC or 240 VAC power sources and for a service life of up to 7 years. The LED Illuminators are weatherproof and are rated safe for use in ordinary locations

### STORAGE and HANDLING

All units should be inspected upon receipt to ensure that no damage has been incurred during transit. If there is a claim due to damage, it should be filed with the carrier immediately. Units should be stored in a dry and sheltered area prior to installation, in a secure manner where they can neither fall, nor be struck by other objects. The temperature of the storage area should not exceed 170° F. (75° C.)

#### **COMPONENTS**

There are five main components that make up the Simpliport Illuminator Assembly: the LED Illuminator, the front end hood, the mounting bar assembly, the power supply, and the cable connecting the power supply to the LED Illuminator. The cable may have more than one piece depending on the required distance between the Illuminator and the power supply. In most cases, however, the power supply will be mounted directly to the LED Illuminator.

#### **INSTALLATION**

<u>CAUTION</u>: All LED Illuminators are tagged with the service conditions for that particular unit. This information is located on the power supply housing. The ratings should be reviewed prior to installation and again prior to start-up, to ensure proper operation in the installed environment.

### **IMPORTANT**

Never remove the blue cord between the power supply and illuminator while power is applied. Doing so will cause permanent damage to the LEDs.


<u>Note:</u> All installation steps should be performed by a qualified technician and should be executed in accordance with all applicable national and local codes.

The LED Illuminator and power supply should be checked to ensure that they contain no foreign matter, and that the end connections are clean, undamaged, and in line with existing conduit.

# **Step by step instructions:**

- 1) Assemble the mounting bar assemblies to the Simpliport Gage mounting lugs using the (4) 5/16" X 1" SHCS that are provided (Fig. 1).
- 2) To mount the LED Illuminator assembly to the gage: While holding the illuminator at a slight angle, slide illuminator top onto pins. Align bottom pins with slots and rest unit in place. Note: The Simpliport® Gage must be viewed with the packing nuts facing slightly to the left. Make sure the Illuminator and viewing hood are in the correct orientation to the Simpliport® Gage. (Fig. 2)
- 3) Repeat the procedure in Step 2 to mount the front end hood to the opposite side (viewing side) of the gage.
- 4) The unit's power supply has wire leads and a fuse ready to connect to the incoming AC power source. Remove the enclosure lid to access wiring. Connect incoming AC power source per local and National Electric Codes. The fused (red) wire is to be connected is the "Hot" and the remaining white wire is the "common".
- 5) The power supply can be remote mounted if desired. After remote mounting of power supply, if the blue power cord will not reach the power supply, contact your local representative.



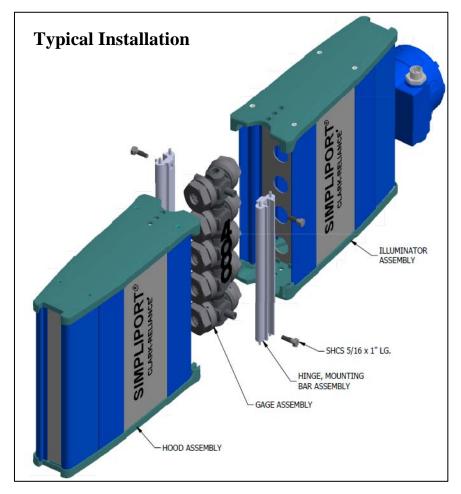

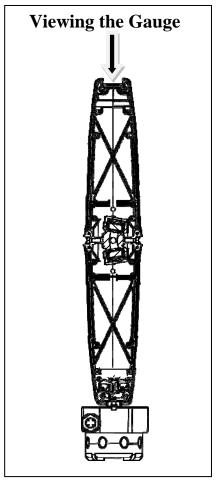


Figure 1 Figure 2

# **OPERATION**

The Simpliport® 180 LED Illuminator can operate continuously. The operating life of the LED's is up to 7 years under normal conditions.

# **ROUTINE MAINTENANCE**

Keep glass on the front of the front end hood and in the illuminator assembly clean using commercial glass cleaners, such as Windex<sup>®</sup> or similar. Never use harsh abrasives, wire brushes, metal scrapers, or any material that could scratch the glass.

The Illuminator and viewing hood may be removed while in operation to inspect the Simpliport® Gauge.

#### **SPECIFICATIONS**

Power Supply: 115/230 VAC @ 50-60 Hz

Max Power

Consumption: 500 mA

Est. Life: Up to 7 years (continuous)
Agency Approvals: FM/CFM Ordinary Locations

Wire Size: Min 16 AWG / Max 10 AWG

Max dist. from

power supply to light: 72' (22 M) Standard Cable = 8' (2.5M)

Ambient Temperature: -40 F (-40 C) to 170 F (77C)





On-Line Parts - DIRECT - for Clark-Reliance® Products

JERGUSON° Reliance®

MAGNE-SONICS JACOBY-TARBOX®



www.clark-reliance.com/parts

