


QUICK START GUIDE

AcoustiCal AC-300 Calibrator

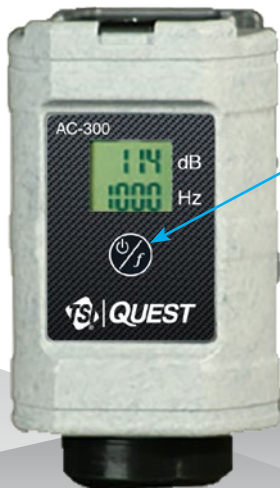

On/Off/Enter key


- + Press to power on
- + Press again to change to 250 Hz if applicable
- + Press to power off




Calibration

1. Insert the microphone (with the cal adapter if needed) into the calibrator cavity ensuring the microphone and adapter are fully seated (or inserted).

Note: the ambient noise level should be less than 88 dBA.


2. Power on the AcoustiCal by pressing the  key and allow at least 10 seconds to stabilize.

+ 1000 Hz at 114 dB will be displayed.

+ If setting to 250Hz at 114 dB, press  key.

3. Perform the calibration.

+ Reference the instrument's user manual for additional details.

4. To power off, press the  key.

Note: an auto-power off will occur after 4 minutes from the last key press.

5. Press and hold the  key for 2 seconds (approximately) to power off.



Quest is a trademark, and TSI and the TSI logo are registered trademarks of TSI Incorporated.



TSI Incorporated - Visit our website www.tsi.com for more information.

North America and Asia Pacific

Telephone: +1 800-680-1220 (USA)
+1 651-490-2860 (Outside USA)

Fax: +1 651-490-3824

E-mail: technical.services@tsi.com

Europe, Middle East, and Africa

Telephone: +49 241-52303-0

Fax: +49 241 52303-49

E-mail: tsigmbh@tsi.com