(Not for use in Japan)

No. CP-UM-1757E

DCP31 DIGITRONIK Digital Program Controller User's Manual



Thank you for purchasing an Azbil Corporation product.

This manual contains information for ensuring the correct use of this product. It also provides necessary information for installation, maintenance, and troubleshooting.

This manual should be read by those who design and maintain equipment that uses this product. Be sure to keep this manual nearby for handy reference.

Azbil Corporation

Please read "Terms and Conditions" from the following URL before ordering and use.

http://www.azbil.com/products/factory/order.html

NOTICE

Be sure that the user receives this manual before the product is used.

Copying or duplicating this user's manual in part or in whole is forbidden. The information and specifications in this manual are subject to change without notice.

Considerable effort has been made to ensure that this manual is free from inaccuracies and omissions. If you should find an error or omission, please contact the azbil Group.

In no event is Azbil Corporation liable to anyone for any indirect, special or consequential damages as a result of using this product.

© 1996–2016 Azbil Corporation All Rights Reserved.

DIGITRONIK[™], DCP[™], and SDC[™] are trademarks of Azbil Corporation in Japan.

Safety Requirement



To reduce the risk of an electric shock resulting in personal injury, follow all safety notices in this document.



This symbol warns the user when there is a danger of electric shock from accidental contact.

- The use of this product in a manner not specified by the manufacturer will impair its built-in safety features
- Do not replace any component or part not explicitly specified as replaceable by the manufacturer.
- All wiring must be in accordance with local regulations and carried out by authorized and experienced personnel.
- To be safe, be sure to wire the ground terminal before other wiring.
- Be sure to mount a switch for shutoff of the main power to this device within reach of the operator.
- Connect a time-lag fuse with a rated current of 1.0 A and rated voltage of 250 V to the wiring for the device power supply. (Reference: IEC 127)
- The fuse must be connected to the wiring on the non-grounded side.
- If a fuse is needed, please use the following.

Manufacturer: Littelfuse, Inc. Model No.: 218001 Rating: 250 Vac, 1 A

EQUIPMENT RATINGS

Supply voltage: 100 to 240 Vac (operating supply voltage: 90 to 264 Vac)

Frequency: 50/60 Hz Power consumption: 30 VA max.

EQUIPMENT CONDITIONS

Do not use this device near flammable fluids or vapors. Under such circumstances, safety will be impaired.

Operating temperature: 0 to 50 °C

Operating humidity: 10 to 90 %RH (without condensation)

Vibration: 1.96 m/s² max. (10 to 60 Hz for 2 h each in x, y, and z directions)

Overvoltage: Category II (IEC 60364-4-443, IEC 60664-1)

Pollution degree:

_ .

Installation location: Indoors
Altitude: 2000 m max

EQUIPMENT INSTALLATION

- Be sure to mount this device in a panel so that operators do not touch the rear terminal block.
- With the exception of supply power and relay contact output, the I/O common mode voltage with respect to the ground should be 33 VRMS max., 46.7 V peak max., and 70 Vdc max.

STANDARDS COMPLIANCE

EN61010-1,

EN61326-1 (For use in industrial locations)

During EMC testing, the reading or output may fluctuate by \pm 10 % FS.

However, the MFB (motor-opening feedback) is within \pm 30 % FS.

WARNING

There is a danger of explosion if the battery is incorrectly replaced.

When replacing the battery, use only the type specified in this user's manual or an equivalent type.

Dispose of used batteries according to the manufacturer's instructions.

Safety Precautions

■ About Icons

The safety precautions described in this manual are indicated by various icons. Please be sure you read and understand the icons and their meanings described below before reading the rest of the manual.

Safety precautions are intended to ensure the safe and correct use of this product, to prevent injury to the operator and others, and to prevent damage to property. Be sure to observe these safety precautions.

!WARNING

Warnings are indicated when mishandling this product might result in death or serious injury to the user.



Cautions are indicated when mishandling this product might result in minor injury to the user, or only physical damage to this product.

■ Examples



Use caution when handling the product.



The indicated action is prohibited.



Be sure to follow the indicated instructions.

WARNING



Before removing, mounting, or wiring the DCP31, be sure to turn off the power to the DCP31 and all connected devices.

Failure to do so might cause electric shock.



Do not disassemble the DCP31.

Doing so might cause electric shock or faulty operation.



Before connecting the DCP31 to the measurement target or external control circuits, make sure that the FG terminal is properly grounded (100 Ω max.). Failure to do so might cause electric shock or fire.



Turn the DCP31 OFF before starting wiring. Failure to do so might cause electric shock.



Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.

!CAUTION



Use the DCP31 within the operating ranges recommended in the specifications (temperature, humidity, voltage, vibration, shock, mounting direction, atmosphere, etc.).

Failure to do so might cause fire or faulty operation.



Do not block ventilation holes.

Doing so might cause fire or faulty operation.



Do not allow lead clippings, chips or water to enter the DCP31 case. Doing so might cause fire or faulty operation.



Wire the DCP31 properly according to predetermined standards. Also wire the DCP31 using designed power leads according to recognized installation methods.

Failure to do so might cause electric shock, fire or faulty operation.



Inputs to the current input terminals (3) and (33) on the DCP31 should be within the current range listed in the specifications.

Failure to do so might cause fire or faulty operation.



Firmly tighten the terminal screws at the torque listed in the specifications. Insufficient tightening of terminal screws might cause electric shock or fire.




Do not use unused terminals on the DCP31 as relay terminals. Doing so might cause electric shock, fire or faulty operation.




We recommend attaching the terminal cover (sold separately) after wiring the DCP31.

Failure to do so might cause electric shock.

!CAUTION




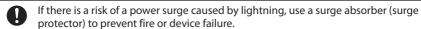

Before replacing the battery, be sure to turn the power OFF. Failure to do so might cause electric shock.

Do not touch internal components immediately after turning the power OFF to replace the battery.

Doing so might cause burns.



- Do not use damaged (broken battery skin, leaking battery fluid) batteries.
- Do not throw batteries into fires, or charge, short-circuit, disassemble or heat batteries.
- Store batteries in low-temperature, dry locations.

Failure to observe the above cautions may cause batteries to emit heat or split, or battery fluid to leak.

- Store batteries out of the reach of small children.
 Batteries are small and are easy to swallow. If a child swallows a battery, consult a physician immediately.
- When disposing of used batteries at the user site, observe bylaws.
- If you touch components inside the DCP31, touch a grounded metal object to discharge any static electricity from your body.

 Otherwise, static electricity might damage the components.
- After the power has been turned ON, the DCP31 does not operate for at least 15s. Therefore, great care should be taken if the relay output from the controller is used.
- Correct settings appropriate for the type of the sensor are required. Since incorrect settings cause incorrect PV measurement, an unsafe situation like constant 100 % control output could occur.

Unpacking

Check the following when removing the DCP31 from its package:

- Check the model No. to make sure that you have received the product that you ordered.
- 2. Check the DCP31 for any apparent physical damage.
- 3. Check the contents of the package against the Package List to make sure that all accessories are included in the package.

After unpacking, handle the DCP31 and its accessories taking care to prevent damage or loss of parts.

If an inconsistency is found or the package contents are not in order, immediately contact your dealer.


Product List

Name	Model No.	Q'ty	Remarks
Body		1	See 1-5 How Model Nos. Are Configured, page 1-5.
Mounting bracket	81405411-003	1 set (2)	The Model No. is the parts No. for two installation tools.
User's Manual	CP-UM-1757E	1	This manual
Unit indicator label (SI units)	N3132	1	

Request

The filter on the front of the controller is Covered with a protective film to protect the surface of the controller.

When you have finished mounting and wiring the controller, fix cellophane adhesive tape on the corners of the filter, and pull in the direction of the arrow to peel off the protective film.



! Handling Precautions

Peeling off the protective film with your fingernail might scratch the surface of the controller.

The Role of This Manual

Three manuals have been prepared for the DCP31. Read the manual according to your specific requirements. The lists below all the manuals that accompany the DCP31 and gives a brief outline of the manual. If you do not have the required manual, contact the azbil Group or your dealer.



DCP31 DIGITRONIK Digital Program Controller User's Manual No.CP-UM-1757E

This manual.

This manual is provided with the DCP31 (single-loop model). It is required reading for those in charge of designing, producing and maintaining control systems incorporating the DCP31, and for those using the DCP31 in other applications.

It describes mounting onto control panels, wiring, parameter setup, program setup, operation methods, maintenance and inspection, trouble-shooting and specifications.



SLP-P30 Smart Loader Package for DCP31/32 DIGITRONIK Digital Program Controller User's Manual

Manual No. CP-UM-1759JE

This manual is written in both Japanese and English.

This manual is supplied with the Smart Loader Package SLP-P30. The manual describes the software used to make various settings for the DCP31/32 using a personal computer.

Personnel in charge of design or configuration of a system using the DCP31/32 must thoroughly read this manual.

The manual describes software installation, operation of the personal computer, various functions, and setup procedures.



DIGITRONIK CPL Communication DCP31/32 User's Manual No.CP-SP-1066E

This manual is required reading for those using the CPL communications functions of the DCP31/32.

This manual describes an outline of CPL communications, wiring, communications procedures and DCP31/32 communications data, how to remedy trouble, and communications specifications.

Organization of This User's Manual

This manual is organized as follows:

Chapter 1. GENERAL

This chapter describes DCP31 applications, features and basic function blocks. It also gives a list of model numbers.

Chapter 2. NAMES & FUNCTIONS OF PARTS

This chapter describes the names and functions of DCP31 parts, input types and range Nos.

Chapter 3. MOUNTING

This chapter describes how to mount the DCP31 on control panels. This chapter is required reading for designers of control systems using the DCP31.

Chapter 4. WIRING

This chapter describes the precautions when wiring the DCP31 to a control system and how to wire the DCP31. This chapter is required reading for designers of control systems and supervisors of wiring work.

Chapter 5. FUNCTIONS

This chapter describes the functions of the controller. This chapter is required reading for designers of control systems using the DCP31.

Chapter 6. OPERATION

This chapter describes how to switch the basic display states of the DCP31, and select and run programs. This chapter is required reading for designers of control systems using the DCP31 and users of the DCP31.

Chapter 7. PARAMETER SETUP

This chapter describes how to set up parameters on the controller and the meaning of settings.

Chapter 8. PROGRAM SETUP

This chapter describes how to set up programs on the controller and the meanings of settings.

Chapter 9. MAINTENANCE & TROUBLESHOOTING

This chapter describes points to check when the DCP31 is not working properly or how to remedy trouble that might occur.

Chapter 10. DISPOSAL

This chapter describes safety precautions and how to dispose of this unit when the unit is no longer used.

Chapter 11. SPECIFICATIONS

This chapter describes the general specifications, performance specifications and external dimensions of the DCP31.

Contents

Safety Requirement
Safety Precautions
Unpacking
Request
The Role of This Manual
Organization of This User's Manual
Conventions Used in This Manual

Chapter 1.	GENERAL ····	1-1
1 - 1	Features ·····	
1 - 2	Basic Function Blocks ·····	1-2
1 - 3	Data Structure ·····	1-3
1 - 4	System Configuration ·····	1-4
	System configuration by CPL communications	1-4
1 - 5	Model Numbers ·····	1-5
	■ Model selection guide ·····	1-5
Chapter 2.	NAMES & FUNCTIONS OF PARTS ·····	2-1
2 - 1	Structure ·····	2-1
2 - 2	Console ·····	
	■ Basic display state ······	
	■ Display ······	
	■ Keys ·····	
	■ Functions using two or more keys ······	
	■ Loader jack ······	
2-3	•	
	■ Inputs ····	
Chapter 3.	MOUNTING ·····	3-1
3 - 1	External Dimensions ······	3-1
3 - 2	Panel Cutout Dimensions ·····	3-2
3 - 3	Mounting ·····	3-3
	■ Mounting locations ·····	3-3
	■ Noise generating sources and countermeasures ······	
	■ Dust-proof cover ······	3-4
	■ Mounting method ······	

Chapter 4.	WIRING	1 -1
4 - 1	Wiring Precautions	
4 - 2	Compensating Lead ······	1-3
4 - 3	Terminal Connections	1-4
4 - 4	Layout of Terminals and Recommended Lead Draw-out Direction	1-5
4 - 5		
	■ Power supply ·····	1-6
	■ Ground ·····	1-6
4 - 6	Wiring of Standard and Add-on Terminal Base · · · · · · · · · · · · · · · · · · ·	1-7
	■ Standard terminal layout ······	1-7
	■ Add-on terminal layout ······	1-7
4 - 7	Connecting Inputs (analog inputs) ······	1-8
	■ Connecting input 1 ······	1-8
4 - 8	Connecting control outputs (outputs 1, 2) ······	1-9
	■ Relay output (0D) ······	1-9
	■ Current output (5G) ······	1-9
	■ Position-proportional output (2G) · · · · · 4-	10
	■ Voltage output (6D)	10
	■ Heat/cool output (3D)	11
	■ Heat/cool output (5K)	11
4 - 9	Connecting auxiliary outputs (outputs 2, 3) 4-	12
	■ 0D, 5G, 6D auxiliary outputs	
	■ 2G, 3D, 5K auxiliary outputs4-	12
4 - 10	Connecting Event Output (relay output) 4-	13
	Connecting Time Event Output (open-collector) 4-	
	Connecting External Switch (RSW) Input 4-	
	Connecting for Communications	
	■ RS-485 interface ······· 4-	17
4 - 14	Isolating Inputs and Outputs 4-	20
	■ Control outputs 0D, 5G, 6D, 3D, 5K · · · · 4-	
	■ Control output 2G ······ 4-	21

Chapter 5.	FUNCTIONS ······· 5-1
5 - 1	Data 5-1
	■ Data types 5-1
5 - 2	Program Patterns 5-2
	■ Patterns ······ 5-2
	■ Events 1 to 3, Time events 1 to 5
	■ PID set selection · · · · 5-11
	■ G.Soak (guarantee soak)
	■ PV start 5-13
	■ Cycle 5-13
	■ Pattern link · · · · · 5-14
5 - 3	Modes 5-15
	■ Mode types · · · · · 5-15
	■ Mode transition ······ 5-18
	■ Mode transition operations · · · · · 5-19
	■ Mode transition limitations · · · · · 5-21
5 - 4	Controller and Programmer 5-22
5 - 5	Input Processing Functions 5-23
5 - 6	Output Processing Functions 5-24
	■ Control output ····· 5-24
	■ SP output
	■ Auxiliary output 5-29
Chapter 6.	OPERATION 6-1
6 - 1	Turning the Power ON ····· 6-1
6 - 2	Switching the Basic Display ····· 6-2
	■ Display in program operation mode ······ 6-3
	■ Display in constant-value operation mode · · · · · 6-6
6 - 3	Program Selection 6-8
	■ How to select the program No. · · · · · · 6-8
6 - 4	External Switch (RSW) Operations ······ 6-9
	■ External switch (RSW) inputs ······ 6-9
	■ Program selection ······ 6-11
	■ Read timing ······· 6-12
6 - 5	Manual Operation and Auto-tuning ······ 6-14
	■ Manual operation ······ 6-14
	■ Auto-tuning (AT) 6-15

Chapter 7.	PARAMETER SETUP ·····	···· 7-1
7 - 1	Parameter Setup ·····	7-1
	■ Selecting the setting group in the parameter setup ······	···· 7-1
	■ Moving individual items in the parameter setup ·····	···· 7-2
	■ Changing individual items and how to return from the setup state ···	···· 7-3
7 - 2	How to Use PARA	
	■ How to register functions to keys ·····	···· 7-5
7 - 3	Parameter Setup List ·····	
	■ Variable parameter settings "P R r R" ········	7-8
	■ Description of variable parameter settings ·····	
	■ Event configuration data settings "£ ∪" ·································	··· 7-22
	■ Description of event configuration data ······	
	■ PID parameter settings "₽; ♂" ···································	
	■ Setup data settings "5 & &" ·······························	
	■ Description of setup data settings ······	
	■ Table data settings "Ł b L" ··································	
	■ Description of table data settings ······	
	■ Constant-value operation data settings "C n 5 ½" ··································	·· 7-66
Chapter 8.	PROGRAM SETUP ·····	···· 8-1
8 - 1	Program Setup ·····	8-1
	■ How to enter program setup ······	
	■ Selecting the program No. to set up ······	
	■ Mode transition ·····	8-3
	■ Programming map ·····	8-5
	■ Display details ······	8-7
	■ Setting up pattern items ·····	8-7
	■ Setting up events 1 to 3 items ······	8-8
	■ Setting up time events 1 to 5 ······	·· 8-10
	■ Setting up PID set No. items ······	⋅⋅ 8-13
	■ Setting up G.Soak (guarantee soak) items ·····	··· 8-14
	■ Setting up G.Soak time-out items ·····	⋅ 8-14
	■ Setting up PV start items ·····	
	■ Setting up cycle items ·····	
	■ Setting up pattern link items ······	
	■ Deleting programs ·····	
	■ Inserting and deleting segments ·····	
8 - 2	Copying Programs ·····	
	■ Operation ·····	
8 - 3	General Reset ·····	
	■ Operation ·····	8-21

Chapter 9.	MAINTENANCE & TROUBLESHOOTING
•	Maintenance 9-1
9-1	Self-diagnostics and Alarm Code Display 9-1
9-2	■ Self-diagnostics at power ON 9-2
	Self-diagnostics at each sampling cycle
	Intermittent self-diagnostics during operation
	■ Self-diagnostics only when certain functions are operating
	Alarm categories 9-4
9 - 3	Trouble during Key Entry 9-5
	■ The program No. does not change by pressing in basic dis-
	play state9-5
	■ The program No. does not change by pressing ▼ in the basic
	display state 9-5
	■ The controller does not change to RUN mode by pressing RUN/HOLD in
	the basic display state ···· 9-5
	■ The controller does not change to HOLD mode by pressing RUN/HOLD
	in the basic display state · · · · · 9-5
	■ The controller cannot be reset by pressing — + — in the
	basic display state 9-6
	■ The program is not advanced by pressing — time in the basic
	display state ····· 9-6
	■ The controller does not change to FAST mode by pressing ^{FUNC} +
	▶ in the basic display state · · · · 9-6
	■ The controller does not change to MANUAL mode by pressing
	in the basic display state ····· 9-7
	■ The controller does not change to AUTO mode by pressing — in
	the basic display state · · · · 9-7
	■ Auto-tuning (AT) is not started by pressing — in the basic dis-
	play state9-7
	■ Auto-tuning (AT) is not canceled by pressing — in the basic dis-
	play state9-7
	■ Setting group other than "₽ ¾ , ¾" is not displayed by pressing
	by selecting the setting group in parameter set state9-7
	■ Setting group other than "5 £ £" is not displayed by pressing PARA
	by selecting the setting group in parameter set state9-8
	■ The controller does not enter the setting entry state by pressing
	in the parameter setup state ······ 9-8
	■ The controller does not change to setup group selection state
	and setting entry state continues by pressing PARA in parameter
	setting entry state9-8
	■ The controller does not change to program setup state by press-
	ing FUNC + PROG in the basic display state 9-8

	■ The controller does not change to the setting entry state by	
	pressing in the basic display state	··· 9-8
	■ Items cannot be changed by pressing ▲ ▼ in program setup state ··	9-9
	■ Event items cannot be displayed by repeatedly pressing ▲ ▼	
	in program setup state ······	9-9
	■ Time events cannot be displayed by repeatedly pressing ▲	
	▼ in program setup state ······	9-9
	■ PID set items cannot be displayed by repeatedly pressing ▲	
	▼ in program setup state ·····	. 9-9
	■ G.Soak items cannot be displayed by repeatedly pressing ▲	
	▼ in program setup state ·····	9-10
	■ PV start items, cycle items and pattern link items cannot be dis-	
	played by repeatedly pressing 🔺 🔻 in program setup state	9-10
	■ Insertion/deletion of segments cannot be confirmed by pressing	
	FUNC + in program setup state	9-10
	■ Program deletion cannot be confirmed by pressing — + — CLR	
	while entering pattern items in program setup state	9-10
	■ The program cannot be copied by pressing ▲ + PROG in the	
	basic display state	9-11
	■ General reset is not applied by pressing FUNC + CLR + DISP in the	
	basic display state · · · · · · · · · · · · · · · · · · ·	
9 - 4	Motor Adjustment is Impossible · · · · · · · · · · · · · · · · · · ·	
	■ Normal wiring for direct motor rotation ·····	
	■ Normal wiring for reverse motor rotation ·····	
	■ Alarm display caused by wrong wiring and causes ······	9-13
9 - 5	Replacing the Battery ·····	
	■ BAT LED blinking ·····	
	■ Replacing the battery ·····	
	■ Replacement procedure ······	9-15
Chapter 10.	DISPOSAL	10-1
Chapter 11.	SPECIFICATIONS	11-1
11 - 1	Specifications ·····	11-1
	■ Accessories/option list ·····	
11 - 2	External Dimensions	
	■ Soft dust-proof cover set (sold separately) ······	
	■ Hard dust-proof cover set (sold separately) ······	11-11
	■ Terminal cover set (sold separately) ······	
	■ China RoHS ·····	

Conventions Used in This Manual

■ In describing the product, this manual uses the icons and conventions listed below.

! Handling Precautions:

Handling Precautions indicate items that the user should pay

attention to when handling the DCP31.

Note: Notes indicate useful information that the user might benefit by

knowing.

These icons represent keys on the DCP31's console.

PROG + RUN/HOLD: Combinations of icons like these indicate that RUN/HOLD must be pressed

while holding PROG down.

(1), (2), (3): The numbers with the parenthesis indicate steps in a sequence or

indicate corresponding parts in an explanation.

>>: Indicates the controller state after an operation.

Chapter 1. GENERAL

1 - 1 Features

The DCP31 is a general-purpose single-loop program controller for controlling temperature, pressure, flow rate and other inputs.

High accuracy achieved by multi-range input

Multi-range input allows you to choose between the following input types: thermocouple, resistance temperature detector (RTD), dc voltage and dc current. Accuracy of $\pm 0.1\% FS\pm 1$ digit and a sampling cycle of 0.1s ensures consistently high-precision control.

Wide range of control output types

A wide range of models supporting various control output types are available: relay time-proportional output, position-proportional output, current output, voltage time-proportional output, and heat/cool output.

On models other than heat-cool control output, you can also choose neural net-based auto-tuning and smart-tuning for inhibiting overshoot, in addition 2 degrees of freedom PID.

Enhanced compatibility with PLC


12 external switch inputs (eight optional), three event outputs and five time event outputs (optional) ensure compatibility with automating systems designed around a PLC core.

Easy operation

Up to eight frequently changed parameter setups can be registered to the $\stackrel{\text{PARA}}{\longleftarrow}$ key, facilitating recall of item setups.

If the Smart Loader Package (sold separately) is used together with the DCP31, programs and parameters can be set up on a personal computer.


1 - 2 Basic Function Blocks

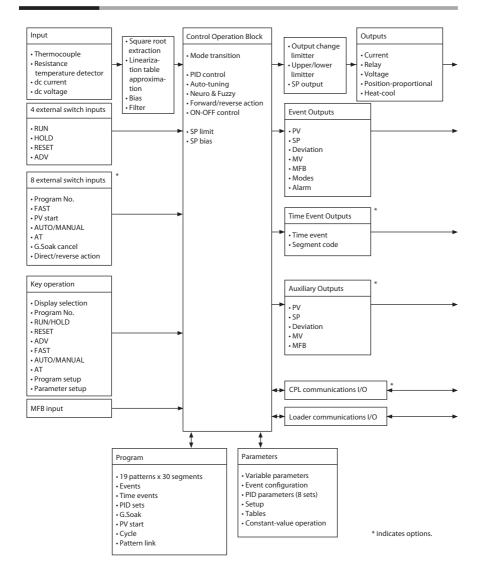


1 - 3 Data Structure

Data is made up of "parameters" that are used mainly for setting controller functions and "programs" that are used for setting operation during program operation of the controller.

• Total of 19 program patterns

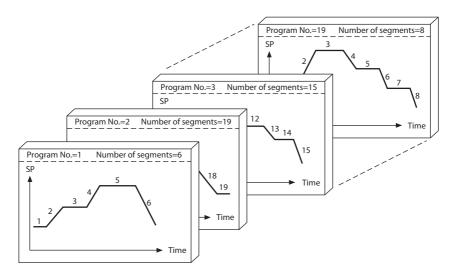


· Parameters

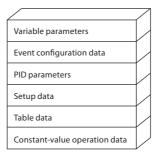

1 - 4 System Configuration

■ System configuration by CPL communications

On DCP31 models supporting RS-485 communications (optional), DIGITRONIK series controllers can be connected as slave stations on the CPL communications (Controller Peripheral Link: Azbil Corporation host communication protocol) network.

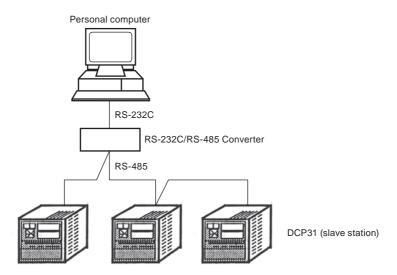

! Handling Precautions

 On the 3-lead RS-485 interface, the Azbil Corporation CMC10L001A000 can be used as the converter for the master station.

1 - 5 Model Numbers

■ Model selection guide

Basic		Func-		Opt	tion	Addi	tions	
Model No.	Output	tion	Power	1	2	1	2	Description
P31A								Digital Program Controller (single-loop model)
	0D							Relay outputs (on-off, or time-proportional)
	2G							Position-proportional output
	5G							Current output (controller/programmer selectable) (changeable to 6D output)
	6D							Voltage output (current value adjustment function supported, on-off, or time-proportional) (changeable to 5D output)
	3D							Heat-cool output (relay output + relay output) (PID control or 3-position-proportional)
	5K							Heat-cool output (current output + current output) (changeable between current output and voltage output)
		0						One input channel
			AS					Free power supply (90 to 264 Vac)
				00				No auxiliary output
				01				1 auxiliary output
				02				2 auxiliary outputs
					0			External switch inputs (4), time events not supported, communications not supported
					1			External switch inputs (12), 5 time events supported, communications not supported
					2			External switch inputs (12), 5 time events supported, RS-485 communications supported
						0		No additional treatment
						D		Inspection certificate provided
						Υ		Complying with the traceability certificate
							0	None


! Handling Precautions

- On 2G, 3D and 5K output models, 2 auxiliary output (option 1) cannot be designated.
- Additionally, tropicalization treatment and anti-sulfuration treatment can be ordered. However, there are some specifications restrictions. For details, contact the azbil Group.

Chapter 2. NAMES & FUNCTIONS OF PARTS

2 - 1 Structure


This controller comprises a body, console, case, standard terminal base and add-on terminal base.

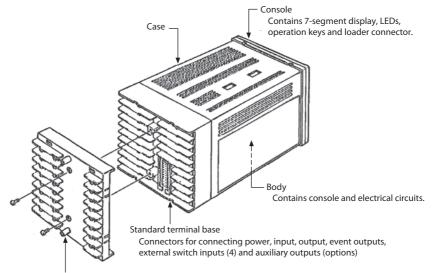

Add-on terminal base

Terminal for connecting external switch inputs (8 options), time event outputs (options) and CPL communications (options).

The add-on terminal base is provided only on models that support optional external switch inputs (8) and time event outputs.

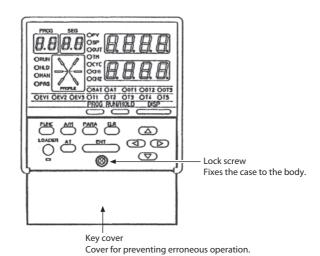

2 - 2 Console


The console comprises keys for operating the controller, displays and LEDs.

■ Basic display state


The "basic display state" is the state in which the controller operating state is displayed on the console.

When the power is turned ON, the controller is in this state.

Key operation changes the controller from the basic display state to one of the parameter setup, program setup, program copy or general reset states. Key operation also returns the controller to the basic display state.

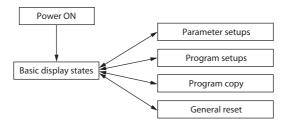

■ Display

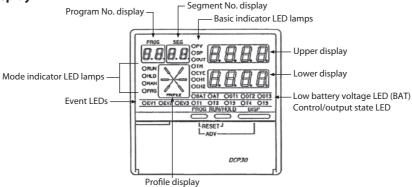

· Program No. display

In the basic display state, this display indicates the currently selected program No.

In the program setup state, this display indicates the program No. currently being set up.

During constant-value operation, this display goes out in the basic display state.

When an alarm occurs in the basic display state, alarm code "RL" is displayed.

• Segment No. display

In the basic display state, this display indicates the currently selected segment No.

In the program setup state, this display indicates the segment No. currently being set up.

During constant-value operation, this display goes out in the basic display state.

In the parameter setup state, this display indicates the item No. When an alarm occurs in the basic display state, the alarm code No. is displayed.

· Mode indicator LEDs

RUN, HLD: Display the READY, RUN, HOLD, FAST and END modes. (See following table.)

Mode LED	READY	RUN	HOLD	FAST	END
RUN	Out	Lit	Out	Blinking	Out
HLD	Out	Out	Lit	Out	Blinking

 $MAN: \qquad Lights in the \, MANUAL \, mode, and goes \, out \, in \, the \,$

AUTO mode.

PRG: Lights in the program setup state. Otherwise, this

LED is out.

· Upper display

In the basic display state, displays PV and other values. In the parameter setup state, displays the item code.

Lower display

In the basic display state, displays SP, time, output and other values. In the parameter setup state, displays the item setting value.

• Low battery voltage LED

BAT: Blinks when the battery voltage is low. Otherwise, this LED is out.

• Control/output state LED

AT: Blinks during auto-tuning, and lights during smart-tuning. Otherwise, this LED is out.

OT1: When relay or voltage are assigned to output 1, lights when output is ON and goes out when output is OFF. In the case of 2G output models, lights when the openside relay is ON and goes out when the relay is OFF.

Lights when current output is assigned to output 1.

OT2: When relay or voltage are assigned to output 2, lights when output is ON and goes out when output is OFF. In the case of 2G output models, lights when the closedside relay is ON and goes out when the relay is OFF. Lights when current output is assigned to output 2, and goes out when auxiliary output is assigned to output 2.

OT3: Out

· Basic indicator LEDs

PV: Lights during PV display. Otherwise, this LED is out. SP: Lights during SP display. Otherwise, this LED is out.

OUT: Lights during output display. Otherwise, this LED is out.

TM: Lights during time display. Otherwise, this LED is out.

CYC: Lights during cycle display. Otherwise, this LED is out.

CH1: Out CH2: Out

· Event LEDs

EV1, EV2,: • In the basic display state or parameter setup state, EV3 light when each of events1 to 3 are ON, and go out when OFF.

• In the program setup (programming) state, light when each of the items for events 1 to 3 are displayed. Otherwise, these LEDs are out.


T1, T2, T3,: • Light when each of time events 1 to 5 are ON, and T4, T5 go out when OFF.

• In the program setup (programming) state, light when each of the items for time events 1 to 5 are displayed.

Otherwise, these LEDs are out.

Profile display

Displays the tendencies (rise, soak, fall) of the program pattern. Blinks during G.soak standby, and lights successively after the power is turned ON.

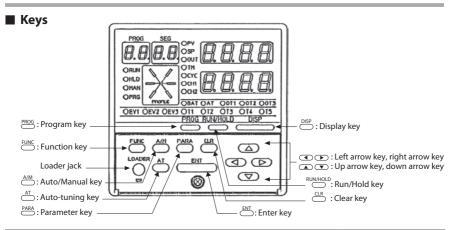

Category	Function	Key operation
Basic display state	To change the display	DISP
	To change the program No. in ascending order (in READY mode)	PROG
	To execute running of program (in READY mode)	•
	To run the program (in READY, HOLD, FAST modes)	RUN/HOLD
	To hold the program (in RUN mode)	
	To reset the program (in READY, HOLD, FAST, END modes)	PROG + RUN/HOLD
	To advance the program (in RUN, HOLD, FAST modes)	PROG + DISP
	To run the program fast (in RUN, HOLD modes)	FUNC +
	To execute manual operation (in AUTO mode)	A/M
	To execute automatic operation (in MANUAL mode)	
	To start auto-tuning (when not executing auto-tuning)	AT
	To cancel auto-tuning (when executing auto-tuning)	
	To change values during manual operation (when MV or SP is blinking)	

Category	Function	Key operation
Parameter setup	Starts parameter setup. So the controller enters selection of setup group (major item). (in basic display state)	FUNC + PARA
	To change the setup group (major item)	PARA
	To fix the setup group	ENT
	To moves between individual items (minor items)	
	To start changing individual item setting values (while setting value is blinking)	ENT
	To end changing individual item setting values (while setting value is blinking)	
	To change individual item setting values (while setting value is blinking)	
	To cancel changing individual item setting values (in basic display state)	PARA
	To selects setup group	
	To end parameter setup	DISP
PARA key Assignment item	To start changing assignment item setting values (in basic display state)	PARA
setup	To move to next item by assignment item, and start changing setting values	
	To change assignment item setting values (while setting value is blinking)	
	To end changing assignment item setting values (while setting value is blinking)	ENT
	To start changing assignment item setting values	
	To end assignment item setup	
Program setup	To start program setup (programming) (in basic display state)	FUNC + PROG
	To move between program items and segment Nos.	
	To start changing item setting values (while setting value is blinking)	ENT
	To end changing item setting values (while setting value is blinking)	
	To change item setting values (while setting value is blinking)	

Category	Function	Key operation
Program setup	To clear item setting (while setting value is blinking)	FUNC + CLR
	To cancel changing item setting values (while setting value is blinking)	DISP
	To insert/delete segments	FUNC + ENT
	To change the program No. in ascending order	FUNC + PROG
	To change the program No. in descending order	FUNC + ▼
	To end program setup (programming)	DISP
Program copy	To start program copy (in basic display state)	+ PROG
	To change the copy destination program No.	
	To execute program copy (while setting value is blinking)	ENT
	To end program copy	DISP
General reset	To check general reset (in basic display state)	FUNC + CLR + DISP
	To execute general reset	ENT
	To cancel general reset	DISP

! Handling Precautions

 Do not operate the console keys using a sharp-pointed object such as a propelling pencil or needle. Doing so might damage the console.

■ Functions using two or more keys

PROG + RUN/HOLD	: Reset keys Press with held down in the basic display state to reset the controller. The controller enters the READY mode in the RUN, HOLD, FAST or END modes. The controller cannot be reset in the READY mode by key operation.
PROG + DISP	: Advance keys Press with held down in the program operation mode in the basic display state to advance the program. In the RUN, HOLD or FAST modes, the program advances to the next segment. The controller cannot advance in the READY mode by key operation.
FUNC +	: Fast keys Press with held down in the program operation mode in the basic display state to fast-operate the program. The controller enters the FAST mode from the RUN or HOLD modes.
FUNC + PARA	: Parameter setup keys Press ABA with HOW held down in the basic display state to move to selection of the setting group (major items) in the parameter setup state.
FUNC + PROG	: Program setup (programming) keys Press with wheld down in the program operation mode in the basic display state to move to the program setup (programming) state. Press with wheld down in the program setup state to change the No. of the program to be set up in ascending order.
FUNC + T	: Program No. change keys Press vith held down in the program setup state to change the No. of the program to be set up in descending order.
FUNC + CLR	: Program item delete keys Press CLR with FUNC held down during entry of settings in the program setup state to clear the setting.
FUNC + ENT	: Segment insert/delete keys Press ENT with UNC held down at SP or time item in the program setup state to move to the segment insert/delete screen.
A + PROG	: Program copy keys Press Press with held down in the program operation READY mode in the basic display state to move to the program copy screen.

 $\stackrel{\text{FUNC}}{\longleftarrow} + \stackrel{\text{CLR}}{\longleftarrow} + \stackrel{\text{DISP}}{\longleftarrow} : \text{General reset keys}$

Press and with with held down in the READY AUTO mode in the basic display state to move to the general reset confirmation screen.

■ Loader jack

This jack is for connecting the loader. Objects other than the loader plug should not be inserted into this jack.

The loader jack is not isolated from internal digital circuits.

Be sure to cap the loader jack when it is not in use.

2 - 3 Input Type and Range No.

■ Inputs

Thermocouple

Input Format	Range No.	Code	Temp. Range (°C)	Temp. Range (°F)
K (CA)	0	K09	0 to 1200	0 to 2400
K (CA)	1	K08	0.0 to 800.0	0 to 1600
K (CA)	2	K04	0.0 to 400.0	0 to 750
K (CA)	3	K29	-200 to +1200	-300 to +2400
K (CA)	4	K44	-200.0 to +300.0	-300 to +700
K (CA)	5	K46	-200.0 to +200.0 -300 to +400	
E (CRC)	6	E08	0.0 to 800.0	0 to 1800
J (IC)	7	J08	0.0 to 800.0	0 to 1600
T (CC)	8	T44	-200.0 to +300.0	-300 to +700
B (PR30-6)	9	B18	0 to 1800	0 to 3300
R (PR13)	10	R16	0 to 1600	0 to 3100
S (PR10)	11	S16	0 to 1600	0 to 3100
W (WRe5-26)	12	W23	0 to 2300	o to 4200
W (WRe5-26)	13	W14	0 to 1400	0 to 2552
PR40-20	14	D19	0 to 1900	0 to 3400
Ni-Ni-Mo	15	Z13	0 to 1300	32 to 2372
N	16	U13	0 to 1300	32 to 2372
PL II	17	Y13	0 to 1300 32 to 2372	
DIN U	18	Z08	-200.0 to +400.0	-300 to +750
DIN L	19	Z07	-200.0 to +800.0	-300 to +1600
Golden iron chromel	20	Z06	0.0 to +300.0K	

Resistance temperature detector (RTD)

Input Format	Range No.	Code	Temp. Range (°C)	Temp. Range (°F)
JIS' 89 Pt100	32	F50	-200.0 to +500.0	-300 to +900
(IEC Pt100Ω)	33	F46	-200.0 to +200.0	-300 to +400
	34	F32	-100.0 to +150.0	-150.0 to +300.0
	35	F36	-50.0 to +200.0	-50.0 to +400.0
	36	F38	-60.0 to +40.0	-76.0 to +104.0
	37	F33	-40.0 to +60.0	-40.0 to +140.0
	38	F05	0.0 to 500.0	0.0 to 900.0
	39	F03	0.0 to 300.0	0.0 to 500.0
	40	F01	0.00 to 100.00	0.0 to 200.0
JIS' 89 J Pt100	48	P50	-200.0 to +500.0	-300 to +900
	49	P46	-200.0 to +200.0	-300 to +400
	50	P32	-100.0 to +150.0	-150.0 to +300.0
	51	P36	-50.0 to +200.0	-50.0 to +400.0
	52	P38	-60.0 to +40.0	-76.0 to +104.0
	53	P33	-40.0 to +60.0	-40.0 to +140.0
	54	P05	0.0 to 500.0	0.0 to 900.0
	55	P03	0.0 to 300.0	0.0 to 500.0
	56	P01	0.00 to 100.00	0.0 to 200.0

• dc current, dc voltage


Input Format	Range No.	Code	Range (programmable)	
4 to 20 mA	64	C01		
0 to 20 mA	65	C08		
0 to 10 mA	66	M01		
-10 to +10 mV	67	L02		
0 to 100 mV	68	L01	-1999 to +9999	
0 to 1 V	69	L04		
-1 to +1 V	70	L08		
1 to 5 V	71	V01		
0 to 5 V	72	L05		
0 to 10 V	73	L07		


! Handling Precautions

- The unit of code Z06 is Kelvin (K)
- The lower limit readout of code B18 is 20 °C (68°F).
 The lower limit readout (°C) of codes K44, K46, T44, Z08 and Z07 is -199.9 °C.
- The lower limit readout (°C) of codes F50, F46, P50 and P46 is -199.9 °C.
- The upper limit readout (°C) of codes F01 and P01.
- The PV lower limit alarm does not occur with code F50.
 However, note that the PV lower limit alarm occurs at a disconnection when input has been downscaled when input is disconnected during setup.
- The number of digits past the decimal point for dc current and dc voltage is programmable within the range 0 to 3.
- To set an input range type, enter the range number from the three tables above.
 - Do not enter a number other than the range numbers listed in the tables.

Chapter 3. MOUNTING

3 - 1 External Dimensions

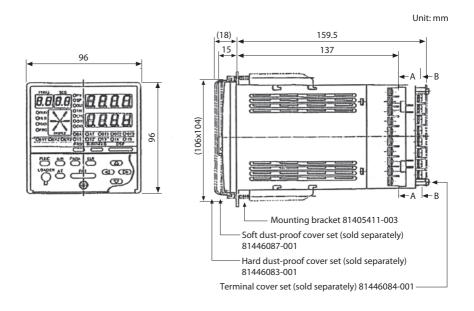


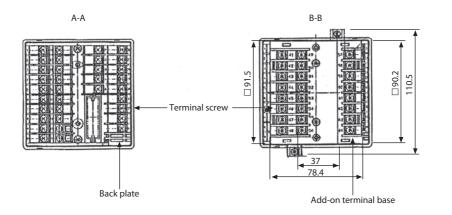


3 - 2 Panel Cutout Dimensions

Use a steel panel of at least 2 mm in thickness for mounting the controller.

Unit: mm

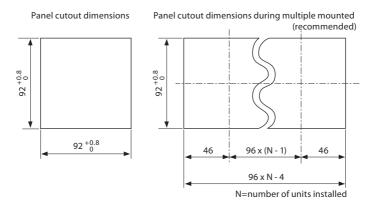

Panel cutout dimensions when mounting units horizontally and vertically (recommended)

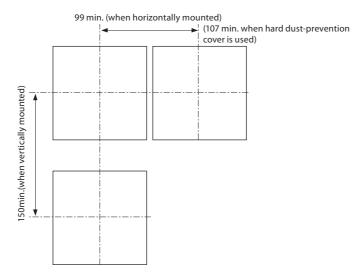

! Handling Precautions

When mounting the controller, take care to prevent the temperature at the lower surface of the controller's case from exceeding the operating temperature range (0 to 50 °C), particularly when mounting vertically or during multiple mounting.

3 - 3 Mounting

⚠ WARNING



Before removing, mounting, or wiring the DCP31, be sure to turn off the power to the DCP31 and all connected devices.

Failure to do so might cause electric shock.



Do not disassemble the DCP31. Doing so might cause electric shock.

ACAUTION



Use the DCP31 within the operating ranges recommended in the specifications (temperature, humidity, voltage, vibration, shock, mounting direction, atmosphere, etc.). Failure to do so might cause fire or faulty operation.



Do not block ventilation holes. Doing so might cause fire or faulty operation.



Do not allow lead clippings, chips or water to enter the controller case. Doing so might cause fire or faulty operation.

Mounting locations

Avoid installing the DCP31 in the following locations:

- Locations outside of the operating temperature range (0 to 50 °C) and operating humidity range (10 to 90 %RH)
- Locations subject to sulfide gas or other flammable gases
- · Locations subject to dust or oil smoke
- Locations subject to the direction sunlight, wind or rain
- Locations that directly subject the body to vibration or impact
- Locations under high-voltage lines, near welders or near sources of electrical noise
- Locations near (within 15 m) of high-voltage ignition equipment such as boilers
- · Locations where magnetic fields are generated
- Locations subject to flammable liquids or moisture
- Outdoors (Indoors use only)

■ Noise generating sources and countermeasures

- Generally, the following generate electrical noise:
 - (1) Relays and contacts
 - (2) Solenoid coils, solenoid valves
 - (3) Power lines (in particular, 90 V ac min.)
 - (4) Induction loads
 - (5) Inverters
 - (6) Motor commutators
 - (7) Phase angle control SCR
 - (8) Wireless communications equipment
 - (9) Welding equipment
 - (10) High-voltage ignition equipment
- If the influence of electrical noise cannot be eliminated, we recommend taking the following countermeasures:
 - Provision of a CR filters for fast-rising noise Recommended CR filter:

Azbil Corporation Model No. 81446365-001

 Provision of a varister for noise with a high wave height Recommended varister:

Azbil Corporation Model No. 81446366-001 (100 V) 81446367-001 (200 V)

! Handling Precautions

The varister may become short-circuited when trouble occurs.
 Pay attention to this when providing a varister on a controller.

■ Dust-proof cover


Use the dust-proof cover when using the controller in a dusty or dirty location, and to prevent inadvertent operation.

Two dust proof-covers are provided, hard or soft, each with the following differing functions:


Туре	Confirmation on Display	Operation
Hard	0	×
Soft	0	0

indicates that a function can be used.

■ Mounting method

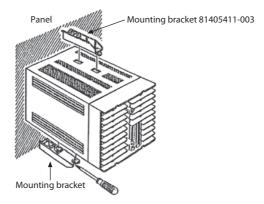


- Firmly secure the top and bottom of the controller by the mounting brackets.
- When mounting the controller, secure by lower mounting bracket (1) first.

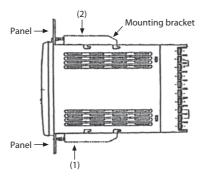

! Handling Precautions

• To secure the controller, tighten the screw on the mounting bracket (supplied) until there is no more play and then tighten a further full turn. Take care not to overtighten the screw. Doing so might deform the case.

• Keep the mounting angle to within 10° from the horizontal at both the controller rear top and bottom.

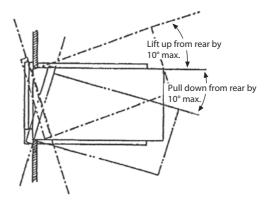

Chapter 4. WIRING

4 - 1 Wiring Precautions

WARNING

- Before connecting the DCP31 to the measurement target or external control circuits, make sure that the FG terminal is properly grounded (100Ω max.). Failure to do so might cause electric shock or fire.
- Before removing, mounting, or wiring the DCP31, be sure to turn off the power to the DCP31 and all connected devices.

 Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.

ACAUTION

- Wire the DCP31 properly according to predetermined standards. Also wire the DCP31 using designed power leads according to recognized installation methods. Failure to do so might cause electric shock, fire or faulty operation.
- Do not allow lead clippings, chips or water to enter the DCP31 case. Doing so might cause fire or faulty operation.
- Inputs to the current input terminals (③) and (③) on the DCP31 should be within the current and voltage ranges listed in the specifications.

 Failure to do so might cause electric shock or faulty operation.
- Firmly tighten the terminal screws at the torque listed in the specifications. Insufficient tightening of terminal screws might cause electric shock or fire.
- Do not use unused terminals on the DCP31 as relay terminals.
 Failure to do so might cause electric shock, fire or faulty operation.
- We recommend attaching the terminal cover (sold separately) after wiring the DCP31. Failure to do so might cause electric shock, fire or faulty operation.
- Use the relays on the DCP31 within the service life listed in the specifications. Continued use of the relays after the recommended service life might cause fire or faulty operation.
- If there is a risk of a power surge caused by lightning, use a surge absorber (surge protector) to prevent fire or device failure.

! Handling Precautions

- Before wiring the DCP31, check the controller catalog No. and terminal Nos. on the label on the rear of the body. After wiring the DCP31, be sure to check the wiring for any mistakes.
- Maintain a distance of at least 50 cm between I/O leads or communications leads and the power lead. Also, do not pass these leads through the same piping or wiring duct.
- When wiring with crimped terminals, take care to prevent contact with adjacent terminals.
- When connecting the DCP31's thermocouples in parallel to other controllers, make sure that the total input impedance of the other controller is at least $1M\Omega.$ If the input impedance is less than $1M\Omega,$ the DCP31 may not be
- When inputting the DCP31's I/O (parallel connection in case of input) to an A/D converter or analog scanner, read data may fluctuate.

To prevent this, adopt one of the following measures.

- (1) Use a low-speed, integrating type A/D converter.
- (2) Insert an isolator without a switching power supply between the DCP31 and A/D converter.
- (3) Average data on a personal computer when reading data.
- (4) If possible, set a filter for the input.

able to detect sensor disconnection.

- Provide the wiring for the instrument power supply with a mains power shutoff switch within reach of the instrument operator.
- Provide a delay-type (T) rated current 1A and rated voltage 250 V fuse on the instrumentation power supply wiring. Connect to live conductor. (IEC 127)
- Devices and systems to be connected to this unit must have reinforced insulation or double insulation sufficient to withstand the maximum operating voltage levels of the power supply and input/output parts.
- Do not connect 3 crimp terminals or more to the same terminal screw.

4 - 2 Compensating Lead

In the case of thermocouple input, connect the bare thermocouple lead to the terminal. If the thermocouple is located a long way from the DCP31 or the thermocouple is connected to a terminal, extend the connection using a compensating lead and then connect to the terminal. Use shielded compensating leads only.


 For I/O other than thermocouples, use JCS4364 instrument cable or equivalent product. (This is generally referred to "twisted shielded cable for instruments.") The following cables are recommended.

Fujikura Ltd.	2-core	IPEV-S-0.9 mm ² x 1P	
	3-core	ITEV-S-0.9 mm ² x 1T	
Hitachi Metals Ltd.	2-core	KPEV 0.9 mm ² x 1P	
	3-core	KTEV-S-0.9 mm ² x 1T	

- Shielded, multi-core microphone cord (MVVS) can be used if there is little electromagnetic induction.
- Use a power supply cable with a nominal cross-sectional area of 0.75 to 2.0 mm², rated voltage of more than 300 V, and rated temperature of more than 60 °C.

4 - 3 Terminal Connections

Use crimped terminals that fit onto M3.5 screws.

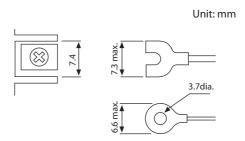



! Handling Precautions

- When installing the DCP31 in locations subject to vibration or impact, be sure to use round crimped terminals to prevent the lead from coming loose from the terminal.
- When wiring with crimped terminals, take care to prevent contact with adjacent terminals.
- The recommended tightening torque for the terminal screws is 0.78 to 0.98 N·m.

4 - 4 Layout of Terminals and Recommended Lead Draw-out Direction

Wiring is carried out on the standard terminal base or add-on terminal base. The following diagram shows the recommended draw-out directions for the leads on the standard terminal base: The lead draw-out directions are the same when using the add-on terminal base.

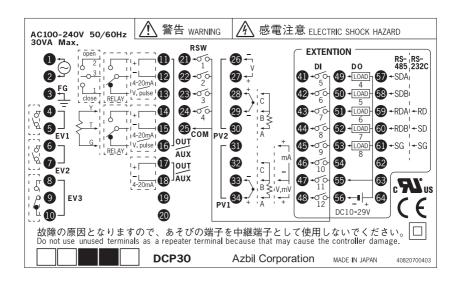

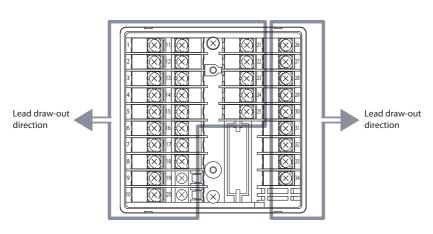


Standard terminal base

4 - 5 Connecting the Ground and Power Supply

■ Power supply

Connect the DCP31 to a single-phase power supply for controllers, and take measures to prevent the influence of electrical noise.

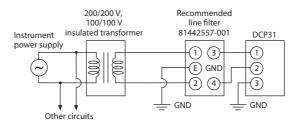

! Handling Precautions

If the power supply generates a lot of electrical noise, we recommend inserting an insulating transformer in the power circuit and using a line filter.

Recommended line filter: Azbil Corporation, model No. 81446364-001

 After providing anti-noise measures, do not bundle primary and secondary power leads together, or pass them through the same piping or wiring duct.


■ Ground

When it is difficult to ground shielded cable, prepare a separate ground terminal (earth bar).

Ground type: 100Ω max.

Ground cable: 2 mm sq. min soft-copper wire (AWG14)

Cable length: Max. 20 m




! Handling Precautions

Use only the FG terminal (3) on the DCP31 for grounding. Do not ground across other terminals.


4 - 6 Wiring of Standard and Add-on Terminal Base

■ Standard terminal layout

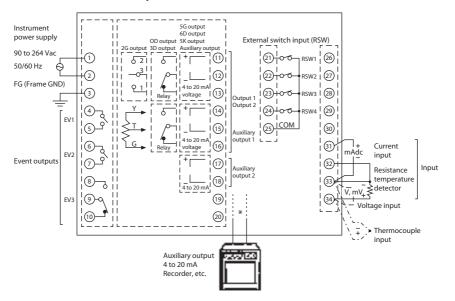

* On 2G, 3D or 5K models, 17 and 18 are the auxiliary outputs. On 0D, 5G or 6D models, 14 and 15, and 17 and 18 are the auxiliary outputs.

■ Add-on terminal layout

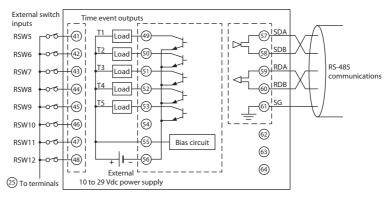

Connecting Inputs (analog inputs) 4 - 7

ACAUTION



Inputs to the current input terminals 31 and 33 on the DCP31 should be within the current range listed in the specifications.

Failure to do so might cause fire or faulty operation.

⚠ The maximum input ratings are as follows:

Thermocouple and DC voltage inputs: -5 to +15 V dc DC current input: 50 mA dc at 2.5 V dc


! Handling Precautions

- Applying voltage across dc current input terminals (31) and (33) may cause faulty operation.
- Take care of polarities (+, -) when wiring inputs.
- Use only shielded cable for wiring inputs.
- When using a thermocouple input, prevent air blasts from coming into contact with the terminal. Doing so might cause a reading error.


■ Connecting input 1

Multiple input 1 supports various sensor inputs. Connect as follows according to the sensor being used:


Thermocouple input




dc voltage input



• RTD input



dc current input



4 - 8 Connecting control outputs (outputs 1, 2)

↑ WARNING




Before removing, mounting, or wiring the DCP31, be sure to turn off the power to the DCP31 and all connected devices.

Failure to do so might cause electric shock.

■ Relay output (0D)

Connect as follows:




! Handling Precautions

When switching small currents, connect a bleeder resistor to allow current flow of the minimum relay switching input (100 mA min.).

■ Current output (5G)

Connect as follows:




! Handling Precautions

4 to 20 mAdc and 0 to 20 mAdc can be selected in setup data $\xi \neq 0$.

■ Position-proportional output (2G)

Connect as follows paying attention to the switching direction:

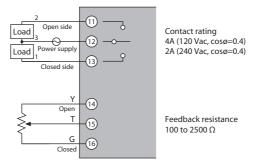


! Handling Precautions

- The life of internal relays is limited.
 Avoid setting the PID constant in such a way that results in excessive repeated ON/OFF switching.
- When using a 100/200Vac motor, pay attention to rush current and the contact rating. If necessary, provide an external auxiliary relay.
- Separate the wiring for motor terminals ① ② ③ and feedback resistor terminals ④ ⑤ ⑥.
 (Do not wire the leads in the same duct or use 6-core cable. Doing so might result in faulty controller operation caused by electrical noise when the motor is started up.)
- When controlling without motor feedback with variable parameter $\tilde{\sigma}$. \mathcal{E} set to "2", terminals 4 5 6 need not be connected.

■ Voltage output (6D)

Connect as follows:




! Handling Precautions

Voltage output is reliant on an internal fixed-current circuit.
 Set the current value in the setup data so that the optimum voltage is obtained matched to the conditions of the SSR in use and load.

Factory setting: general-purpose SSR voltage value.

■ Heat/cool output (3D)

Connect as follows.

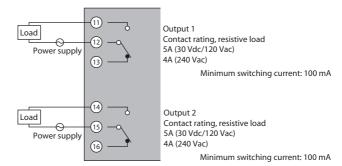


! Handling Precautions

 When switching small currents, connect a bleeder resistor to allow current flow of the minimum relay switching input (100 mA min.).

■ Heat/cool output (5K)

Connect as follows.

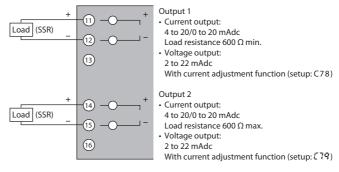

! Handling Precautions

- Current output and voltage output can be selected by setups £75 and £75.

Voltage output is reliant on an internal fixed-current circuit. Set the current value in the setup data so that the optimum voltage is obtained matched to the conditions of the SSR in use and load.

Factory setting: general-purpose SSR voltage value.

4 - 9 Connecting auxiliary outputs (outputs 2, 3)

Optional auxiliary outputs can be added on.


MARNING



Before removing, mounting, or wiring the DCP31, be sure to turn off the power to the DCP31 and all connected devices.

Failure to do so might cause electric shock.


■ 0D, 5G, 6D auxiliary outputs

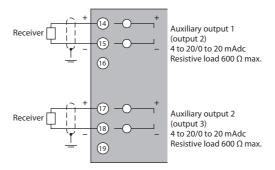

! Handling Precautions

- 4 to 20 mA dc and 0 to 20 mA dc can be selected in setup data (90.
- · Use shielded cable only.

■ 2G, 3D, 5K auxiliary outputs




Auxiliary output 1 is not provided for 2G, 3D and 5K outputs.

! Handling Precautions

- 4 to 20 mA dc and 0 to 20 mA dc can be selected in setup data *C 9 0*.
- · Use shielded cable only.

4 - 10 Connecting Event Output (relay output)

Event outputs EV1 and EV2 are 1a contact, and event output EV3 is 1a1b. Event outputs are connected on the standard terminal base.

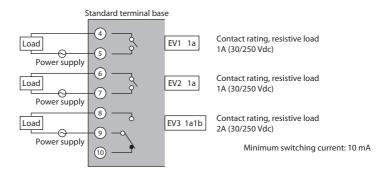


! Handling Precautions

 When switching small currents, connect a bleeder resistor to allow current flow of the minimum relay switching input (10 mA min.).

4 - 11 Connecting Time Event Output (open-collector)

Optional time event outputs T1 to T5 (open-collector outputs) can be added on. Time event outputs are connected on the add-on terminal base.

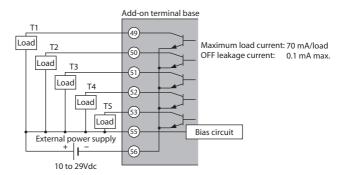


! Handling Precautions

- Be sure to connect terminal ③ to the + terminal of the external power supply.
 - Otherwise, open-collector output will not function.
- Do not short-circuit the + terminal of the external power supply and terminals

 to 33 on the DCP31. Doing so will cause faulty open-collector output.
 - (The DCP31 does not contain a short-circuit prevention circuit.)
- When connecting to a semiconductor load such as a programmable controller (sequencer), select a module whose current directions are matching.
 - Use a module that does not operate by leakage current when the open-collector output of the DCP31 is OFF.

4 - 12 Connecting External Switch (RSW) Input


The DCP31 is provided with four external switch inputs as standard (eight optional). The optional eight inputs are located on the add-on terminal base. Wire the external switch inputs across the standard and add-on terminal bases.

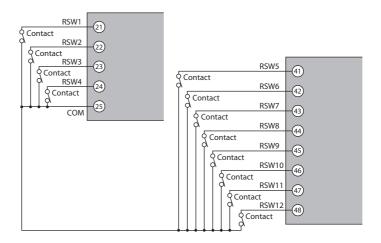

! Handling Precautions

- The external switch inputs on the DCP31 have built-in power supplies (open voltage 12 Vdc). Be sure to use no-voltage contacts for external contacts.
- Use no-voltage contacts such as gold contacts whose small current can be switched ON/OFF. On some relay contacts, the small current cannot be switched ON/OFF. Use no-voltage contacts having a sufficient minimum switching capability with respect to the contact current and open voltage of the DCP31.
- When using a semiconductor (e.g. open-collector) as a novoltage contact, use a semiconductor whose contact terminal voltages at contact ON are 3 V max., and whose leakage current at contact OFF is 0.1 mA.
- External switch inputs on the DCP31, DCP32, and SDC40 series can be connected in parallel.
 When connecting in parallel with other controllers, thoroughly check the conditions of the other controller before configuring the control system.

Internal circuit for controller components for connecting external switch inputs

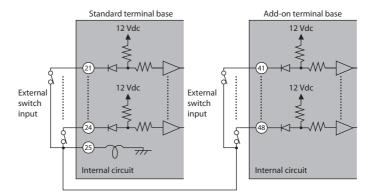

! Handling Precautions

• Do not connect to the SDC20/21 or SDC30/31 series in parallel. Doing so might damage the external switch inputs of the SDC20/21 or SDC30/31.

4 - 13 Connecting for Communications


Some controller models support the RS-485 communications interface. Select the RS-485 communications models by selected the required catalog No.

Connect as follows.

! Handling Precautions

The DCP31 operates as a slave station.


■ RS-485 interface



! Handling Precautions

- Multi-drop connection of slave stations is possible.
- Make sure that different addresses are set for each slave station.
- Connect terminating resistors (a total of 4 in the case of a 5-lead connection) to both ends of the transmission line. Use terminators having a resistance of 150 Ω ±5 %, 1/2 W min.
- In the case of a 3-lead connection, short-circuit terminals \$\textit{9}\$ and \$\textit{3}\$ or \$\textit{8}\$ and \$\textit{6}\$ on the DCP31.
- Do not short-circuit the RDA and RDB, or SDA and SDB terminals.
 Doing so might damage the DCP31.

• 5-lead RS-485 mutual connection

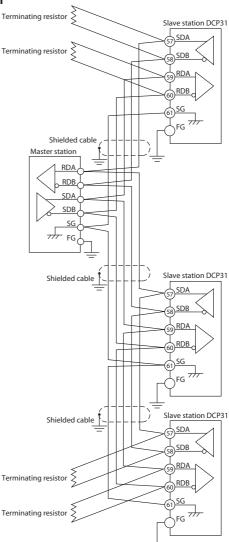

! Handling Precautions

Be sure to connect SG terminals each other.
 Failure to do so might cause unstable communications.

Connect terminating resistors (150 Ω ±5 %, 1/2 W min.) to both ends of the transmission line.

Grounding of the shielded FG terminal should be carried out at only one end and not both ends.

3-lead RS-485 mutual connection Slave station (controller Terminating resistor or DIGITRONIK controller) FG Master station Shielded cable SDA FG Slave station (controller or DIGITRONIK controller) Shielded cable ! Handling Precautions SDA • Be sure to connect SG terminals each Failure to do so might cause unstable communications. Shielded cable Slave station (controller or DIGITRONIK controller) SDA Terminating resistor Provide terminating resistors of 150 Ω ±5 %, 1/2 W min. at both ends of the communications path.

Grounding of the shielded FG terminal should be carried out at only one end and not both ends.


In this connection, the Azbil Corporation CMC10L001A000 can be used as a host station converter.

When there are only three RS-485 terminals, terminals marked * are wired internally.

4 - 14 Isolating Inputs and Outputs

The following figures show isolation between inputs and outputs. Solid lines show isolated items, and dotted lines show non-isolated items:


■ Control outputs 0D, 5G, 6D, 3D, 5K

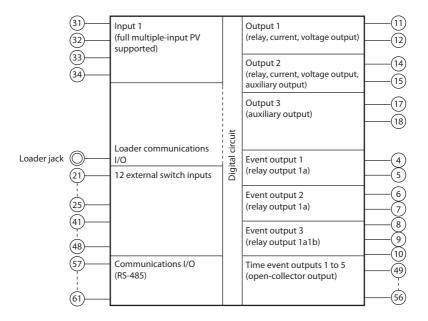

! Handling Precautions

The loader jack is not isolated from internal digital circuits.
 Be sure to cap the loader jack when it is not in use.

■ Control output 2G

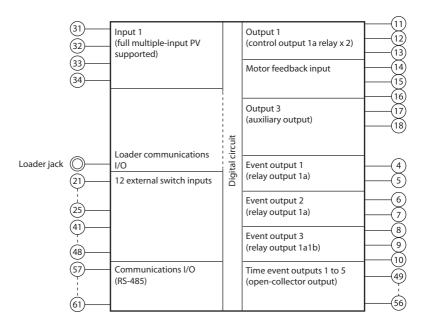

! Handling Precautions

The loader jack is not isolated from internal digital circuits.
 Be sure to cap the loader jack when it is not in use.

Chapter 5. FUNCTIONS


5 - 1 Data

■ Data types

The DCP31 supports the following data types:

For further details,

see "Chapter 7. PARAMETER SETUP" and "Chapter 8. PROGRAM SETUP".

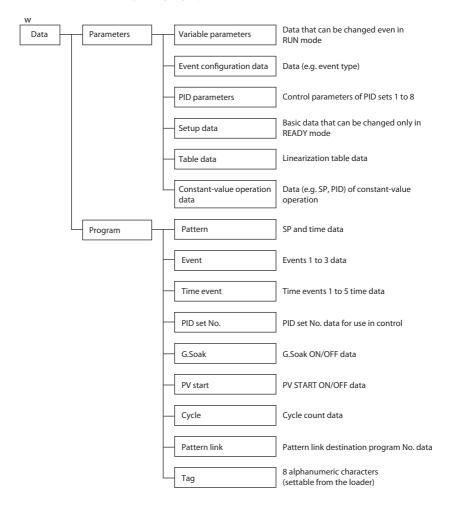

5 - 2 Program Patterns

■ Patterns

SP and time comprise the settings for a single segment in a pattern. Up to 30 segments can be linked to create a broken-line whose vertical axis is SP and horizontal axis is time.

This system is called the "RAMP-X" system.

SP setting: Within range of SP limitter upper and lower limits

Timesetting: 0 to 99 h, 59 min or 0 to 99 min, 59s (Select the time unit in setup data 5 8 4.)

SP is the point that corresponds to the time elapsed in the current segment on a straight line made by jointing the start point (SP setting value of the previous segment) to an end point (SP setting value of the current segment).


Accordingly, segments are categorized as follows:

- Rising ramp (rising ramp, rising tendency)
 Previous segment SP setting value < current segment SP setting value
- Falling ramp (falling ramp, falling tendency)
 Previous segment SP setting value > current segment SP setting value
- Soak (soak)
 Previous segment SP setting value = current segment SP setting

In the case of the No.1 segment, both the start and end points become the soak segment of the No.1 segment SP setting values.

SP (other than No.1 segment) is calculated as by the following formula:

SP = (current segment SP setting value - previous segment SP setting value) x (current segment elapsed time ÷ current segment time setting) + previous segment SP setting + SP bias*

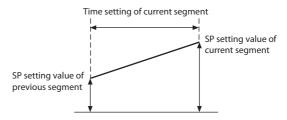

^{*} SP bias is commonly effective in all programs and all segments.

■ Events 1 to 3, Time events 1 to 5

In event configuration data setup, they are used after setting the event type, event standby, hysteresis and ON delay time. A total of four event types which are PV type events, controller status events, time events and segment number events are available.

Segment number events can be set by time events 1 to 5 only.

In the constant-value operation mode, the time events 1 to 5 do not function.

PV type events

• Basic specifications

The next page shows event type PV, deviation, absolute value deviation, SP, MV and MFB. In the figures, the thick lines show ON-OFF changes in state. The upper line expresses the ON state, and the lower line the OFF state.

EV and H stand for event setting value and hysteresis, respectively. Output in the READY state is OFF.

· Event standby

Events function as follows when event standby has been set to ON:

- If the controller is in the state in the figure when changing from the READY to the RUN mode and after restoring the power, operation is the same as when event standby is set to OFF. The up-facing arrow in the figure indicates a change to ON, and a down-facing arrow indicates a change to OFF.
- If the controller is outside the state in the figure when changing from the READY to the RUN mode and after restoring the power, the state is OFF. After entering the state, the up-facing arrow in the figure indicates a change to ON, and a downfacing arrow indicates a change to OFF.

Event ON delay

The event No. to apply the delay to and the delay time can be set regardless of event type. "Delay" functions to turn output ON when the event is continuously ON for the preset delay time after the event OFF→ON condition is satisfied.

When event ON delay is combined with event standby, event standby must first be canceled before event ON delay functions.

• Segment progression

- Output is OFF until the program progresses to the segment containing the event setting.
- When the program progresses to the segment containing the event setting, event ON/OFF operation is carried out according to the event setting value.
- The previous setting is valid until the program progresses to a segment containing a new event setting.

For this reason, set as follows to disable the event set in the previous segment from a certain segment onwards:


Direct action events: Upper limit value of event setting Reverse action events: Lower limit value of event setting

Note, however, that some types of event turn ON even if events are set as shown above.

- When the program has progressed to the No.1 segment by the cycle or pattern link functions, the previous setting is disabled. Output is OFF unless the No.1 segment contains an event setting.

Other

On 5G output models, when setup data $\mathcal{L} \mathcal{L} \mathcal{B}$ is set to 1, and SP output (programmer functions) is selected, the MV direct/reverse event does not function.

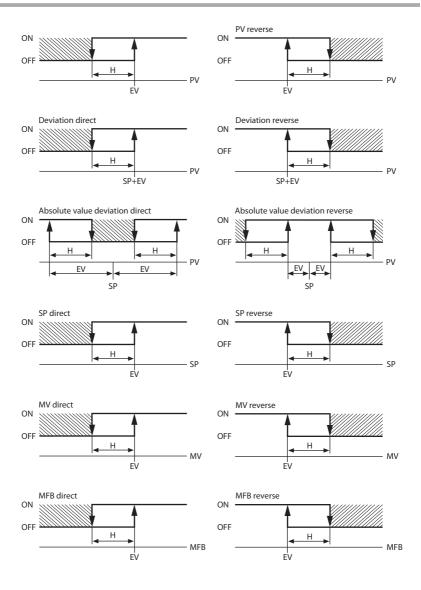

Controller status events

Controller status events are turned ON and OFF according to the controller mode, alarm status and other statuses.

Though the event standby function does not function, the ON delay function does.

Event setting values (operating point), hysteresis and event standby are not set.

• Basic operations

The following basic operation types are provided:

RUN+HOLD+FAST+END

READY

RUN

HOLD

FAST

END

G.Soak standby

MANUAL

Auto-tuning executing

Constant-value operation

MFB estimated position control, sum of all alarms

PV range alarm

Controller alarms

Low battery voltage

Console setup in progress

Loader setup in progress

ADV

Program end

When the DCP31 reaches the state designated by the event type, the event is turned ON. Otherwise, the event is OFF.

Alarms

Alarms are divided into PV range alarm groups (alarm code Nos. 01 to 16) and controller alarm groups (alarm code Nos. 70 to 99, and low battery voltage).

When the event type is set to the sum of all alarms, the event turns ON if any one of the alarms occurs.

When the event type is set to PV range alarm, the event turns ON if any one of the alarms in the PV range alarm group occurs.

When the event type is set to controller alarm, the event turns ON if any one of the alarms in the controller alarm group occurs.

ADV

This is ON for 1s after executing program advance. The event ON delay is disabled and a delay is not applied.

· Program end

When the DCP31 automatically (including ADV) reaches the READY mode from program operation status (RUN, HOLD, FAST) without performing RESET operation, the event is turned ON. When shifting from END mode to READY mode, the event is not turned ON as RESET operation is required.

This event is cancelled (ON→OFF) when one of the following conditions is satisfied:

- When RESET operation is performed.
- When shifting from READY to RUN mode.
- When power is again supplied.

Time events


When the event 1 to 3 type is set to time event, the event can be used in the same way as time events 1 to 5. However, note that events 1 to 3 do not have segment No. event functions.

Though the event standby function does not function, the ON delay function does.

The ON and OFF times or only the ON time can be set for each event No. and segment.

The following describes ON/OFF of output:

- When the ON time is smaller than the OFF time, output is ON for the duration from the ON time to the OFF time. (See segments 1, 6 and 7 in the figure.)
- When only the ON time is set, output is ON for the during from the ON time to the segment end point. (See segments 2 and 5 in the figure.)
- When both the ON time and OFF time are not set, output is OFF.
 (See segment 3 in the figure.)
- Setting only the OFF time without an ON time is not possible.
 (See segment 3B in the figure.)
- Setting an ON time to be greater to or equal than the OFF time is not possible. (See segment 3C in the figure.)
- Only ON and OFF times set within the segment time are valid. Times straddling the next segment are invalid.
 The ON and OFF times set in the next segment are valid.
 (See segments 4 and 5 in the figure.)
 Accordingly, the ON and OFF times settings at the segment end point are ignored.

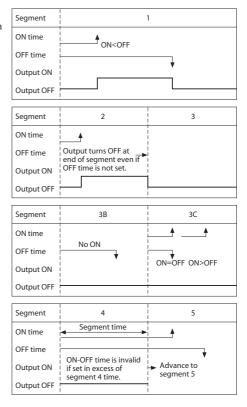

However, ON and OFF times set for segment end points when the END mode is shifted to are valid.


(See segment 9 in the figure, and compare with segment 10 in the END mode.)

- When the ON time is set to 0 (no OFF time setting, or OFF time is greater than 0), output becomes OFF at time 0.
 If output at the previous segment end point was ON at this time, the output status at the segment switching point does not momentarily become OFF.
 (See segments 5 and 6 in the figure.)
- The G.Soak standby time is not included in the ON and OFF times. (See segment 7 in the figure.)
- If the ON time is set to 0 in the case of G.Soak standby, output becomes ON from the G.Soak standby state, and the ON time is started at completion of the G.Soak standby time.

The output time = G.Soak time + OFF time

(See segment 8 in the figure.)

 ON and OFF time settings the same time as the segment end point are valid in the case of the final segment END mode. (See segment 10 in the figure.)

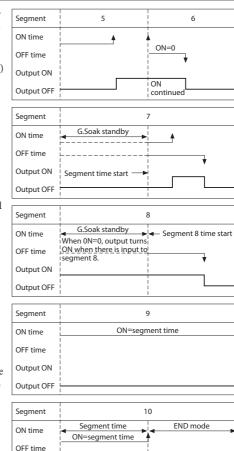

Output ON
Output OFF

Segment No. events

The current segment No. is output as binary code.

When all of T1 to T5 are selected as segment No. events in the time event type setup, all ON-OFF operations are as shown in the following table.

When T1 to T4 are assigned in part to segment No. events, only the assigned time events operate as shown in the following table, and the remaining events operate as regular time events.

Segment No. Event No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
T1	ON	OFF	ON												
T2	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON
T3	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON
T4	OFF	ON													
T5	OFF														

Segment No. Event No.	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
T1	OFF	ON	OFF												
T2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON
T3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON
T4	OFF	ON													
T5	ON														

■ PID set selection

- Eight sets of PID parameters, PID1 to PID8, are used for control operation. When the PID set No. is set to each segment by designating the PID set segment, control output is calculated by each of the PID parameters.
- There are two ways of selecting PID sets: by designating the PID set segment and PID set autoswitching. The method can be selected by setting setup data & II.


! set to 0: Designation of PID set segment! set to 1: PID set auto-switching

These two methods cannot be set simultaneously.


M Note

When setup data 🕻 🕻 is set to 1, PID items in the program setup are not displayed.

- By designation of PID set segment, the PID set No. is set for each segment, and control output is calculated by each of the PID parameters.
- By PID set auto-switching, the SP full-scale is divided into eight zones according to the settings of CP. 11 to CP. 17, and the PID constant to be used according to the SP value is automatically selected to calculate the control output.



PID set segment designation

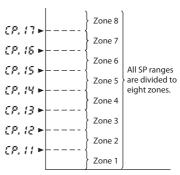

PID set automatic switching

■ G.Soak (guarantee soak)

G.Soak ON/OFF and G.Soak width can be set for each segment. The G.Soak time can also be set by the variable parameter $3.5 \cdot k$ item.

The G.Soak function ensures a segment execution time with PV close to SP. G.Soak functions not only in soak segments but also in ramp segments.

At the segment start point, PV and SP are compared, and the absolute value of the resulting deviation continues for the G.Soak time or longer. When the absolute value is smaller than the G.Soak width, operation of that segment is started.


The controller is in the G.Soak standby state until this condition is satisfied, and the linear lamp on the left of the profile display blinks. The operation state is the same as hold at the segment start point (time is set to 0). However, note that in the FAST mode, the controller does not enter the G.Soak standby state even if G.Soak is set to ON. The G.Soak standby state can also be canceled by external switch output. The following cancel conditions can be selected by the setup date \mathcal{E} 5 \mathcal{E} to \mathcal{E} 5 \mathcal{E} settings:

- G.Soak cancel when external switch input contact is ON or PV satisfies the G.Soak cancel conditions
- (2) G.Soak cancel when external switch input contact is ON and PV satisfies the G.Soak cancel conditions


G.Soak time-out time can be set for each segment.

If the G.Soak width and G.Soak time-out time are both set, the G.Soak standby state is forcefully cancelled after the passage of G.Soak standby time for the set time, and then the segment time count starts.

If the G.Soak width is not set, the G.Soak function does not function. As a result, this time-out function also does not function.

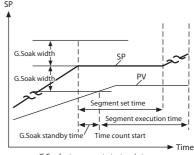

G.Soak at segment start point

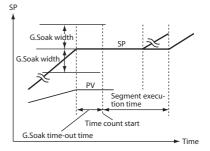

■ PV start


If PV start is set in the program setup, PV is started by regular RUN operation.

The first point where PV matches the SP in the program pattern (including bias for both PV and SP) is searched for, and operation is started from that point.

However, note that if a matching point is not found, operation is started from the beginning of segment 1.

When PV has started, event operating points and the time of time events are automatically corrected. If the PV start function is selected by setup data £ 5 & to £ 5 4 settings relating to external switch input, PV start can be executed without setting PV start in the program setup.

PV start is valid for segments in the currently selected program, and invalid for the segment at the pattern link destination.

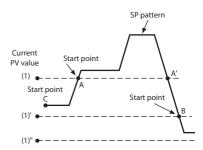

PV start points

- (1) PV starts at point A where the PV value first crosses the SP pattern.
- (1)' PV starts at point B where the PV value first crosses the SP pattern.
- (1)" Point C of segment 1 is the PV start point since there is no point where the PV value crosses the SP value.


■ Cycle

The cycle function is for repeating operation from the No.1 segment of the program pattern to the final set segment for a preset number of cycles. The number of cycles can be set up to 9999.

When a number of cycles "n" is set, the operation count becomes "n+1".

When executing cycle operation, operation at the end point of the final segment is not carried out, and operation is restarted with the settings of events 1 to 3 and time events 1 to 5 cleared. At this time, PV is not started and operation starts from the No.1 segment even if PV start is set.

If the SPs at the pattern start and end points do not match, the SP changes in a stepped manner during cycle operation.

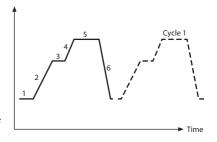

■ Pattern link

"pattern link" is a function for linking patterns together.

The link destination program No. is set by the pattern link item.


When the pattern link item is set to 0 (initial setting), patterns are not linked. When the No. of the current program itself is set to the pattern link item, this creates an endless loop.

If the SPs at the link source end point and the link destination start point do not match, the SP changes in a stepped manner during link operation.

When cycle operation has been set, the pattern link function works after cycle operation has ended. After pattern link operation ends, operation begins from the No.1 segment of the link destination pattern, so operation is restarted with the settings of events 1 to 3 and time events 1 to 5 cleared.

If PV start is programmed to the link destination pattern, the PV start function operates after the link is made.


After the link has been made, PID operation is not initialized, and is continued.

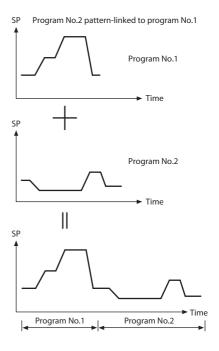

5-3 Modes

■ Mode types

The following modes are available on the DCP31:

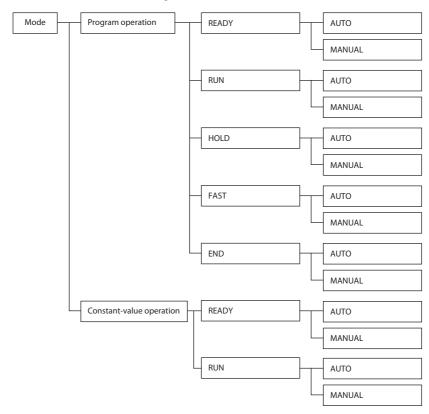

Program operation

Operation is carried out according to SP, times, events, etc. set to program patterns No.1 to 19.

Constant-value operation

Operation is carried out according to SP or events set in the constant-value operation data. Time events 1 to 5 turn OFF.

READY

In this mode, the DCP31 is ready for operation.

MV output is fixed, and events to be operated according to event setting values turn OFF. However, events to be operated according to controller states are active.

Parameters for all of the setup data, some event configuration data and some constantivalue operation data can be set or changed in the READY mode. During program operation, program pattern Nos.1 to 19 can be selected.

RUN

In this mode, the program is running.

MV outputs are active in PID control or ON-OFF control, and events and time events are active.

In the program operation mode, program operation progresses according to the elapsed time.

However, note that progress of program operation stops in the same way as the HOLD mode when the controller is in the G.Soak (Guarantee Soak) standby state.

HOLD

In this mode, the program is held.

Progress of program operation stops. However, note that MV outputs are active in PID control or ON-OFF control, and events and time events are active in the same way as in the RUN mode. The HOLD mode is not available during constant-value operation.

FAST

In this mode, the program is fast-forwarded.

This mode is like the RUN mode except that progress of the program operation time is speeded up.

The time scale is selected by the variable parameter $F \ \% \ 5 \ \xi$ setting. MV outputs are active in PID control or ON-OFF control, and events and time events are active.

The controller does not enter the G.Soak standby state even if G.Soak (Guarantee Soak) is set. The FAST mode is not available during constant-value operation.

END

In this mode, operation of the program has ended.

MV outputs are active in PID control or ON-OFF control, and events and time events are active with program operation stopped at the program end point.

The END mode is not available during constant-value operation.

AUTO

In this mode, program operation is automatic.

MV output is active according to controller control.

(However, note that when programmer functions are selected on 5G output models, SP output is active according to controller control.)

MANUAL

In this mode, program operation is manual.


MV output can be changed by , , , on the console or communications.

(However, note that when programmer functions are selected on 5G output models, SP output can be changed by \bigcirc , \bigcirc , \bigcirc on the console or communications.)

■ Mode transition

During program operation

The solid lines in the below diagram show mode transition operations. The broken lines show end of operation.

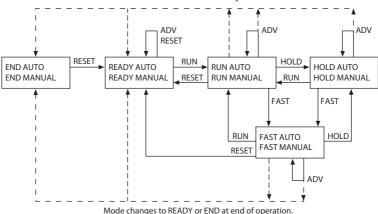

Mote

- When shifting between the AUTO and MANUAL modes, the modes in the square frames can be shifted between.
- Selection of the READY or END modes at end of operation is set up in the setup data.

During constant-value operation

The solid lines in the following diagram shows mode transition operation:



M Note

When shifting between the AUTO and MANUAL modes, the modes in the square frames can be shifted between.

• Switching between program operation and constant-value operation

In the READY mode, select operation by the constant-value operation data " $\mathcal{H} \cdot \mathcal{O} \not\subset \mathcal{E}$ " operation mode item.

0: Program operation

1: Constant-value operation

■ Mode transition operations

The following describes mode transition operations: Though "program end" is not an operation, it is described below as it is a factor in mode transition.

RUN

This operation involves shifting to the RUN mode from the READY, HOLD or FAST modes. To shift from the READY mode to the RUN mode, the DCP31 must be in the basic display state even in key, external switch input or communication operations.

HOLD

This operation involves shifting to the HOLD mode from the RUN or FAST modes.

The HOLD mode is not available in the constant-value operation mode.

RESET

This operation involves shifting to the READY mode from the RUN, HOLD, FAST or END modes.

In the program operation mode, this mode includes returning to the No.1 segment.

ADV

This operation involves advancing one segment in the READY, RUN, HOLD or FAST modes.

The ADV mode is not available in the constant-value operation mode.

FAST

This operation involves shifting to the FAST mode from the RUN or HOLD modes.

The FAST mode is not available in the constant-value operation mode.

AUTO

This operation involves shifting to the AUTO mode from the MANUAL mode.

MANUAL

This operation involves shifting to the MANUAL mode from the AUTO mode.

When the DCP31 enters the MANUAL mode, the basic display state changes as follows.

- When controller functions are selected, PV and output value (%) are displayed.
- When programmer functions are selected, PV and SP are displayed.

When the DCP31 enters the MANUAL mode from the AUTO mode by external switch inputs or communications, the display changes to the basic display state even in the parameter setup or program setup states.

Program end

When operation progresses in the RUN or FAST modes in the program operation mode, or when the segment has been advanced in the ADV mode, the program ends when all end points in the program setup including cycles and pattern links have been reached. You can select in the setup setting in which of the READY or END modes program operation ends.

The program does not end in the constant-value operation mode.

■ Mode transition limitations

Mode transition can be carried out operating the console keys, external switching input and communications. The following table shows which operations are enabled in each of the modes:

OI	Operation		RUN o RUN mode)		HOLD (to HOLD mode)		RESET (to READY mode)			ADV * (to next segment mode)			FAST (to FAST mode)			
Original mode		Key	Switch	Com- muni- cations	Key	Switch	Com- muni- cations	Key	Switch	Com- muni- cations	Key	Switch	Com- muni- cations	Key	Switch	Com- muni- cations
Program	READY	0	0	0	_	_	-	_	Δ	Δ	_		_	_	_	- 1
operation	RUN	_	_	_	0			0			0			0		
	HOLD	0			_	_	_	0			0			0		
	FAST	0			_			0			0			_	_	
	END	_	_	_	_	_	_	0			_	_	_	_	_	- 1
Constant-	READY	0			_	_	_	_	_	_	_	_	_	_	_	_
value operation	RUN	_	_	_	_	_	_	0			_	_	_	_	_	_

	Operation	l	MANUA NUAL		AUTO (to AUTO mode)			
Original mode		Key	Switch	Com- muni- cations	Key	Switch	Com- muni- cations	
Program	AUTO	0			_	_	_	
operation	MANUAL	_	_	_	0			
Constant- value	AUTO	0			_	_	_	
operation	MANUAL	_	_	_	0			

- : Operation is enabled.
- Operation is enabled if in basic display state.
- $\Delta\ :$ No.1 segment is returned to if controller is still in READY mode.
- : Operatiosn is disabled.
 - * With ADV by communications, mode transition is not limited to the next segment; the mode advances to the segment specified in the communications message.

5 - 4 Controller and Programmer

On 5G output models (output catalog No. appended with 5G), you can choose between use as a controller or a programmer. Set this in setup data \mathcal{E} (8. You can also choose between controller or programmer functions even if the DCP31 is used for program operation or constant-value operation.


The DCP31 is limited to use as a controller at all times on other models.

Controller

When the DCP31 is used as a controller, PID control operation is carried out according to PV, SP AND PID setting values, and the resulting manipulated variable (MV) is output as an analog output.

ON-OFF control, heat/cool PID control and 3-position-proportional is also possible depending on the type of output supported by the model of DCP31.


In the MANUAL mode, the MV can be incremented or decremented in the basic display state by the console keys.



Programmer


When the DCP31 is used as a programmer, PID control operation is not carried out, and the SP is output in the scaled 4 to 20mA range.

In the MANUAL mode, the SP can be incremented or decremented in the basic display state by the console keys.

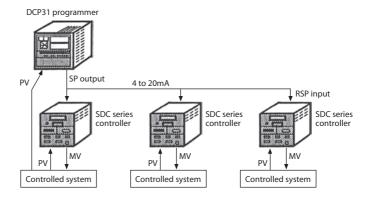

5 - 5 Input Processing Functions

Input processing is carried out in the order shown below.

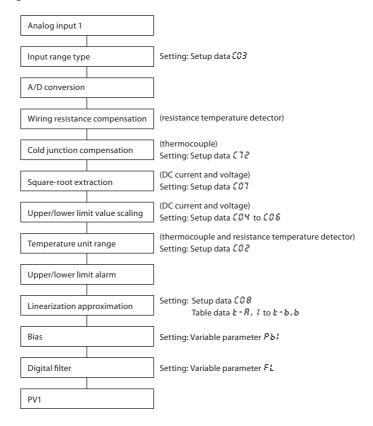


5 - 6 Output Processing Functions

Three outputs are provided as output processing functions: control output, SP output and auxiliary output.


■ Control output

When the DCP31 is selected for use as a controller, control output is operational. How outputs are processed varies according to the output type supported on the model.


• 5G output

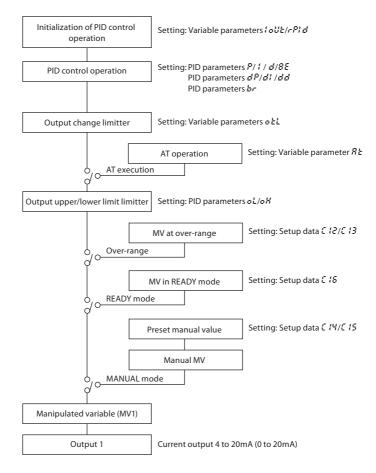

• 0D, 6D output

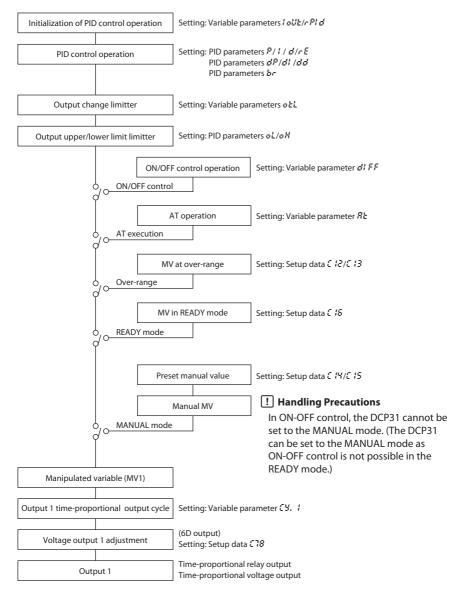

2G output

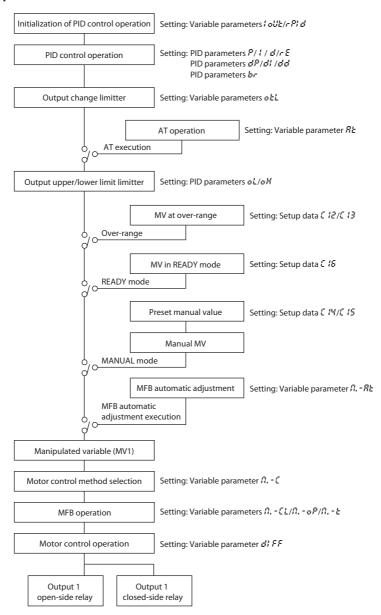


3D, 5K outputs Setting: Variable parameters ! out / P! d Initialization of PID control operation Setting: PID parameters P/ 1/d/r E PID control operation Output change limitter Setting: Variable parameters of L Setting: Setup data C 12/C 13 MV at over-range 50% , READY mode Setting: Setup data & 14/E 15 Preset manual value Manual MV ! Handling Precautions MANUAL mode In 3-position control, the DCP31 cannot be set to the MANUAL mode Manipulated variable (MV1) Setting: Variable parameter #1 FF Heat-cool MV operation Heat-side Cool-side Output upper/lower limit limitter Output upper/lower limit limitter Setting: PID parameters oよ/o片 Setting: PID parameters oL/oH (odd-numbered PID sets) (even-numbered PID sets) 3-position control operation 3-position control operation Setting: Setup data Setting: Setup data 3-position control 645 545 O 3-position control Variable parameters Variable parameters du-L/X3-L 80-X/X3-X MV in READY mode (cool) MV in READY mode (heat) READY/AUTO modes READY/AUTO modes Setting: Setup data 🕻 🌃 Setting: Setup data 🕻 🛭 MV (heat) MV (cool) Output 1 time-proportional output cycle Output 2 time-proportional output cycle (relay/voltage output) (relay/voltage output) Setting: Variable parameter [4.] Setting: Variable parameter €4.2 Voltage output 1 adjustment Voltage output 2 adjustment (voltage output) (voltage output) Setting: Setup data £78 Setting: Setup data [79 Output 1 Output 2 Time-proportional relay output Time-proportional relay output Current output 4 to 20mA (0 to 20mA) Current output 4 to 20mA (0 to 20mA)

Time-proportional voltage output

Time-proportional voltage output

■ SP output


When the DCP31 is selected for use as a programmer, control output is operational. On 5G output models, SP output is processed is as follows:

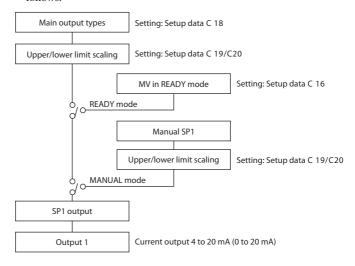

■ Auxiliary output

Auxiliary output 1


When auxiliary output 1 or 2 are supported on 0D, 5G or 6D output models, auxiliary output 1 is processed as follows:

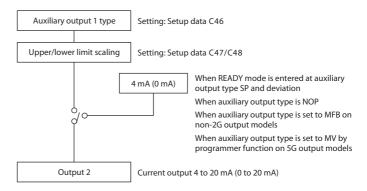

Auxiliary output 2

When auxiliary output 2 is supported on 0D, 5G or 6D output models, auxiliary output 2 is processed as follows:

When auxiliary output 1 is supported on 2G, 3D or 5K output models, auxiliary output 2 is processed as follows:

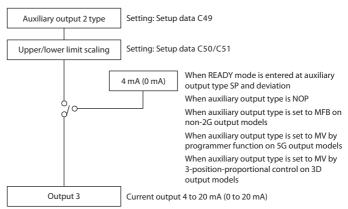


Chapter 6. OPERATION

6 - 1 Turning the Power ON

The DCP31 is not equipped with a power switch or protective fuses. If necessary, prepare these externally.

When a voltage of 90 to 264 V ac is applied across terminals ① and ② on the DCP31, display appears for about 10 s after which control and other operations are started. During controller startup until start of operations, the LEDs on the profile display light successively at uneven intervals clockwise from top right. The following diagram shows the flow of operations at startup:

Startup flow

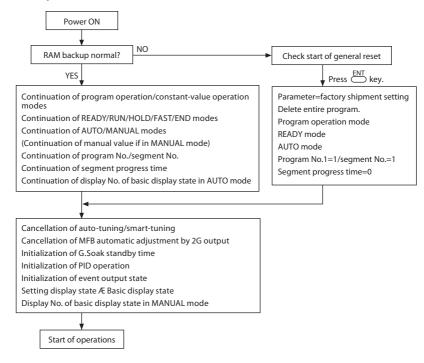

! Handling Precautions

With the following modes and items, the state when the power is turned OFF continues when the power is turned back ON.


- · READY, RUN, HOLD, FAST, END modes
- · AUTO, MANUAL modes
- · MANUAL values in MANUAL mode
- · Program No., segment No.
- · Progress time in segment
- · Display No. if in basic display state in AUTO mode

6 - 2 Switching the Basic Display

The "basic display state" of the controller collectively refers to the display state of the program No. display, segment No. display, upper display, lower display, basic indicator LED lamps and event LEDs.

Each press of DISP successively switches the basic display state. Operation of other displays and LEDs is carried out in the same way even when setting up parameters, for example. However, switching by DISP is not possible.


The following figure shows the conventions used for displays in this manual.

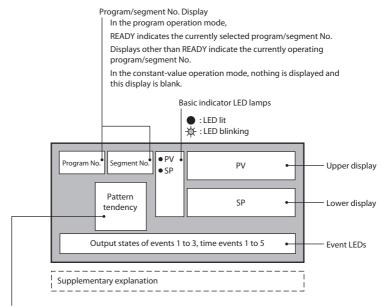

Profile Display

In the program operation mode, the profile is displayed only when the program has been set up. The profile is not displayed when the program is not set up.

When there is no subsequent segment even if the program is set up, the three LEDs on the right do not light. In the constant-value operation mode, nothing is displayed and this display is blank.




■ Display in program operation mode

• DISP functions


Output Model No.	Display
0D, 5G, 6D	Display 1 → Display 2 → Display 5 → Display 6 → Display 7 → Display 1 (repeated)
2G	Display 1 → Display 2 → Display 3 → Display 5 → Display 6 → Display 7 → Display 1 (repeated)
3D, 5K	Display 1 → Display 2 → Display 4 → Display 5 → Display 6 → Display 7 → Display 1 (repeated)

Display 1

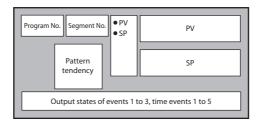


The digit to which SP values can be entered blinks in the MANUAL mode when programmer functions are selected.

Display 2

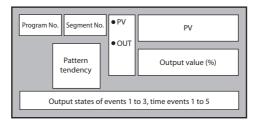


The digit to which SP values can be entered blinks in the MANUAL mode when controller functions are selected.

Display 3

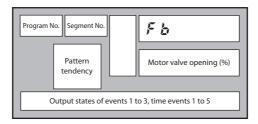


This display is exclusive to 2 G output models (output catalog No. appended with 2 G).

Display 4

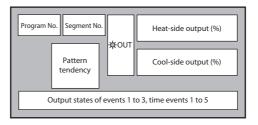


This display is exclusive to heat/cool output models (output catalog No. appended with 3 D or 5 K).

Display 5

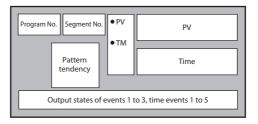


Either of "h:min" or "min:s" is selected as the time unit in setup settings. Select either "remaining segment time" or "total operating time" in setup settings as the details whose time is to be displayed.

Display 6

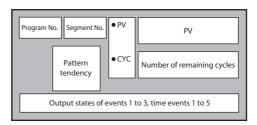

When the remaining number of cycles is "0", subsequent cycle operation is not carried out.

Display 7

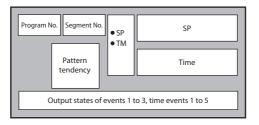


The digit to which SP values can be entered blinks in the MANUAL mode when programmer functions are selected. Either of "h:min" or "min:s" is selected as the time unit in setup settings. Select either "remaining segment time" or "total operating time" in setup settings as the details whose time is to be displayed.

■ Display in constant-value operation mode

• DISP functions


Output Model No.	Display
0D, 5G, 6D	Display 1 \rightarrow Display 2 \rightarrow Display 1 (repeated)
2G	Display 1 → Display 2 → Display 3 → Display 1 (repeated)
3D, 5K	Display 1 → Display 2 → Display 4 → Display 1 (repeated)

Display 1

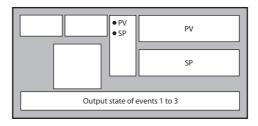


The digit to which SP values can be entered blinks in the MANUAL mode when controller functions are selected.

Display 2

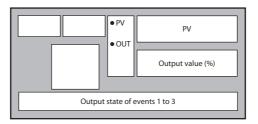


The digit to which SP values can be entered blinks in the MANUAL mode when programmer functions are selected.

Display 3

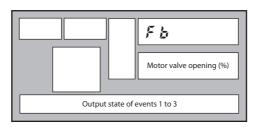

This display is exclusive to 2 G output models (output catalog No. appended with 2 G).

Display 4

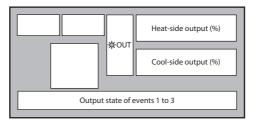


This display is exclusive to heat/cool output models (output catalog No. appended with 3 D or 5 K).

6 - 3 Program Selection

The program No. can be selected on the console within the range 1 to 19.

■ How to select the program No.

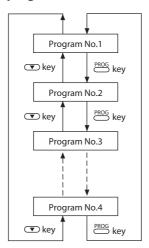

When the controller is in the basic display state in the program operation READY mode:

- Each press of PROG increments the program No. The display reverts to 1 after 19.
- Each press of decrements the program No. The display reverts to 19 after 1.

! Handling Precautions

- Both already set or non-set program Nos. can be selected
- The program No. cannot be selected when selecting the program No. by external switch input.
- The program No. cannot be selected during constant-value operation.
- Pressing odoes not change the program No. when values currently being entered are displayed in the MANUAL mode.

6 - 4 External Switch (RSW) Operations

■ External switch (RSW) inputs

In all, the DCP31 is provided with 12 external switch inputs. Each of these inputs are differentiated by RSW1, RSW2 and so forth to RSW12. On models whose option 2 catalog No. is "0", only inputs RSW1 to RSW4 are mounted.

(RSW: external switch input)

External switch input types

The functions of RSW1 to 4, and RSW8 to 12 are fixed. The functions of RSW5 to 7 are selected by the setup setting.

External Switch No.	Function	Detection Method
RSW1	RUN	Rising edge
RSW2	HOLD	Rising edge
RSW3	RESET	Rising edge
RSW4	ADV	Rising edge
RSW5 RSW6	Selected by setup from the following functions	
RSW7	FAST	Rising edge
	PV start	Rising edge
	AUTO/MANUAL	Rising/falling edge
	AT start/stop	Rising/falling edge
	G.Soak cancel by OR conditions	Status
	G.Soak cancel by AND conditions	Status
	Direct/reverse action switching	Status
RSW8	Program No. selection Weighting 1	Status
RSW9	Program No. selection Weighting 2	Status
RSW10	Program No. selection Weighting 4	Status
RSW11	Program No. selection Weighting 8	Status
RSW12	Program No. selection Weighting 10	Status

 With PV is valid only in the program operation mode and READY mode, and the PV start RUN mode is entered regardless of the PV start setting in the program. Note, however, that RUN mode is entered from the start point of the selected segment in READY mode when there is no SP for the PV start.

- With G.Soak cancel by OR conditions, G.Soak standby is canceled when the external switch turns ON or when the PV enters the G.Soak width.
- With G.Soak cancel by AND conditions, G.Soak standby is canceled when the external switch turns ON or when the PV enters the G.Soak width.
- When the external switch turns ON by direct/reverse action switching, control operation is the opposite to that set in setup parameter $\xi \cdot \mathcal{Q} \cdot t$. When the external switch turned OFF, control operation is that set in setup parameter $\xi \cdot \mathcal{Q} \cdot t$.

■ Program selection

The program can be selected in the program operation READY mode. The table below shows program selection by external switch inputs. Two external switch states are provided for selection of programs 10 to 15. When program selection by external switch inputs is set to "0", the program can be selected by the console keys and by communication with a personal computer.

External Switch No.	Weighting		State									
RSW8	1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	
RSW9	2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	
RSW10	4	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	
RSW11	8	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	
RSW12	10	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
Program No. Selection		0	1	2	3	4	5	6	7	8	9	

External Switch No.	Weighting		State										
RSW8	1	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON
RSW9	2	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF	ON
RSW10	4	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON
RSW11	8	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
RSW12	10	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
Program No. Selection		10 1			11 12			1	3	1	4	1	5


External Switch No.	Weighting		State										
RSW8	1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON		
RSW9	2	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON		
RSW10	4	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON		
RSW11	8	OFF	OFF	ON	ON								
RSW12	10	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON		
Program No. Selection		16	17	18	19	0							

■ Read timing

Timing of RSW1 to 7

Inputs RSW1 to RSW7 are read according to the following timing.

- (1) When input changes state from OFF to ON, the time from the change up to reading is 0.2 s max.
- (2) When input changes state from ON to OFF, the time from the change up to reading is 0.2 s max.




Timing of RSW8 to 12, RUN and PV start

The time from the change in input state up to reading when selecting program Nos. by RSW8 to RSW12 is 0.4 s max.

Accordingly, due to the relationship with RUN operation, be sure to observe timings (1) to (4) in the following diagram.

PV start operation also must conform to RUN operation.

- (1) The time from fixing of the selected No. up to the rising edge of the RUN signal is 0.4 s min.
- (2) The time from the rising edge of the RUN signal up to holding of the program No. is 0.2 s min.
- (3) The time from holding of RUN signal OFF up to the rising edge of the RUN signal is 0.2 s min.
- (4) The time from the rising edge of the RUN signal up to holding of RUN signal ON is 0.2 s min.
- (5) The time from fixing of the selected No. up to changing of the program No. is 0.4 s max.
- (6) The time from the rising edge of the RUN signal up to start of RUN is 0.4 s max.

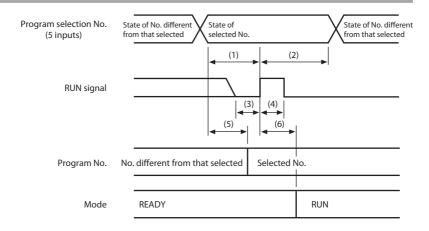

! Handling Precautions

When operating the controller by external switch inputs, operation can be carried out more reliably if a margin is added to the minimum time for the above read times.

6 - 5 Manual Operation and Auto-tuning

■ Manual operation

In the MANUAL mode, controller outputs can be manipulated by

or on the console.

Controller functions

When outputs are displayed in the basic display state, only one digit in the output value blinks. If the output value is incremented or decremented by or , actual output also increments or decrements. Output values differ from values being entered to setting items in that $\stackrel{\text{ENT}}{\longrightarrow}$ need not be pressed.

The blinking digit can be moved by pressing or .

On 2G output models, when only estimated position-proportional control is selected by variable parameter $n.-\zeta$ setting 2, "——" not the value is displayed as the output display in the MANUAL mode.

Pressing displays "o P E n", and the open-side relay turns ON.

Pressing odisplays " \$\mathcal{L} \odds 5\", and the closed-side relay turns ON.

Bump-less and preset output changes when shifting from the AUTO to the MANUAL mode can be selected by setup parameter *5* 15 setting. When shifting from the MANUAL to the AUTO mode, output is bumpless.

(However, when the total time for the PID parameter of the PID set in use is set to "0", a sudden change in output occurs.)

Programmer functions

On 5G output models, when programmer functions are in operation with setup data \$\mathcal{E}\$ 18 setting 1, SP can be manually manipulated. When SP is displayed in the basic display state, only one digit in the SP value being entered blinks. When the SP value is incremented or decremented by \(\blacktriangle \text{ or } \blacktriangle \text{, the actual SP output also increments or decrements. SP values differ from values being entered to setting items in that \(\blacktriangle \text{NT} \) need not be pressed.


The blinking digit can be moved by pressing \bigcirc or \bigcirc .

Output changes when shifting from the AUTO to the MANUAL mode are bumpless regardless of setup data £ 15 setting. When shifting from the MANUAL to the AUTO mode, the SP becomes the program pattern SP, which results in a sudden change in output.

■ Auto-tuning (AT)

When operating in the AUTO mode in either of the RUN, HOLD, FAST or END modes, setting values can be automatically written to the PID set in use by auto-tuning (AT). The following can be selected by variable parameter $\Re \, \boldsymbol{\xi}$ setting.

- 0: AT is disabled.
- 1: General AT is executed.
- 2: Overshoot-inhibited AT is executed.
- 3: AT by neural net is executed.
- Auto-tuning does not function when programmer functions are selected on 3D or 5K heat/cool output models and 5G output models.
- During execution of auto-tuning, progress of program operation time stops. Accordingly, the controller is in a similar state to the HOLD mode even in the RUN or FAST modes.
- Auto-tuning in all instances involves calculating the downtime and critical sensitivity of the line according to two limit cycles and PID values according to suitable characteristic equations for each, and automatically writing these PID values.
- During execution of auto-tuning, PV fluctuates according to fluctuations in MV. Before executing auto-tuning, make sure that fluctuations in PV will not cause controller trouble.
- Normally, suitable values are written by setting variable parameter At setting to 1 or 3. However, when executing auto-tuning on a line that easily overshoots, either set to 2, or also use smarttuning for carrying out overshoot inhibit control. Setting to 3 executes AT by neural net so that the suitable value is calculated for wider range applications.
- The point at which output at auto-tuning is inverted (lower limit to upper limit, and vice versa) is determined as follows from SP and PV at start of auto-tuning.

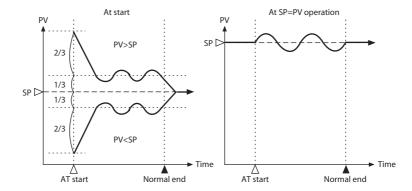

- Auto-tuning can be started by AT, external switch inputs and communications. During auto-tuning, the AT LED blinks.
- If one or more of the following conditions occurs during autotuning, auto-tuning is canceled without PID constants being written, and the AT LED goes out.
 - Cancel by AT
 - Cancel by external switch input
 - Cancel by communications
 - Change in mode (shift to MANUAL mode or READY mode)
 - Execution of automatic motor valve opening adjustment on 2G output models
 - When variable parameter ₹ ≥ setting is changed to "0"
 - When input 1 becomes out-of-range

! Handling Precautions

- Auto-tuning will not function properly unless the control target is connected.
- The time from start to end of auto-tuning varies according to the control target.
- When auto-tuning is executed, control is stopped, OFF and ON
 outputs are switched in the case of relay output and voltage output, and the manipulated variable upper and lower limits of the
 currently selected PID set are switched several times in the case
 of current output and position proportional output. If this causes
 controller trouble, manually set the PID value.
- Sometimes a suitable PID value cannot be obtained depending on the control target. If this happens, manually set the PID value.

Chapter 7. PARAMETER SETUP

7 - 1 Parameter Setup


Parameters can be set up when the DCP31 is in the basic display state. If the DCP31 is not in the basic display state, press $\stackrel{DISP}{=}$ to set the controller to the basic display state.

■ Selecting the setting group in the parameter setup

Parameter setup is divided into two stages: setting group (major item) and individual item (minor item).

If you press + PARA in the basic display state, the display changes to selection of setting group (major item), the setting group is displayed on the upper display, and the lower display goes out.

If you press ARA or , A or , the setting group display changes in order.

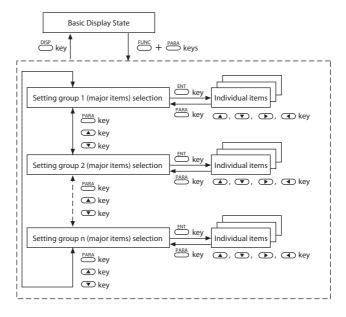

If you press the ment the setup group to be selected is displayed, the display moves to the individual (minor) item level. The following table shows the setting groups:

Name	Upper Display	Remarks
Variable parameters	PAFA	
Event configu- ration data	Ευ	This parameter is not displayed when variable parameter $L \circ C$ is 2 or 4
PID parameters	Pid	This parameter is not displayed when variable parameter $l \circ l$ is 2 or 4 This parameter is not displayed when constant-value operation data $l \circ l \circ l$ is 1 This parameter is not displayed when setup data $l \circ l \circ l$ is 1 by 5G output This parameter is not displayed when setup data $l \circ l \circ l$ is 1 by 3D output
Setup data	SEE	This parameter is not displayed when variable parameter $L \circ \zeta$ is 1, 2 or 4
Table data	tbl	This parameter is not displayed when variable parameter 🕹 o 🕻 is 2 or 4
Constant-value operation data	Enst	This parameter is not displayed when variable parameter $L \circ \zeta$ is 2 or 4

■ Moving individual items in the parameter setup

With individual items, item codes are displayed in the upper display and setting values are displayed in the lower display.

The program No. display goes out, and the item No. is displayed in the segment No. display. However, note that the segment No. display also goes out in the case of setup data.

Individual items are arranged in a matrix as shown on the following page, and can be displayed in order by pressing , , , or or . The size of individual item matrices varies according to the setting group.

■ Changing individual items and how to return from the setup state


If you press when an individual item is displayed, the setting value blinks. This state is referred to as the "setting value entry state." In this state, pressing or can increment or decrement the setting value that is blinking. Also, pressing or composes the position of the digit that is blinking.


If you press the desired value, blinking stops, the display returns to its normally lit state, and the new setting value is stored to internal memory.

To cancel changing of setting values, press $\stackrel{PARA}{\longrightarrow}$ or $\stackrel{DISP}{\longrightarrow}$. When $\stackrel{PARA}{\longrightarrow}$ is pressed, the value stops blinking and the display returns to its normal lit state.

If you press $\stackrel{\text{DISP}}{\longrightarrow}$, the display returns to the basic display state. If "---" is displayed at the lower display when an individual item is displayed, or the controller does not enter the setting value entry state by pressing $\stackrel{\text{ENT}}{\longrightarrow}$, that item cannot be set nor changed.

• Example of individual item matrix (setup date)

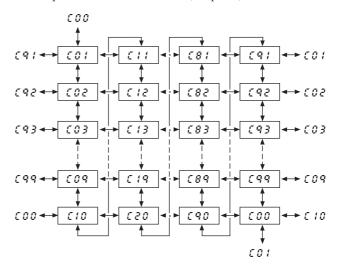

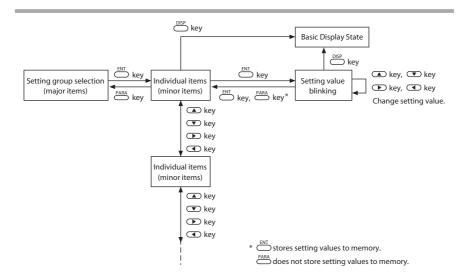

7 - 2 How to Use PARA

Use $\stackrel{\text{PARA}}{\longleftarrow}$ for calling up individual items in frequently changed parameters.

■ How to register functions to keys

Up to eight individual items in the parameter setup can be assigned to each Aey. The assignment item must be registered to use this feature

This feature allows you to call up individual items more easily in the following order:

 $\stackrel{\text{FUNC}}{\longleftarrow} + \stackrel{\stackrel{\text{PÄRA}}{\longleftarrow}}{\longrightarrow} \rightarrow$ selection of setting group \rightarrow individual item matrix.

How to register assignment items

To register an assignment item, add the following base corresponding to the setting group to the item No., and then set the resultant value to setup data \mathcal{L} 5 5 to \mathcal{L} 8 \mathcal{E} ($\stackrel{\text{PARM}}{\longrightarrow}$ assignment items 1 to 8):

Base	Setting Group
1000	Constant-value operation data
1500	PID parameters
2500	Variable parameters
3500	Event configuration data
4000	Table data
4500	Setup data

Example

Let's register four individual items to PARA . If you press in the basic display state, the 1st to 4th individual items in the table below are displayed successively. In this example, let's change the setting values.

Order	Item to Call by PARA			
1	Setup data	001		
2	PID parameter	P-2		
3	Variable parameter	FL		
4	Variable parameter	FRSE		

The settings for registering these individual items are as follows: Setup Data Setting "5 £ £"

No.	Item Code [auxiliary display]	ltem	Setting Value	Remarks
55	(55	eassignment item 1	4501	This is produced by adding item No.1 of CO1 to setup data radical 4500.
56	C 5 8	example 2 assignment item 2	1511	This is produced by adding item No.11 of $P - 2$ to PID parameter radical 1500.
57	C 57	PARA assignment item 3	2503	This is produced by adding item No.3 of F & to setup data radical 2500.
58	C 5 8	em 4	2520	This is produced by adding item No.20 of F # 5 £ to variable parameter radical 2500.


! Handling Precautions

- For details on item Nos., see 7-3 Parameter Setup List (pages 7-7 to 7-42).
- When the "PARA assignment item" setting is set to a value that
 does not correspond to an existing item, that setting is ignored.
 For example, though factory setting 1000 corresponds to "constant-value operation data" 0th of base 1000, 0th does not exist, so the setting will be treated an invalid data and will not be registered.

• Operations by PARA

If you press PARA in the basic display state, registered individual items are called up. Each press of PARA successively calls up (up to eight) registered individual items. Only individual items to which valid assignment settings have been registered can be called up.

PARA operations are not limited by the setting of "variable parameter setup" Lo E (key lock) setting. PARA operations are described on the following page:

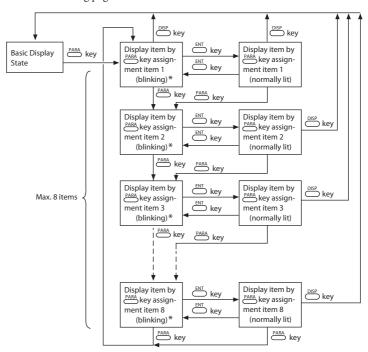

! Handling Precautions

 When invalid assignments are registered, that item is skipped and the next registered item is displayed.

* Items that can be changed: When these items are displayed blink-

ing, the setting values can be changed by \bigcirc , \bigcirc , and \bigcirc .

ent stores data to memory.

Items for reference: These are displayed at all times.

7 - 3 Parameter Setup List

M Note

"U" and "%FS" used in the "Factory Setting" and "Setting" columns in the table mean the following:

U: The decimal point changes according to the input range type setting. For example, when one digit past the decimal point is allowed, -1999 U becomes 199.9, and 9999 U becomes 999.9.

%FS: The numbers and decimal point position changes according to the input range setting.

For example, when the input range is 0.0 to 800.0 °C, 0 %FS is 0.0 and 100 %FS is 800.0.

■ Variable parameter settings "戶幕 - 爲"

No.	Item Code	ltem	Factory Setting	User Setting	Setting
1	Loc	Key lock	0		O: Key lock disabled Display of setup data settings disabled Display of parameter settings and program settings disabled Use of operation keys disabled Display of parameter settings and program settings displayed, and use of operation keys disabled Note Two or more key lock setting values for actual key lock items and items assigned to PARA can be displayed and set.
2	PrEC	Program protect	0		Changing program settings enabled Changing program settings disabled
3	FL	Input 1 digital filter	0.0		0.0 to 120.0 s [Note] 0.0 disables the filter.
4	P51	Input 1 bias	0 U		-1000 to +1000 U
5	561	SP1 bias	0 U		-1999 to +9999 U [Note] SP bias is commonly effective in all programs and all segments.
6	021	MV change limitter (CH1)	0.0		0.0 to 10.0 % (0.1 %s steps) [Note] 0.0 disables the limit.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
7	loUE	PID operation initial MV (CH1)	0.0 (50.0)		0.0 to 100 % [Note] On heat/cool models, the factory setting is 50.0.
8	rPid	PID operation initialization	0		O: Automatic judgment of initialization is carried out by advance operation. I: Initialization is carried out by advance operation. I: Initialization is not carried out by advance operation.
9	RE	Auto-tuning method selection (CH1)	0		 AT is disabled. General AT is executed. Overshoot-inhibited AT is executed. AT by neural net is executed. [Note] On heat/cool models, "" is displayed, and setting is not possible.
10	5 &	Smart-tuning method selection (CH1)	0		 Smart-tuning is disabled. The brake value is fixed to inhibit overshoot. Overshoot is inhibited while automatically reviewing the brake value. [Note] On heat/cool models, "" is displayed, and setting is not possible.
11	2918	Advanced PID selection (CH1)	0		 0: 2 degrees of freedom PID is disabled. 1: 2 degrees of freedom PID is enabled. [Note] On heat/cool models, "" is displayed, and setting is not possible.
12	95.5	G.Soak time (CH1)	2.0		0.1 to 60.0 s
13	CP.11	PID auto-switching point 1-1	0U		-1999 to +9999 U [Note]
14	CP.12	PID auto-switching point 1-2	200 U		When setup data 🕻 🕯 setting is 0 (PID set autoswitching OFF), "– – – –" is displayed and setting is not possible.
15	CP.13	PID auto-switching point 1-3	400 U		ansprayed and secting is not possible.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
16	CP.14	PID auto-switching point 1-4	600 U		-1999 to +9999 U [Note]
17	CP.15	PID auto-switching point 1-5	800 U		On heat/cool models, "" is displayed and setting is not possible.
18	CP.15	PID auto-switching point 1-6	1000 U		On other models, when setup data ! ! setting is 0 (PID set auto-switching OFF), "" is displayed and setting
19	CP.17	PID auto-switching point 1-7	1200 U		is not possible.
20	FRSE	FAST factor	0		0: 2 X 1: 10 X 2: 60 X (10 X) 3: 120 X (10 X) [Note] When setup data € € ¥ setting is 1 (program time unit: min/s), the FAST factor is 10 X for settings 2 and 3.
21	d IFF	ON-OFF control differential	5 U		0 to 1000 U [Note] This setting is displayed on 0D and 6D models.
		Position-proportion- al dead zone	5.0		0.5 to 25.0 % [Note] This setting is displayed on 2G output models.
		Heat/cool control dead zone	0.0		-100.0 to +50.0 % [Note] This setting is displayed on heat/cool models.
					[Note] On 5G output models, "" is displayed and setting is not possible.
22	C4.1	Output 1 time proportional output cycle	10		5 to 120 s (relay output) 1 to 60 s (voltage output) [Note] On models whose output 1 is neither relay output nor voltage output, "" is displayed and setting is not possible.

No.	Item Code	ltem	Factory Setting	User Setting	Setting	
23	(4.2	Output 2 time proportional output cycle	10		5 to 120 s (relay output) 1 to 60 s (voltage output) [Note] On models whose output 2 is neither relay output nor voltage output, "" is displayed and setting is not possible.	
24	CY.3	Unused	_		[Note] "" is displayed and setting is not possible.	
25	du-L	3-position control deviation lower limit	5 U		0 to 1000 U [Note]	
26	du-H	3-position control deviation upper limit	5 U		On models other than 3D output models, "" is displayed and setting is	
27	HA -F	3-position control lower limit hysteresis	5 U		not possible.	
28	H	3-position control upper limit hysteresis	5 U			
29	nc	Motor control method selection	0		O: MFB control (conventional) + estimated position control I: MFB control (conventional) only 2: Estimated position control only [Note] On models other than 2G output models, "" is displayed and setting is not possible.	
30	n#E	Motor valve opening automatic adjustment	0		0: Adjustment disabled 1: Adjustment enabled [Note] On models other than 2G output models, "" is displayed and setting is not possible. On 2G output models, when ℜ € setting is 2, "" is displayed and setting is not possible.	

No.	Item Code	ltem	Factory Setting	User Setting	Setting
31	ncl	Motor valve open- ing adjustment fully closed position	1000		0 to (fully open adjustment - 500) [Note] On models other than 2G output models, "" is displayed and setting is not possible. On 2G output models, when ?? € setting is 2, "" is displayed and setting is not possible.
32	ΠοP	Motor valve open- ing adjustment fully open position	9000		(fully closed adjustment + 500) to 9999 [Note] On models other than 2G output models, "" is displayed and setting is not possible. On 2G output models, when ?? { setting is 2, "" is displayed and setting is not possible.
33	AE	Motor valve open- ing adjustment fully open/closed time	30.0		5.0 to 240.0 s [Note] On models other than 2G output models, "" is displayed and setting is not possible.

■ Description of variable parameter settings

● Lot (key lock)

- 0: Key lock disabled
- 1: Display of setup data settings disabled
- 2: Display of parameter settings and program settings disabled
- 3: Use of operation keys disabled
- 4: Display of parameter settings and program settings displayed, and use of operation keys disabled
- When $\mathcal{L} \circ \mathcal{L}$ is set to 1, the following keys are disabled. Basic display state: FUNC + CLR + DISP (general reset) Only 5 £ & can be selected by setting group selection in the parameter setup state.
- When \not o \not is set to 2, the following keys are disabled.

Basic display state: FUNC + PROG (program setup)


(program copy)

FUNC + CLR + DISP (general reset)

Only PR r R can be selected by setting group selection in the parameter setup state.

However, note that items assigned to $\stackrel{\text{\tiny PARA}}{=}$ can be called up by $\stackrel{\text{\tiny PARA}}{=}$ in the basic display state.

• When ¿ ♂ ∑ is set to 3, the following keys are disabled.

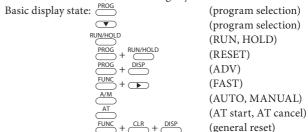

However, note that MV (when controller functions are selected) and SP (when programmer functions are selected) can be changed in the basic display state in the MANUAL mode.

• When ¿o C is set to 4, all keys disabled when ¿o C is set to 2 and 3 are disabled.

● Prb((program protect)


0: Changing program settings enabled

1: Changing program settings disabled

When $P \cap L \mathcal{L}$ is set to 1, the following keys are disabled.

● ø ヒ ¼ (MV change limit)

The MV is increased or decreased by the same value so that the output change is taken as the limit setting value when the output change (%) after PID operation is greater than this limit setting. The below example shows the actual change in MV when the MV changes from 20 % to 22 % with the change limit setting at 0.5 %. MV is output at 0.5 % setting value increments every 0.1 s, and reaches 22 % in 0.4s.

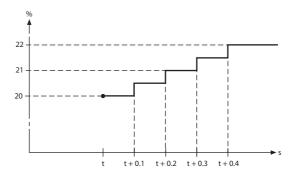

● Po U & (PID operation initial MV)

PID operation is started in the following cases using the $\mathcal{L}_{\mathcal{O}}$ $\mathcal{U}_{\mathcal{E}}$ setting value:

- When the mode changes from READY AUTO to RUN AUTO
- When the power is turned ON in the RUN AUTO (or HOLD, FAST, END AUTO) mode
- · At completion of auto-tuning

As the PV, SP and PID parameters settings bear a relation to PID operation, the first MV

resulting from PID operation will not necessarily match the $l \circ U \not \in$ setting value.

● ヶ戸けば (PID operation initialization)

When SP changes suddenly by ADV (advance) operation, rate action in PID operation may cause the MV in the operation to change excessively. For this reason, excessive changes can be suppressed by initializing PID operation.

However, as initialization of PID operation may result in lost continuity, initialization may adversely influence PID operation depending on the circumstances in which the controller is being used. Initialization ON/OFF and conditions can be selected by the *r* ? ! d setting.

• 5 k (smart-tuning method selection)

- 0: Smart-tuning is disabled.
- 1: The brake value is fixed to inhibit overshoot.
- 2: Overshoot is inhibited while automatically reviewing the brake value.
- When the control direction is set to reverse action, overshoot is inhibited. When set to direct action, undershoot is inhibited. Both functions are referred to collectively as "overshoot inhibit."

 When set to 1, the value of PID parameter setting item **b** r is used as it is to inhibit overshoot.

When set to 2, the value of b r is reviewed at each rise (reverse action) or fall (direct action, and overshoot is inhibited while the value is automatically rewritten.

Review is executed only in the direction in which the b_r value is increased (overshoot inhibit effect becomes more apparent). When operation is carried out for a long time with this parameter set to 2, overshoot inhibit may function too strongly, and it may take a long time to arrive at SP. So, when overshoot disappears, note down the b_r value at that time, set b_r to 1, and reset the b_r value to the noted down value.

- The AT LED lights while reviewing the **b** r value when set to 2.
- Do not set to 2 when normal control is not being carried out due to inappropriate tuning of the PID constant, for example.

 Also, hunting is more likely to occur when **b** r is set to a large value on quick-starting lines. Set the **b** r value to 0 then to 2.
- On heat/cool models, smart-tuning does not function.

● *そ* ら (2 degrees of freedom)

- 0: 2 degrees of freedom is disabled.
- 1: 2 degrees of freedom is enabled.
- 2 degrees of freedom is a function for improving the response to disturbance during setup without losing conventional characteristics at rise (or fall).

When set to 1, optimum PID constants can be set individually for inhibiting disturbance in addition to conventional the PID constant.


These constants are set automatically during AT execution, and is memorized. They can also be set and changed independently. In particular, on 2G output models, suppressing changes in MV to lessen the frequency of motor operation during setup, and manually applying weak PID differential for inhibiting disturbance to lengthen service life, for example, proves effective.

- These PID are switched automatically by applying fuzzy rules on the slope between deviation and PV.
- When ! (reset time) is set to 0, control is carried out without integration in all states regardless of the setting value of #! (disturbance inhibit reset time).
- On heat/cool models, 2 degrees of freedom does not function.

dlff

· ON-OFF control differential

When P is set to 0.0 on both 0D and 6D output models, control is set to ON-OFF control, and operational period at that time is set.




Position-proportional control dead zone

On 2G output models, a dead zone between the motor open and motor closed positions is set.

As a general guideline, the minimum value is the value where this dead zone changes to stop motor hunting once a fixed value set to manual output is being output.

If this value is set without any margin, the motor will be operating at all times, which will considerably shorten its service life.


The factory setting is 5 %. Use this as a guideline, and take the control results and motor service life into consideration when setting the dead zone.




Heat-cool control dead zone

-100 to +50 %


Heat-cool control is calculated as follows:

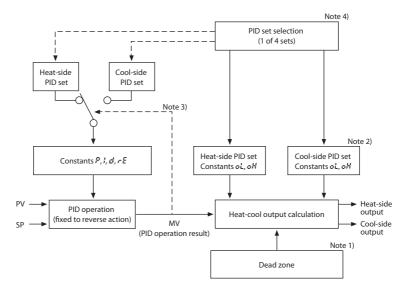

Note 1) On heat/cool models, this sets how the relationship between heat-side output and cool-side output should be processed with respect to the MV resulting from PID operation.

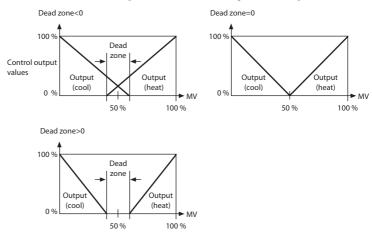

Note 2) Constants of and off function as follows:




Note 3) When MV \geq 50 %, the heat-side PID set is switched to. When MV < 50 %, the cool-side PID set is switched to.

Note 4) PID set selection is carried out by setting value and external switch.

- ರೆ υ ಓ (3-position control deviation lower limit)
- 💆 🗸 '⅓ (3-position control deviation upper limit)
- #3 -1 (3-position control lower limit hysteresis)
- #3 -# (3-position control upper limit hysteresis)

In 3-position control, control is carried out in the following three states in the RUN, HOLD, FAST and END modes:

State	Heat-side Output	Cool-side Output	MV
1	OFF (0.0 %)	ON (100.0 %)	0.0 %
2	OFF (0.0 %)	OFF (0.0 %)	50.0 %
3	ON (100.0 %)	OFF (0.0 %)	100.0 %



! Handling Precautions

 Even in 3-position control, output is time-proportional in the READY mode. This is set in setup data \$\mathcal{L}\$ (MV (heat) in READY mode) and \$\mathcal{L}\$ (MV (cool) in READY mode).

When connecting an actuator that may burn by time-proportional output, set setup data \mathcal{E} 15 and \mathcal{E} 17 so that output in the READY mode is 0 %.

● fi.- € (motor control method selection)

- 0: MFB control (conventional) + estimated position control
- 1: MFB control (conventional) only
- 2: Estimated position control only
- 0: MFB control (conventional) + estimated position control
 - When MFB (<u>M</u>otor <u>F</u>eed <u>B</u>ack) input is normal, the motor position is controlled by the actually measured MFB.
 - When MFB input is in error, the motor position is controlled by an estimated MFB value. This state is referred to as "estimated position control state."

For example, when the motor rotates at a position where the feed-back potentiometer has deteriorated, MFB input changes suddenly. This sudden change is detected as an error, and the correct MFB position is estimated. The motor position is also controlled by the estimated MFB value when the MFB disconnected alarm has occurred.

 In the estimated position control state, an error will inevitably occur between the actual motor valve opening and estimated MFB value.

So, set the closed-side relay to ON at all times when output (MV) ≤ 0.0 %, and the open-side relay to ON at all times when MV ≥ 100.0 % to set the motor to a fully-open or fully-closed state to compensate this error.

However, note that this error is not compensated when MV is limited to within 0.1 to 99.9 % by the output limiter, or when MV is 0.0 % or less or 100 % or more due to the control state.

- The following are probable causes when estimated position control is likely to be carried out:
 - Defective motor valve opening adjustment
 - Deteriorated feedback potentiometer, insufficient resolution
 - Defective MFB wiring.

• 1: MFB control (conventional) only

- When this setting is used, conventional MFB control is carried out. When the MFB disconnected alarm occurs, the MFB value is regarded as 150.0 %, and the closed-side relay is ON at all times.
- 2: Estimated position control only
 - When this setting is used, control is in the estimated position control state at all times, and the motor position is controlled by the estimated MFB value regardless of the state of MFB wiring.
 - When this setting is used, enter the correct Ωk item.

- The MFB disconnected alarm does not occur.
- The error between actual motor valve opening and estimated MFB value is compensated by forcibly continuing motor operation in the closed or open directions when MV is 0.0 % and 100 %.

● #1.-# & (motor valve opening automatic adjustment)

- 0: Adjustment disabled
- 1: Adjustment enabled

This parameter automatically measures the motor fully closed position, fully open position, and close-open times. The results of calculation are automatically written to $\Omega_1 - \xi L_1 \Omega_2 - \varrho P$ and $\Omega_1 - \xi L_2 \Omega_3 - \varrho P$.

- · Adjustment Method and Motor Functions
 - 1. Set #1.- 5 to 0 or 1.
 - Set n.-R to 1, and press ENT.
 If set to 1 already, press twice to enter automatic adjustment.
 - 3. Automatic adjustment is carried out.
 - CR.CL is displayed on the upper display, and the closed-side relay turns ON.
 - The motor operates to the closed side, and the MFB count value is displayed on the lower display. When the count has stabilized, fully closed adjustment is completed, and the count value is written to \$\textit{R}_1.-\textit{C}_k\$.
 - *CR.₀P* is displayed on the upper display, and the closed-side relay turns ON.
 - The motor operates to the open side, and the MFB count value is displayed on the lower display. When the count has stabilized, fully open adjustment is completed, and the count value is written to \$\Omega\$. \omega P.

The time it took from fully closed to fully open is written to Ω .- ξ . However, note that if this time is 240.0 s or more, the time is taken as 240.0 s.

- When all adjustments are completed, the controller returns to the basic display state.
- 4. To cancel automatic adjustment, press DISP.

 When automatic adjustment begins, you cannot press any keys other than DISP.

is used for canceling adjustment.

The following instances are regarded as errors. In these instances, the factory settings are returned to, and \mathcal{BLIE} is displayed. The \mathcal{BLIE} display can be cleared only when auto-

matic re-adjustment has ended successfully or when the power has been reset.

- Fully closed count fully open count < 500
- Fully closed count > fully open count
- Time from fully closed to fully open is less than 5 s
- MFB disconnected alarm (# L 10, # L 11) occurs continuously or frequently
- The time taken for the MFB count to stabilize exceeds 5 min
- Faulty wiring of MFB or switching relay (However, note that all faulty wiring cannot be detected as an error.)

● \vec{n} . - $\not\succeq$ (motor valve opening adjustment fully open/closed time)

When Ω_{i} - Γ_{i} is set to 2, the set time is taken as the base for all operations. Enter the time correctly in 0.1 s units.

■ Event configuration data settings "₺ "

No.	Item Code	ltem	Factory Setting	User Setting	Setting
1	EE!	Event 1 type	0		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
2	Edi	Event 1 standby	0		 0: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
3	H451	Event 1 hysteresis	5		0 to 200 U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
4	dLi	Event 1 ON delay time	0		0 to 3600 s

No.	Item Code	ltem	Factory Setting	User Setting	Setting
5	EFS	Event 2 type	0		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
6	E & ?	Event 2 standby	0		 0: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
7	#452	Event 2 hysteresis	5		0 to 200 U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
8	d L 2	Event 2 ON delay time	0		0 to 3600 s

No.	Item Code	ltem	Factory Setting	User Setting	Setting
9	E & 3	Event 3 type	0		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1 s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
10	E d 3	Event 3 standby	0		 O: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
11	H453	Event 3 hysteresis	5		0 to 200 U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
12	d L 3	Event 3 ON delay time	0		0 to 3600 s
13	£E	Time event type	0		 T1 to T5 are all time events. T1 is a segment No. event. T2 to T5 are time events. T1 and T2 are segment No. events. T3 to T5 are time events. T1 to T3 are segment No. events. T4 and T5 are time events. T1 to T4 are segment No. events. T5 is a time event. All T1 to T5 are segment No. events. [Note] On models not supporting time events, " " is displayed and setting is not possible. Settings can be changed only in the READY mode.
14	-	Unused			
15	-	Unused			
16	-	Unused			

No.	Item Code	ltem	Factory Setting	User Setting	Setting
17	E & . & 1	T1 event type	50		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
18	Ed. E1	T1 event standby	0		 O: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
19	MA.F1	T1 event hysteresis	5		0 to 200U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
20	dL.El	T1 event ON delay time	0		0 to 3600 s

No.	Item Code	ltem	Factory Setting	User Setting	Setting
21	E & . & 2	T2 event type	50		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
22	Ed. t 2	T2 event standby	0		 O: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
23	¥4.F5	T2 event hysteresis	5		0 to 200 U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
24	dL.E2	T2 event ON delay time	0		0 to 3600 s

No.	Item Code	ltem	Factory Setting	User Setting	Setting
25	E & . & 3	T3 event type	50		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
26	Ed. £3	T3 event standby	0		 O: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
27	M4.E3	T3 event hysteresis	5		0 to 200U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
28	dL.E3	T3 event ON delay time	0		0 to 3600 s

No.	Item Code	ltem	Factory Setting	User Setting	Setting
29	E Ł. Ł Y	T4 event type	50		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.


No.	Item Code	ltem	Factory Setting	User Setting	Setting
30	Ed. E 4	T4 event standby	0		 O: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
31	# 4.54	T4 event hysteresis	5		0 to 200U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
32	dL.E4	T4 event ON delay time	0		0 to 3600 s

No.	Item Code	ltem	Factory Setting	User Setting	Setting
33	E & . & 5	T5 event type	50		PV type events 0: PV direct 1: PV reverse 2: Deviation direct 3: Deviation reverse 4: Absolute value deviation1 direct 5: Absolute value deviation1 reverse 6: SP direct 7: SP reverse 8: MV direct 9: MV reverse 10: MFB direct 11: MFB reverse 12 to 49: NOP Time events 50: Time event 51 to 99: NOP Controller status events 100: RUN+HOLD+FAST+END 101: READY 102: RUN 103: HOLD 104: FAST 105: END 106: G.Soak standby 107: MANUAL 108: Auto-tuning executing 109: Constant-value operation 110: MFB estimated position control 111: Sum of all alarms 112: PV range alarm 113: Controller alarm 114: Low battery voltage 115: Console setup in progress 116: Loader setup in progress 117: ADV (ON time 1 s) 118 to 124: NOP 125: Program end 126 to 129: NOP [Note] Setting can be changed only in READY mode.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
34	Ed. £5	T5 event standby	0		 O: Standby OFF 1: Standby ON [Note] The controller stands by after power is restored and in the READY mode. When the event type setting is ≥ 50, "" is displayed and setting is not possible.
35	M4.E5	T5 event hysteresis	5		0 to 200 U (when event type is neither MV nor MFB) 0.0 to 20.0 % (when event type is MV or MFB) [Note] When the event type setting is ≥ 50, "" is displayed and setting is not possible.
36	dL.ES	T5 event ON delay time	0		0 to 3600 s

■ Description of event configuration data

- £ ♂ { to ¾ (event 1 to 3 standby)
- £ ♂. と (to 5 (T1 to T5 event standby)
 - 0: Standby OFF
 - 1: Standby ON
 - When set to standby ON, event output becomes OFF if the controller is in the standby state even if the condition for turning event output ON is satisfied.
 - The controller enters the standby state in the following instances:
 - When in the READY mode
 - When shifting from the READY to the RUN mode
 - When the power is turned ON
 - The standby state is canceled in the following instances:
 - When the condition for turning event output OFF (not including the hysteresis period) is satisfied in one of the RUN, HOLD or FAST modes
 - When set to standby OFF
 - In the below example, PV event direct, operating point 500 °C, hysteresis 10 °C and standby ON are set. When the mode changes from READY to the RUN mode at PV 550 °C, the controller enters the standby state, so event output is turned OFF.
 - Standby functions only when the event type is set to PV type event, and does not function when set to time event type or controller status type.
- & L to 3 (event 1 to 3 ON delay time)
- & L. & (to 5 (T1 to 5 event ON delay time)
 - The ON delay time is processed after completing all processes up to event output standby ON/OFF. Event output is turned ON when more than the ON delay time has elapsed with the condition for turning event output ON satisfied.
 - When the event type is set to ADV, the ON delay function does not operate whatever value is set as the ON delay time.
 - ON delay time is processed as follows.



■ PID parameter settings "♬ ; ♂"

No.	Item Code	ltem	Factory Setting	User Setting	Setting
1	P -1	Proportional band (PID set 1)	100.0		P: 0.0 to 999.9 % (0D, 6D output models) 0.0 enables ON-OFF control.
2	1-1	Reset time (PID set 1)	0		0.1 to 999.9 % (models other than 0D and 6D output models)
3	d -1	Rate time (PID set 1)	0		0 disables integrating action.
4	oL-1	MV lower limit (PID set 1)	0.0		0 disables derivative action.
5	o X -1	MV upper limit (PID set 1)	100.0		o 光: MV lower limit to 110.0 % r E: 0.0 to 100.0 % br: 0 to 30
6	r E -1	Manual reset (PID set 1)	50.0		0 disables the brake function.
7	dr -1	Brake (PID set 1)	0		៨៖ : 1 to 3600 s ៨៨: 0 to 1200
8	dP-1	Disturbance inhibit proportional band (PID set 1)	100.0		0 disables derivative action. [Note]
9	d1-1	Disturbance inhibit reset time (PID set 1)	120		• On 0D and 6D output models, when P setting is 0.0, ON-OFF control is enabled. "" is displayed for items I, d, o L, o H, r E, d P, d I and d d, and
10	dd -1	Disturbance inhibit rate time (PID set 1)	0		setting is not possible. • When variable parameter ℜ ℂ setting is 2 (estimated position control only) on
11	P-2	Proportional band (PID set 2)	100.0		2G output models, "– – – " is displayed for items & L and & H, and setting is not
12	1-2	Reset time (PID set 2)	0		possible. • When ; setting is not 0, "" is
13	d -2	Rate time (PID set 2)	0		displayed for $r \in E$ and setting is not possible.
14	oL-2	MV lower limit (PID set 2)	0.0		• When variable parameter 5 & setting is 0 (smart-tuning disabled), ""
15	o X - 2	MV upper limit (PID set 2)	100.0		is displayed for br and setting is not possible. • When variable parameter 2 P 1 d setting is 0 (2 degrees of freedom PID disabled), the items for d P, d 1, d d are not displayed.
16	r E -2	Manual reset (PID set 2)	50.0		
17	br-2	Brake (PID set 2)	0		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
18	dP-2	Disturbance inhibit proportional band (PID set 2)	100.0		 On heat/cool models, the set No. of the PID parameter used for the PID set No. is as follows:
19	d;-2	Disturbance inhibit reset time (PID set 2)	120		PID Set No. Designated in the Program or Zone No. PID Set According to Automatic (heat) (cool) Selection of PID Set
20	dd -2	Disturbance inhibit	0		1 1 2
		rate time (PID set 2)			2 3 4
21	P-3	Proportional band	100.0		3 5 6
		(PID set 3)			4 7 8
22	1-3	Reset time (PID set 3)	0		• When variable parameter 2 P 1 d setting is 1 (2 degrees of freedom
23	d -3	Rate time (PID set 3)	0		PID enabled), the parameter (P, 1, d) ideal for control when SP changes and
24	oL-3	MV lower limit (PID set 3)	0.0		the parameter (d P, d l, d d) ideal for inhibiting disturbance during settling are automatically switched.
25	o X -3	MV upper limit (PID set 3)	100.0		 Decreasing the proportional band (P, d P) value improves controllability.
26	r E -3	Manual reset (PID set 3)	50.0		However, it also makes overshoot or hunting more likely to occur.
27	br -3	Brake (PID set 3)	0		Use of the controller on a motor or actuator shortens the controller's life.
28	dP-3	Disturbance inhibit proportional band (PID set 3)	100.0		Do not set the proportional band (P, & P) to too small a value. Decreasing the reset time (も, なり) im-
29	d:-3	Disturbance inhibit reset time (PID set 3)	120		proves trackability. However, it also makes cycling caused by integrating action more likely to occur. When is setting is 0, integrating operation for inhibiting disturbance also functions.
30	dd-3	Disturbance inhibit rate time (PID set 3)	0		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
31	p -4	Proportional band (PID set 4)	100.0		• Increasing the rate time (ಶೆ, ಶೆ ಶೆ) allows overshoot to be inhibited more easily.
32	1-4	Reset time (PID set 4)	0		However, it also make hunting more likely to occur as the controller reacts to minute changes in PV.
33	d -4	Rate time (PID set 4)	0		In a temperature control system, set- ting the rate time to 1/3 to 1/4 of the in-
34	06-4	MV lower limit (PID set 4)	0.0		tegrating time is generally considered to be appropriate. In a pressure or flow
35	o X - Y	MV upper limit (PID set 4)	100.0		rate control system, derivative action causes hunting.
36	r E -4	Manual reset (PID set 4)	50.0		Either set the d setting to 0.0 to disable derivative action, or decrease the setting so that derivative action is almost
37	br -4	Brake (PID set 4)	0		negligible. The latter solution is more frequently adopted.
38	dP-4	Disturbance inhibit proportional band (PID set 4)	100.0		・The MV upper and lower limits (っし, っぱ) function as integrating limits. When the MV reaches the upper or
39	d:-4	Disturbance inhibit reset time (PID set 4)	120		lower limit, integration no longer func- tions. This prevents reset wind-up that occurs when the PV has not risen for a
40	dd -4	Disturbance inhibit rate time (PID set 4)	0		 Iong time. Manual reset (¬ Ε) is a setting for eliminating offset that occurs during
41	P-5	Proportional band (PID set 5)	100.0		proportional action (integrated action disabled). For manual reset, set the MV ideal for deviation 0.
42	1-5	Reset time (PID set 5)	0		 Increasing the brake (br) value increases the overshoot inhibit effect.
43	d -5	Rate time (PID set 5)	0		However, it also lengthens the rise time.
44	oL-5	MV lower limit (PID set 5)	0.0		
45	o X -5	MV upper limit (PID set 5)	100.0		
46	r E -5	Manual reset (PID set 5)	50.0		
47	br -5	Brake (PID set 5)	0		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
48	dP-5	Disturbance inhibit proportional band (PID set 5)	100.0		
49	d:-5	Disturbance inhibit reset time (PID set 5)	120		
50	dd-5	Disturbance inhibit rate time (PID set 5)	0		
51	P-6	Proportional band (PID set 6)	100.0		
52	1-6	Reset time (PID set 6)	0		
53	d -6	Rate time (PID set 6)	0		
54	οL-6	MV lower limit (PID set 6)	0.0		
55	o X - 6	MV upper limit (PID set 6)	100.0		
56	r E -6	Manual reset (PID set 6)	50.0		
57	br -8	Brake (PID set 6)	0		
58	dP-6	Disturbance inhibit proportional band (PID set 6)	100.0		
59	d:-6	Disturbance inhibit reset time (PID set 6)	120		
60	dd -6	Disturbance inhibit rate time (PID set 6)	0		
61	P -7	Proportional band (PID set 7)	100.0		
62	1-7	Reset time (PID set 7)	0		
63	d -7	Rate time (PID set 7)	0		
64	oL-7	MV lower limit (PID set 7)	0.0		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
65	o H -7	MV upper limit (PID set 7)	100.0		
66	r E -7	Manual reset (PID set 7)	50.0		
67	br -7	Brake (PID set 7)	0		
68	dP-7	Disturbance inhibit proportional band (PID set 7)	100.0		
69	d)-1	Disturbance inhibit reset time (PID set 7)	120		
70	dd-7	Disturbance inhibit rate time (PID set 7)	0		
71	P-8	Proportional band (PID set 8)	100.0		
72	<i>1-8</i>	Reset time (PID set 8)	0		
73	d -8	Rate time (PID set 8)	0		
74	oL-8	MV lower limit (PID set 8)	0.0		
75	o X -8	MV upper limit (PID set 8)	100.0		
76	r E -8	Manual reset (PID set 8)	50.0		
77	br -8	Brake (PID set 8)	0		
78	dP-8	Disturbance inhibit proportional band (PID set 8)	100.0		
79	d¦-8	Disturbance inhibit reset time (PID set 8)	120		
80	dd-8	Disturbance inhibit rate time (PID set 8)	0		

■ Setup data settings "5 € ₺"

No.	Item Code	ltem	Factory Setting	User Setting	Setting
1	C01	Control action (CH1)	0		 0: Reverse action (heat) 1: Direct action (cool) [Note] On heat/cool models, "" is displayed and setting is not possible. On other models, external switch input can invert direct/ reverse action on the setting of £ 0 f.
2	C 0 2	Input 1 temperature unit	0		0: °C 1: °F [Note] When the input 1 range type is linear, "" is displayed and setting is not possible.
3	C03	Input 1 range type	0		0 to 73 0 to 20: Thermocouple 32 to 40, 48 to 56: Resistance temperature detector 64 to 73: Linear (dc current, dc voltage) [Note] Refer to the input 1 range table. Operation according to a setting not listed in this table is not fixed.
4	C 0 Y	Input 1 range decimal point position	Not fixed		0 to 3 [Note] When the input 1 range type is non- linear, "" is displayed and setting is not possible. When the input 1 range type is changed from nonlinear to linear, the original non-linear range values remain.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
5	C 0 5	Input 1 range lower limit (0 %)	Not fixed		-1999 to +9999 U [Note] When the input 1 range type is nonlinear, "" is displayed and setting is not possible. When the input 1 range type is
6	C08	Input 1 range upper limit (100 %)	Not fixed		changed from nonlinear to linear, the original non-linear range values remain. The relationship between the analog inputs and readout values can be inverted by inverting the upper and lower limit values.
7	C07	Input 1 root extraction dropout	0.0		0.0 to 10.0 % (ratio to input range) [Note] 0.0 disables square root extraction. When the input 1 range type is non- linear, " " is displayed and setting is not possible.
8	C08	Input 1 linearization table approximation	0		O: Disabled I: Enabled [Note] Table data setting (R, b) is used for the linearization table.
9	C09	SP1 lower limit	0 %FS		-1999 to upper limit U [Note] Changing the input 1 range has no effect on the range. However, note that a general reset sets the range to the 0 %FS value of the input 1 range.
10	C 10	SP1 upper limit	100 %FS		Lower limit to 9999 U [Note] Changing the input 1 range has no effect on the range. However, note that a general reset sets the range to the 0 %FS value of the input 1 range.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
11	E 1 1	PID set autoswitching (CH1)	0		O: OFF (PID set segment designation) 1: ON [Note] When set to 1, the PID set items in the program are invalid. The switching point for auto-switching is set in variable parameters (£ P . 11 to £ P . 17).
12	C 12	MV setting at input 1 over-range (MV1)	0		0: OFF 1: ON
13	C 13	MV at input 1 over- range (MV1)	0		-10 to +110 % [Note] When & & setting is 0, "" is displayed and setting is not possible.
14	C 14	Manual change mode (MV1)	0		0: Bump-less 1: Preset [Note] When the programmer function is selected, operation is bump-less regardless of the setting of じげん
15	C 15	Preset manual value (MV1)	0		-10 to +110 % [Note] When & !4 setting is 0, "" is displayed and setting is not possible.
16	C 18	MV in READY mode (MV1, MV1 heat-cool output)	0		-10 to +110 % [Note] This setting is valid even if the programmer function is selected by € 18 setting. On heat/cool models, this setting functions as the MV (heat) setting in the READY mode.
17	C 17	MV (cool) in READY mode (MV1 heatcool output)	0		-10 to +110% [Note] When the model is not a heat/cool model, "" is displayed and setting is not possible.
18	C 18	Main output type (CH1)	0		O: MV1 output (controller function) SP1 output (programmer function) [Note] When the model is not a 5G output model, "" is displayed and setting is not possible.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
19	C 19	SP1 main output lower limit (4 mA set- ting)	0 U		-1999 to +9999 U [Note] When the model is not a 5G output model and 8 setting is 0 on a 5G output put model, "" is displayed and
20	C 2 0	SP1 main output upper limit (20 mA setting)	1000 U		setting is not possible. The relationship between the analog outputs and SP1 can be inverted by inverting the upper and lower limit values.
21	681	Unused	-		[Note]
22	683	Unused	_		"" is displayed and setting is not possible.
23	683	Unused	-		possible.
24	684	Unused	-		
25	685	Unused	_		
26	688	Unused	_		
27	687	Unused	_		
28	658	Unused	_		
29	689	Unused	-		
30	C 3 0	Unused	-		
31	631	Unused	-		
32	635	Unused	-		
33	033	Unused	_		
34	634	Unused	_		
35	035	Unused	_		
36	C 3 6	Unused	-		
37	C 37	Unused	-		
38	C 3 8	Unused	-		
39	639	Unused	-		
40	C40	Unused	-		
41	[41	Unused	-		
42	648	Unused	-		
43	C43	Unused	-		
44	[44	Unused	-		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
45	C45	3-position control	0		 0: 3-position control disabled 1: 3-position control enabled [Note] On models not supporting 3D output, "" is displayed and setting is not possible.
46	C 4 6	Auxiliary output 1 type	0		O: PV1 1: SP1 2: Deviation1 3: MV1 4 to 7: NOP 8: MFB 9 to 11: NOP [Note] On models not supporting auxiliary output 1, "" is displayed and setting is not possible. When set to NOP (or to MFB on models other than 2G output models), output is fixed to 4 mA. When set to SP or deviation, output in the READY mode is fixed to 4 mA.
47	647	Auxiliary output 1 lower limit (4 mA)	0		-1999 to +9999 U -199.9 to +999.9 % [Note] When the auxiliary output type is MV
48	C48	Auxiliary output 1 upper limit (20 mA)	1000		or MFB, the unit is %. Otherwise, the unit is U.
49	C 4 9	Auxiliary output 2 type	0		O: PV1 1: SP1 2: Deviation1 3: MV1 4 to 7: NOP 8: MFB 9 to 11: NOP [Note] When auxiliary output 2 is not supported, "" is displayed and setting is not possible. When set to NOP (or to MFB on models other than 2G output models), output is fixed to 4 mA. When set to SP or deviation, output in the READY mode is fixed to 4 mA.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
50	C 5 0	Auxiliary output 2 lower limit (4 mA)	0		-1999 to +9999 U -199.9 to +999.9 % [Note]
51	C 5 1	Auxiliary output 2 lower limit (20 mA)	1000		When the auxiliary output type is MV or MFB, the unit is %. Otherwise, the unit is U.
52	658	External switch input RSW5 assignment	0		0: NOP 1: Fast operation
53	C 5 3	External switch input RSW6 assignment	0		2: PV start 3: NOP
54	C 5 4	External switch input RSW7 assignment	0		4: AT start/stop 5: NOP 6: Manual/auto operation 7: Cancel G.Soak by OR conditions 8: Cancel G.Soak by AND conditions 9: Direct/reverse action inversion 10 to 20: NOP [Note] On external switch 4-input models, "-

No.	Item Code	ltem	Factory Setting	User Setting	Setting
55	(55	each assignment item 1	1000		1000 to 5000 [Note]
56	C 5 6	ent assignment item 2	1000		To set the No., add the No. of the item to be assigned to PARA to the following
57	657	eran assignment item 3	1000		values for the setting group contain- ing that item. • 1000: Constant-value operation data
58	C 5 8	eran assignment item 4	1000		1500: PID parameter 2500: Variable parameter
59	(59	eran assignment item 5	1000		• 3500: Event configuration data • 4000: Table data
60	C 6 0	eran assignment item 6	1000		4500: Setup data Assignments to which a nonexistent
61	C 6 1	eran assignment item 7	1000		No. have been set are invalid.
62	662	eran assignment item 8	1000		
63	C63	Operation comple- tion state	0		0: READY 1: END
64	664	Program time unit	0		0: h/min 1: min/s 2: 0.1s
65	C65	Time display	0		O: Remaining segment time 1: Total operation time [Note] The total operation time returns to 0 in the READY mode.
66	C 6 6	PV display	0		O: ON 1: OFF 2: ON 3: OFF [Note] Settings 0 and 2, and 1 and 3 mean the same, respectively.
67	C 6 7	Alarm display			O: Display ON 1: Display OFF [Note] Even when set to 1, alarm-related events do not operate.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
68	C68	Programming item: Events 1 to 3	0		0: Display ON 1: Display OFF
69	C 6 9	Programming item: Time events 1 to 5	0		[Note] Even if each of the items is set to 1, the function operates if program data is
70	C70	Programming item: PID set, G.Soak	0		set. On models not supporting time
71	671	Programming item: PV start, cycle, pat- tern link	0		events, time event items are not displayed in program settings regardless of the number of \mathcal{E} \mathcal{E} settings.
72	C72	Cold junction compensation	0		O: Compensated internally Compensated externally [Note] When the input 1 range type is other than a thermocouple, "" is displayed and setting is not possible.
73	C13	Input operation at input 1 disconnec- tion	0		O: Upscale Downscale [Note] This setting is valid when the input 1 range type is thermocouple, resistance temperature detector or linear (mV series).
74	674	Voltage timeproportional output system	0		O: Input ON again enabled within time-proportional cycle 1: Input ON again disabled within time-proportional cycle [Note] When both of outputs 1 and 2 are not voltage timeproportional outputs, "" is displayed and setting is not possible.
75	C75	Output 1 selection	Not fixed		0: Current output 1: Voltage output [Note] When each of the outputs are relay output, positionproportional out- put, auxiliary output or output is no mounted, "" is displayed and setting is not possible. Factory setting is 1 if outputs are vol age output according to output type Otherwise, the setting is 0.
76	C76	Output 2 selection	Not fixed		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
77	677	Unused	-		[Note] "" is displayed and setting is not possible.
78	C78	Voltage output 1 adjustment	15		2 to 22 mA [Note] When each of the outputs are other
79	C79	Voltage output 2 adjustment	15		than voltage output, "– – – " is dis- played and setting is not possible. Normally, use the factory setting.
80	C80	Unused	_		[Note] "" is displayed and setting is not possible.
81	C81	Input 1 burnout current (expansion setting 1)	0		O: Burnout current ON I: Burnout current OFF [Note] Normally set to 0. Set to 1 when infra-red thermocouple RT50 is connected to input 1.
82	683	Expansion setting 2	0		O: Expansion disabled I: Expansion enabled [Note] This setting is for service use only.
83	C 8 3	Unused	-		[Note] "" is displayed and setting is not possible.
84	C84	Station address	0		0 to 127 [Note] On models not supporting communications, "" is displayed and setting is not possible. 0 disables communication.
85	C85	Transmission rate/ Character format	0		 0: 9600 bps/even parity, 1 stop bit 1: 9600 bps/no parity, 2 stop bits 2: 4800 bps/even parity, 1 stop bit 3: 4800 bps/no parity, 2 stop bits [Note] On models not supporting communications, "" is displayed and setting is not possible.


No.	Item Code	ltem	Factory Setting	User Setting	Setting
86	686	Unused	-		[Note]
87	687	Unused	-		"" is displayed and setting is not
88	688	Unused	-		possible.
89	689	Unused	-		
90	C90	Special functions	0		[Note] Normally set to "0".
91	C91	Input 1 zener barrier adjustment	-		[Note] "" is displayed and setting is not possible.
92	(92	Unused	-		[Note] "" is displayed and setting is not possible.
93	(93	CPL communications port selection	0		0: Add-on terminal 1 to 15: Loader jack (communications address)
94	(94	PID type	0		0: Improved 1: Compatible with DCP200
95	(95	Unused	-		[Note] "" is displayed and setting is not possible.
96	(98	Hardware type 1	_		[Note]
97	697	Hardware type 2	-		This setting is for service use only, and
98	(98	ROM ID	-		can only be verified.
99	(99	ROM item	-		
100	600	ROM revision	-		

■ Description of setup data settings

- £ 87 (input 1 square root extraction dropout)
 - Generally, the differential pressure detected by an orifice on a differential pressure type flowmeter, is proportional to the square of the flowrate. For this reason, square root extraction is carried out when uniform signals are required.

When input for square root extraction is the dropout value set by \mathcal{L} 0.7 or less, output from square root extraction processing can be set to 0 %.


• When **CO** is set to 1, square root extraction is not carried out.

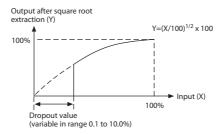

- Square root extraction is carried within the range 0.0 to 100.0 %.
 In the ranges -10.0 to 0.0 % and 100.0 to 110.0 %, regular scaling is carried out.
- £ 8 9 (SP1 lower limit)
- € 10 (SP1 upper limit)
 - This is a program setup pattern item, and functions as a limitter when setting or changing SP.
 - In the program operation mode, this functions as a limitter on the value obtained by adding the SP set to the program to the SP bias (variable parameter). The result of this operation is taken as SP.
 - This functions as a limitter when setting or changing the SP in constant-value data setup.
 - In the constant-value operation mode, this functions as a limitter on the value obtained by adding the SP set to the constant-value operation data to the SP bias (variable parameter). The result of this operation is taken as SP.

- 〔48 (auxiliary output 1 upper limit)
- £50 (auxiliary output 2 lower limit)
- £5 { (auxiliary output 2 upper limit)
 - This is the scaling setting for auxiliary output. The values of the upper limit setting and lower limit setting can also be inverted.
 - In the following example, the type is set to MV at auxiliary input
 1. 12 mA is output when MV is 100 % and 20 mA is output when
 MV is 0%. In the following figure, MV is 200 % when virtually calculated at 4 mA.

Accordingly, the setting of ζ \forall 7 and ζ \forall 8 become 200.0 and 0.0, respectively.



● £ 6 5 (time display)

- 0: Remaining segment time
- 1: Total operation time
- This selects the time display in the basic display state in the program operation mode.
- When set to 0, in the READY mode, the time setting value of the currently selected segment is displayed.
- When set to 0, in the RUN, HOLD, FAST or END modes, the remaining time for the currently executing segment is displayed after being rounded down.
 - For example, if the remaining time is 1h, 30 min, 59 s when the time unit is set to "h: min", the time display is "t.30".
- When set to 1, in the READY mode, the time display is "\$\mathcal{G} \tau \mathcal{G} \tau".
- When set to 1, in the RUN, HOLD, FAST or END modes, the time it takes to shift from the READY to the RUN mode is displayed after being round down. Also, after "99.59" the time display changes to "0.00".
 - For example, if the remaining time is 101 h, 30 min, 59 s when the total operation time is set to "h: min", the time display is "1.30".
- In the FAST mode, the time display changes according to the FAST scale if this parameter is set to either 0 or 1.

● € δ δ (PV display)


This selects PV display in the basic display state. You can select between numerical display or no display at all. The setting of this parameter does not influence PV-related input processing, PID operation, event output, auxiliary output and alarm display. Also, to eliminate PV alarm display or PV alarm event output, select the thermocouple range by the input range to short-circuit the input terminals.

● £72 (cold junction compensation)

- 0: Compensated internally
- 1: Compensated externally
- This selects how thermocouple cold junctions are to be compensated.
- When set to 1, carry out 0°C compensation by an ice box, for example.

● 【7号 (voltage time-proportional output system)

- 0: Input ON again enabled within time-proportional cycle
- 1: Input ON again disabled within time-proportional cycle
- This selects whether or not to turn output ON again if output is OFF and the results of PID calculation have changed during the time-proportional cycle (cycle time).
- The figure below shows each of these differences.

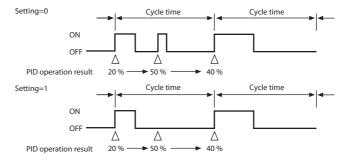

● €78 (voltage output 1 adjustment)

● ෛ (voltage output 2 adjustment)

[Constant current type]

• Input current (maximum):

Check that the input current is within the maximum allowable current or less, then the parallel connection can be made.

• Operating voltage range (input):

Check that the voltage between the terminals of the voltage pulse output is within the specified range.

This example shows the calculation for the connection of this unit and the PGM10N015.

(Note: For connection with other model number, check the specifications of each model.)


• Input current:

Since the input current is 10 mA or less, up to two units ($10 \text{ mA} \times 2 = 20 \text{ mA} < 22 \text{ mA}$ [maximum allowable current]) can be connected in parallel.

• Operating voltage range (input):

The rated voltage is DC 3.5 to 30 V, so an open terminal voltage of 25 V or less is within range.

Connection diagram



Example: Number of connectable units and settings

	Settings	6D m	nodel	5K model		
SSR to be used		C78	C79	C78	C79	
PGM10N	1 unit	10 or more	disable	10 or more	10 or more	
	2 units (parallel)*	20 or more	disable	20 or more	20 or more	
PGM10F	1 unit	12 or more	disable	12 or more	12 or more	

^{*:} It is able to connect 2 units for each heat side (setup item C78) and cool side (setup item C79), because the 5K model has heat/cool control output. Using an SSR in the 5K model, set the setup of C75 and C76 to 1(voltage output).

[Resistor type]

When driving an SSR by voltage time-proportional output, the output voltage of the controller must be within the input rated voltage (optimum ignition voltage) of the SSR.

On the DCP31, a newly developed variable output system is utilized that enables output of the optimum ignition voltage even when driving two or more SSRs.

This system sets the optimum current value on the controller so that the optimum ignition voltage with respect to the internal impedance of the SSR side can be obtained.

The following shows equivalent circuits and related formulas:

• Description of Symbols

(1) Details

Io : Setting output current of controller (setting range: 2

to 22 mA)

Vo : Maximum applied load voltage (approx. 14.7V)

VSSR': Actual input voltage to SSR

VSSR : Input rated voltage range of SSR (VSSR/MIN to


VSSR/MAX)

VSSR/MIN: Minimum input rated voltage of SSR VSSR/MAX: Maximum input rated voltage of SSR

Z : Internal impedance of SSR


V_D : Internal voltage drop of SSR (normally 1 to 2V)

(2) Equivalent circuit when one SSR is connected

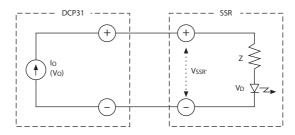

Formulas (1) and (2) formulas must be satisfied.


- (1) formula $V_{SSR/MIN} \le I_O \times Z + V_D \le V_O$
- (2) formula $V_{SSR'} < V_{SSR/MAX}$ $(V_{SSR'} = I_O \times Z + V_D)$

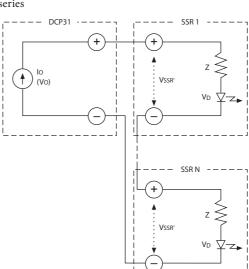

(3) Equivalent circuit when N number of SSRs are connected in series

Formulas (3) and (4) formulas must be satisfied.

- (3) formula $V_{SSR/MIN} \le I_O \times Z + V_D \le V_O/N$
- (4) formula $V_{SSR'} \le V_{SSR/MAX}$ $(V_{SSR'} = I_O \times Z + V_D)$
- (4) Equivalent circuit when N number of SSRs are connected in parallel

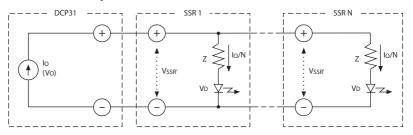

Formulas (5) and (6) formulas must be satisfied.

- (5) formula $V_{SSR/MIN} \le I_O/N \times Z + V_D \le V_O$
- (6) formula $V_{SSR'} \le V_{SSR/MAX}$ $(V_{SSR'} = I_O/N \times Z + V_D)$

(5) Example: Using Azbil Corporation's PGM ** 2A1 series

 $\begin{array}{lll} V_{SSR} & : 3 \text{ to } 6 \text{ V} \\ Z & : 260 \text{ } \Omega \pm 5 \text{ \%} \\ V_{D} & : 0.8 \text{ to } 1.3 \text{ V} \end{array}$

What value should IO be set to when connecting one PGM?
 As shown in the figure on the right, a fixed-current system is used for the voltage output of this controller. The fixed current can be calculated as follows from the input voltage range of PGM:

$$8.9 \text{ mA} \le 1 \le 17.2 \text{ mA}$$
 $I_{\text{MIN}} \times Z_{\text{MIN}} + V_{\text{D/MIN}} > 3$
 $I_{\text{MIN}} > 8.9 \text{ mA}$
 $I_{\text{MAX}} \times Z_{\text{MAX}} + V_{\text{D/MAX}} < 6$
 $I_{\text{MAX}} < 17.2 \text{ mA}$

• How many PGMs can be connected?

A current of 8.9 mA or more must flow to a single PGM. On the other hand, the maximum current of the controller is 22.0 mA. Accordingly, two PGMs can be connected in parallel. In the case of a series connection, due to the maximum output current (22.0 mA) and allowable load resistance (600 Ω), the maximum voltage that can be applied to a load becomes 13.2 V (22.0 mA × 600 Ω).

When a current of 8.9 mA flows to a PGM, the maximum voltage at both of its input terminals becomes $3.7~{\rm V}.$

$$0.0089 \times 260 \times 1.05 + 1.3 = 3.7 \text{ V}$$

Accordingly, $13.2 \div 3.7 = 3.56$, which means that three PGMs can be connected in series.

The above calculation assumes operation in the worst conditions. For example, even if four PGMs are connected in series, they should operate normally if a voltage of 3 V or more is applied to each of the PGMs in a voltage ON state.

● 〔90 (Special functions)

- Normally set to 0.
- In the case of setup 102, current output (including heat-cool output) 0 to 100 % for the control output becomes 0 to 20 mA. Note, however, that at 0 % or less, the current is 0 mA.

At output 1 mA or less, accuracy is ± 0.5 %.

• In the case of setup 103, current output (including heat-cool output) and auxiliary output 0 to 100 % for the control output becomes 0 to 20 mA. Note, however, that at 0 % or less, the current is 0 mA

At output 1 mA or less, accuracy is ± 0.5 %.


- When set to 104, the rate time (d, dd) and reset time (I, dI) settings are in units of 0.1 s.
- When set to 105, the rate time (d, dd) and reset time (I, dI) settings are in units of 0.01 s.

- When set to 113, square root extraction is used for the MV.
- When set to 114, the rate time (d, dd) and reset time (I, dI) settings are in units of 0.1 s, and square root extraction is used for the MV.
- When set to 115, the rate time (d, dd) and reset time (I, dI) settings are in units of 0.01 s, and square root extraction is used for the MV.
- When the input 1 range type (⟨ 𝒢 𝔞) is an RTD in setup 241, Zener barrier adjustment (⟨ 𝔻 𝔞) is displayed.

● 〔♀ { (Input 1 Zener barrier adjustment)

The following adjustment must be made when using a Zener barrier:

 Turn the DCP31 OFF. When you have finished mounting and wiring the DCP31, short-circuit across A and B on the terminals of the RTD.



- (2) Turn the DCP31 ON again, and set setup data $\mathcal{E} \neq \mathcal{O}$ setting to 241. For details on how to change settings, see 7-1 Parameter Setup (page 7-1).
- (3) Display the setup data [? ! setting.
- (4) Press to display the difference (A—B) between the resistances of the Zener barrier connected to leads A and B on the lower display.
- (5) Press to memorize the difference (A—B) between the resistances to the controller.
- (6) Press $\stackrel{\text{DISP}}{=}$ to set the DCP31 to the basic display state.
- (7) Turn the power OFF, and remove the short across A and B.

! Handling Precautions

- The resistance error of the Zener barrier connected to leads A and B cannot be adjusted unless it is 20 Ω or less.
- This adjustment is not required when a Zener barrier and an input other than an RTD are not used.
- Once the Zener barrier has been adjusted, compensation is carried out on the Zener barrier. When using on an RTD without a Zener barrier, re-adjust without the Zener barrier.
- Use zener barriers recommended by Azbil.
 Recommended zener barriers (for RTD)
 Product No.8907/22-02/120 (Azbil Corporation)
 Product No. NZB3-1R75 (Nakamura Electric Mfg.Co.,Ltd.)

● 〔93 (CPL communications port selection)

- When set to 0, CPL communications from the loader jack is not possible. In this case, CPL communications is possible from the addon terminal under setup £ 8 4 and £ 8 5 communications conditions if the controller model supports CPL communications.
- When set to 1 to 15, CPL communications from the loader jack is not possible, and the ₹ ♀ 3 setting becomes the CPL communications address.

Communications conditions are also 4800 bps, even parity and 1 stop bit.

In this case, CPL communications is not possible from the addon terminal even if the controller model supports CPL communications.

- Use the special cable to connect the RS-232C port on the personal computer and the loader jack on the equipment.
- When the setup \(\mathcal{C} \mathcal{O} \) (ROM revision) setting indication is 0 or 1, the setup \(\mathcal{C} \mathcal{Q} \mathcal{B} \) setting indication cannot be set at "---".

 Also, communications from the loader jack is not possible.
- For details about CPL communications, refer to DIGITRONIK CPL Communications "DCP30", Manual No. CP-UM-1760E.

■ Table data settings "₺ ₺ ₺"

No.	Item Code	ltem	Factory Setting	User Setting	Setting
1	E-A.1	Input linearization table approximation A1	0 U		-1999 to 9999 U [Note]
2	E-8.2	Input linearization table approximation A2	1000 U		When setup data £ 0 8 setting is 0, "" is displayed and setting is not
3	E-R.3	Input linearization table approximation A3	1000 U		possible. Item An displays input (X-axis) and Bn displays output (Y-axis). In principle,
4	E-R.4	Input linearization table approximation A4	1000 U		set so that A1 is \leq A2, A2 \leq A3 and so forth up to A10 \leq A11. Linear interpola-
5	Ł-R.5	Input linearization table approximation A5	1000 U		tion is carried out between points on the linearization table.
6	Ł-R.6	Input linearization table approximation A6	1000 U		The ends of the linearization table are fixed to (A0, B0) = (-2000, -2000) and
7	E-A.7	Input linearization table approximation A7	1000 U		$(A12, B12) = (10000, 10000).$ When $An \le X \le A_{n+1}$, Y becomes $(X-A_n) \times (B_{n+1}-B_n)$
8	Ł-R.8	Input linearization table approximation A8	1000 U		(An+1-An)+Bn.
9	E-8.9	Input linearization table approximation A9	1000 U		
10	Ł-R.R	Input linearization table approximation A10	1000 U		
11	£-R.b	Input linearization table approximation A11	1000 U		
12	£-b.1	Input linearization table approximation B1	0 U		
13	£-b.2	Input linearization table approximation B2	1000 U		
14	E-6.3	Input linearization table approximation B3	1000 U		
15	£-6.4	Input linearization table approximation B4	1000 U		
16	£-6.5	Input linearization table approximation B5	1000 U		
17	£-b.6	Input linearization table approximation B6	1000 U		
18	£-6.7	Input linearization table approximation B7	1000 U		
19	£-6.8	Input linearization table approximation B8	1000 U		
20	£-5.9	Input linearization table approximation B9	1000 U		


No.	Item Code	ltem	Factory Setting	User Setting	Setting
21	t-b.A	Input linearization table approximation B10	1000 U		
22	£-6.6	Input linearization table approximation B11	1000 U		

■ Description of table data settings


- £-A, /to £-A, b
- b -b, l to b -b, b
 - These settings are for the A-axis (input) and B-axis (output) settings of input 1 linearization table approximation.
 - \bullet Both ends of the linearization table are fixed at -2000 U, -2000 U and 10000 U,10000 U.

The linearization table is formed by connecting 11 points of table data settings between the two ends.


• Table data is set not by percentages but directly by engineering unit. When the range type is set to linear, set scaled values.

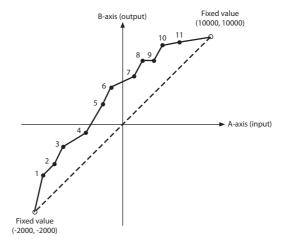

• Points on the broken-line, An and Bn, must be set so that they increase in the following way $(A_1, B_1) = (0, 0)$, $(A_2, B_2) = (100, 100)$ and so forth: If set points break this relationship, the point in conflict must be excluded to create the linearization table.

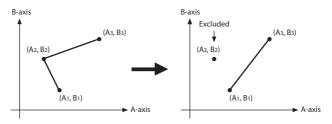

 \bullet When two equal points such as A_1 and A_2 are set for the A-axis, B_1 shall be taken as the output value.

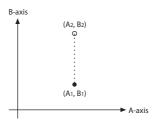

■ Constant-value operation data settings "£ n 5 ½"

No.	Item Code	ltem	Factory Setting	User Setting	Setting
1	N.odE	Operation mode	0		O: Program operation 1: Constant-value operation [Note] This setting can be changed only in the READY mode.
2	5 <i>P</i>	SP1	0		This setting can be set in the SP1 lower to upper limit range in setup data settings COP and COO .
3	SP2	Unused	0		[Note] "" is displayed and setting is not possible.
4	Eu!	Event 1 setting value	9999		-1999 to 9999 U (event type is deviation or SP) 0 to 9999 U (event type is absolute value deviation)
5	Eu2	Event 2 setting value	9999		-10.0 to 110.0 % (event type is MV or MFB) [Note] When the event configuration data
6	E v 3	Event 3 setting value	9999		type setting is ≥ 50 for each event, "– – – –" is displayed and setting is no possible.
7	-	Unused	-		[Note]
8	-	Unused	-		"" is displayed and setting is not possible.
9	-	Unused	-		possible.
10	-	Unused	_		

No.	Item Code	ltem	Factory Setting	User Setting	Setting
11	Р.	Proportional band (CH1)	100.0		P: 0.0 to 999.9 % (0D, 6D output models) 0.0 enables ON-OFF control.
12	<i>}.</i>	Reset time (CH1)	0		0.1 to 999.9 % (models other than 0D and 6D models) 3 : 0 to 3600 s
13	đ.	Rate time (CH1)	0		0 disables integral action.
14	oL.	MV lower limit (CH1)	0.0		0 disables derivative action. o に -10.0 to MV upper limit %
15	oX.	MV upper limit (CH1)	100.0		σ Η: MV lower limit to 110.0 % Γ Ε: 0.0 to 100.0 % あ
16	rE.	Manual reset (CH1)	50.0		0 disables the brake function. 로우: 0.1 to 999.9 %
17	br.	Brake (CH1)	0		៨៖ : 1 to 3600 s ៨៨: 0 to 1200
18	d₽.	Disturbance inhibit proportional band (CH1)	100.0		0 disables derivative action. [Note] On 0D and 6D output models, when
19	d }.	Disturbance inhibit reset time (CH1)	120		P setting is 0.0, ON-OFF control is enabled. " " is displayed for items
20	ದರ.	Disturbance inhibit rate time (CH1)	0		パカロトゥ H, r モ も P, d I and d d, and setting is not possible. ・ When variable parameter A C setting
21	PC	Proportional band (for cool control)	100.0		is 2 (estimated position control only) on 2G output models, "" is displayed
22	10	Reset time (CH1) (for cool control)	0		for items $o L$ and $o H$, and setting is not possible.
23	dC	Rate time (CH1) (for cool control)	0		• When i setting is not 0, "" is displayed for r E and setting is not possible.
24	oLC	MV lower limit (CH1) (for cool control)	0.0		 When variable parameter 5 & setting is 0 (smart-tuning disabled), ""
25	ο MC	MV upper limit (CH1) (for cool control)	100.0		is displayed for b r and setting is not possible.
26	r E C	Manual reset (CH1) (for cool control)	50.0		・When variable parameter さき じゅ setting is 0 (2 degrees of freedom PID disabled), the items for カア, カリ, カカ are
					not displayed. For details, see the Note for PID parameters.

No.	Item Code	ltem	Factory Setting	User Setting	Setting
27	-	Unused	-		[Note]
28	-	Unused	-		"" is displayed and setting is not
29	-	Unused	-		possible.
30	-	Unused	-		

Chapter 8. PROGRAM SETUP

8 - 1 Program Setup

Programs can be set up when the DCP31 is in the basic display state. This is sometimes referred to as "programming" in this manual.

If the DCP31 is not in the basic display state, press on to set the controller to the basic display state.

Programming can be carried out more easily if the details of the setup are entered to a program chart before starting programming.

■ How to enter program setup

Key operation

Press — + PROG in the basic display state to enter program setup. In the program setup state, the PRG LED on the console lights, and the decimal points in the program No. display and segment No. display light. However, note that the DCP31 does not enter the program setup state in the following cases:

- When in the constant-value operation mode (when constant-value operation data ᾱ, ο σ ξ setting is 1)
- When key lock is active (variable parameter $\mathcal{L} \circ \mathcal{L}$ is set to 2 or 4) Also, the setup cannot be changed even if the DCP31 is in the program setup in the following case:
- When the program is protected (variable parameter ₱ r ₺ ₵ is set to 1)

Display start items

When the DCP31 enters the program setup state, display starts from the program No. and the segment No. pattern item.

■ Selecting the program No. to set up

There are two ways of selecting the program No. to set up.

- Selecting the program No. before entering program setup
- Selecting the program No. after entering program setup

Selecting the program No. before entering program setup

To select the program No. press $\stackrel{PROG}{\longrightarrow}$ or $\stackrel{}{\checkmark}$ if the DCP31 is in the basic display state in the READY mode.

! Handling Precautions

 The program No. cannot be selected on the DCP31 when selecting the program No. by external switch inputs.
 For details, see 6 - 3 Program Selection (P. 6-8).

Selecting the program No. after entering program setup

Each press of FUNC + PROG in the program setup state increments the program No. When 19 is reached, the program No. returns to 1. Likewise, each press of V decrements the program No. When 1 is returned to, the program No. advances to 19. However, note that when setup values are being entered (setting value is blinking) during program setup, press T first to quit entry of values and then press V PROG or V V T to change the program No.

• Selecting the program No. after entering program setup (continued)


When you select the program No. by this method, the display changes to segment No.1 and the pattern item on the programming map.

This method can be used, for example, to select a program No. to set up a program other than the No. being operated in the RUN mode. It can also be used to select a program No. to set up a program other than the currently selected No. by external switch input.

■ Mode transition

The following diagram shows the transition between modes during program setup.

The following page describes the various mode transition states (1) to (16) in the diagram.

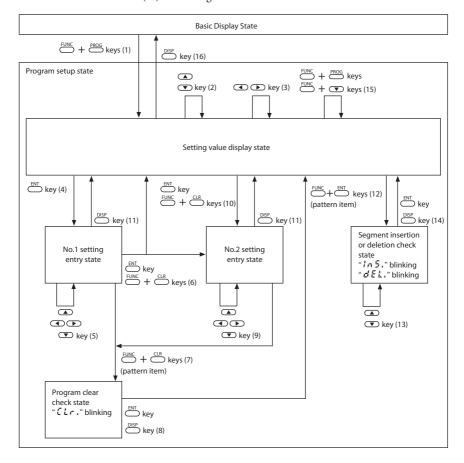

Description of mode transition states (see page 8-2.)

- (1) Program setup is entered.
- (2) Setup item on programming map is moved.
- (3) Segment on programming map is moved.
- (4) Entry of the No.1 setup is started.
- (5) No.1 setting value incremented/decremented, and blinking digit is moved.
- (6) Entry of No.1 setup is completed.

 ENT stores the value being entered to memory.

 With items having a No.2 setup, entry of the No.2 setup value is started. When the item does not have a No.2 setup, the setup display is returned to.

 When FUNC + CLR are pressed at an event/time event item, the setting for that segment is cleared.

 When FUNC + CLR are pressed at a G.Soak item, the setting for that segment is cleared.
- (7) Pressing FUNC + CLR for a pattern item causes "[Lr." to blink to confirm clearing of the program from that segment onwards. However, note that FUNC + is disabled for currently running programs.
- (8) ENT clears the program from that segment onwards.

 Olsp does not clear the program and the setting display is returned to.
- No.2 setup setting value incremented/decremented, and blinking digit moved.
- (10) Entry of No.2 setup is completed.

 ENT stores the value being entered to memory.

 When FUNC + CLR are pressed at an event/time event item, the setting for that segment is cleared.
- Entry of values currently being entered completed without being stored to memory.
- (12) When $\stackrel{\text{FUNC}}{\longrightarrow}$ + $\stackrel{\text{ENT}}{\longrightarrow}$ are pressed at a pattern item, the display changes to the segment insert/delete screen, and "In 5." is blinks.
 - However, note that $\stackrel{\text{FUNC}}{\longleftarrow}$ + $\stackrel{\text{ENT}}{\longleftarrow}$ is disabled for currently running programs.
- (13) "& E.L." displayed blinking by , and "In S." displayed blinking by ...
- (14) If the spressed at the "In 5." display, a segment is inserted.

 If the spressed, a segment is "d E L.".

 If the spressed, neither of segment delete or insert are carried out.

- (15) Press + to increment program Nos, and + to decrement program Nos.
- (16) Basic display state is returned to.

■ Programming map

As shown in the figure below, the programming map is arranged in a matrix with the segment Nos. aligned along the horizontal axis and program setup items arranged along the vertical axis. The area surrounded by thick black lines indicates the items that can be designated by segment No. and program setup item in the program setup state.

Moves to the left or right (i.e. moves segments)

Moves up or down (i.e. moves program items).

The programming map below shows an example where segments No.1 to No.10 have been set up.

	Segment No.						
Program Items	(1) No.1 setting (2) No.2 setting	1	2	 10	11	12 to 30	Remarks
Pattern	(1) SP1	100	1000	100			*1
	(2) Time	0.30	3.00	10.00			
Event 1	(1) Operating point (ON time)	1100					*2
	(2) (OFF time)						
Event 2	(1) Operating point (ON time)		30				
	(2) (OFF time)			 			
Event 3	(1) Operating point (ON time)	0.00	0.00	0.00			
	(2) (OFF time)	0.01	0.01	0.01			
Time	(1) ON time		0.00				*3
event 1	(2) OFF time		1.00	 			
Time	(1) ON time		1.00				
event 2	(2) OFF time		2.00				
Time	(1) ON time		2.00				
event 3	(2) OFF time		3.00	 			
Time	(1) ON time						
event 4	(2) OFF time			 			
Time	(1) ON time			0.00			
event 5	(2) OFF time						
PID set No. (CH1)		1	5	8			*4
G.Soak (CH1)							
G.Soak time-out							
PV start		ŧ	1	1			*5
Cycle		0	0	0			
Pattern link		0	0	0			

^{*1} The No.10 segment is the final segment. A non-set segment is shown in the No.11 segment.

^{*2} As PV type event is selected as the PV type for events 1 and 2, only the No.1 setting can be set up. As time event is selected as the event type for event 3, the No.1 and No.2 settings can be set up.


^{*3} As all time events are selected as the event type in the time event, the No.1 and No.2 settings can be set up.

^{*4} This can be set as controller functions are selected and PID or ON-OFF control is carried out.

^{*5} As these are setting items for each program, the display and setting are common for all segments.

■ Display details

The following figure shows the conventions used for displays in this manual:

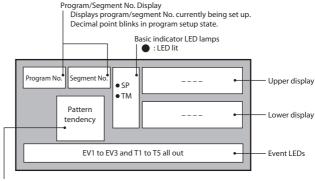

Profile Display

■ Setting up pattern items


- (1) In the setting display state, move to the pattern item of the segment to be set up on the programming map.
- (2) If you press , the upper display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , or is to set to the No.1 setup SP setting. Setting range: SP1 lower to upper limit (Set the SP1 limit in setup data £ 0 9 or £ 10.)
- (4) When you press , blinking on the upper display stops. The lower display then starts blinking to indicate start of entry to the No.2 setup.
- (5) Press , , , to set to the No.2 setup time setting.

Setting range: 0:00 to 99:59 (h:min/min:s) 0.0 to 599.9 (0.1 s)

(Select either of h:min or min: s as the time unit in setup data £ & 4. ":" is substituted by "." as it cannot be displayed.)

(6) When you press on the lower display stops.

Display

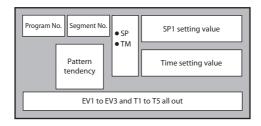

"- - - -" is displayed for the SP and time setting values in non-set

■ Setting up events 1 to 3 items

When event type is PV type event

- (1) In the setting display state, move to the event 1 to 3 items of the segment to be set up on the programming map.
- (2) If you press , the upper display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , or to set to the No.1 setup event operating point setting.


-1999 to +9999 U Setting range:

> 0 to 9999 U (in case of absolute value deviation event)

-10.0 to +110.0% (in case of MV, MFB event)

(4) When you press $\stackrel{\text{ENT}}{\longrightarrow}$, blinking on the upper display stops. (When $\stackrel{\text{FUNC}}{\longrightarrow}$ + $\stackrel{\text{CLR}}{\longrightarrow}$ are pressed, the upper display returns to "- - - -" and stops blinking.)

Display (PV type event)

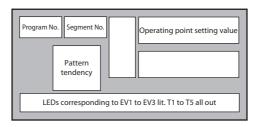

- "- - -" is displayed for the setting values in non-set segments.
- When setup data [§ 8 is set to 1, event 1 to 3 items on the programming map are skipped and not displayed.

When event type is time event

- (1) In the setting display state, move to the event 1 to 3 items of the segment to be set up on the programming map.
- (2) If you press the upper display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , or b to set to the No.1 setup ON time setting.

Setting range: 0:00 to 99:59 (h:min/min:s) 0.0 to 599.9 (0.1 s)

(Select either of h:min or min:s as the time unit in setup data £ & 4. ":" is substituted by "." as it cannot be displayed.)


- (4) When you press , blinking on the upper display stops. The lower display then starts blinking to indicate start of entry to the No.2 setup.
 - (When Func + CLR are pressed, the upper and lower displays both return to "- - -" and blinking stops.)
- (5) Press ♠, ♥, ♠ or ▶ to set to the No.2 setup ON time setting.

Setting range: ON time setting + 0:01 to 99:59 (h:min/min:s)
ON time setting + 0.1 to 599.9 (0.1 s)

(6) When you press hinking on the upper display stops.

(When hinking are pressed, the upper display returns to "- - - -" and stops blinking.)

Display (time event)

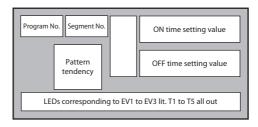

- \bullet "- - -" is displayed for the setting values in non-set segments.
- When setup data $\zeta \delta \delta$ is set to 1, event 1 to 3 items on the programming map are all skipped and not displayed.
- When the event type is set to time event and the ON time is set to 99:59, "- - -" is displayed for the ON time and the display does not blink. In this case, the OFF time cannot be set.
- When the event type is set to time event and the ON time is set higher than the time setting of the pattern item, event output at that segment is OFF. However, note that event output is ON when

the mode changes to the END mode at segments whose ON time and pattern item time are equal.

When event type is controller status event

In this case, the event item on the programming map is skipped and not displayed.

■ Setting up time events 1 to 5

- (1) In the setting display state, move to the event 1 to 5 items of the segment to be set up on the programming map.
- (2) If you press , the upper display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , or to set to the No.1 setup ON time setting.


```
Setting range: 0:00 to 99:59 (h:min/min:s) 0.0 to 599.9 (0.1 s)
```

(Select either of h:min or min:s as the time unit in setup data \mathcal{L} \mathcal{E} \mathcal{H} . ":" is substituted by "." as it cannot be displayed.)

- (4) When you press , blinking on the upper display stops. The lower display then starts blinking to indicate start of entry to the No.2 setup.
 - (When Func + CLR are pressed, the upper and lower displays both return to "- - -" and blinking stops.)
- (5) Press ▲, ▼, ◀ or ▶ to the No.2 setup ON time setting.
 - Setting range: ON time setting + 0:01 to 99:59 (h:min/min:s) ON time setting + 0.1 to 599.9 (0.1 s)
- (6) When you press ENT, blinking on the upper display stops.

 (When FUNC + CLR are pressed, the upper display returns to "- - -" and stops blinking.)

Display

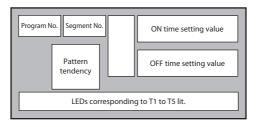

- "- - " is displayed for the setting values in non-set segments.
- On models that do not support time events, event 1 to 5 items on

the programming map are all skipped and not displayed. The table below shows time events by a \bigcirc .

Time event No.	T1	T2	Т3	T4	T5
0	0	0	0	0	0
1		0	0	0	0
2			0	0	0
3				0	0
4					0
5					

- When setup data $\mathcal{L} \mathcal{S} \mathcal{P}$ is set to 1, event 1 to 5 items on the programming map are all skipped and not displayed.
- When the ON time is set to 99:59, "- - -" is displayed as the OFF time, and the display does not blink.
- When the ON time is set higher than the time setting of the pattern item, event output at that segment is OFF. However, note that event output is ON when the mode changes to the END mode at segments whose ON time and pattern item time are equal.

When event type is PV type event

- (1) In the setting display state, move to the event 1 to 5 items of the segment to be set up on the programming map.
- (2) If you press , the upper display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , to set to the No.1 setup event operating point setting.

Setting range: -1999 to +9999 U


0 to 9999 U (in case of absolute value deviation

-10.0 to +110.0% (in case of MV, MFB event)

(4) When you press ..., blinking on the upper display stops.

(When FUNC + CLR are pressed, the upper display returns to "---" and stops blinking.)

Display (PV type event)

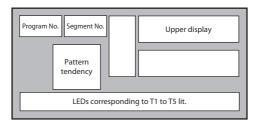

- "- - " is displayed for the setting values in non-set segments.
- When setup data $\zeta \delta \delta$ is set to 1, event 1 to 5 items on the programming map are skipped and not displayed.

When event type is a controller event

The event item on the programming map is skipped and not displayed.

Setting up PID set No. items


- (1) In the setting display state, move to the PID set No. items of the segment to be set up on the programming map.
- (2) If you press on, the lower display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , or b to set to the No.1 setup PID set No. setting.

Setting range: 0 to 8 (non heat/cool models)

0 to 4 (heat/cool models)

(4) When you press ENT, blinking on the upper display stops.

Display

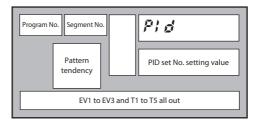


- When setup data ζ'' is set to 1 and PID set auto-switching ON is selected, the PID set No. items on the programming map are skipped and not displayed.
- On 5G output models, when setup data & 18 is set to 1 and programmer functions are selected, the PID set No. items on the programming map are skipped and not displayed.
- On 3D output models, when setup data £ 45 is set to 1 and 3-position-proportional control is selected, the PID set No. items on the programming map are skipped and not displayed.
- When setup data £ 70 is set to 1, the PID set No. items on the programming map are all skipped and not displayed.
- When the PID set No. setting is set to 0, this means that the PID set No. of the previous segment is continued. When the PID set No. setting is set to 0 in the No.1 segments, this is the same as being set to 1.

■ Setting up G.Soak (guarantee soak) items

- (1) In the setting display state, move to the G.Soak item of the segment to be set up on the programming map.
- (2) If you press on, the lower display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press (A), (V), (A) or (E) to set to the G.Soak width setting. Setting range: 0 to 1000 U
- (4) When you press ENT , blinking on the lower display stops.

 (When UNC + CLR are pressed, the lower display returns to "- - -" and blinking stops.)

Display

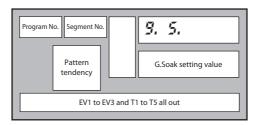

- "---" is displayed for the setting values in non-set segments. The G.Soak function does not work in non-set segments.
- When setup data (70 is set to 1, G.Soak items on the programming map are skipped and not displayed.

■ Setting up G.Soak time-out items

- (1) In the setting display state, move to the G.Soak time-out item of the segment to be set up on the programming map.
- (2) If you press on, the lower display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , to set to the G.Soak time-out width setting.


Setting range: 0:00 to 99:59 (h:min/min:s) 0.0 to 599.9 (0.1 s)

(Select either of h:min or min:s as the time unit in setup data £ 6 4. ":" is substituted by "." as it cannot be displayed.)

(4) When you press ENT, blinking on the lower display stops.

(When FUNC + CLR are pressed, the lower display returns to "---" and blinking stops.)

Display

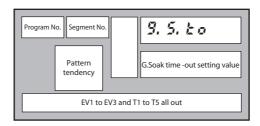

- "---" is displayed for the setting values in non-set segments.

 The G.Soak time out function does not work in non-set segments.
- When setup data (70 is set to 1, G.Soak time-out items on the programming map are skipped and not displayed.

■ Setting up PV start items

- (1) In the setting display state, move to the PV start items on the programming map.
 - (The settings are common to all segments as the PV start items are setting items provided for each program.)
- (2) If you press , the lower display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , to set to the No.1 setup PV start setting.


Setting range: 0 to 1

0: PV start disabled

1: PV start enabled

(4) When you press , blinking on the lower display stops.

Display

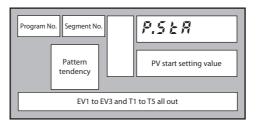


- The settings are common to all segments as the PV start items are setting items provided for each program.
- When setup data £ 7 f is set to 1, PV start items on the programming map are skipped and not displayed.

■ Setting up cycle items

- (1) In the setting display state, move to the cycle items on the programming map.
 - (The settings are common to all segments as the cycle items are setting items provided for each program.)
- (2) If you press this, the lower display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , , or to set to the No.1 setup cycle setting.
 - Setting range: 0 to 9999
- (4) When you press on the lower display stops.

Display

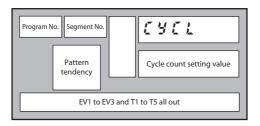

- The settings are common to all segments as the cycle items are setting items provided for each program.
- When setup data [7] is set to 1, cycle items on the programming map are skipped and not displayed.

■ Setting up pattern link items

- (1) In the setting display state, move to the pattern link items on the programming map.
 - (The settings are common to all segments as the pattern link items are setting items provided for each program.)
- (2) If you press , the lower display starts blinking to indicate start of entry to the No.1 setup.
- (3) Press , , or b to set to the No.1 setup pattern link setting.


Setting range: 0 to 19

0: Pattern link disabled

1 to 19: Pattern link destination program No.

(4) When you press ENT, blinking on the lower display stops.

Display

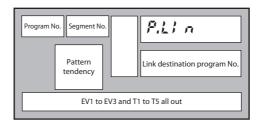


- The settings are common to all segments as the pattern link items are setting items provided for each program.
- When setup data [7] is set to 1, pattern link items on the programming map are skipped and not displayed.

■ Deleting programs

- In the setting display state, move to the pattern item of the segment from which the program is to deleted on the programming map.
 - To delete all the segments of a particular program, move to the No.1 segment.
- (2) If you press the upper display starts blinking to indicate start of entry to the No.1 setup.

 (So far, the procedure is the same as that for setting the pattern item.)
- (3) If you press CLR + CLR, the display changes to confirm clearing of the program, and "[Lr." is displayed blinking in the upper display.
- (4) Press to execute deletion of the program.
- (5) The DCP31 returns to the setting display state, both the upper and lower displays change to "- - -" to indicate no setting.

Display

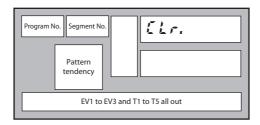


- In the above procedure, FUNC + CLR are pressed while entering values (SP setting value) to the No.1 setup. However, the program can also be deleted by pressing FUNC + CLR while entering values (time setting value) to the No.2 setup.
- "----" is displayed for the SP and time setting values in non-set segments.
- Currently running (RUN, HOLD, FAST, END) programs cannot be deleted.

Inserting and deleting segments


- (1) In the setting display state, move to the pattern item of the segment where the segment is to be inserted or deleted on the programming map.
- (2) If you press $\stackrel{\text{FUNC}}{\longrightarrow} + \stackrel{\text{CLR}}{\longrightarrow}$, the display changes to confirm insertion of the segment, and "In 5." is displayed blinking in the upper display.
- (3) If you press ____, the display changes to confirm insertion of the segment, and "! n 5." is displayed blinking in the upper display. If you press ____, the display changes to confirm deletion of the segment, and "d E L." is displayed blinking in the upper display.
- (4) If you press while "In 5." is displayed on the upper display, the segment is inserted.

 If you press while "I E L." is displayed on the upper display, the segment is deleted.
- (5) The DCP31 returns to the setting display state.

Display (inserting segment)

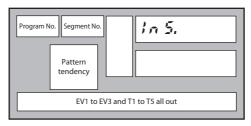

Display (deleting segment)

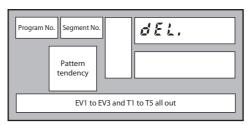

When you insert a segment, a new segment is automatically created at the currently displayed segment No., and all segment Nos. onward are incremented by one. The setting of the inserted segment is as follows:

SP setting value: Same value as original segment before the new segment was in serted

Time setting value: 0:10

Events, time events and G.Soak are not set, and the PID set No. is set to 0

- If you try to insert a segment in a program already containing 30 segments, pressing will not insert the segment.
- When you delete a segment, the next segment shifts down to the currently displayed segment No. and subsequent segment Nos. are decremented by one.
 - When you delete the last segment, the display changes to "- - -" indicating that nothing is set.
- Segments cannot be inserted or deleted from currently running (RUN, HOLD, FAST, END) programs.

8 - 2 Copying Programs


The DCP31 can be set for copying programs in the program operation READY mode in the basic display state. If the DCP31 is not in the basic display state, press $\stackrel{DISP}{\longrightarrow}$.

Operation

- (1) Set the DCP31 to the program operation READY mode. Set variable parameter $L \circ \mathcal{L}$ to either of 0, 1 or 3, and variable parameter $P \circ L \mathcal{L}$ to 0.
- (2) In the basic display state, press press or to select the copy source program No.

 However, note that the program No. cannot be selected on the console when controlling the DCP31 by external switch inputs. For details, see 6-3 Program Selection (page 6-7).
- (3) If you press + PROG, "fo Py" is displayed on the upper display, and the copy destination program No. is displayed on the lower display.
- (4) If you press or , currently non-set program Nos. are displayed blinking in order as the copy destination program No. When there are no non-set program Nos., "- - -" is displayed on the lower display.
- (5) If you press in program copy is executed, and the lower display stops blinking. To repeat the procedure, carry out steps (4) and (5) again.

Display

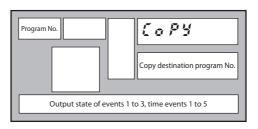

8 - 3 General Reset

A general reset can be executed when the DCP31 is in the READY AUTO mode in the basic display state. If the DCP31 is not in the basic display state, press $\stackrel{DISP}{\longrightarrow}$.

A "general reset" involves the following operations:


- Clearing all program setups for program Nos.1 to 19
- Returning parameter setups to their factory settings
- Changing the mode to the program operation READY AUTO mode

Operation

- (1) Set the DCP31 to the READY AUTO mode. Set variable parameter Lo and P r L to 0.
- (2) If you press FUNC + CLR + DISP in the basic display state, the display changes to confirm execution of general reset, and "5". r £ 5" is displayed on the upper display.
- (3) If you press ENT, the general reset is executed, and operation starts from startup at power ON.

 If you press DISP, general reset is not executed, and the DCP31 returns to the basic display state.

Display

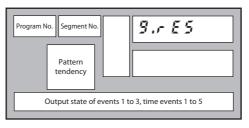

In the constant-value operation mode, all of the program No., segment No. and profiles displays are cleared.

- If a RAM backup error occurs when the power is turned ON, the display changes to confirm general reset without pressing any of the keys on the console, and "\$\mathcal{G}\$. \$\sigma \mathcal{E}\$ \$\mathcal{S}\$" is displayed in the upper display.
 - If you press , the general reset is executed. Other keys, however, cannot be operated.
- The following setup data items are not returned to their factory settings.
 - $\mathcal{L} \mathcal{O} \mathcal{E}, \mathcal{L} \mathcal{O} \mathcal{B}$: Save setting values.

However, note that if a RAM backup error occurs when the power is turned ON, ζ Q Z and ζ Q Z settings become 0.

€ 04, € 05: These are set to 0 when the input 1 range type is set to linear.

 $\mathcal{L} \mathcal{O} \mathcal{S}$: This is set to 1000 when the input 1 range type is set to linear.

Chapter 9. MAINTENANCE & TROUBLESHOOTING 9 - 1 Maintenance

Cleaning:	When removing dirt from the instrument, wipe it off with a soft and dry cloth rag. At this time, do not use detergent, any organic solvent, such as paint thinner or benzene.
Replacing parts:	Only authorized personnel are allowed to replace parts. The users should never replace parts on their own.
Replacing fuse:	Use only specified fuses when replacing fuses on the power supply wiring.

9 - 2 Self-diagnostics and Alarm Code Display

Self-diagnostics functions are incorporated into the controller. The table on the following page shows the alarm codes that are displayed as a result of self-diagnostics:

■ Self-diagnostics at power ON

PROM error

An error in the system program stored to PROM has been detected. However, note that not all PROM errors are detected. Some errors are detected as controller operation errors.

The corresponding alarm code is displayed when this error is detected.

Adjustment value error

An error in the analog I/O adjustment data stored to volatile memory has been detected.

The corresponding alarm code is displayed when this error is detected.

RAM backup error

An error in the RAM backup function has been detected. When this error is detected, a general reset is carried out. An alarm code is not displayed for this error.

Board configuration error

An error in the board configuration (combination of different PCBs) has been detected according to the catalog No. of the controller. The corresponding alarm code is displayed when this error is detected.

■ Self-diagnostics at each sampling cycle

Analog input error

A probable cause of this error is a disconnected analog input. This error is detected when the analog input is outside the -10.0 to 110.0% range.

The corresponding alarm code is displayed when this error is detected.

MFB (motor feedback) input error

Disconnected MFB input or a short-circuit has been detected on 2G output models.

The corresponding alarm code is displayed when this error is detected.

■ Intermittent self-diagnostics during operation

Program error

An error in the program setup data stored to backup RAM has been detected.

The corresponding alarm code is displayed when this error is detected

Parameter error

An error in the parameter setup data stored to backup RAM has been detected.

The corresponding alarm code is displayed when this error is detected.

Low battery voltage error

A drop in the battery voltage for backing up RAM data has been detected.

When the low battery voltage error is detected, the red BAT LED on the console blinks.

■ Self-diagnostics only when certain functions are operating

MFB (motor feedback) adjustment error

This error is detected when MFB automatic adjustment is not going smoothly on 2G output models.

The corresponding alarm code is displayed when this error is detected.

To clear this alarm, either execute automatic adjustment again or turn the power OFF then back ON again.

■ Alarm code display

When an input error or controller error is detected in the basic display state, the alarm code and regular display are displayed alternately every second on the program No. and segment No. displays. The table below shows alarm codes and alarm descriptions.

When two or more alarms occur at the same time, the alarm codes are displayed from the smallest number upwards together with the regular display.

However, note that when setup data \mathcal{L} \mathcal{S} 7 has been set to "1", alarm codes are not displayed.

■ Alarm categories

PV range alarm groups: #LO 1 to #L 12

Controller alarm groups: # L8 1 to # L99, and low battery voltage

(BAT LED on console blinks in case of

low battery voltage.)

Alarm Code	Alarm Name	Description	Remedy	
RLOI	Input 1 over-range	Input 1 has exceeded 110%FS	Check input 1	
ALOS	Input 1 under-range	Input 1 has fallen below -10%FS		
ALOT	Input 1 RTD disconnection A	RTD line A is disconnected.	Check line of RTD (resistance temperature detector) connected to input 1 for disconnection, and terminal connections.	
ALO8	Input 1 RTD disconnection B	RTD line B or lines ABC are disconnected.		
8109	Input 1 RTD disconnection C	RTD line C is disconnected.		
AL 10	MFB disconnection	MFB (Y, T, G) line(s) is disconnected.	Check MFB wiring.	
ALII	MFB short-circuit	Y-G line or Y-T-G line is short-circuited.		
AL15	MFB adjustment impossible	Faulty wiring, motor incompatibility etc.	Check wiring of MFB switching relay or motor specifications.	
ALTO	A/D trouble	A/D converter has malfunctioned. *3	Ask for repair.	
AL81	Board configuration error	Faulty board configuration	Ask for repair.	
<i>8</i> 196	Program error	Damaged program setup data	Check program setup, and reset damaged data. *1	
RL97	Parameter error	Damaged parameter setup data	Check parameter setup, and reset damaged data. *2	
8198	Adjustment value error	Damaged analog input/output adjustment data	Ask for repair.	
8199	PROM error	Damaged system program	Ask for repair.	

^{*1.} **RL95** goes out even if program setup data other than the damaged data is reset.

^{*2. #197} goes out even if parameter setup data other than the damaged data is reset.

^{*3.} Input data is not updated. An over range or under range condition does not necessarily occur.

9 - 3 Trouble during Key Entry

■ The program No. does not change by pressing n basic display state

Cause	Remedy
Program selection by external switch input not 0.	Set all external switch inputs RSW8 to 12 OFF.
The controller is not in the READY mode.	Reset the controller.
The controller is in the constant-value operation mode.	Set constant-value operation data $\Pi.odE$ setting to 0.
Key lock is enabled.	Set variable parameter Lo C setting to 0 to 2.

Cause	Remedy
Program selection by external switch input not 0	Set all external switch inputs RSW8 to 12 OFF.
The controller is not in the READY mode.	Reset the controller.
The controller is in the constant-value operation mode.	Set constant-value operation data \hat{H} . o d E setting to 0.
Entry changeable display state by Ain MANUAL mode	Press DISP.
Key lock is enabled.	Set variable parameter Lo C setting to 0 to 2.

■ The controller does not change to RUN mode by pressing RUNHOLD in the basic display state

Cause	Remedy
The currently selected program in READY mode has not been set up.	Select an already set up program.
The controller is in the END mode.	Reset the controller to READY mode.
Key lock is enabled.	Set variable parameter & o C setting to 0 to 2.

■ The controller does not change to HOLD mode by pressing NUNLHOLD in the basic display state

Cause	Remedy
The controller is in the READY or FAST mode.	RUN mode is entered from READY or FAST mode. Press RUN/HOLD key again.
The controller is in the END mode.	Reset the controller to READY mode, and press RUN/HOLD twice.
The controller is in the constant-value operation mode.	Set constant-value operation data Ω . σ d E setting to 0.
Key lock is enabled.	Set variable parameter $L \circ \mathcal{L}$ setting to 0 to 2.

■ The controller cannot be reset by pressing PROG + RUNHOLD in the basic display state

"Reset in the program operation mode" refers to switching to the READY mode and returning to the No.1 segment.

"Reset in the constant-value mode" refers to switching to the READY mode.

Cause	Remedy
	Press CUN'HOLD to set the controller to the RUN mode. (The controller can be reset in case of external switch input or communications even in the READY mode.)
Key lock is enabled.	Set variable parameter 🕻 o 🕻 setting to 0 to 2.

■ The program is not advanced by pressing → in the basic display state

Cause	Remedy
The controller is in the READY mode.	Press PUN/HOLD to set the controller to the RUN mode. (The controller can be reset in case of external switch input or communications even in the READY mode.)
The controller is in the END mode.	Press PROG + RUN/HOLD to set the controller to the READY mode, and press RUN/HOLD again to set the controller to the RUN mode.
The controller is in the constant-value operation mode.	Set constant-value operation data $\Pi.odE$ setting to 0.
Key lock is enabled.	Set variable parameter Lo C setting to 0 to 2.

■ The controller does not change to FAST mode by pressing + in the basic display state

Cause	Remedy
The controller is in the READY mode.	Press RUN/HOLD to set the controller to the RUN mode. (The controller can be reset in case of external switch input or communications even in the READY mode.)
The controller is in the END mode.	Press PROG + RUN/HOLD to set the controller to the READY mode, and press RUN/HOLD again to set the controller to the RUN mode.
The controller is in the constant-value operation mode.	Set constant-value operation data Ω . σ d E setting to 0.
Key lock is enabled.	Set variable parameter $\mathcal{L} \circ \mathcal{L}$ setting to 0 to 2.

■ The controller does not change to MANUAL mode by pressing — in the basic display state

Cause	Remedy
ON-OFF control is being carried out by 0D and 6D outputs.	Set PID set P setting in use to other than 0.0 and switch to PID control from ON-OFF control.
3-position-proportional control is selected by 3D output.	Set setup data (45 setting to 0 and switch to PID control from 3-position-proportional control.
Key lock is enabled.	Set variable parameter $L \circ C$ setting to 0 to 2.

■ The controller does not change to AUTO mode by pressing — in the basic display state

Cause	Remedy
Key lock is enabled.	Set variable parameter $\mathcal{L} \circ \mathcal{L}$ setting to 0 to 2.

■ Auto-tuning (AT) is not started by pressing — in the basic display state

Cause	Remedy
The controller is in the READY mode.	Press RUN/HOLD to set the controller to the RUN mode.
The controller is in the MANUAL mode.	Press A/M t o set the controller to the AUTO mode.
Input 1 over-range	Correctly wire input 1 to correct input state.
Controller set not to execute AT.	Set variable parameter $R \succeq$ setting to other than 0.
The controller is set to programmer functions by 5G output.	Set setup data [18 setting to 0.
This is a heat/cool model.	AT cannot be executed by 3D and 5K outputs.
Key lock is enabled.	Set variable parameter $L \circ C$ setting to 0 to 2.

\blacksquare Auto-tuning (AT) is not canceled by pressing $\stackrel{\text{AT}}{\frown}$ in the basic display state

Cause	Remedy
Key lock is enabled.	Set variable parameter $\mathcal{L} \circ \mathcal{L}$ setting to 0 to 2.

■ Setting group other than " ${}^{p} \mathcal{A} \cap \mathcal{A}$ " is not displayed by pressing $\stackrel{\text{\tiny PARA}}{\longleftarrow}$ by selecting the setting group in parameter set state

Cause	Remedy
Key lock is enabled.	Set variable parameter $\mathcal{L} \circ \mathcal{E}$ setting to 0, 1 or 3.

Setting group other than "5 & &" is not displayed by pressing	PARA	by	se-
lecting the setting group in parameter set state			

Cause	Remedy
Key lock is enabled.	Set variable parameter $L \circ \mathcal{L}$ setting to 0 or 3.

■ The controller does not enter the setting entry state by pressing — in the parameter setup state

Cause	Remedy
"" is displayed on the lower display.	This cannot be displayed nor set. This item sometimes can be displayed or set by changing the setting of related items.
Unchangeable data is displayed on the lower display.	This is a display-only item.

■ The controller does not change to setup group selection state and setting entry state continues by pressing PARA in parameter setting entry state

Cause	Remedy
The controller displays items by Assignment.	Press DISP to return the controller to the basic display state, and press FUNC + PARA .

■ The controller does not change to program setup state by pressing ← + PROG in the basic display state

 Cause
 Remedy

 The controller is in the constant-value operation mode.
 Set constant-value operation data ℜ, o d E setting to 0.

 Key lock is enabled.
 Set variable parameter L o C setting to 0, 1 or 3.

■ The controller does not change to the setting entry state by pressing in the basic display state

Cause	Remedy
The program setup cannot be changed.	Set program parameter $P \cap L C$ setting to 0.

■ Items cannot be changed by pressing ▼ in program setup state

Cause	Remedy
The pattern item has not been set.	Set SP and time data.
Programming items are set to "display OFF".	All setup data £ 8 to £ 7 i settings are "1". Set necessary items to 0.

■ Event items cannot be displayed by repeatedly pressing ▼ in program setup state

Cause	Remedy
Event type is controller status event.	Set event type ($\mathcal{E} + \mathcal{E}, \mathcal{E} + \mathcal{E}, \mathcal{E} + \mathcal{E}$) in event configuration date to one of 0 to 11 or 50.
Programming items are set to "display OFF".	Set setup data £ 6 8 setting to 0.

■ Time events cannot be displayed by repeatedly pressing ▼ in program setup state

Cause	Remedy		
Time event is assigned to segment No. event.	Change event configuration data £ £ setting and assign to time event.		
This model does not support time events.	Select a mode that supports time events (option).		
Programming items are set to "display OFF".	Set setup data 🕻 🎜 setting to 0.		

■ PID set items cannot be displayed by repeatedly pressing ▼ in program setup state

Cause	Remedy		
PID set auto-switching is set to ON.	Set setup data 🕻 🕻 setting to 0.		
The controller is set to programmer function by 5G output.	Set setup data 🕻 18 setting to 0.		
3-position control is selected by 3D output.	Set setup data £45 setting in use to 0 and switch to PID control from 3-position control.		
Programming items are set to "display OFF".	Set setup data £70 setting to 0.		

■ G.Soak items cannot be displayed by repeatedly	pressing 🗷	o 🕶 in
program setup state		

Cause	Remedy	
Programming items are set to "display OFF".	Set setup data £70 setting to 0.	

Cause	Remedy	
Programming items are set to "display OFF".	Set setup data £7.1 setting to 0.	

■ Insertion/deletion of segments cannot be confirmed by pressing ^{EUNC} + ^{ENT} in program setup state

Cause	Remedy	
The program setup cannot be changed.	Set program parameter $P \cap L C$ setting to 0.	
The program being set up is being operated (RUN. HOLD, FAST, END).	Reset the controller.	
Not pattern item on programming map	Move to pattern item on programming map.	
Pattern item of non-set segment on programming map	Either move to already set up segment, or set up segment.	

■ Program deletion cannot be confirmed by pressing → + → while entering pattern items in program setup state

Cause	Remedy
The program being set up is being operated (RUN. HOLD, FAST, END).	Reset the controller.

■ The program cannot be copied by pressing → + in the basic display state

Cause	Remedy	
The mode is not the READY mode.	Reset the controller.	
The program of the currently selected program No. is not set up.	Select a program No. whose program is already set.	
The controller is in the constant-value operation mode.	Set constant-value operation data $\mathcal{H}.od\mathcal{E}$ setting to 0.	
The program is protected.	Set variable parameter PrEs setting to 0.	
Key lock is enabled.	Set variable parameter $L \circ C$ setting to 0, 1 or 3.	

■ General reset is not applied by pressing + CLR + DISP in the basic display state

Cause	Remedy	
The mode is not the READY mode.	Reset the controller.	
The mode is the MANUAL mode.	Execute auto operation.	
Program is protected.	Set variable parameter $P r \notin C$ setting to 0.	
Key lock is enabled.	Set variable parameter $L \circ \mathcal{E}$ setting to 0.	

9 - 4 Motor Adjustment is Impossible

There are two ways of wiring a motor to the DCP31: wiring for direct motor rotation and wiring for reverse motor rotation. When wired for direct motor rotation, the motor rotates in clockwise $(CW \cap)$ direction when DCP31 output increases. There are two ways of making the motor rotate in the reverse direction (counterclockwise: CCW) depending on your control requirements (e.g. cooling control):

- By switching the control operating direction on the DCP31 with the motor wired to the DCP31 for direct motor rotation as it is, or
- By wiring the motor to the DCP31 for reverse motor rotation.

The control operating direction (direct/reverse) can be switched on this controller. If the motor is wired to the controller for direct motor rotation, the DCP31 can be easily set up for control in either direction. This makes it easier to remedy trouble that may occur during controller operation. For this reason, we recommend wiring the motor to the DCP31 for direct motor operation.

Wiring for direct motor rotation

DCP31


(1) (2) (3) (14) (15) (6)

24Vac

(2) (3) (1) (7) (7) (G)

(W open CCW closed CW open CCW closed Motor

Wiring for reverse motor rotation

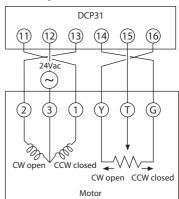

CW: $\underline{\mathsf{Clock}}\underline{\mathsf{w}}\mathsf{ise}\left(\bigcap\right)$ CCW: $\underline{\mathsf{Counter}}\mathsf{clock}\underline{\mathsf{w}}\mathsf{ise}\left(\bigcap\right)$

The DCP31 is also provided with a function (RL 10 to RL 12) for detecting MFB disconnection or short-circuit if the motor has been wired to the controller in the wrong way.

By this function, the DCP31 judges reverse direction wiring in the same way as direct direction wiring, and does not generate an alarm. If the setting of variable parameter \mathcal{A}_{i} is left at the factory setting ("0"), motor operation is continued.

The following tables summarize the phenomena that occur according to how the motor and DCP31 are wired when the motor is automatically adjusted (variable parameter $\mathcal{R} \cdot \mathcal{R} \, \mathcal{E}$ setting 1 is input). Motor rotation is started from the fully closed position (motor is turned as far as possible CCW).

The values displayed in the lower display in the tables are only examples. Alarms are displayed after the motor fully closes or fully opens.

■ Normal wiring for direct motor rotation

Upper Display	Lit LEDs	Lower Display	Motor Action	Remarks
<i>CR.CL</i> ↓	OT2	Readout decreases from 1000 to 500 and stabilizes.	CCW	If the motor rotates CCW when OT2 lights, motor
(R.oP	OT1	Readout increases from 500 to 9500 and stabilizes.	CW	terminals 1 and 2 are wired for direct rotation.

■ Normal wiring for reverse motor rotation

Upper Display	Lit LEDs	Lower Display	Motor Action	Remarks
<i>CR.CL</i> ↓	OT2	Readout decreases from 9000 to 500 and stabilizes.	CW	If the motor rotates CW when $1 \leftrightarrow 2$ and $G \leftrightarrow Y$ are
(R.oP	OT1	Readout increases from 500 to 9500 and stabilizes.	CCW	reversed and OT2 lights, motor terminals 1 and 2 are wired for reverse rotation.

■ Alarm display caused by wrong wiring and causes

Upper Display	Lit LEDs	Lower Display	Motor Action	Alarm Display	Cause
CR.CL ↓ CR.oP	OT2 OT1	Display increases and stabilizes. Display decreases and stabilizes.	CCW	RL18	G ↔ Y reversed
CR.CL ↓ CR.oP	OT2 OT1	Display decreases and stabilizes. Display stabilizes at 9999.	CCW	RL18	T ↔ G reversed
CR.CL	OT2	Display stabilizes at 9999.	CCW	8111 8112	T ↔ Y reversed
CR.CL ↓ CR.oP	OT2 OT1	Display increases and stabilizes. Display decreases and stabilizes.	CCW	RL18	1 ↔ 2 reversed
CR.CL	OT2	Display stabilizes at 9999.	CW	ALII ALII	$1 \leftrightarrow 2$ reversed $T \leftrightarrow G$ reversed
CR.CL ↓ CR.oP	OT2 OT1	Display decreases and stabilizes. Display stabilizes at 9999.	CW	AL18	1 ↔ 2 reversed T ↔ Y reversed

9 - 5 Replacing the Battery

ACAUTION



Before replacing the battery, be sure to turn the power OFF. Failure to do so might cause electric shock.



Do not touch internal components immediately after turning the power OFF to replace the battery. Doing so might cause burns.



- Do not insert the battery with the polarities (+,-) reversed.
- Do not use damaged (broken battery skin, leaking battery fluid) batteries.
- Do not throw batteries into fires, or charge, short-circuit, disassemble or heat batteries.
- Store batteries in low-temperature, dry locations. Failure to observe the above cautions may cause batteries to emit heat or split, or battery fluid to lead.
- Store batteries out of the reach of small children. Batteries are small and are easy to swallow. If a child swallows a battery, consult a physician immediately.
- When disposing of used batteries at the user site, observe bylaws.
- If you touch components inside the DCP31, touch a grounded metal object to discharge any static electricity from your body.
 Otherwise, static electricity might damage the components.

! Handling Precautions

 Batteries left in storage for a long time discharge electricity, reducing their service life. Purchase new batteries as required.

■ BAT LED blinking

When low battery voltage is detected, the BAT LED on the console blinks. The voltage level for detection of low battery voltage is set higher than the required voltage level for holding stored setups in memory.

Accordingly, as soon as the BAT LED starts blinking, stored setups can still be held in memory. However, if the DCP31 is turned back ON after being left for a long time with its power OFF and the BAT LED blinks, setups stored to memory may be damaged.

■ Replacing the battery

The parameter setups and program setups on the DCP31 are stored to battery backed up memory (RAM). So, stored setups are held in memory even if the DCP31 is turned OFF.

However, when battery voltage becomes low, stored setups are no longer held in memory when the DCP31 is turned OFF.

■ Replacement procedure


! Handling Precautions

- Replace with the lithium battery set (model No.: 81446431-001).
 The lithium battery set can be ordered from Azbil Corporation.
- When removing or mounting the RAM board or battery connectors, do not use metallic tools. Doing so might short-circuit electrical circuits.
- While the battery is removed for battery replacement, the capacitor on the RAM board backs up the contents of memory.

As this capacitor is charged, make sure that the controller is left ON for at least 1 h before replacing the battery. Insert the new battery on the RAM board within 24 h of turning the controller OFF.


When the BAT LED starts blinking, follow the procedure below to replace the battery.

- (1) Leave the controller turned ON for at least 1 h.
- (2) Turn the power OFF.
- (3) Remove the key cover from the console, and fully loosen the lock screw under that a Phillips screwdriver.
 - >> The body comes out towards you.

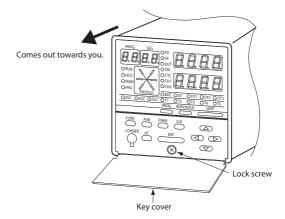

(4) Before handling components inside the controller, touch a grounded metal object to remove any static electricity from your body.

- (5) Pull the body out towards you to remove from the case.
 - >> You should be able to see the button-shaped battery on the left facing the body.

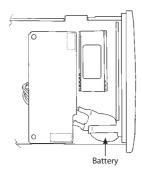


- (6) Place the body on its save on a desk or flat surface so that the side on which the battery is installed is facing up.
- (7) Remove the battery from its gray holder.
- (8) Remove the RAM board (approx. 3 cm \times 8 cm) with the battery still connected to the board.

The RAM board is connected to the base board by two connectors.

! Handling Precautions


 When placing the RAM board on the desk, make sure that the solder surface of the board is face down. If the component mounting surface is placed face down, the components may become damaged.

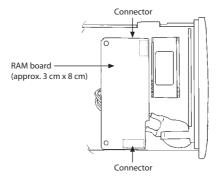


(9) Remove the battery connector from the RAM board.

- (10) Connect the connector of the new battery to the RAM board making sure that it is inserted the correct direction.
- (11) Mount the RAM Board making sure that it is mounted in the correct direction. Run the battery cables over or under the RAM board, paying attention to the following points.






If the cables are run over the RAM board, be sure not to pinch the battery cables with the case when putting the controller back into the case.



If the cables are run under the RAM board, be sure not to pinch the battery cables with the connector.

(12) Fit the battery into the gray holder so that the battery cable is above the RAM board.

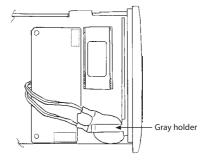

(13) Insert the body into the case. Do not exert excessive force if the body cannot easily fit into the case. Also, make sure that the boards mounted on the body are not loose or twisted.

- (14) Tighten the lock screw while slightly pushing in the controller's console. Take care not to overtighten the screw.
- (15) Turn the controller ON, and make sure that the BAT LED is out.

Mote

 The following serves as a general guideline for when to replace the battery:

About 3 years when using the controller under standard operating conditions (operating temperature: 23 ± 2 °C) with the controller ON

About 10 years when using the controller under standard operating conditions (operating temperature: 23 ± 2 °C) with the controller OFF

Using the controller in a higher operating temperature will shorten its service life.

- · Setups are held in memory even if the BAT LED is blinking.
- The controller operates in one of two ways when memory contents are damaged.
 - "5, r £ 5" is displayed when the controller is turned ON and regular operation is not started.
 (If this happens, press ENT to execute a general reset. This restores parameter setups to factory settings and clears the program setup.)
 - (2) Regular operation is started when the controller is turned ON, and one or both of alarm codes # L 9 5 and/or # L 9 7 is displayed.

Chapter 10. DISPOSAL



When discarding, remove the battery and dispose of both the product and the battery as industrial waste, following local regulations.

Battery removal method
 See ■Replacing the Battery in chapter 9. MAINTENANCE & TROUBLESHOOTING of this user's manual.

Chapter 11. SPECIFICATIONS

11 - 1 Specifications

ltem		Specification			
Program	Number of programs	19			
	Number of segments	30 per program			
	Segment setting system	RAMP-X system: Set by set points (SP) and time.			
	Segment time	0 to 99 h 59 min, 0 to 99 min 59s, or 0.0 to 599.9 s (time unit selectable)			
	Basic time accuracy	±0.01 % (0.1 s delay when segment time setting=0)			
	Events (3)	Set operating point.			
	Time events (5)	Set ON and OFF times.			
	PID set No.	Set 0 to 8 (Set 0 for continuation of previous segment) (Set 0 to 4 on heat/cool models.)			
	G.Soak	Sets G.Soak width 0 to 1000 U.			
	PV start	Sets program ON/OFF.			
	Cycle	Sets program count 0 to 9999.			
	Pattern link	Sets program No.0 to 19 (0: no link)			
	Tag	Sets 8 alphanumerics for each program (not displayed on controller)			
Input	Input type	Thermocouple: K, E, J, T, B, R, S (JIS C 1602-1981) WRe5-26 (Hoskins Data) PR40-20 (Johnson Matthey Data) Ni-NiMo (General electric Data) N (N.B.S. Monograph 161) PLII (Engelhard Industries Data (IPTS68)) DIN U, DIN L (DIN 43710-1985) Gold iron chromel (Hayashidenko Data) Resistance temperature detector (RTD): Pt100, JPt100 (JIS C 1604-1989) DC current: 4 to 20 mA, 0 to 20 mA, 0 to 10 mA DC voltage: -10 to +10 mV, 0 to 100 mV, 0 to 1 V, -1 to +1 V, 1 to 5 V, 0 to 5 V, 0 to 10 V Multi-range of thermocouple, resistance temperature detector,			
	Input readout accuracy	DC voltage, and DC current (see page 2-8, 2-9). ±0.1 %FS ±1 U (varies according to standard conditions, display value conversion and range) • For the K44, K46, and T44 thermocouples at −100 °C and colder: ±1 °C±1 U • At 260 °C max. of B thermocouple: ±4 %FS ±1 U At 260 to 800 °C: ±0.4 %FS ±1 U At 800 to 1800 °C: ±0.2 %FS ±1 U At 100 °C max. of R and S thermocouples: ±0.2 %FS ±1 U At 100 °C max. of PR40-20 thermocouples: ±2.5 %FS ±1 U At 300 °C max. of PR40-20 thermocouple: ±2.5 %FS ±1 U At 300 to 800 °C: ±1.5 %FS ±1 U At 300 to 800 °C: ±0.5 %FS ±1 U At 300 to 1900 °C: ±0.5 %FS ±1 U • At 300 to 1900 °C: ±0.5 %FS ±1 U • At 0 to 10 mV range: ±0.15 %FS ±1 U • At −100 °C max. of DIN U thermocouple: ±2 °C ±1 U • At −100 °C max. of DIN L thermocouple: ±1.5 °C ±1 U			

	Item	Specification		
Input	Input sampling cycle	0.1 s		
	Input bias current	Thermocouple, dc voltage input: ±1.3 µA max. (at peak value, under standard conditions) At 1 V min. range: 3 µA max.		
	Input impedance	dc current input: 50 $\Omega \pm 10$ % (under operating conditions)		
	Measuring current	RTD input: 1.04 mA ±0.02 mA, current flow from terminal A (under operating conditions)		
	Influence of wiring resistance	Thermocouple, Changes in readout value at wiring resistance of 250 Ω at both coltage input: ends are as follows by input conversion: 0 to 10 mV, -10 to 10 mV: Within 35 μ V 0 to 100 mV: Within 60 μ V Other: Within 750 μ V RTD input: ± 0.01 %FS max. in wiring resistance range 0 to 10 Ω Range of F01, F33, F38, P01, P33 and P38: ± 0.02 %FS/ Ω max.		
	RTD input allowable wiring resistance	 Allowable wiring resistance is 85 Ω max. (including Zener barrier resistance. When Zener barrier is used, this applies only to ranges other than F01, F33, F38, P01, P33 and P38. Note that site adjustment is required.) Range of F01, F33, F38, P01, P33 and P38 are 10 Ω max. (Zener barrier can not be used.) 		
	Allowable parallel resistance	Thermocouple disconnection detection allowable parallel resistance: $1 \text{ M}\Omega$ min. Thermocouple, dc voltage input: $-5 \text{ to} + 15 \text{ Vdc}$ dc current input: 50 mAdc , 2.5 Vdc		
	Max. allowable input			
	Burnout	Upscale and downscale can be internally selected. (dc current input and dc voltage input of 1 V or more are only downscaled.)		
	Over-range detection threshold	110 %FS min.: Upscaled –10 %FS max.:Downscaled (Note that F50 range is not downscaled. Lower readout limit of B18 range is 20 °C, 68 °F.)		
	Cold junction compensation accuracy	±0.5 °C (under standard conditions)		
	Influence of surrounding temperature on cold junction compensation	±0.2 °C (at 0 to 50 °C range)		
	Cold junction compensation system	Internal/external (0 °C only) compensation selectable		
	Scaling	-1999 to +9999 U (settable at dc voltage and dc current ranges. Reverse scaling and decimal point repositioning possible)		
	Square root extraction	Dropout 0.1 to 10.0 %, Possible by dc current and voltage ranges		
	Linearization table approximation	12 (both line ends fixed, 11 points variable)		
	Input bias	−1000 to +1000 U variable		
	Digital filter	0.0 to 120.0 s variable (filter OFF at 0.0)		

	Item	Specification		
External	Number of inputs	12		
Switch (RSW)	Types of connectable outputs	Dry contacts (relay contact) and open-collector (current sink to ground)		
Input	Terminal voltage (open)	10.4 to 12.6 V (under operating conditions) across common terminal (terminal $^{\textcircled{3}}$) and each input terminal		
	Terminal current (shortcircuit)	5.0 to 6.6 mA across each terminal (under operating conditions)		
	Allowable contact resistance (dry contact)	ON: 700Ω max. (under operating conditions) OFF: $10k\Omega$ min. (under operating conditions)		
	Residual current (allowable open- collector ON)	3 V max. (under operating conditions)		
	Leakage current (allowable open- collector OFF)	0.1 mA max. (under operating conditions)		
	Parallel connection to other instruments	Can be connected to Azbil Corporation SDC40 and DCP30 series.		
	Assignments (fixed)	RUN, HOLD, RESET, ADV, program No.		
	Assignments (variable)	FAST, PV start, AT, AUTO/MANUAL, G.Soak cancel, reverse/direct action		
	Input sampling cycle	0.1 s		
	ON detection min. hold time	0.2 s (program No. 0.4 s)		
Indica- tion/ Program-	Upper display	Green 4-digit, 7-segment LED This normally displays PV values. Item codes are displayed in parameter setup.		
mer	Lower display	Orange 4-digit, 7-segment LED This normally displays SP values. Setting values are displayed in parameter setup.		
	Program No. display	Green 2-digit, 7-segment LED This normally displays program No.		
	Segment No. display	Green 2-digit, 7-segment LED This normally displays segment No. Item Nos. are displayed in parameter setup, and alarm No. is displayed when alarm occurs.		
	Profile display	6 orange LEDs Displays program pattern rise, soak and fall tendencies.		
	Status displays	22 round LEDs Modes: RUN, HLD, MAN, PRG (green) Display details: PV, SP, OUT, TM, CYC (green) Battery voltage: BAT (red) (blinks at low voltage) Status: AT, OT1, OT2, OT3 (orange) Events: EV1, EV2, EV3, T1, T2, T3, T4, T5 (orange)		
	Operation keys	13 rubber keys		
	Loader connector port	1 (dedicated cable with stereo mini plugs)		

	ltem		Specification	
Mode	Program operation mode	READY: Ready to run program (control stop/program No. selectable) RUN: Program run HOLD: Program hold FAST: Program fast-forward END: Program end AUTO: Automatic operation MANUAL: Manual operation (output controlled on console)		
	Constant-value operation mode	RUN: Program (AUTO: Automati	run program (control stop) run c operation peration (output controlled on console)	
Control	PID control	Proportional band (P) Rate time (I) Reset time (D) MV limit	0.0 to 999.9 % (0D, 6D output), ON-OFF control by 0.0 0.1 to 999.9 % (2G, 5G, 3D, 5K output) 0 to 3600 s, PD control by 0 0 to 1200 s, PI control by 0 Lower limit: -10.0 to upper limit %	
		Manual reset	Upper limit: Lower limit to 110.0 % 0.0 to 100.0 %	
		Number of PID sets	8 sets for program operation + 1 set for constant- value operation	
		PID set selection	Segment designation/automatic zone selection can be switched by program operation	
		MV change limit Auto-tuning	0.0 to 10.0 %/0.1 s, no limit by 0.0 Automatic setting of PID value by limit cycle system + Neuro & Fuzzy (2 degrees of freedom PID) and Smart systems (executable by 0D, 2G, 5G and 6D outputs)	
		ON-OFF control differential	0 to 1000 U (settable by 0D and 6D outputs)	
		Position- proportional dead zone	0.5 to 25.0 % (settable by 2G output)	
		Heat/cool dead zone	-100.0 to +50.0 % (settable by 3D and 5K outputs)	
	3-position control	Deviation lower limit Deviation upper limit Deviation lower limit hysteresis Deviation upper limit hysteresis	0 to 1000 U (settable when 3-position control is selected by 3D output)	
	Reverse/direct action switching	Switchable	(0D, 2G, 5G, 6D outputs)	
	Programmer function	Switching Scaling	MV output can be switched to SP output (5G output). Supported	
		Output resolution	1/10000	

	Item		Specification	
Control	Auxiliary output	Туре	PV, SP, deviation, MV, MFB	
		Scaling	Supported	
		Output resolution	1/10000	
Output	0D output 1	Relay contact	Contact type:	1a1b
	3D outputs 1, 2	output	Contact rating:	5 A (24 Vdc, resistive load) 5 A (120 Vac, resistive load) 4 A (240 Vdc, resistive load)
			Allowable contact voltag	ge: 250 Vac, resistive load 125 Vdc, resistive load
			Max. switching power:	150 W, resistive load 960 VA, resistive load
			Life:	100,000 operations (resistive load at contact rating, frequency: 30 operations/minute)
			Min. switching voltage:	5 V
			Min. switching current:	100 mA
			Output resolution:	1/1000
			Time-proportional cycle	: 5 to 120 s
	2G output 1	M/M drive relay	Contact type:	1 a (2 circuits)
			Contact rating:	2.5 A (30 Vdc, L/R=0.7 ms) 4 A (120 Vac, cosø=0.4) 2 A (240 Vac, cosø=0.4)
			Allowable contact voltage	ge:
				250 Vac, cosø=0.4 125 Vdc, L/R=0.7 ms
			Max. switching power:	75 W (L/R=0.7 ms) 480 VA (cosø=0.4)
			Life:	100,000 operations (cosø=0.4 at contact rating, frequency: 30 operations/minute)
			Min. switching voltage:	5 V
			Min. switching current:	100 mA
			MFB (motor feedback) input range: 100 to 2500 Ω	
			Control at MFB (motor feedback) disconnection: ON/OFF for continuation of operation according to MFB estimated position can be selected.	

	Item		Specification		
Output	5G output 1 5K outputs 1, 2 Auxiliary outputs 1, 2	Current output (4 to 20 mA)	Output current: Allowable load resistance	4 to 20 mA dc/0 to 20 mA dc e: 600 Ω max. (under	
	, , , , , , , ,			operating conditions)	
			Output accuracy:	±0.1 %FS max. (under standard conditions) ±0.5 %FS at output 5 % or less of 0 to 20 mA output	
			Output resolution:	1/10000	
			Inrush current:	25 mA max. for 50 ms max. (at 250 Ω load)	
			Max. output current:	22.0 mA dc	
			Min. output current:	0.0 mA dc	
			Output updating cycle:	0.1 s	
			Open terminal voltage:	25 V max. (output 1) 18 V max. (output 2, auxiliary outputs 1, 2)	
İ	6D output 1	Voltage output	Allowable load resistance	e:	
	5K outputs 1, 2 (when current output			600 Ω max. (under operating conditions)	
	is switched to voltage output)		Inrush current:	25 mA max. for 50 ms max. (at 250 Ω load)	
			Load current adjustment:2 to 22 mA variable		
			Open terminal voltage:	25 V max. 18 V max. (output 2 of 5 K output)	
			OFF leakage current:	100 μA max.	
			Output response time:	At ON-OFF 600 Ω load: 0.5 ms max. At OFF-ON 600 Ω load: 1.0 ms max.	
			Output resolution:	1/1000	
			Time-proportional cycle	: 1 to 60 s variable	
Event/	Events 1, 2	Relay contact	Contact type:	1 a	
Time event		output	Contact rating:	1 A (240 Vac/30 Vdc, resistive load)	
Output			Life:	100,000 operations (at rating)	
			Min. switching voltage, current: 10 V, 10 mA		
	Event 3	Relay contact	Contact type:	1a1b	
	Events	output	Contact type.	2A (240 Vac/30 Vdc, resistive load)	
			Life:	100,000 operations (at rating)	
			Min. switching voltage, o	current: 10 V, 10 mA	

ltem			Specification		
Event/ Time event Output	Time events 1 to 5	Open-collector output	External supply voltage: 10 to 29 Vdc Max. load current: 70 mA/load OFF leakage current: 0.1 mA ON residual voltage: 1.6 V max.		
	Event 1 to 3 settings Time event 1 to 5	Event type	PV type events: PV, deviation, absolute value deviation, SP, MV, MFB		
	settings		Controller status events: RUN+HOLD+FAST+END, READY, RUN, HOLD, FAST, END, G.Soak standby, MANUAL, auto-tuning executing, constant-value operation, MFB estimated position control, sum of all alarms, PV range alarm, controller alarms, low battery voltage, setting on console, ADV		
			Time events: Segment No. events (Time event 1 to 5 only)		
		Event standby	ON/OFF selectable		
		Event hysteresis	0 to 200 U (event types PV, deviation, absolute value deviation or SP)		
			0.0 to 20.0 % (event types MV or MFB)		
		Event ON delay	0 to 3600 s		
Commu- nications	Communications system	Communications standard	RS-485		
		Network	Multidrop (DCP31 provided with only slave node functionality) 1 to 16 units max. (DIM), 1 to 31 units max. (CMC, SCM)		
		Data flow	Half duplex		
		Synchronization	Start-stop synchronization		
	Interface system	Transmission system	Balanced (differential)		
		Data line	Bit serial		
		Signal line	5 transmit/receive lines (3-wire connection also possible)		
		Transmission speed	4800, 9600 bps		
		Transmission distance	500 m max. (total) (300 m for MA500 DIM connection)		
		Other	Conforming to RS-485		
	Display characters	Char. bit count	11 bits/character		
		Format	1 start bit, even parity, 1 stop bit; or 1 start bit, no parity, and 2 stop bits		
		Data length	8 bits		
	Isolation	All inputs and outpu	ts are completely isolated.		
		ations can be performed by connecting to a computer equipped with an RS-485 il Corporation MX200, MA500 (DK link II DIM) or CMC10 controllers.			


	ltem		Spec	ification			
General Memory backup		Memory Battery backed-up RAM					
Specifica- tions	метогу раскир			Approx. 3 years under standard conditions			
		Control	er power ON	Approx. 10 years under standard conditions			
	Rated power supply voltage	100 to 240 Vac, 50/60) Hz				
	Allowable power supply voltage	90 to 264 Vac, 50/60	Hz				
	Power consumption	30 VA max.					
	Power ON rush current	30 A max., 10 ms (un	der operating	conditions)			
		! Handling Pr	ecautions				
		When starting up power is supplie may not start no	o a number of I d or stagger sta rmally due to i	OCP31s simultaneously, ensure ample artup times. Otherwise, the controllers nrush current induced-voltage drop. s after power ON.			
	Power ON operation		x. (time until no operating cond	ormal operation possible under ditions)			
	Allowable transient power loss	20 ms max. (under operating conditions)					
	Insulation resistance	Min. 20 MΩ across po (using a 500 Vdc meg		1) or (2) and ground terminal (3)			
	Dielectric strength	1500 Vac 50/60 Hz for 1 min across power terminal and ground terminal 1500 Vac 50/60 Hz for 1 min across relay output and ground terminal 500 Vac 50/60 Hz for 1 min across non-power terminal and ground terminal 500 Vac 50/60 Hz for 1 min across isolated terminals					
	Standard conditions	Ambient temperature	23 ±2 ℃				
		Ambient humidity	60 ±5 %RH				
		Rated power supply voltage	105 Vac ±1 %				
		Power frequency	50 ±1 Hz or 60) ±1 Hz			
		Vibration resistance	0 m/s ²				
		Impact resistance	0 m/s ²				
		Mounting angle	Reference pla	ne (vertical) ±3°			
	Operating conditions	Ambient temperature range	0 to 50 °C (ter closely moun	nperature at case bottom when ted)			
		Ambient humidity 10 to 90 %RH (without condensation) range					
		Rated power supply 100 to 240 Vac voltage					
		Power frequency	50 ±2 Hz or 60) ±2 Hz			
		Vibration resistance	0 to 1.96 m/s ²				
		Impact resistance	0 to 9.80 m/s ²				
		Mounting angle	Reference pla	ne (vertical) ±10 °			
		Altitude	2000 m max.				

	Item		Specification		
General Specifica-	Installation mode	Permanently connect mounted	tted type controller, indoor installation, panel-		
tions	Standards compliance		n industrial locations) the reading or output may fluctuate by ±10 %FS. e within ±30 %FS.		
	Over-voltage category	Category II (IEC60364	4-4-443, IEC60664-1)		
	Pollution degree	2			
	Transport/storage conditions	Ambient temperature range	−20 to +70 °C		
		Ambient humidity range	10 to 95 %RH (no condensation)		
		Vibration resistance	0 to 4.90 m/s ² (10 to 60 Hz for 2 h each in X, Y and Z directions)		
		Impact resistance	0 to 490 m/s ² (3 times vertically)		
		Package drop test	Drop height: 60 cm (1 angle, 3 edges and 6 planes; free fall)		
	External fuse	Rated	IEC127		
		Cutoff speed	Delayed operation type (T)		
		Rated voltage	250 V		
		Rated current	1 A		
	Terminal screw	M 3.5 self-tapping so	rew		
	Terminal screws tightening torque	0.78 to 0.98 N·m			
	Mask/case materials	Mask: PC/ABS	Case: PC, PC/ABS, m-PPM		
	Mask/case color	Mask: Dark gray (Munsell 5Y3.5/1) Case: Light gray (Munsell 2.5Y7.5/			
	Installation	Specially designed m	mounting bracket		
	Weight	Approx. 900 g			

■ Accessories/option list

	Item	Model No.	Q'ty
Standard accessories	Unit indicating label	N-3132	1
	Mounting bracket	81405411-003	1 set (2 brackets)
	User's Manual	CP-UM-1757E	1
Options	Hard dust-proof cover set	81446083-001	_
(sold separately)	Soft dust-proof cover set	81446087-001	_
	Terminal cover set	81446084-001	_
	Lithium battery set	81446431-001	_
	Smart Loader Package	SLP-P30	_
Related manuals	DIGITRONIK CPL Communications	CP-SP-1066E	_
	Smart Loader Package	CP-UM-1759JE	


11 - 2 External Dimensions

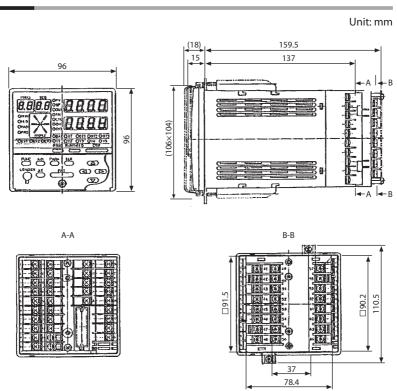

■ Soft dust-proof cover set (sold separately)


(transparent silicon rubber) Model No.: 81446087-001

Unit: mm

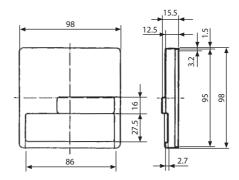

■ Hard dust-proof cover set (sold separately)

(transparent polycarbonate) Model No.: 81446083-001

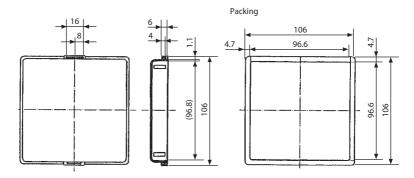

■ Terminal cover set (sold separately)

(gray non-flammable, heat-resistant PVC) Model No.: 81446084-001

Unit: mm

Can be attached to either of standard or add-on terminal base.

■ China RoHS


基于SJ/T11364-2014「电子电气产品有害物质限制使用标识要求」的表示式样 产品中有害物质的名称及含量

	有害物质					
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
电路板组件*1	×	0	0	0	0	0

本表格依据SI/T 11364 的规定编制。

- 〇:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规 定的限量要求以下。
- ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
- *1: 电路板组件包括印刷电路板及其构成的零部件,如电阻、电容、集成电路、连接器等。



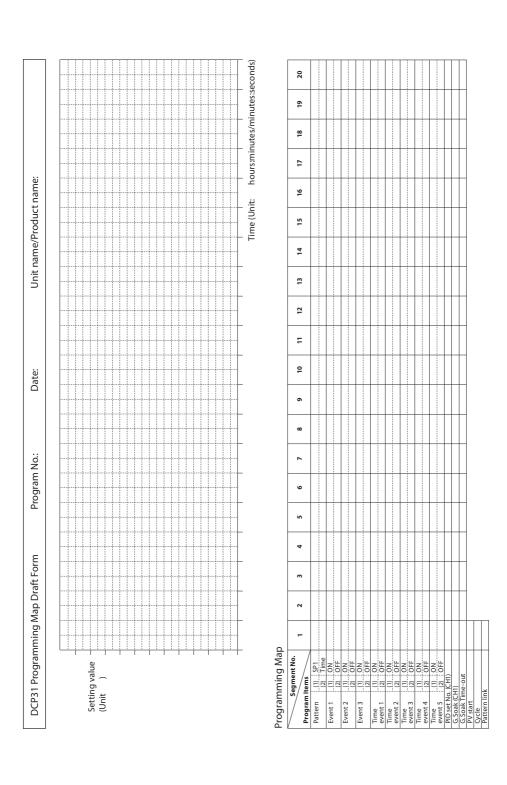

Index

0D, 6D output 5-25	Constant-value operation data setting 7-66
2 degrees of freedom	Controller
2G output 5-26	Controller status events 5-6
3D, 5K outputs 5-27	Control/output state LED 2-3
3-lead RS-485 mutual connection 4-19	CPL communications 1-4
3-position control deviation lower limit . 7-18	CPL communications port selection 7-62
3-position control deviation upper limit. 7-18	CR filter 3-4
3-position control lower limit hysteresis. 7-18	Crimped terminal
3-position control upper limit hysteresis 7-18	Current output (5G)
5G output 5-24	Cycle
5-lead RS-485 mutual connection 4-18	Cycle
5-lead K5-465 mutuai connection 4-16	
	-D-
— A —	Data Structure
Accessories	Data types 5-1
add-on terminal base2-1	DC current 2-11, 4-8
add-on terminal base2-1	DC voltage 2-11
Add-on terminal layout 4-7	Display
ADV (advance)	Dust-proof cover 3-4
Alarm code	_
Alarm code display9-3	— E —
Auto-tuning (AT)	END
Auxiliary output 5-29	END
Auxiliary output 1 lower limit 7-48	
Auxiliary output 1 upper limit 7-48	Event 1 standby
Auxiliary output 2 lower limit 7-49	Event 2 ON delay time
auxiliary output 2 upper limit 7-55	Event 2 stand by
Auxiliary parts	Event 3 ON delay time
, , , , , , , , , , , , , , , , , , ,	Event 3 standby
_	Event configuration data setting 7-22
—B—	Event LED
Basic display state	Event output (relay output), Connecting 4-13
Basic functions 1-2	Events 1 to 3 5-3
Basic indicator LEDs 2-4	External Dimensions
Battery, Low voltage LED2-2, 2-3	External switch inputs, Connecting 4-16
Battery, Replacing the battery 9-14	External switch operation 6-9
Body2-1	
	— F —
- c-	FAST5-16
Cable	Feedback resistor 4-10
Case	Functions using two or more keys 2-8
Cold junction compensation	i unctions using two of more keys 2 c
Communications, Connecting for 4-17	
Connecting control outputs (outputs 1, 2) 4-9	- G -
	General Reset 8-21
Connecting input 1	Ground
Console	G.Soak (guarantee soak) 5-12, 8-14
Constant-value operation 5-15	G.Soak time-out 8-14

-H-	—N—
Hard dust-proof cover set 11-9, 11-11	Noise
Heat/cool control dead zone 7-10	
Heat/cool output (3D) 4-11	-0-
Heat/cool output (5K) 4-11	ON-OFF control differential 7-15
HOLD 5-16, 5-19	Output Processing 5-24
How to Use	
	— P —
— —	Panel cutout dimensions 3-2
Input 1 root extraction dropout 7-45 Input 1 zener barrier adjustment 7-53	Parameters1-3
Input Processing Functions5-23	Parameter Setup 7-1
Inputs	Pattern items 8-7
Isolating Inputs and Outputs 4-20	Pattern link 5-14, 8-16
isolating inpute and o dipute ******* 1 20	Patterns
- K -	PID operation initialization
key lock	PID operation initial MV
Keys	PID set No. items 8-13
10,5	PID set selection
	Position-proportional control dead zone 7-16
L – L – Loader jack	Position-proportional output (2G) 4-10
Lower display2-9	Power ON, Turning the 6-1
Lower display2-2, 2-3	Power supply 4-6
	Profile display
— M —	Program end 5-18
MANUAL 5-17, 5-20 Manual operation 6-14	Program No. display 2-2
Mode indicator LEDs	Program No., How to Select 6-8
Model Numbers	Program operation
Mode transition	Program patterns
Mode types 5-15	Program protect 7-13 Programs 1-3
Motor Adjustment is Impossible 9-12	Programs, Copying 8-20
Motor control method selection 7-19	Programs, Deleting 8-17
Motor valve opening adjustment fully open/	Programs, setting up 8-1
closed time	PV display 6-3 to 6-6, 7-56
Motor valve opening adjustment fully open	PV start 5-13, 8-15
position	PV type events 5-3
Motor valve opening automatic adjustment	
Mounting bracket3-1, 3-5, 11-9	— R —
Mounting locations	Range No 2-10
Mounting method	READY 5-16
MV change limit	Relay output (0D)
	RESET 5-19
	Resistance temperature detector (RTD) . 2-11
	RS-485

-s-
Segment No. display2-3
Segments, Deleting 8-18
Segments, Inserting 8-19
Self-diagnostics
Setup data setting 7-44
Smart-tuning method selection 7-14
Soft dust-proof cover set 3-1, 11-9, 11-11
SP1 lower limit
SP1 upper limit
Special functions
Specifications
SP output
Standard terminal base 2-1
Standard terminal layout 4-7
Switching the Basic Display 6-2
System configuration 1-4
-T-
Table data settings 7-63
Terminal cover set 3-1, 11-9, 11-12
Terminals, Connecting 4-4
Thermocouple 2-10, 4-8
Time event output (open-collector),
connecting4-14
Time event outputs
Time events
Time events 1 to 5
Trouble during Key Entry 9-5
-U- Upper display2-2, 2-3
Opper display2-2, 2-3
-v-
Variable parameter settings
Varister
Voltage output 1 adjustment 7-52
Voltage output 2 adjustment
Voltage output (6D)
Voltage time-proportional output system 7-56
-w-
Wiring 4-1
Wiring for reverse motor rotation 9-12
_

Revision History of CP-UM-1757E

Printed	Edn.	Revised pages	Description
Oct. 1996	1		
Mar. 1999	2		Revisions made to all pages in manual
May 2000	3		Manual title was changed
Jan. 2001	4		RS-232C/RS-485 Converter was changed
May 2001	5	7-32	No. 84 CPL Communications address → Station address was changed No. 85 CPL communications speed/code → Transmission rate/Character format was changed No. 94 Unused → PID type was changed
Aug. 2002	6	1-4	Description of CPL communications changed
		1-5	Description "Y0" of Addition changed
		4-5	Label changed
		5-3	Events 1 to 3 to Events 1 to 3, Timeout 1 to 5 changed, description changed
		5-5	Program end added
		5-9	Description added
		5-10 to 5-23	Old 5-9 to 5-22 page
		7-13	Description of Heat/cool control dead zone changed
		7-18, 7-19	118 to 199: NOP → 118 to 124: NOP changed
		7-20	125: Program end, 126 to 129: NOP added
		7-21 to 7-26	No. 14 to No. 36 added
		7-27	● Ed.t1 to 5, ● dL.t1 to 5 added, old 7-22 page
		7-28 to 7-47	Old 7-23 to 7-42 page
		8-4	G.Soak time-out added
		8-9	Description added
		8-10	Old 8-9 page
		8-11	■ Setting up G.Soak time-out items added, Old 8-10 page
		8-12	Old 8-10 and 8-11 page
		8-13	Old 8-11 page
		8-14 to 8-17	Old 8-12 to 8-15 page
		Chapter 9	Title, TROUBLESHOOTING to MAINTENANCE & TROUBLESHOOTING changed
		9-1	9-1, Maintenance added
		9-2 to 9-10	Old 9-1 to 9-9 page
		9-11	Item of CAUTION added, description changed, Old 9-10 page
		9-12 to 9-14	Old 9-11 to 9-13 page
			Programming G.Soak Time-out added Map Draft Form
Feb. 2003	7		RESTRICTIONS ON USE changed
		ii	Icon about Cautions corrected
		iv, 10-6	Applicable standards added, EN61326
July 2003	8	4-17, 4-18	Handling precautions added.
		8-5, 8-7, 8-8	Setting range: 0.0 to 599.9 (0.1s) added.
		8-7, 8-8	ON time setting + 0.1 to 599.9 (0.1s) added.
		8-11	Setting range changed "0 to 1000U" to "0:00 to 99:59 (h:min/min:s) or 0.0 to 599.9 $(0.1s)$ " in G.Soak time-out items.
Apr. 2004	9	i	SAFETY REQUIREMENTS changed.
		4-2	1 item added in Handling Precautions.
		7-10	Constant current type SSR added.
		10-6	Altitude: 2000m max. added in operating conditions.
		1 20 0	Thirdae, 2000m man, added in operating conditions.

Printed	Edn.	Revised pages	Description
Aug. 2004	10	4-3	Cable name change based on standard revision.
		10-5	Explanation of time event changed.
May 2005	11	5-2	SP bias and foot note added.
		7-7	Note about SP bias added.
		10-1	Input type changed.
		10-6	Rated power supply voltage corrected.
			Allowable power supply voltage added.
Dec. 2005	12	7-22 to 7-26	T1 to T5 event type: Factory Setting 0 changed
		10-4	Voltage output: Open terminal voltage: 25V max.
Aug. 2006	13	i, 10-6	(output 2 of 5K output) changed to 25V max. Applicable standard: EN50081-2, EN50082-2 deleted.
Aug. 2000	13	10-6	Power ON rush current: 15A max. changed to 30A max.
Nov. 2006	14	4-5	UL recognized component mark added on the label.
July 2007	15	10-1	Input readout accuracy: Specification changed.
July 2007	13	10-1	Input readout accuracy: Specification changed. Influence of wiring resistance: Description of RTD input added.
Jan. 2008	16	2-9	Handling Precautions: 7th item added.
		9-13	Description (11) changed.
Sep. 2008	17	vi	Description of No. CP-UM-1759JE added.
		5-1	Tag data type added.
		10-1	Chapter 10. DISPOSAL added.
		11-1 to 11-9	Chaptr 11. SPECIFICATIONS changed Old Chapter 10. and 10-1 to 10-9
			page.
		11-7	Accessories/options list: SLP-P30 and CP-UM-1759JE added.
June 2011	18	End paper	RESTRICTIONS ON USE deleted. "Terms and Conditions" added.
		i	Safety requirements were changed.
		i, 11-6	UL61010-1 added to applicable standards.
		i, 4-2	Safety requirement on fuse was added.
		iii, 3-3, 4-1, 4-9, 4-11	Warning was changed.
		1-4	Description of MA500 and MX200 and diagram were deleted.
		4-3	Cable description added.
		4-5	Label diagram was changed.
		4-8	CAUTION added.
		7-35	Setting "2" added to C64
		9-3	Note added to Alarm categories.
Apr. 2012	19		Company name changed.
May 2013	20	V, 3-1, 3-5, 11-7	The model No. of the mounting bracket was changed from 81405411-001 to 81405411-003.
		11-1	Segment time of 0.0 to 599.9s was added.
		11-3	The MV change limit was changed.
Feb. 2014	21	i, 11-6	APPLICABLE STANDARD was changed.
		1-5	Model selection guide was changed. Handling Precaution was added.
		11-7	Mask/case materials were changed.
Apr. 2015	22		"(Not for use in Japan)" was added to the cover
			page.
		i	SAFETY REQUIREMENTS was changed.
		iv	CAUTIONs were added. "Handling Precautions" was deleted.
			was ucicicu.

Printed	Edn.	Revised pages	Description
Apr. 2015	22	1-5 3-3 4-2 4-6 7-44 11-4	Model selection guide was changed. "Outdoors (use indoors only)" was added to the list. A Handling Precautions was added and changed. The line filter part No. was changed from 81446364-001 to 81442557-001. A Handling Precautions on recommended zener barriers was added. The contact ratings of the relay contact output and M/M drive relay were changed from 30 Vdc to 24 Vdc.
June 2016	23	11-6	Standards compliance was changed. Overall revision. 23rd ed = 33rd Jp ed.
Oct. 2016	24	11-1	"At -100°C max. of K and T thermocouples:" was changed to "In the K44 and K46 thermocouple ranges and at -100°C and colder for T thermocouples:"

