

# 1/16 & 1/32 DIN TEMPERATURE CONTROLLER MANUAL (59423-10)

## SAFETY INFORMATION

### INSTALLATION

Designed for use:  
UL61010-1 Edition 3 / CSA 22.2 No 1010.1  
To offer a minimum of Basic Insulation only.

Suitable for installation within Category II and Pollution Degree 2.

SEE ELECTRICAL INSTALLATION It is the responsibility of the installation engineer to ensure this equipment is installed as specified in this manual and is in compliance with appropriate wiring regulations. Compliance shall not be impaired when fitted to the final installation.

Field wiring must be rated for a minimum of 80 deg C

The body responsible for installation is to ensure supplementary insulation suitable for Installation Category II is achieved when installed.

To avoid possible hazards, accessible conductive parts of the final installation should be protectively earthed in accordance with UL61010-1 Edition 3 for Class 1 Equipment. Live parts should not be accessible without the use of a tool.

Output wiring should be within a Protectively Earthed cabinet. Sensor sheaths should be bonded to protective earth or not be accessible.

When fitted to the final installation, an IEC/CSA APPROVED disconnecting device should be used to disconnect both LINE and NEUTRAL conductors simultaneously. Position the equipment so that it is easy to operate the disconnecting device.

These products are intended for indoor use only.

Intended for use as a temperature and process controller.

Intended for use as a temperature and process controller.

### CONFIGURATION

All functions are front selectable; it is the responsibility of the installing engineer to ensure that the configuration is safe. Use the program lock to protect critical functions from tampering.

### ULTIMATE SAFETY ALARMS

Do not use SP2 as the sole alarm where personal injury or damage may be caused by equipment failure.

## MECHANICAL INSTALLATION

The Controllers are designed to be mounted either in a 1/16 or a 1/32 DIN panel cut-out. The units are sleeve mounted with the front bezel assembly rated NEMA4/IP66 provided that:

- The panel is smooth and the panel cut-out is accurate;
- The mounting instructions are carefully followed.

### DIN PANEL CUTOUT

**1/16 DIN:** 45.0mm +0.6 / 0.0 wide, 45.0mm +0.6 / 0.0 high **1/32 DIN:** 45.0mm +0.6 / -0 wide, 22.2mm +0.3 / -0 high

**Maximum panel thickness** 9.5mm

**Minimum ventilation spacing** 20mm vertical, 10mm horizontal

### MOUNTING

To mount a controller, proceed as follows:

- 1 Check that the controller is correctly orientated and then slide the unit into the cut-out.
- 2 Slide the panel clamp over the controller sleeve pressing it firmly against the panel until the controller is held firmly.
- 3 The controller front bezel and circuit board assembly can be unplugged from the sleeve. Grasp the bezel firmly by the recesses on each side and pull. A screwdriver can be used as a lever if required.
- 4 When refitting the bezel assembly, it is important to press it firmly into the sleeve until the latch clicks in order to compress the gasket and seal to NEMA4X/IP66.

### CLEANING

Wipe down with damp cloth (water only)

**Note:** The controller should be isolated before removing or refitting it in the sleeve, and electrostatic precautions should be observed when handling the controller outside the sleeve.

### DIMENSIONS: MODELS

Model	Bezel*		Behind panel		Overall length	Behind panel length*
	Width	Height	Width	Height		
1/32 DIN – 48 x 24mm	51.0	28.5	44.8	22.0	116.2	106.7
1/16 DIN – 48 x 48mm	51.0	51.0	44.8	44.8	116.2	106.7

Dimensions in mm

\* includes gasket

## ELECTRICAL INSTALLATION

(Also see important Safety Information).

Designed for use with the following supply voltages:

1. 100 - 240V 50-60 Hz 4 VA (nominal) +/-10% maximum permitted fluctuation
2. 12V - 24V (AC/DC) +/-20% 4 VA Polarity not required

The supply voltage is dependent on the specific model, check the product label to establish the correct voltage for the unit.

### OUTPUT DEVICES

Two of the following output devices are fitted to the controllers, depending on the model.

- 1 Solid state relay drive (SSd/SSd1/SSd2) 5Vdc +0/-15%, 15mA non isolating. To switch a remote SSR (or logic)
- 2 Miniature power relay (rLY/rLY1) 2A/250V AC resistive, Form A/SPST contacts.
- 3 Sub miniature power relay (rLY2) 1A/250V AC resistive, Form A/SPST contacts.

### OUTPUT DEVICE ALLOCATION

Either output may be chosen for the main setpoint (SP1), the remaining device being automatically allocated to the second setpoint (SP2).

**Dual relay or dual Ssd output models are available to order. Please contact your local distributor for details.**

### WIRING THE CONNECTOR

Use copper conductors (except on T/C input). Max. recommended wire size: 32/0.2mm 1.0mm. (18AWG). Field wiring must be rated for > 80°C. Prepare the cable carefully, remove a maximum of 8mm insulation and ideally tin to avoid bridging. Prevent excessive cable strain.

### INDUCTIVE LOADS

To prolong relay contact life and suppress interference, it is recommended to fit a snubber (0.1uF/100 ohms) between terminals 5 and 6.

**CAUTION: Snubber leakage current can cause some electro-mechanical devices to be held ON. Check with the manufacturers specifications.**

### SENSOR SELECTION

Thermocouples	Description	Sensor Range	Linearity
tC b	Pt-30% Rh/Pt-6%Rh	0 to 1800°C	2.0*
tC E	Chromel/Con	0 to 600°C	0.5
tC J	Iron/Constantan	0 to 800°C	0.5
tC K	Chromel/Alumel	-50 to 1200°C	0.25*
tC L	Fe/Konst	0 to 800°C	0.5
tC n	NiCrosil/NiSiil	-50 to 1200°C	0.25*
tC r	Pt-13% Rh/Pt	0 to 1600°C	2.0*
tC s	Pt-10% Rh/Pt	0 to 1600°C	2.0*
tC t	Copper/Con	-200 to 250°C	0.25
Resistance Thermometer RTD	Pt100/RTD-2	-200 to 400°C	0.25*

Linear process inputs (Input mV range: 0 to 50mV)

Displays 0 - 20mV 4 - 20mV setpoint limits

Lin1 0 - 100 0 - 400 ± 0.5%

Lin2 0 - 100 -25 - 400 ± 0.5%

Lin3 0 - 1000 0 - 3000 ± 0.5%

Lin4 0 - 1000 -250 - 3000 ± 0.5%


Lin5 0 - 2000 0 - 3000 ± 0.5%

Notes: 1 Linearity: 5-95% sensor range

2 \* Linearity B:5° (70° - 500°C) K/N:1° >350°C exceptions: R/S: 5° <300°C T:1° <- -25° >150°C


RTD/Pt100: 0.5° <-100°C

### CONNECTION DIAGRAM

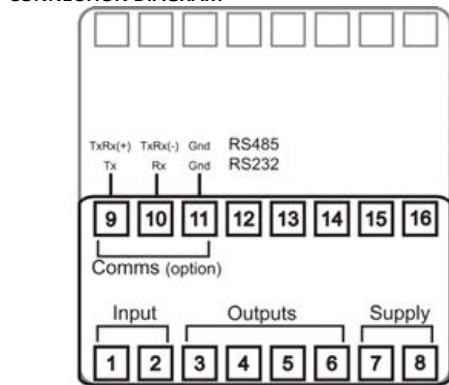

F1 Fuse: 1A time lag type to IEC127. CSA/UL rating 250Vac

S1 Switch: IEC/CSA/UL Approved disconnecting device

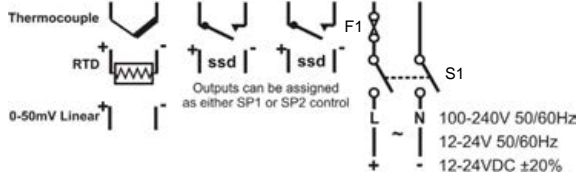

## INSTRUMENT PANEL FEATURES



**Green Display:** Process temperature or program Function/Option

**Orange Display:** Setpoint temperature or program Option (Dual Display only)

**Green LED:** Setpoint 1 output indicator

**Red/Orange LED:** Setpoint 2 output indicator

### ADJUSTMENTS

To enter or exit **program mode:** Press ▲ ▼ together for 3 seconds

To scroll through **functions:** Press ▲ or ▼

To change **levels or options:** Press \* ▲ together or \* ▼ together

To view setpoint: Press \*

To increase setpoint: Press \* ▲ together

To decrease setpoint: Press \* ▼ together

To reset an alarm or fault condition: Press ▲ ▼ together briefly

**Notes:** If in difficulty by becoming "lost" in program mode, press ▲ and ▼ together for 3 seconds to return to display mode, check the INSTRUMENT ADJUSTMENTS above and try again.

When in program mode, after 60 seconds of key inactivity the display will revert to either **inPt : none** or, if the initial configuration has been completed, the measured value. Any settings already completed will be retained.

## GETTING STARTED

After power-up the controller requires programming with the following information:

- **Type of Sensor**
- **Operating unit**
- **Allocation of Output Device to SP1/SP2 (Relay or Ssd)**
- **Temperature Setpoint**

When the above information has been programmed into the controller it will be operational with the following factory settings.

Proportional band/Gain	10°C/18°F
Integral time/Reset	5 mins
Derivative time/Rate	25 secs
Proportional cycle-time	20 secs (Typical setting for relay output)
DAC Derivative approach control	1.5 (Average setting for minimum overshoot)

**NOTE: The instruments covered in this manual may be fitted with either a single or a dual display. Where a single display shows more than one reading, it will alternate between them.**

### INITIAL SET-UP

On power-up the controller will display the self test sequence followed by the initial display **inPt : none**

#### ① Select input sensor.

- **Press and hold \*** and use the ▲ or ▼ buttons to scroll through the sensor selection list until the correct sensor is displayed. Release the buttons. The display will now read selected sensor type e.g. **inPt : tCs**
- **Press ▲ once** The display will now read **unit : none**

#### ② Select unit.

- **Press and hold \*** and use the ▲ or ▼ buttons to scroll through the unit selection list until the correct unit is displayed. Release the buttons. The display will read selected unit e.g. **unit : °C**
- **Press ▲ once** The display will now read **SP1.d : nonE**

#### ③ Select SP1 (Main setpoint output device)

**Note: Dual Relay and Dual Ssd Output Options Models have their outputs pre-configured. Move to Step 4.**

- **Press and hold \*** and use the ▲ or ▼ buttons to select **Ssd** or **rLY** as required. The controller will now read selected output device e.g. **SP1.d : SSd**

#### ④ To enter initial configuration into controller memory

- **Press and hold both ▲ and ▼** buttons for 3 seconds. The display will now read **Park** and measured variable (temperature) (eg. **23 ) Park** is displayed because a setpoint has not yet been entered.
- **To display setpoint**  
Press and hold \* The displays will now read **unit** (eg. °C) and **0**
- **To enter setpoint**  
**Press and hold \*** and use ▲ button to increase or ▼ button to decrease the reading and scroll to required setpoint value. (The digit roll-over rate increases with time).

### THE CONTROLLER IS NOW OPERATIONAL WITH FACTORY SETTINGS

**Note:** For precise control of an application the controller may need to be TUNED. Please see the following section on AUTOTUNE

## AUTOTUNE

This is a single shot procedure to match a controller to the process. Select either **Tune** or **Tune at Setpoint** from the criteria below.

The **Tune** program should be used when the load temperature is at or near ambient. The procedure will apply disturbances when the temperature reaches 75% of the setpoint value, causing overshoot which is monitored in order to adjust the **DAC** overshoot inhibit feature. Care should be taken to ensure that any overshoot is safe for the process.

The **Tune at Setpoint** program is recommended when:

- The process is already at setpoint and control is poor
- The setpoint is less than 100°C
- Re-tuning after a large setpoint change
- Tuning multi-zone and/or heat-cool applications.

**Notes:** **DAC** is not re-adjusted by Tune at setpoint.  
**Proportional Cycle Time** can be pre-selected before running the Autotune program.

Hereafter the symbol (▲ ▼) signifies both buttons are held pressed for 3 seconds to ENTER or EXIT program mode.

### TUNE OR TUNE AT SETPOINT PROGRAM

Enter program (▲ ▼) and from the display **tune : oFF** press and hold \* and press ▲ to display **tune : on** or **tune : At.SP**

Exit program mode (▲ ▼).

The **TUNE** program will now start. The display will show **tune** as the process temperature climbs to setpoint.

**Note:** During tuning, the main setpoint (SP1) LED will flash.

When the **TUNE** or **TUNE AT SETPOINT** program is complete the PID values are entered automatically. The process temperature will rise to setpoint and control should be stable. If not, this may be because optimum cycle time is not automatically implemented. To set the cycle time see **PROPORTIONAL CYCLE-TIME**.

## PROPORTIONAL CYCLE-TIME

The choice of cycle-time is influenced by the external switching device or load. eg. Contactor or SSR. A setting that is too long for a process will cause oscillation or a setting that is too short will cause unnecessary wear to an electro-mechanical switching device.

**Factory set** - To use the 20 sec factory set cycle-time no action is needed whether autotune is used or not.

### To Manually Select AUTOTUNE Calculated CYCLE-TIME

When AUTOTUNE is completed, enter program (▲ ▼) and select **CYC.t** in **Level 1**. The display will read **CYC.t:20** (factory setting)

To view the new calculated optimum value, press and hold both \* and ▼ buttons until indexing stops. The calculated value will be displayed eg. **A16**. If acceptable, exit program (▲ ▼) to implement this setting.

### To Pre-select Automatic Acceptance of AUTOTUNE Calculated CYCLE-TIME

Before AUTOTUNE is initiated select **CYC.t** in **Level1**, press and hold both \* and ▼ buttons until indexing stops at **A --**. Exit program (▲ ▼) to accept calculated value automatically.


### To Manually Pre-select Preferred CYCLE-TIME

Before AUTOTUNE is initiated select **CYC.t** in **Level 1**, press and hold both \* and ▲ or ▼ buttons until indexing stops at preferred value then exit program (▲ ▼) to accept.

CYCLE-TIME RECOMMENDATIONS		
Output device	Factory setting	Recommended minimum
Internal relay : rLY / rLY1 / rLY2	20 seconds	10 seconds
Solid state drives : Ssd / SSd1 / SSd2	20 seconds	0.1 seconds

## PROGRAMMER - RAMP-SOAK

This feature enables the controller to ramp up or down from current temperature to a target setpoint at a pre-determined rate. It then controls at the target setpoint for an adjustable soak period before switching off the SP1 output.

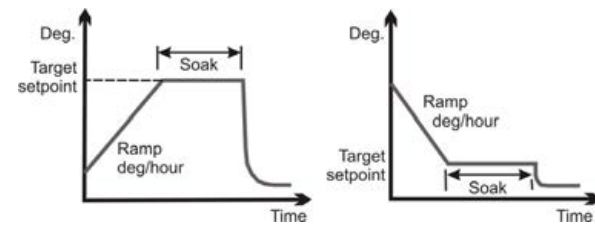

**Notes:** In **Ramp on** configuration, if power is removed from the controller, the Ramp will re-start when power is restored. The **Ramp hold** option suspends the ramp at its last value.

If no **Soak** period has been set, control at target setpoint continues indefinitely.

SP2 deviation alarms follow the ramp setpoint and can be used to alarm "out of limits" ramp rate.

**WARNING:** The Soak timer is triggered when the ramp setpoint reaches the target setpoint. If the ramp rate is set too fast for the process, the Soak timer will be triggered before the process temperature reaches the target setpoint.

## SECOND SETPOINT (SP2)

### SECOND SETPOINT (SP2) Alarm Output

Configure SP2 output to operate as an alarm from **SP2.A** in Level 2 and set the temperature alarm setting in **SEt.2** Level 1. The alarm will be triggered when the process temperature changes according to the options listed below.

#### dV.hi

Rises above the main setpoint by the value inserted at **SEt.2**.

#### dV.Lo

Falls below the main setpoint by the value inserted at **SEt.2**.

#### Band

Rises above or falls below the main setpoint by the value inserted at **SEt.2**.

#### FS.hi

Rises above the main setpoint by a **SEt.2** value that is greater than the setpoint.

#### FS.Lo

Falls below the main setpoint by a **SEt.2** value that is smaller than the setpoint.

### SUBSIDIARY SP2 MODE

The following additional alarm functions can be added to the above alarm configurations using the features found in **SP2.b** in Level 2

#### LtCh

Once activated, the alarms will latch and can be manually reset when the alarm condition has been removed.

#### Hold

This prevents any alarm operation on power-up and is automatically disabled once the process reaches setpoint in order to allow normal alarm operation.

#### Lt.ho

Combines the effects of both **LtCh** & **Hold** and can be applied

### SECOND SETPOINT (SP2) Proportional control output

Configure in **Level 1** using **CYC.2** to select proportional cycle time and **bnd.2** to adjust proportioning band.

- For Heat/Cool operation see full operating manual.

- In on/off mode, bnd.2 adjusts SP2 hysteresis.

**SP2 OUTPUT AND LED INDICATION STATES - IN ALARM CONDITION**

Alarm Type	ON-OFF Operating mode	Proportional Operating mode	Legend
Deviation dU.h dU.l bAnd	SP2 Output State SP2 LED State	SP2 Output State SP2 LED State	Output ON (relay or ssd energised) Output OFF (relay or ssd de-energised) LED ON
Full scale FS.h FS.l			
Cool Strategy	Temperature above setpoint		

**SP2 ALARM ANNUNCIATOR**  
When an SP2 alarm mode is selected in SP2.A an alarm annunciator **-AL-** displays, alternating with the process value, during alarm conditions. **Notes:** The alarm will be automatically reset when the temperature returns within the **bnd.2** setting in Level 1. The annunciator may be disabled by selecting function **no.AL : on** in level 4.

**SP2 in cool strategy** See full operating manual (ADVANCED SETTINGS)

**ERROR MESSAGES**

Display Flashes	Fault Type	Action
<b>inPt : FAIL</b>	<b>SENSOR FAULT</b> Thermocouple burnout RTD/Pt100 open or short circuit or negative over-range.	Check sensor/wiring
<b>dAtA : FAIL</b>	<b>NON-VOLATILE MEMORY ERROR</b>	De-power briefly. Replace unit if problem persists
<b>hAnd : FAiL</b>	<b>MANUAL POWER ERROR</b> SP1 set to ON/OFF in <b>CyC.t</b>	Select proportional mode
<b>tunE : FAiL</b>	<b>IMMEDIATE FAIL ON AUTOTUNE START</b> Note: To reset and clear error press <b>▲ ▼</b> together briefly to cancel message. <b>FAIL LATER DURING AUTOTUNE CYCLE</b> The thermal characteristics of the load exceed the autotune algorithm limits. The failure point is indicated by any display 0.0 in <b>tech</b> e.g. Ctb = 0.0	1. If display setpoint=0 then enter setpoint 2. If SP1 set to ON/OFF in <b>CyC.t</b> then select proportional mode 1. Change conditions. eg. raise setpoint 2. Try <b>tunE : At.SP</b> 3. If the error message persists, call local CAL representative for advice.

**FUNCTION LIST (LEVELS 1 TO 4) - LEVEL 1**

Function	Options [Factory settings]	Description
<b>Select Autotune</b>		
<b>tunE</b>	[oFF], on, Park, At.Sp	Used to switch the Autotune feature on and off, to select <b>Park</b> or tune at setpoint. <b>Park</b> temporarily turns the output(s) off. To use select <b>Park</b> and exit program mode. To disable re-enter program at <b>tunE</b> and select <b>oFF</b> .
<b>SP1 Operating Parameters</b>		
<b>bAnD</b>	0.1 to * °C/°F [10°C/18°F]	SP1 proportional band/Gain or Hysteresis * 25% sensor maximum Proportional control eliminates the cycling of on-off control. Heater power is reduced, by time proportioning action, across the proportional band.
<b>int.t</b>	oFF, 0.1 to 60 minutes [5.0]	SP1 integral time/reset Auto-corrects proportional control offset error
<b>dEr.t</b>	oFF 1 - 200 seconds [25]	SP1 derivate time/rate Suppresses overshoot and speeds response to disturbances
<b>dAC</b>	0.5 - 5.0 x bAnd [1.5]	SP1 derivative approach control dAC Tunes warm-up characteristics, independent of normal operating conditions, by controlling when derivative action starts during warm-up (smaller dAC value = nearer setpoint).
<b>CyC.t</b>	A --, on.oF, 0.1 - 81 sec [20]	SP1 proportional cycle-time (see section above) Determines the cycle rate of the output device for proportional control. Select <b>on.oF</b> for ON/OFF mode.
<b>oFSt</b>	[0] to * °C/°F	SP1 offset/manual reset * ±50% bAnd. Applicable in proportional and ON/OFF mode with integral disable: <b>Int.t</b> : <b>oFF</b> .
<b>SP.LK</b>	[oFF] on	Lock main setpoint Locks the setpoint preventing un-authorized adjustment.

**Programmer Settings**

<b>SPrr</b>	[0] to 9995 deg/hour	Sets the ramp rate
<b>SPrn</b>	on [oFF] hold	Switches the ramp on or off, or hold at last ramp value
<b>SoAK --</b>	[oFF] 0 to 1440 min	Sets the soak time

**SP2 Operating Parameters**

<b>SEt.2</b>	0 to * °C/°F [0]	Adjust SP2 setpoint * Deviation Alarms DV.hi, DV.Lo, bAnd 25% sensor maximum. * Full scale alarms FS.hi, FS.Lo sensor range f/s
<b>bnd.2</b>	0.1 - * °C/°F [2.0°C/3.6°F]	Adjust SP2 hysteresis or proportional band/gain (see <b>CyC.2</b> setting) * 25% of sensor full scale
<b>CyC.2</b>	[on.oFF] 0.1-81 seconds	Select SP2 ON/OFF or proportional cycle-time Select on.oFF for ON/OFF mode, or the cycle rate of SP2 output for proportional mode.

**LEVEL 2**

Function	Options [Factory settings] shown in brackets	Description
<b>Manual Control Modes</b>		
<b>SP1.P</b>	0 to 100 % 'read only'	Read SP1 output percentage power
<b>hAnd</b>	[oFF] 1 to 100 % (not in ON/OFF)	SP1 manual percentage power control For manual control should a sensor fail. Record typical SP1.P values beforehand.
<b>PL.1</b>	100 to 0 % duty cycle [100]	Set SP1 power limit percentage Limits maximum SP1 heating power during warm-up and in proportional band.
<b>PL.2</b>	100 to 0 % duty cycle [100]	Set SP2 percentage power limit (cooling)
<b>SP2 Operating Modes</b>		
<b>SP2.A</b>	[none] dV.hi dV.Lo bAnd FS.hi FS.Lo Cool	Main SP2 operating mode
<b>SP2.b</b>	[none] LtCh hoLd nLin	Subsidiary SP2 mode: latch/sequence. Non-linear cool proportional band
<b>Input Selection and Ranging</b>		
<b>di.SP</b>	[1] 0.1	Select display resolution: for display of process temperature, setpoint, <b>oFSt</b> , <b>SEt.2</b> , <b>hi.SC</b> , <b>LoSC</b>
<b>hi.SC</b>	sensor minimum [sensor maximum] °C/°F	Set full scale
<b>Lo.SC</b>	[sensor minimum] sensor maximum °C/°F	Set scale minimum (default 0°C or 32°F)
<b>inPt</b>	[none]	Select input sensor (See <b>SENSOR SELECTION</b> table)
<b>Unit</b>	[none] °C °F bAr Psi Ph rh SEt	Select °C/°F or process units

**LEVEL 3**


Function	Options [Factory settings] shown in brackets	Description
<b>Output Configuration</b> Note: 'read only' after initial configuration. <b>rSET ALL</b> full reset to factory settings required to change <b>SP1.d</b> subsequently.		
<b>SP1.d</b>	[none] rLY SSd rLY1 rLY2 SSd1	Select SP1 output device Dual Relay and Dual SSd output options are factory set.
<b>SP2.d</b>	[none] SSd rLY rLY2 rLY1 SSd2	Select SP2 output device(read only) Dual Relay and Dual SSd output options are factory set.
For SP1.d & SP2.d Note: (when in initial configuration only) Hold * and ▲ or ▼ for 10 seconds to move to or from output options shaded.		
<b>burn</b>	SP1 / SP2 [uP.SC] Upscale/Upscale [dn.SC] Downscale/Downscale [1u.2d] Upscale/Downscale [1d.2u] Downscale/Upscale	Sensor burn-out/break protection Caution: Settings affect fail safe state.
<b>rEu.d</b>	SP1 / SP2 [1r.2d] Reverse Direct [1d.2d] Direct Direct [1r.2r] Reverse Reverse [1d.2r] Direct Reverse	Select output modes: Direct/Reverse Select Reverse on SP1 for heating and Direct for cooling applications. Caution: Settings affect fail safe state.
<b>rEu.L</b>	SP1 / SP2 [1n.2n] Normal Normal [1i.2n] Invert Normal [1n.2i] Normal Invert [1i.2i] Invert Invert	Select SP1/2 LED indicator modes
<b>SPAn</b>	[0.0] to ±25% sensor maximum	Sensor span adjust For recalibrating to align readings with another instrument e.g. External Meter, data logger. See Full Operating Manual (ADVANCED SETTINGS).
<b>ZERo</b>	[0.0] to ±25% sensor f/s	Zero sensor error (see Sensor span adjust above).
<b>ChEK</b>	[oFF] on	Select control accuracy monitor
<b>rEAD</b>	[Var] hi Lo	Read control accuracy monitor
<b>rECh</b>	[Ct A] CT b Ct 1 Ct 2 Ct 3 Ct 4 oS 1 uS oS 2	Read Autotune tuning cycle data (see Operating Manual)
<b>UEr</b>		Software version number
<b>rSET</b>	[none] ALL	Resets all functions to factory settings Caution: This selection will lose all of the current settings.

**LEVEL 4**

Access to level 4 is gained through **UEr** in level 3. Press and hold ▲ or ▼ for 10 seconds. Enter level 4 at **LoCK**, release ▲ or ▼ together. Display reads **LoCK nonE**

Function	Options [Factory settings] shown in brackets	Description
<b>Security</b>		
<b>LoCK</b>	[none] LEV.3 LEV.2 ALL	Program security using Lock <b>LEV.3</b> locks level 3 and 4 only - Technical Functions. <b>LEV.2</b> locks levels 2, 3 and 4 only - Configuration and technical Functions. <b>ALL</b> locks all functions <b>LoCK ALL</b>
<b>Function Options</b>		
<b>ProG</b>	[Auto] StAY	Program mode auto-exit switch. Auto-exit returns display to normal if 60 seconds of key inactivity, select <b>StAY</b> to disable
<b>no.AL</b>	[oFF] on	Disable SP2 alarm annunciator-AL Select on to disable -AL
<b>di.SS</b>	Dir, 1 to 32 [6]	Display sensitivity <b>dir</b> = direct display of input 1 = maximum, <b>32</b> = minimum sensitivity
<b>dEr.S</b>	0.1 to 1.0 [0.5]	Derivative sensitivity

**FUNCTIONS MENU**

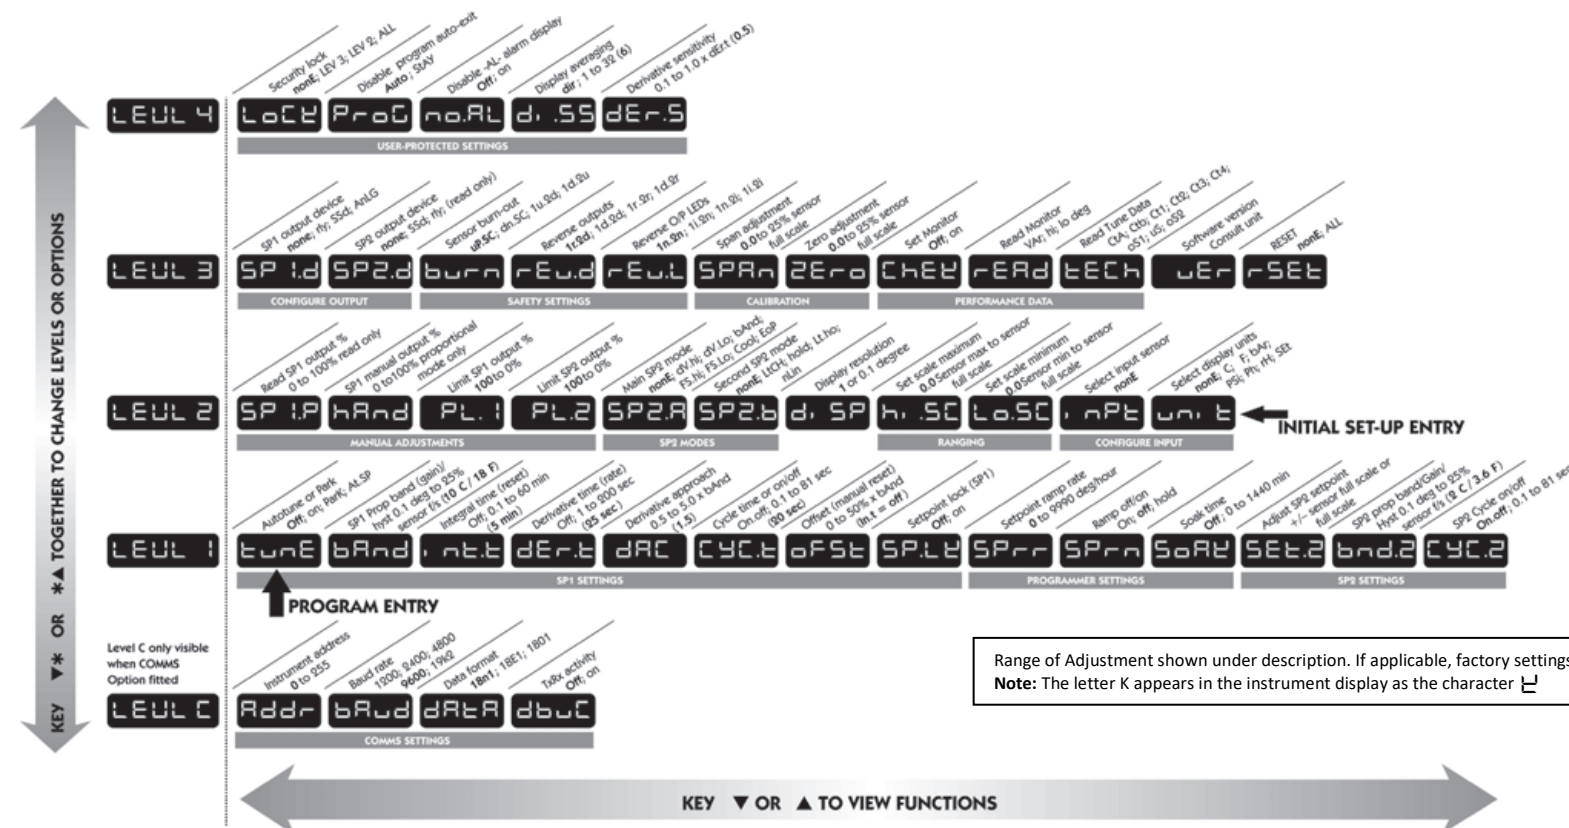

**SPECIFICATION**

**Thermocouple** 9 types  
Standards: IPTS/68/DIN 43710  
CJC rejection: 20:1 (0.05°C) typical  
External resistance: 100Ω maximum

**Resistance thermometer** RTD-2/Pt100 2 wire  
Standards: DIN 43760 (100Ω 0°C/138.5Ω 100°C Pt)  
Bulb current: 0.2mA maximum

**Linear process inputs**  
mV range: 0 to 50mV

**Applicable to all inputs SM = sensor maximum**  
Calibration accuracy: ±0.25%SM ±1°C  
Sampling frequency: Input 10Hz, CJC 2 sec.  
Common mode rejection: Negligible effect up to 140dB, 240V, 50-60Hz  
Series mode rejection: 60dB, 50-60Hz  
Temperature co-efficient: 150ppm/°C SM  
Reference conditions: 22°C ±2°C, rated voltage after 15 minutes settling time.

**Output devices**  
SSd/SSd1/SSd2: Solid state relay driver: To switch a remote SSR 5Vdc +0/-15% 15mA non-isolated  
Miniature power relay: Form A/SPST contacts (AgCdO) rLY and rLY1: 2A/250ac resistive load rLY2: 1A/250ac resistive load

**General**  
Displays: Upper, 4 Digits, high brightness green LED. 10mm (0.4") high.  
Lower, 4 Digits, Orange LED. 9mm (0.35") high (dual display version only)

Digital range: -199 to 9999  
Hi-res mode: -199.9 to 999.9  
LED output indicators: Flashing, SP1 square, green; SP2 round, red  
Keypad: 3 elastomeric buttons

**Environmental**  
Humidity: Max 80%  
Altitude: Up to 2000m  
Installation: Category II  
Pollution: Degree II  
Protection: IP66 Front panel (NEMA 4X for CAL3300 only), Installation Class 2, CSA 22.2 No 1010.1& UL61010-1 Edition 3.  
EMC Emission: EN61326-1:2013 Class A. This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.  
EMC Immunity: EN61326-1:2013 Table 2.  
Ambient: 0-50°C (32-130°F)  
Mouldings: Flame retardant polycarbonate  
Weight: 1/32 DIN - 110g (3.9oz), 1/16 DIN single display - 120g (4.2oz), 1/16 DIN dual display - 130g (4.6oz).

**Approvals** CE, UL, cUL, CSA and FM (3545)

**Note:** Applications where controller may be subjected to 110MHz -130MHz radiated RF (common in aeronautical environments) If using the 12-24V variant fitted with RS232/485 comms option, individual Ferrites (Wuerth Elektronik, Part 742 711 31, or similar) must be fitted to all incoming and outgoing cables, at the point of entry / exit to the controller.

**WARNING:** This product can expose you to chemicals including arsenic, which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)